




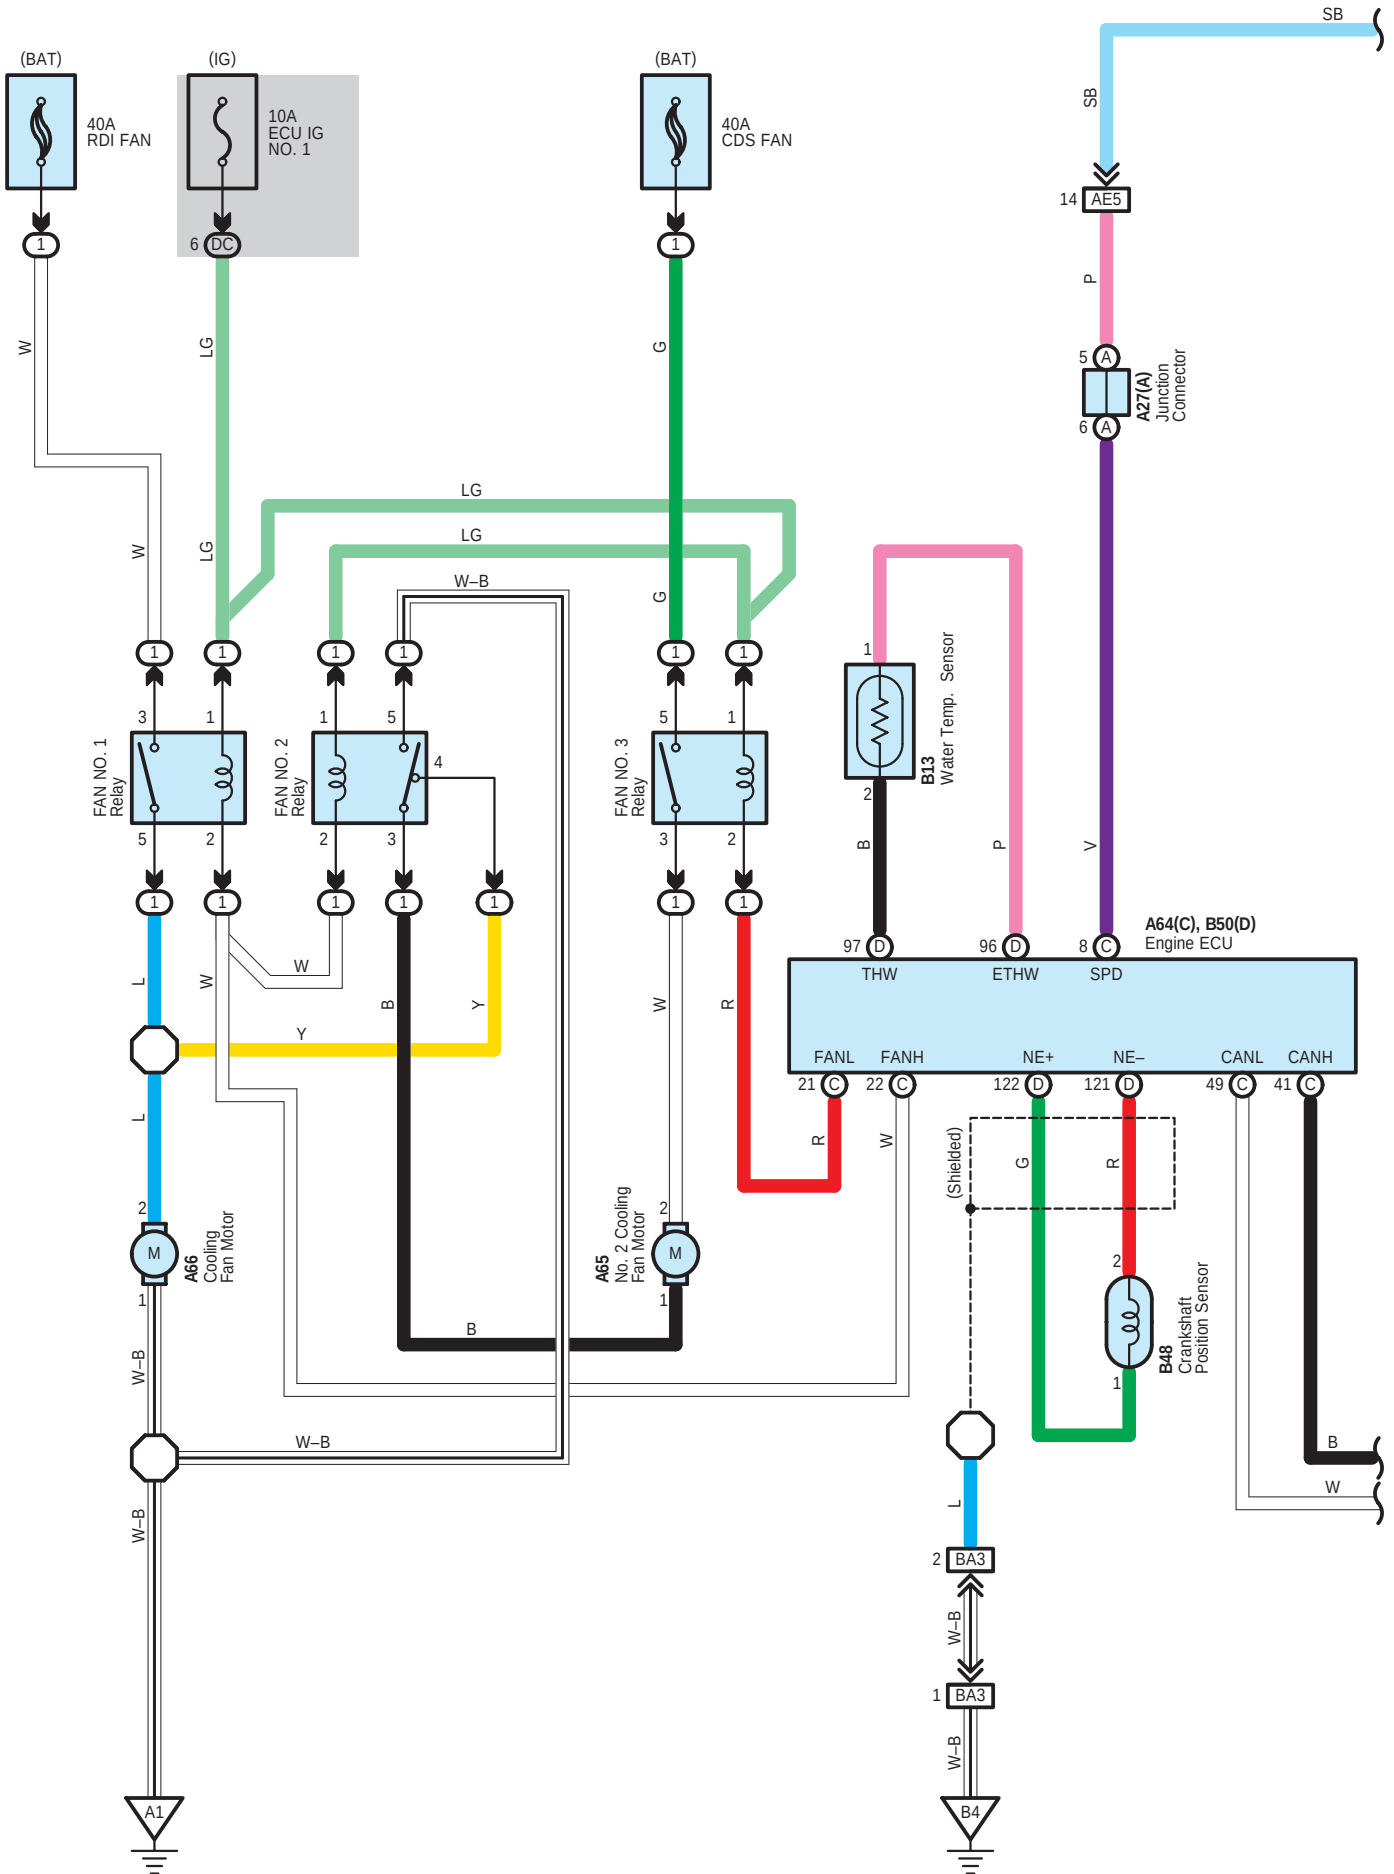


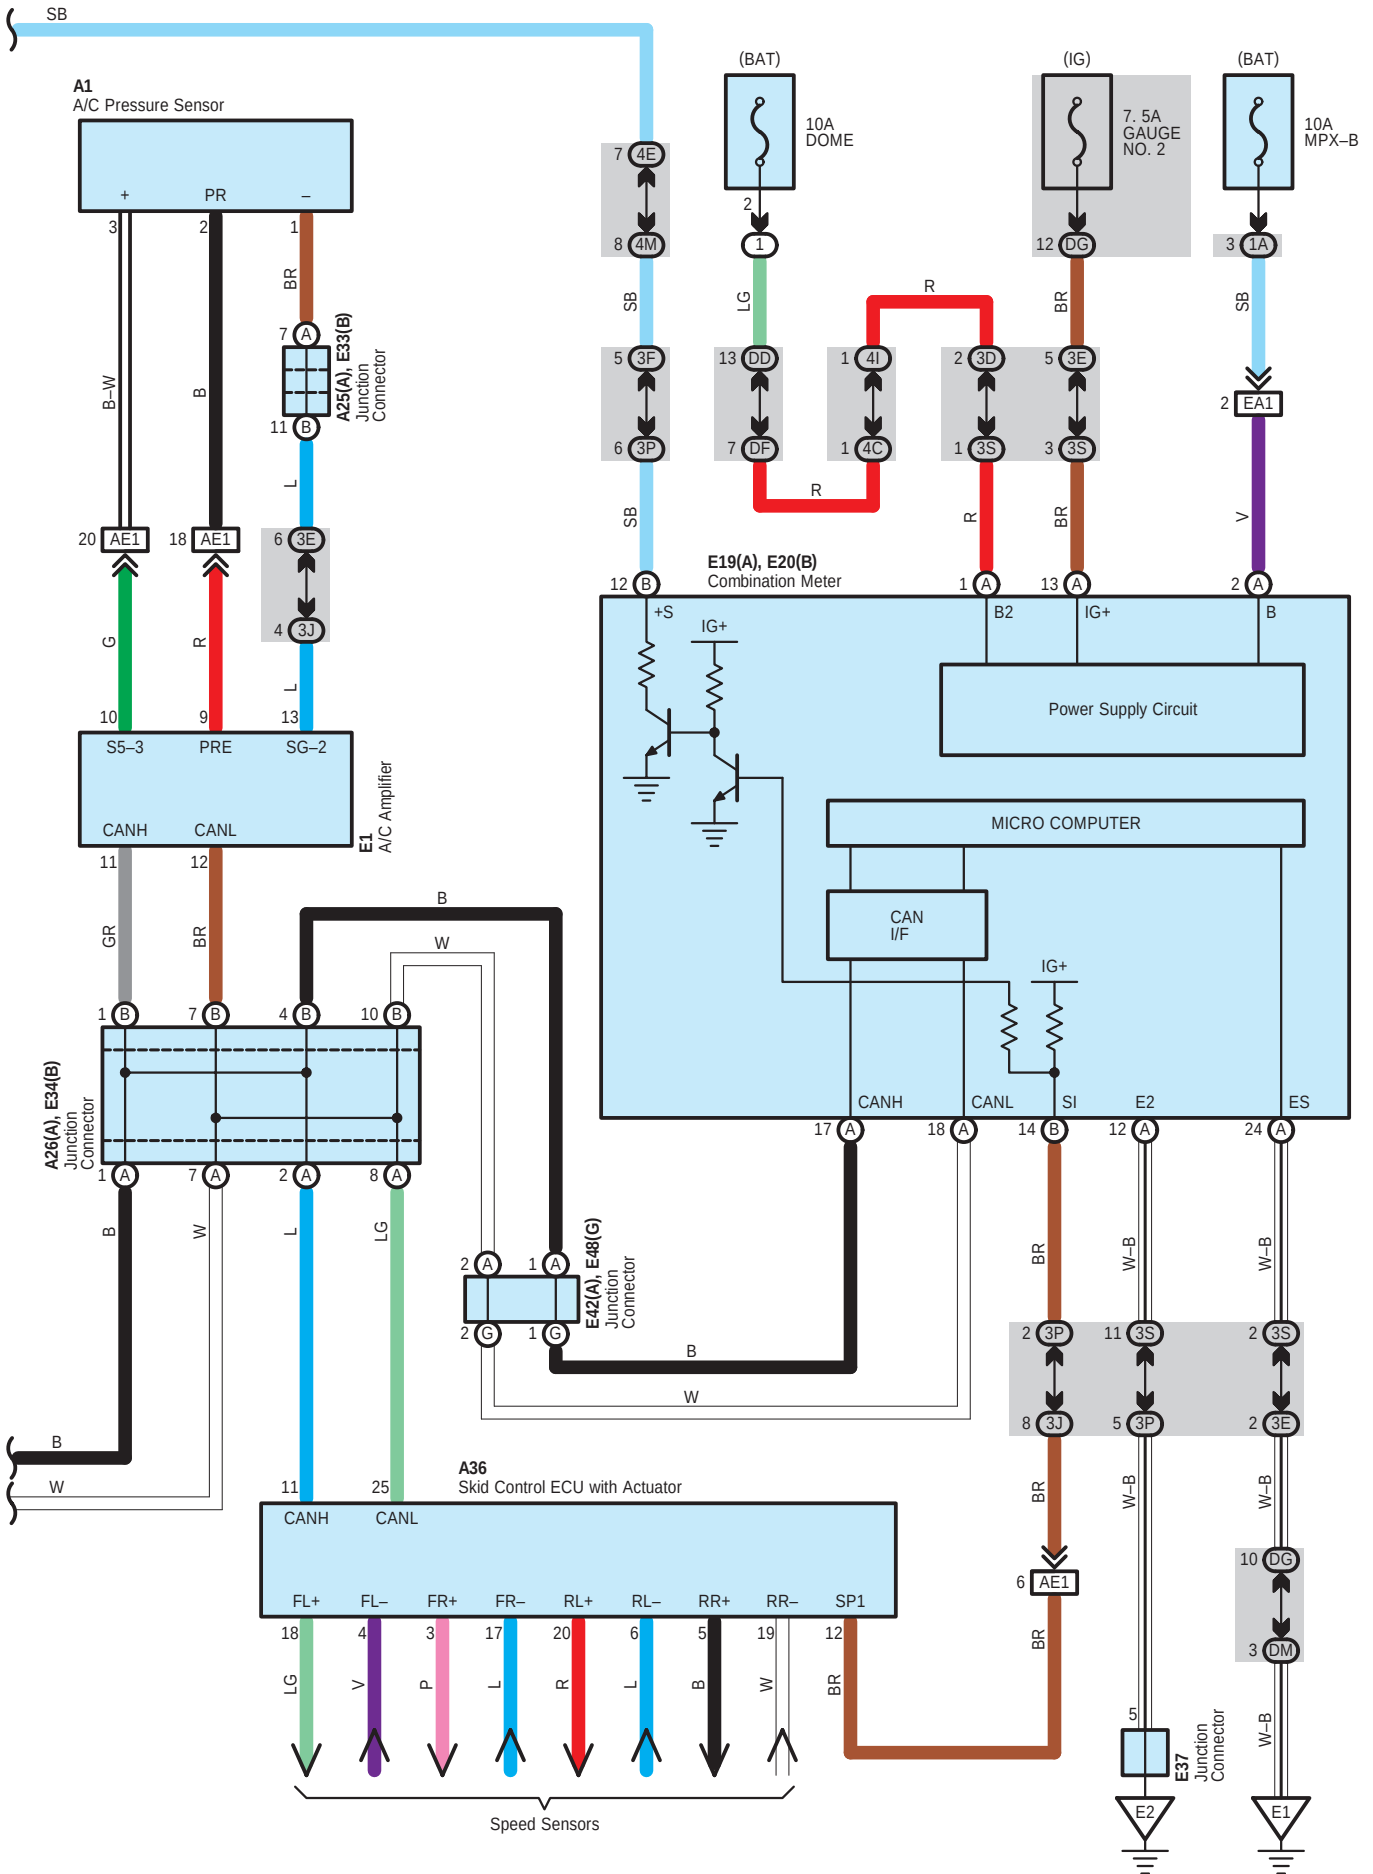


A 1
Black

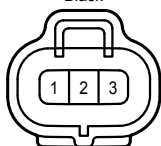


A 25
Black

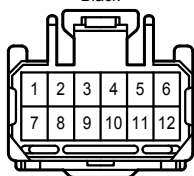


A 26
Blue

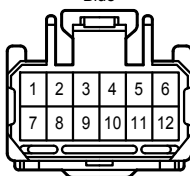


A 27
White

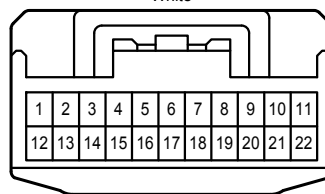


A 36
Black

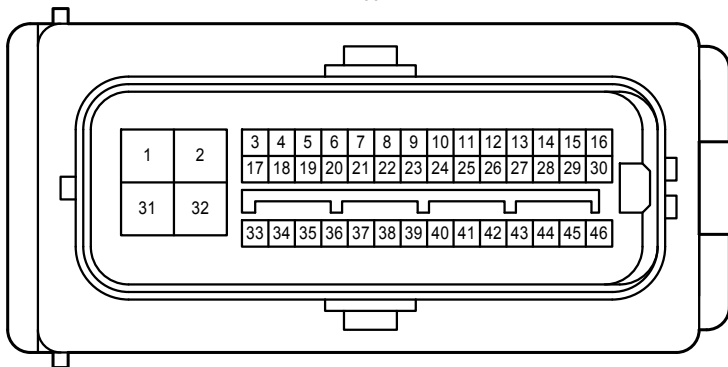


A 64
Black

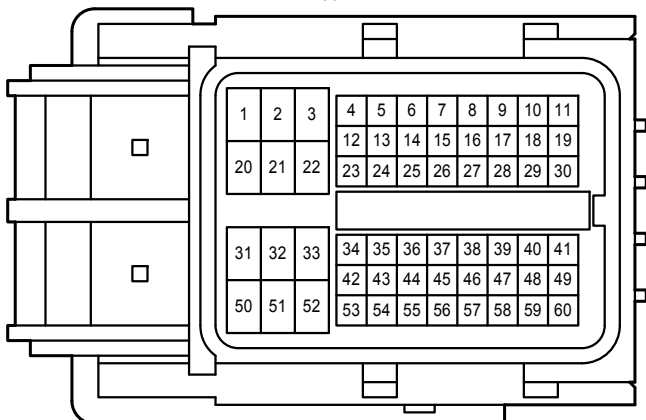

A 65
Gray

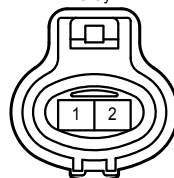

A 66
Black

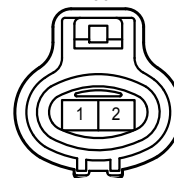


B 13
Black




B 48
Black




B 50
Black

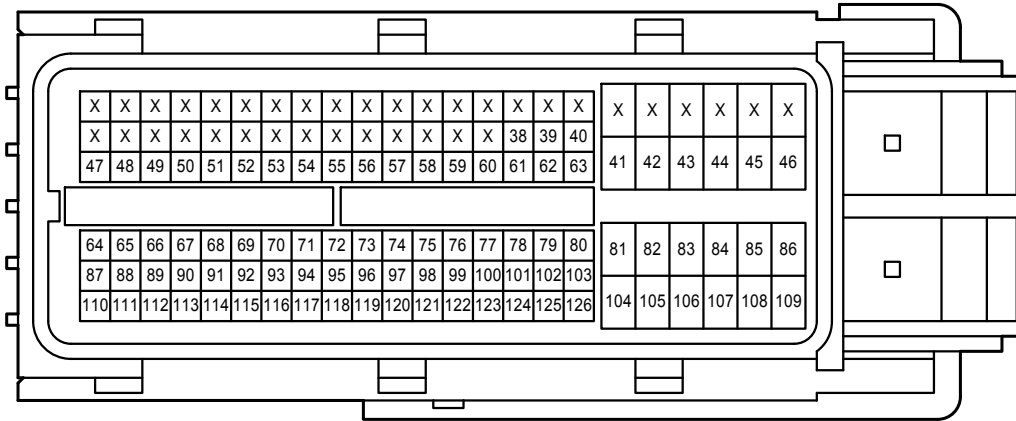


E 1
White

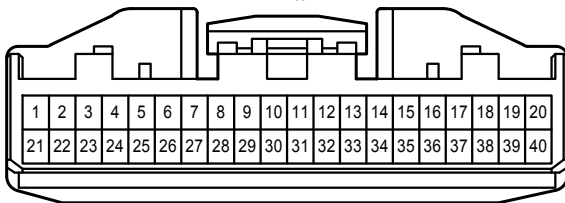


E 19
White

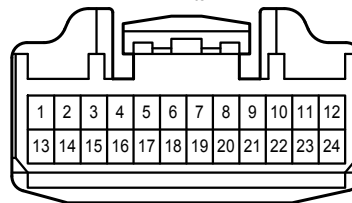


E 20
White

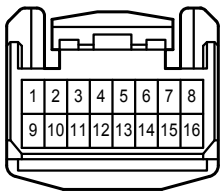


E 33
Black

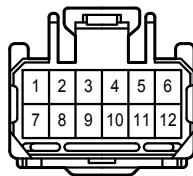


E 34
Blue

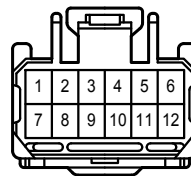


E 37
White

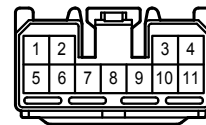


E 42
White




E 48
White




1A
White

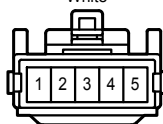


3D
White




3E
Gray




3F
White




3J
Gray




3P
White



3S
Gray




4C
White




4E

White




4I

White




4M

White




DC

White

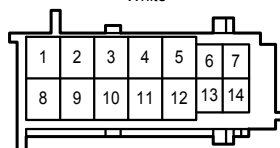


DD

White

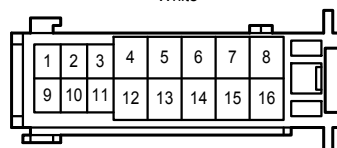


DF

White

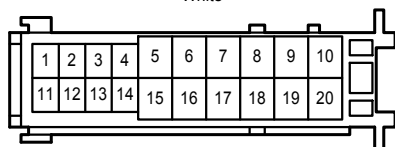


DG

White

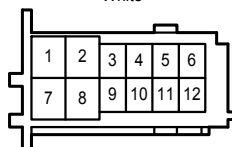


DM

White

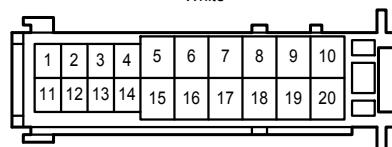


AE1

Gray

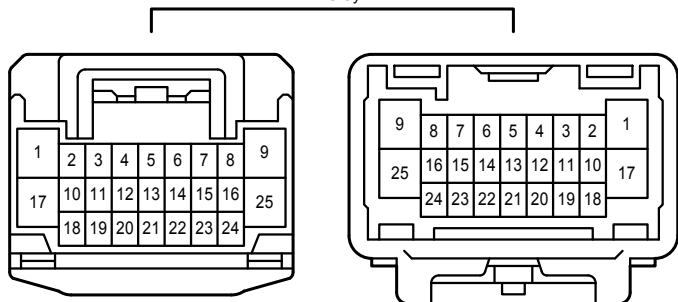


AE5

White

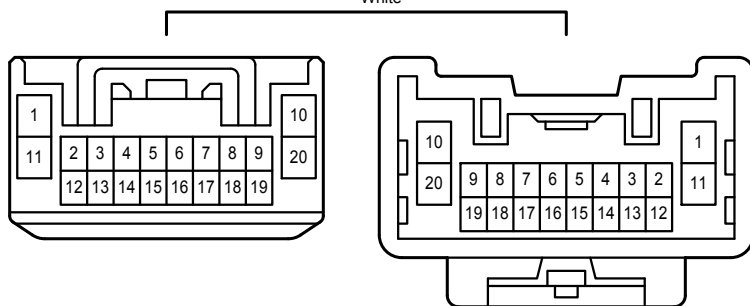

BA3

White

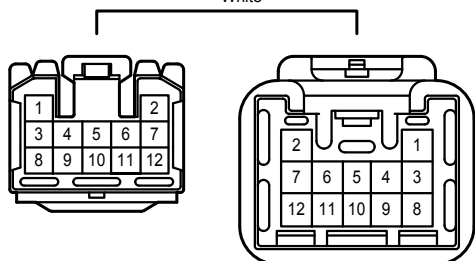

EA1

White

