






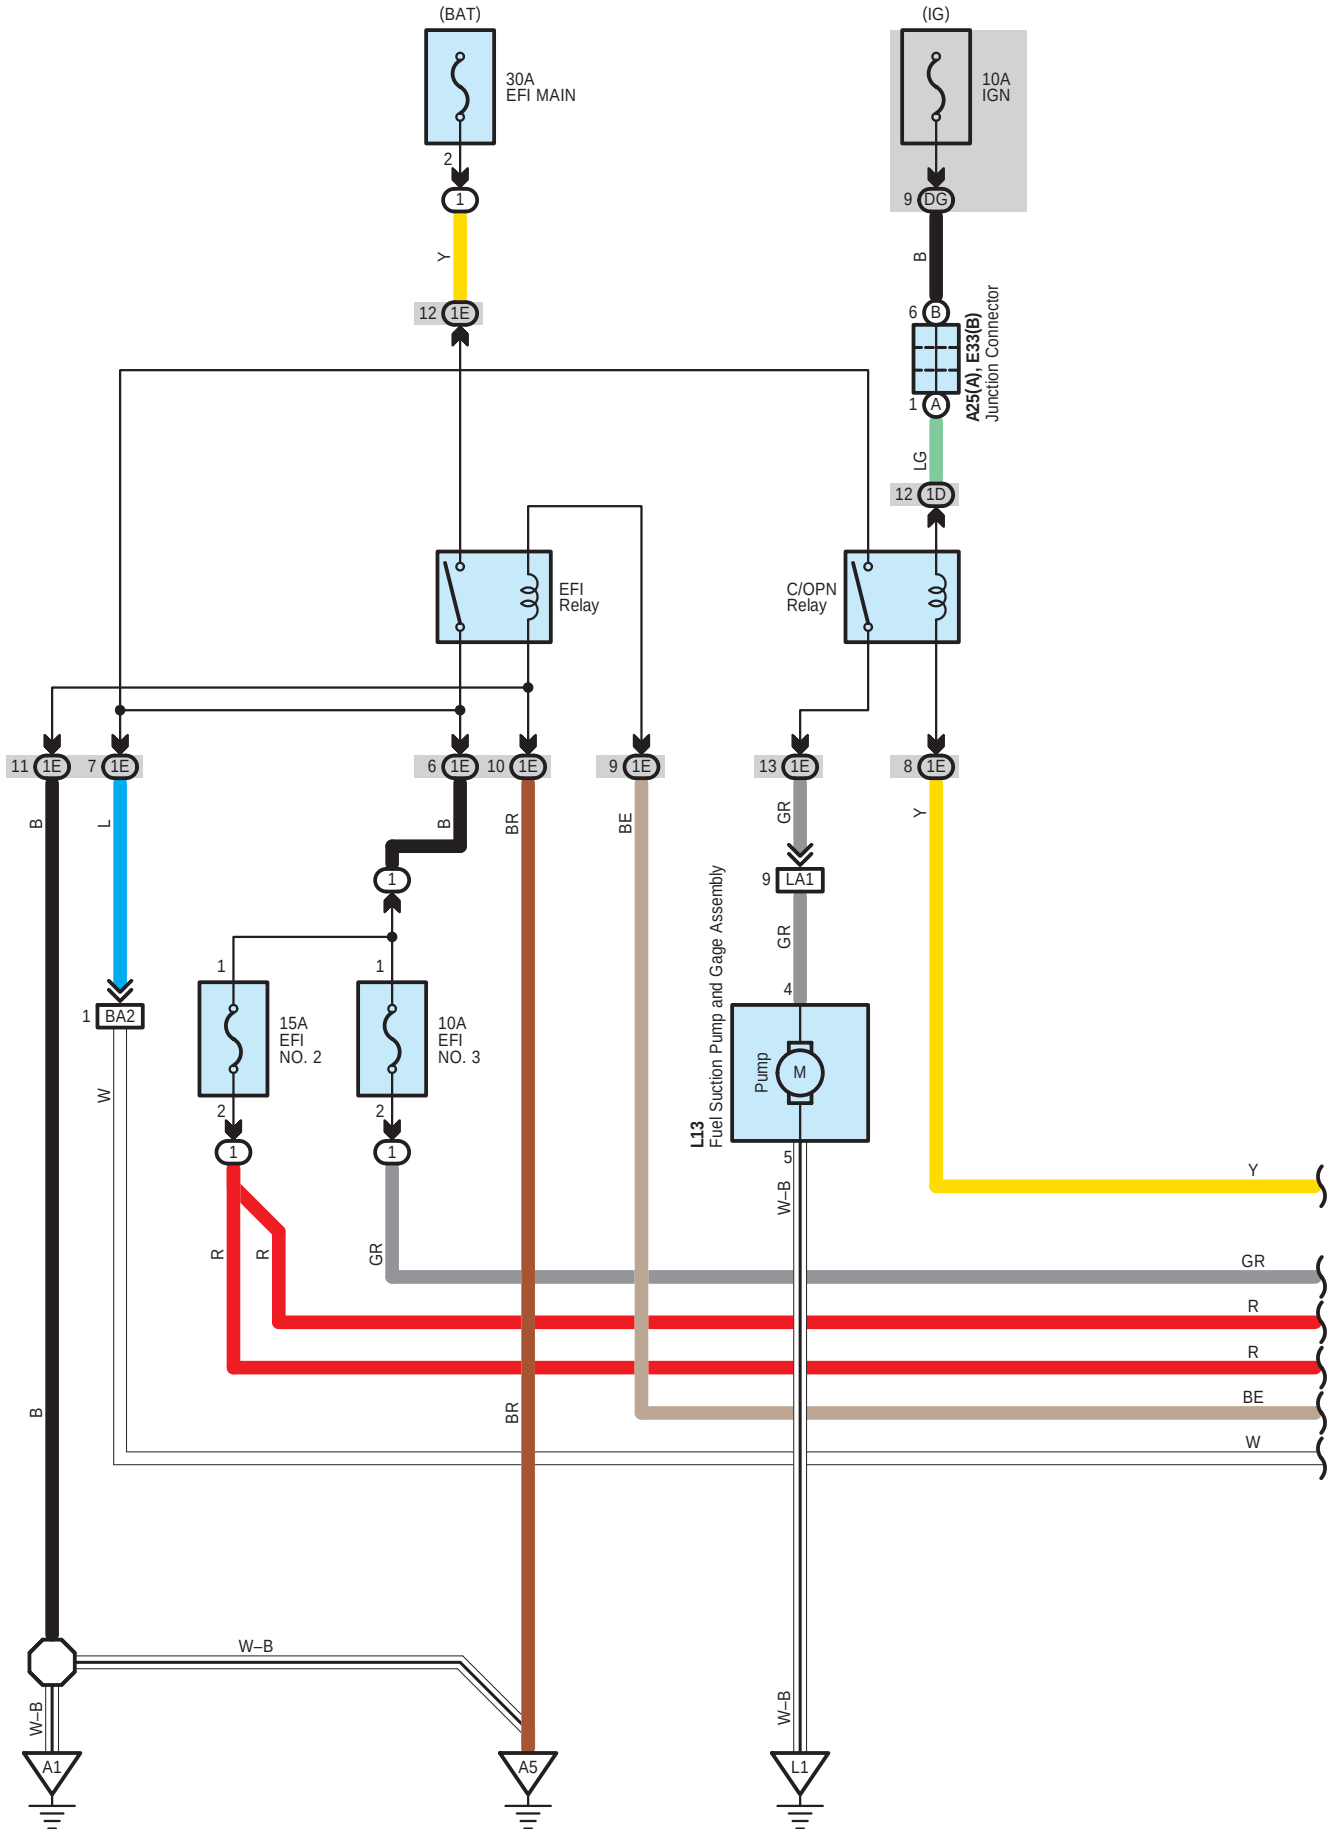


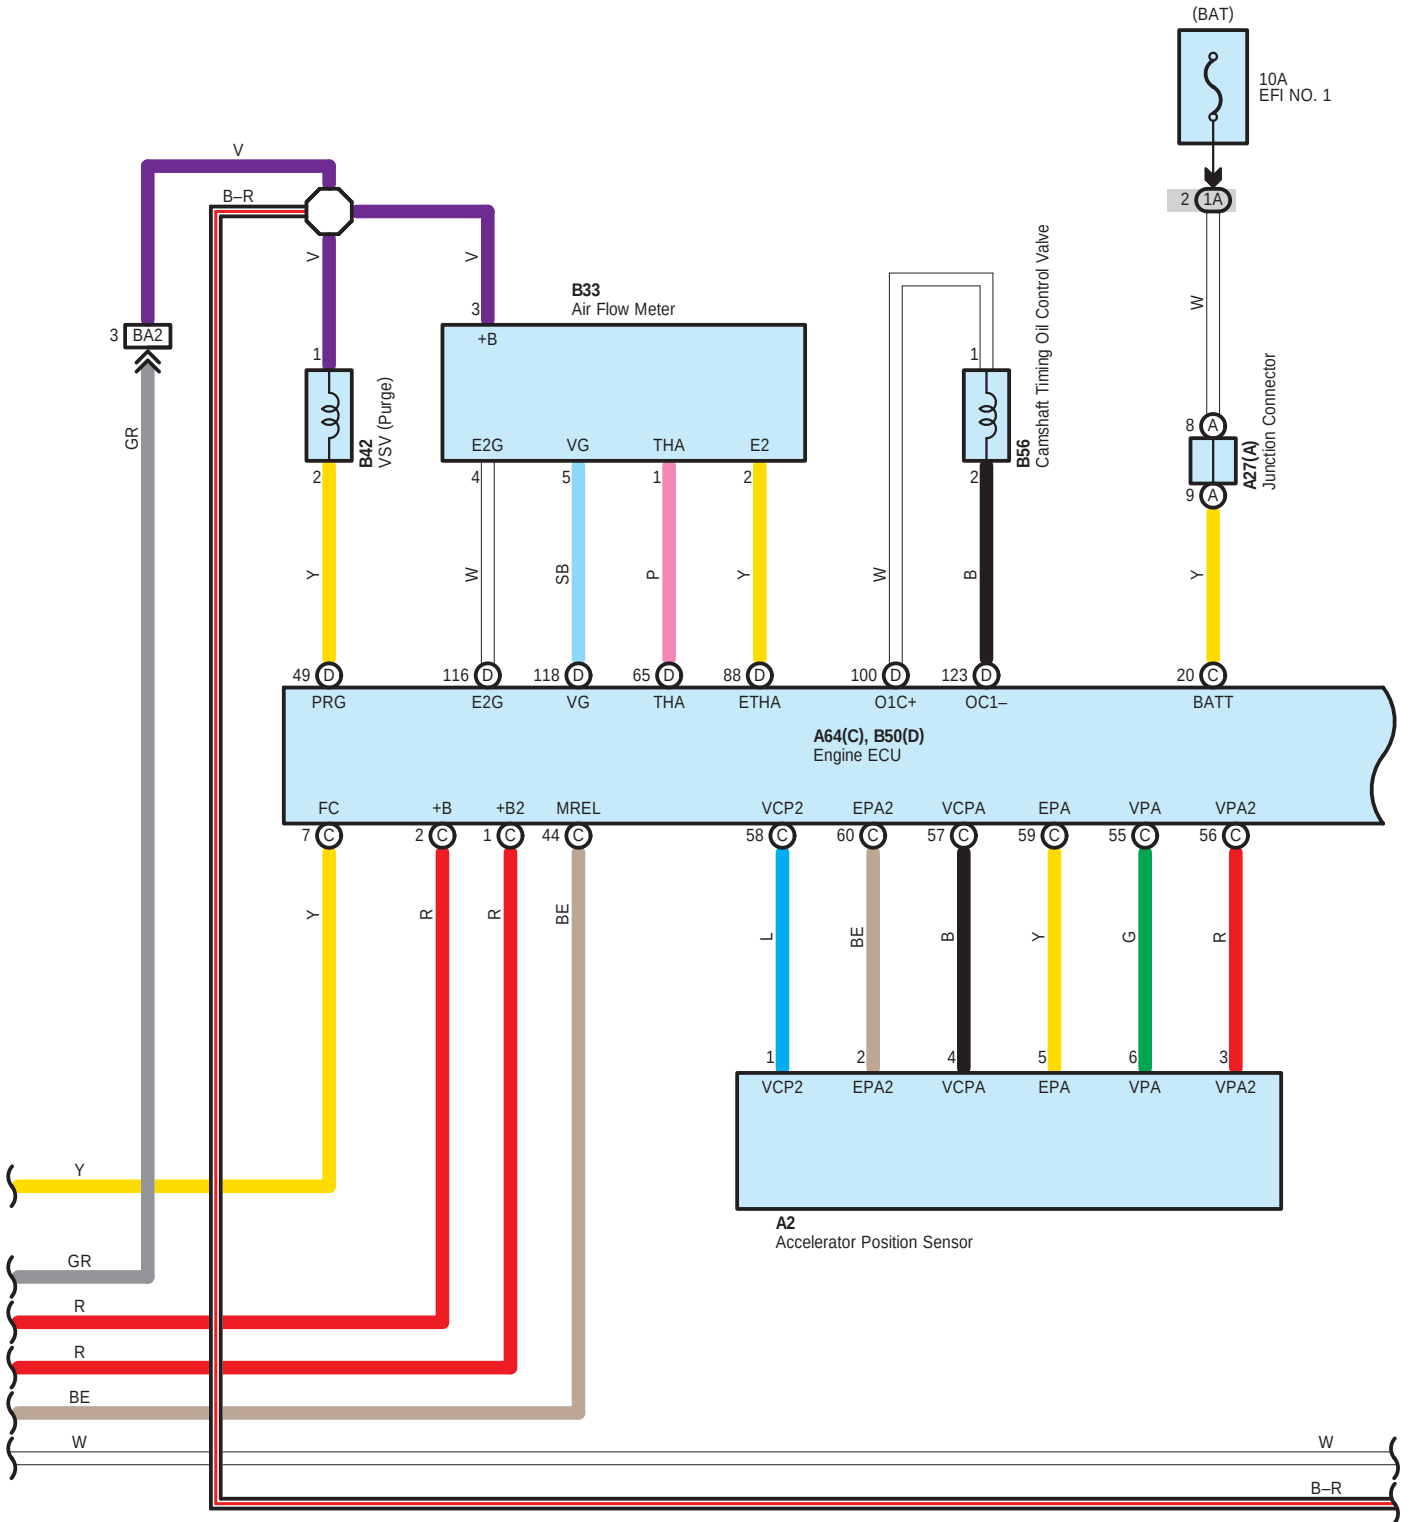


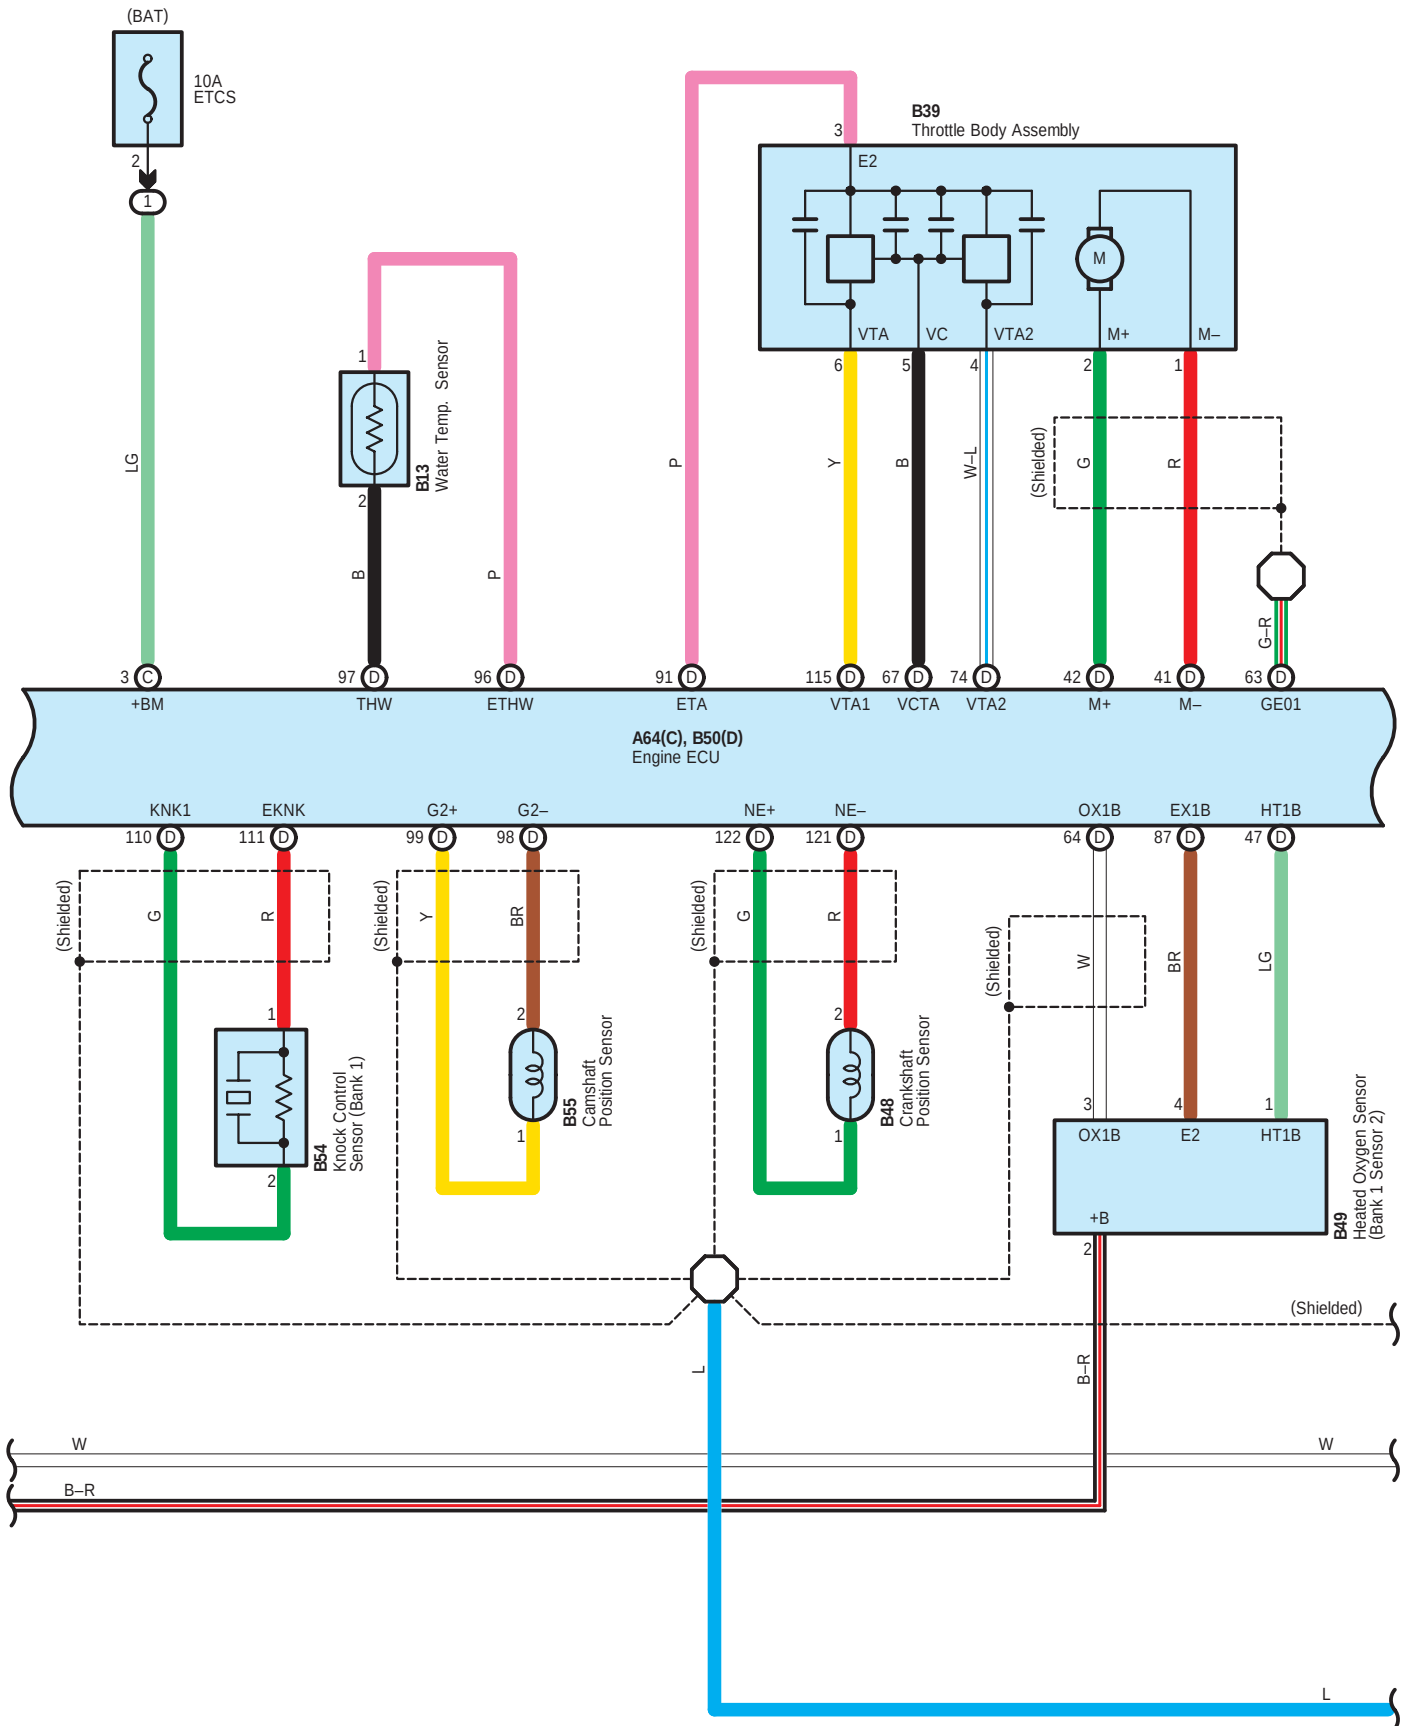


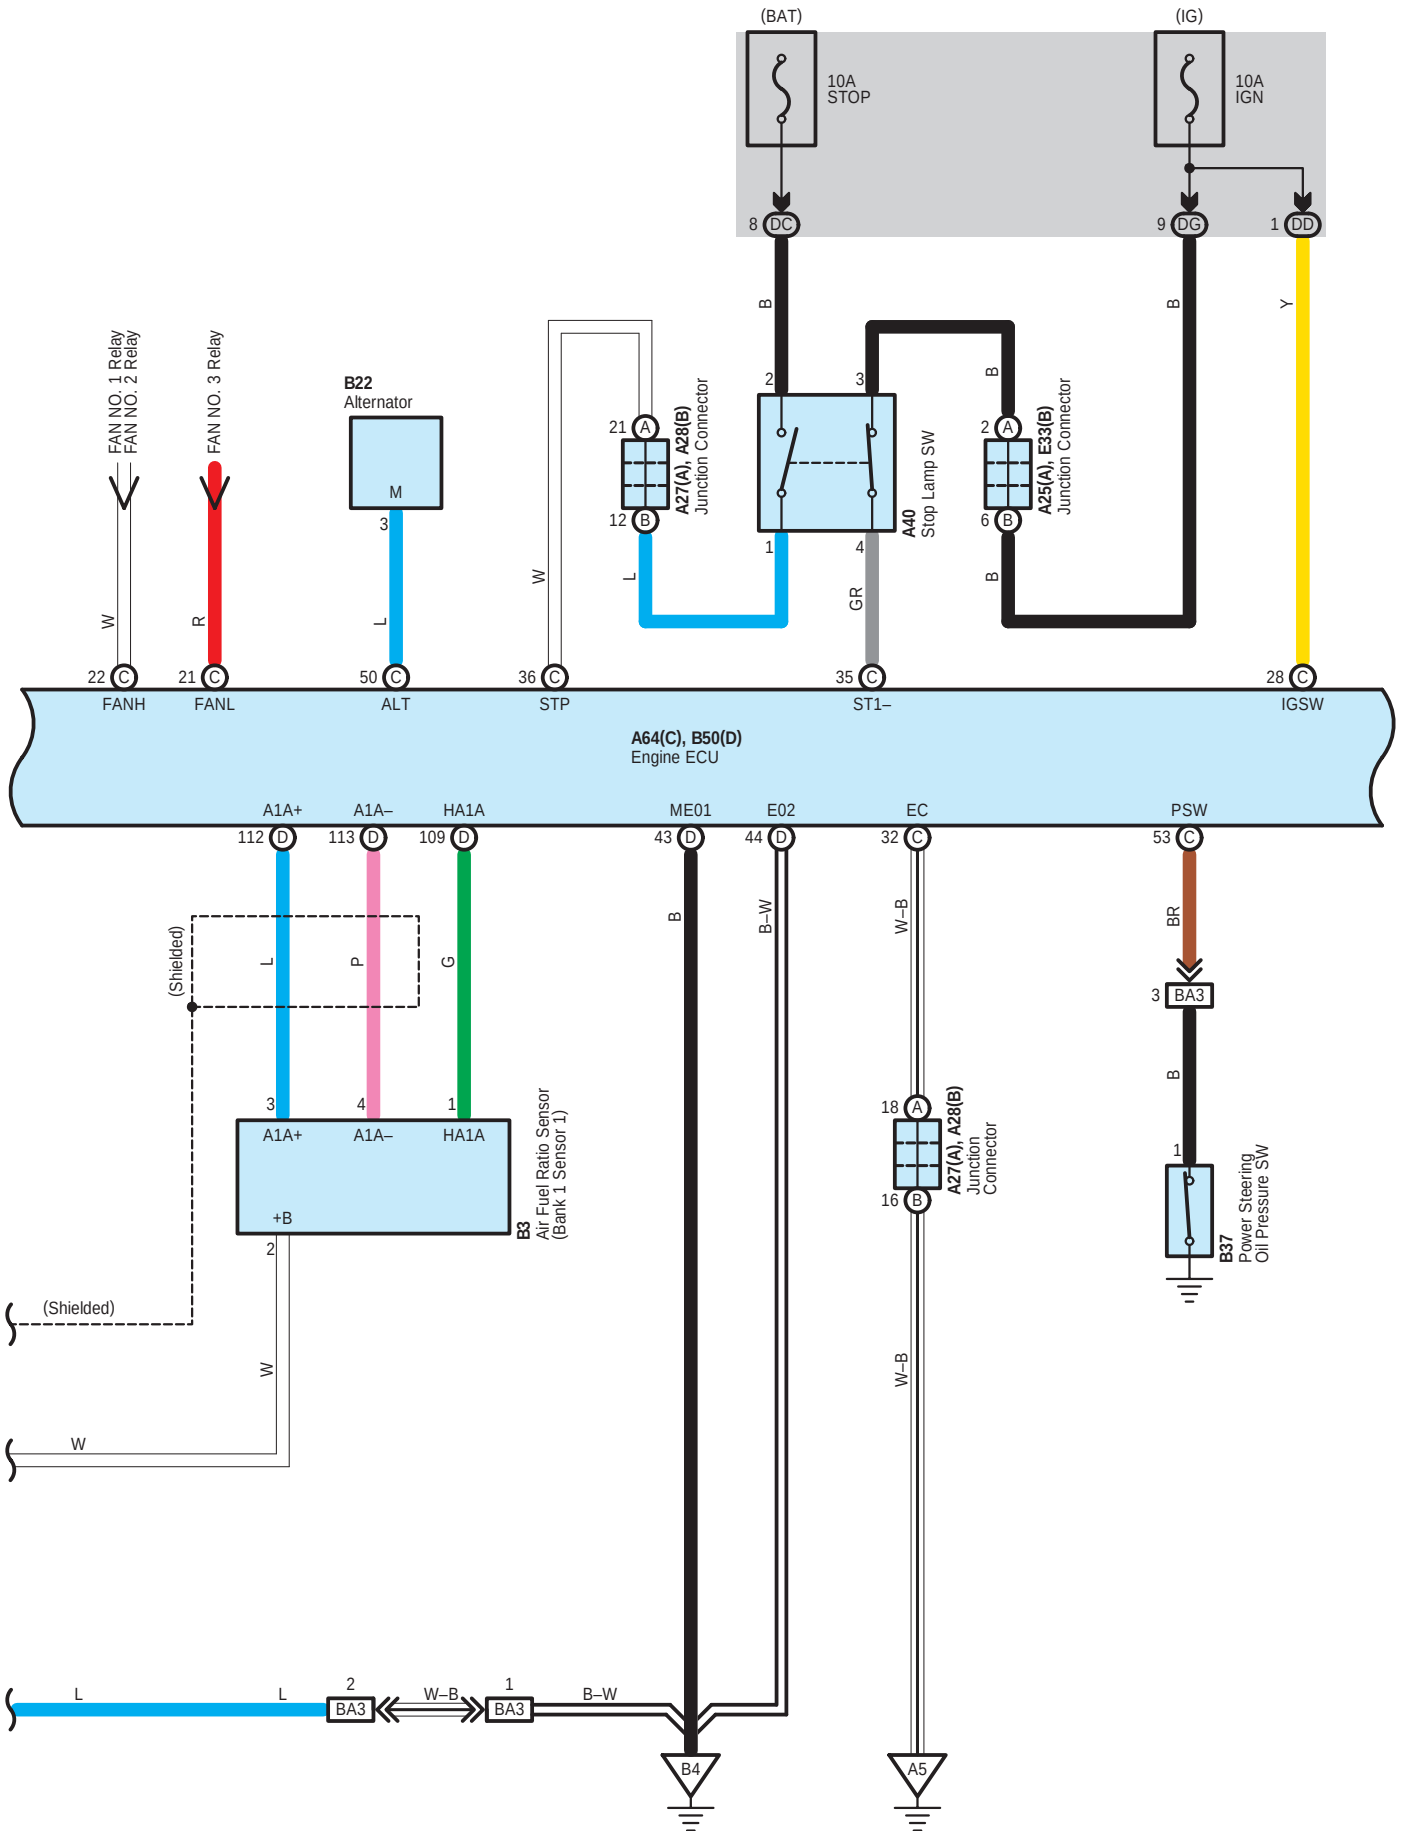


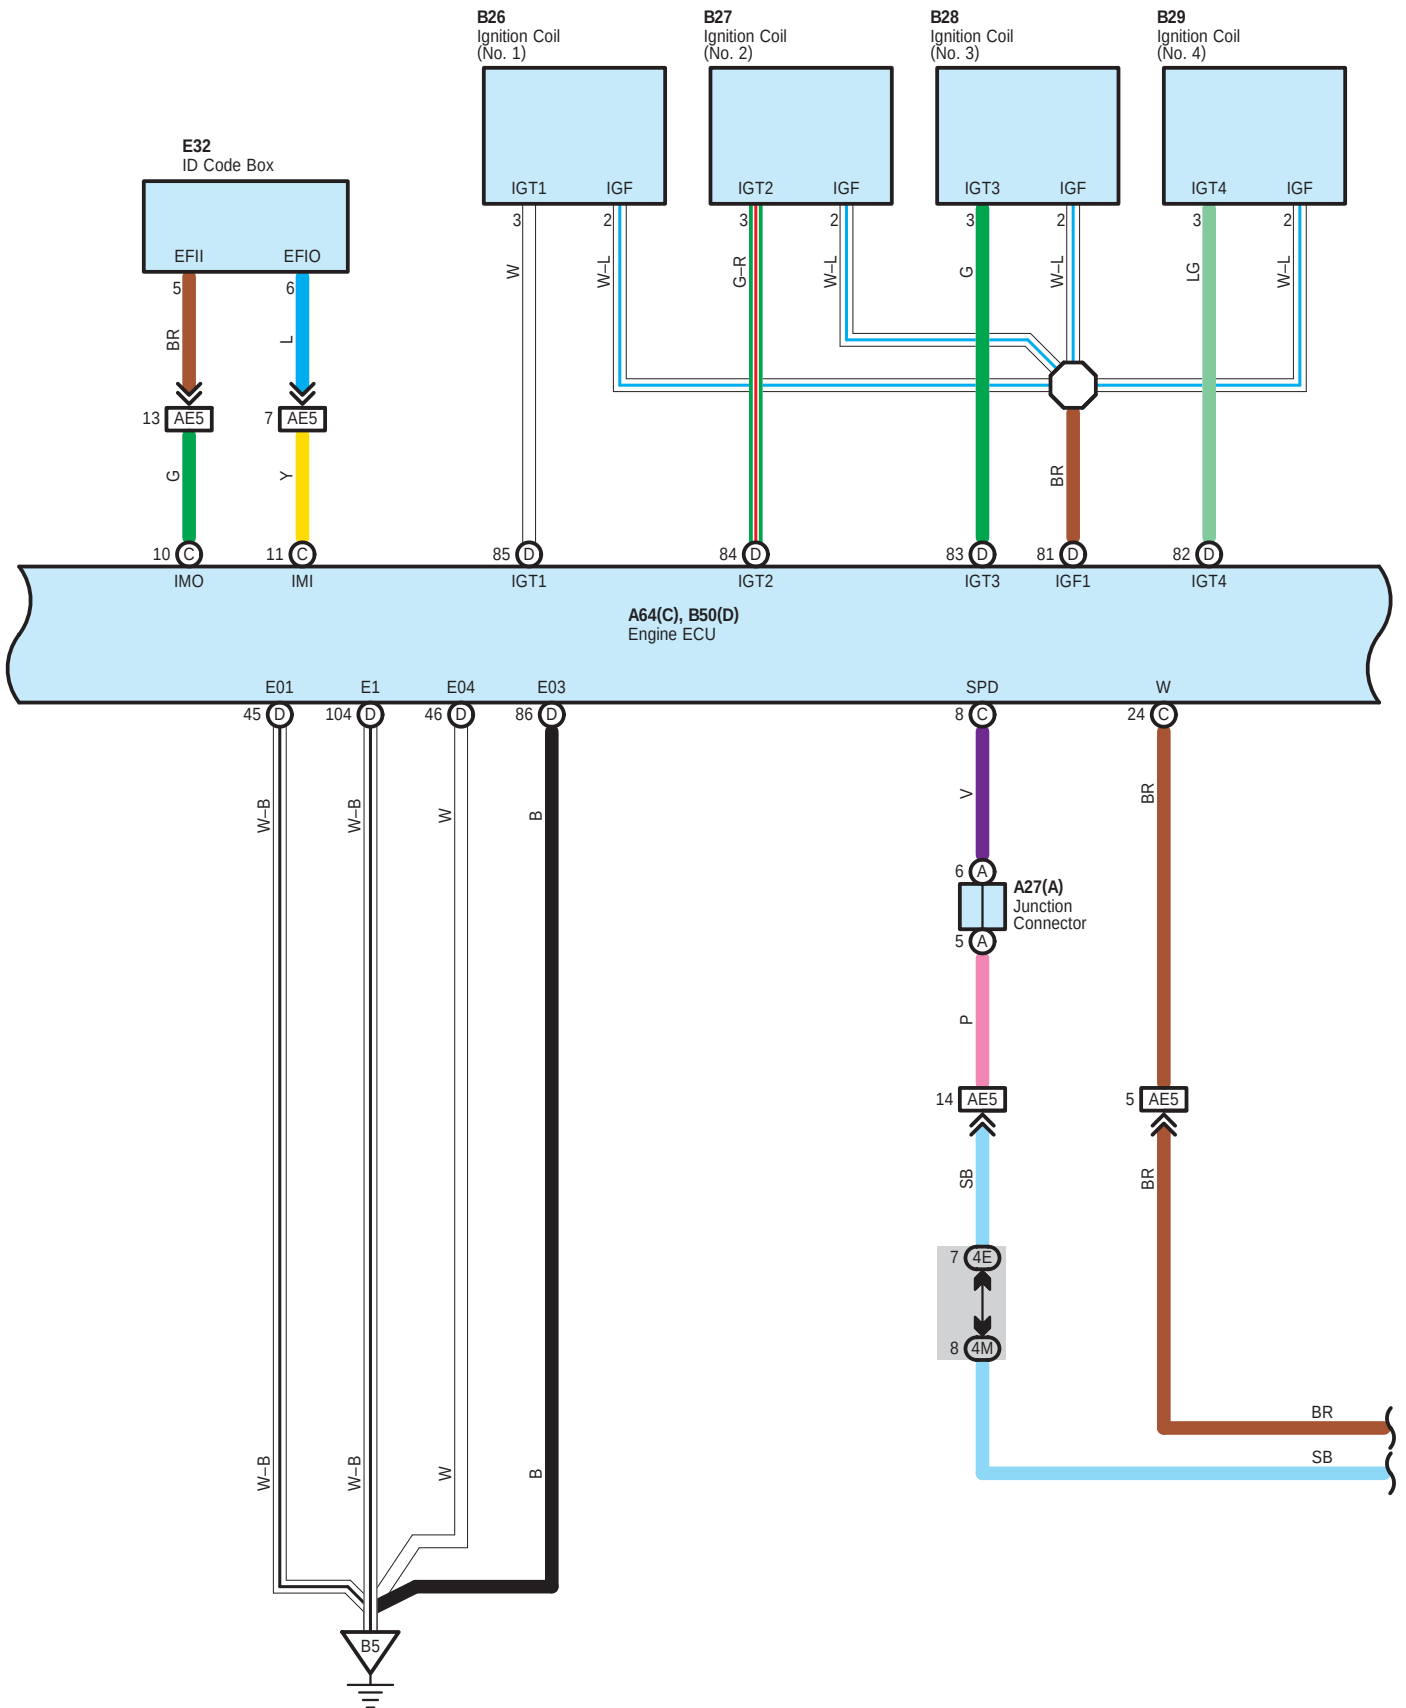

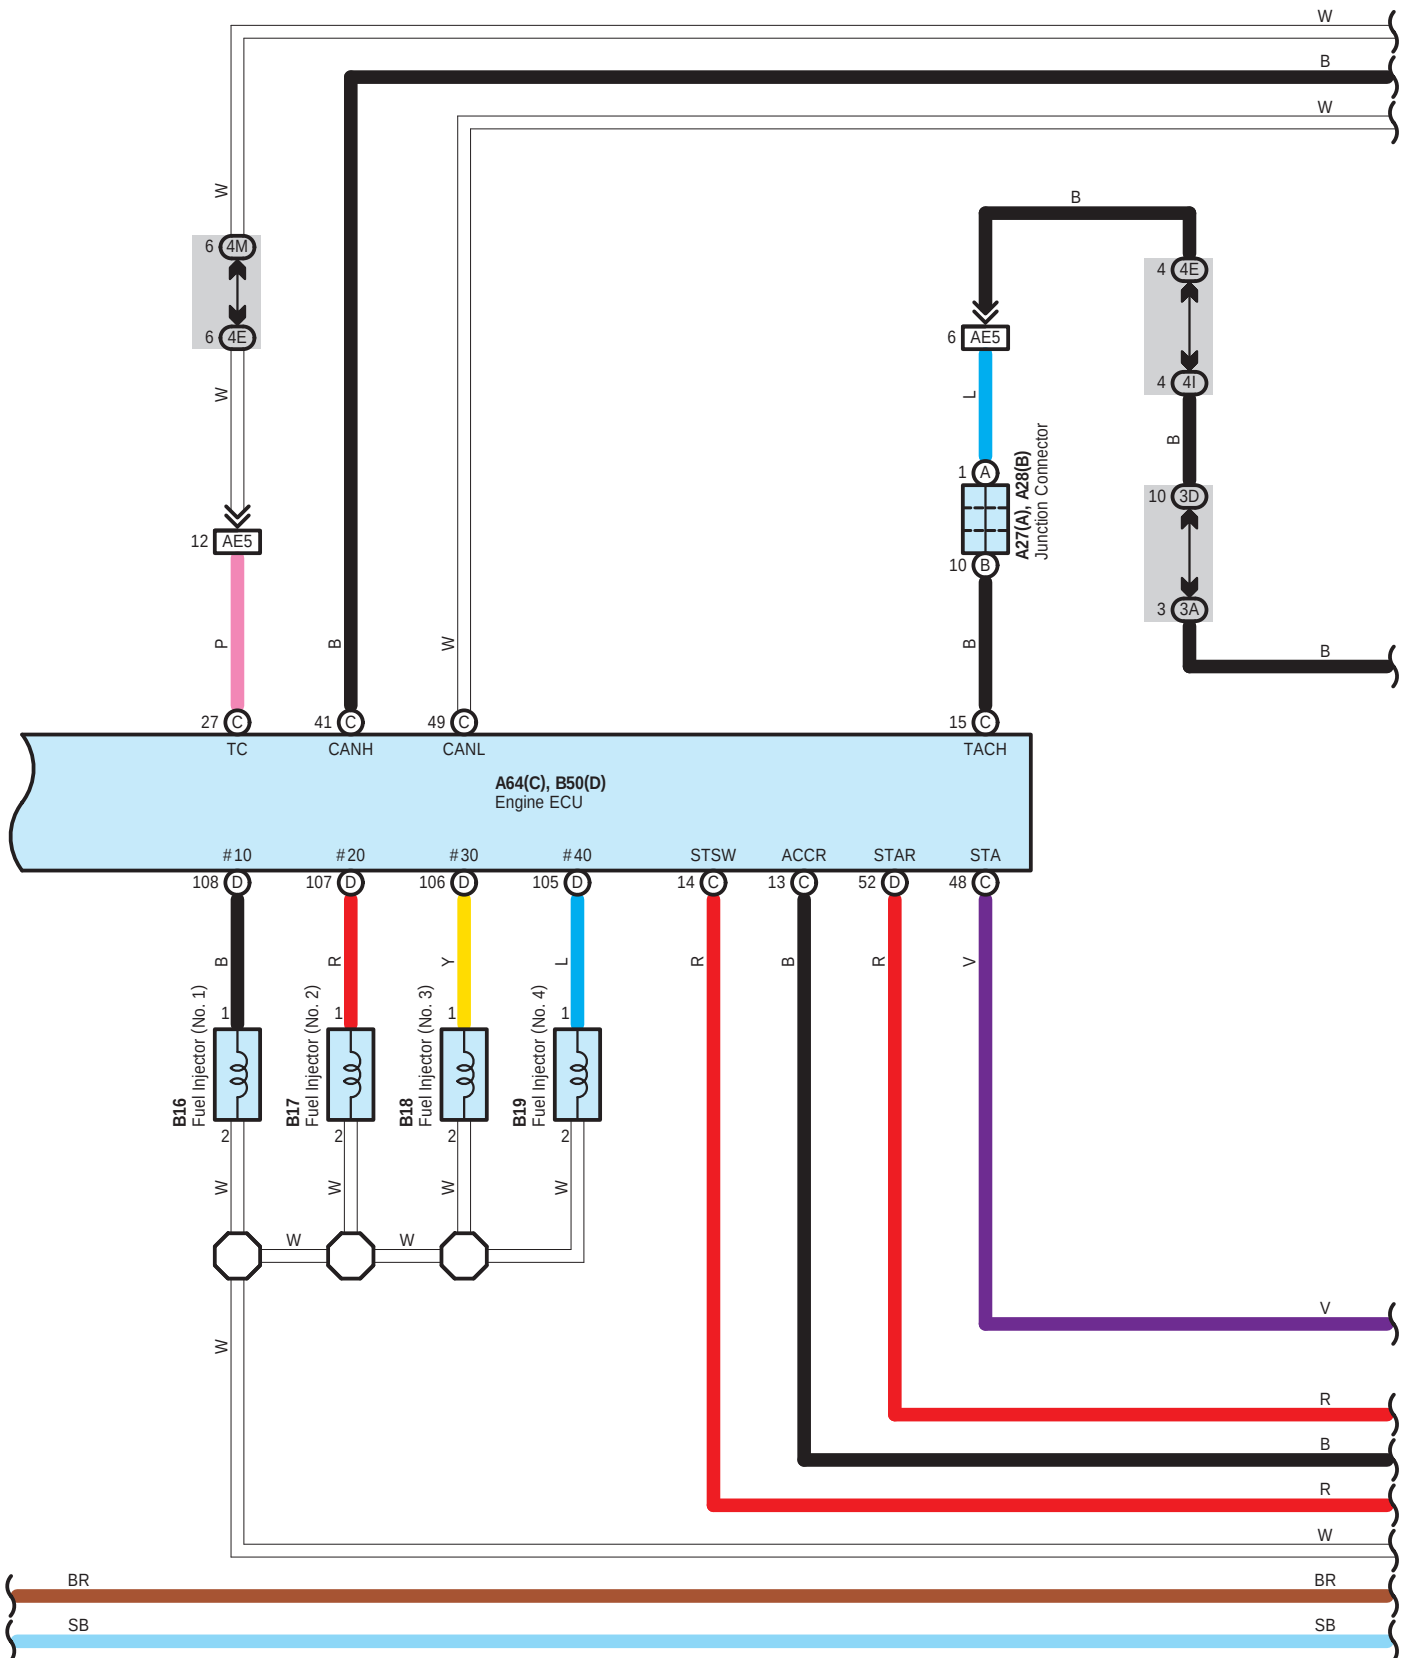

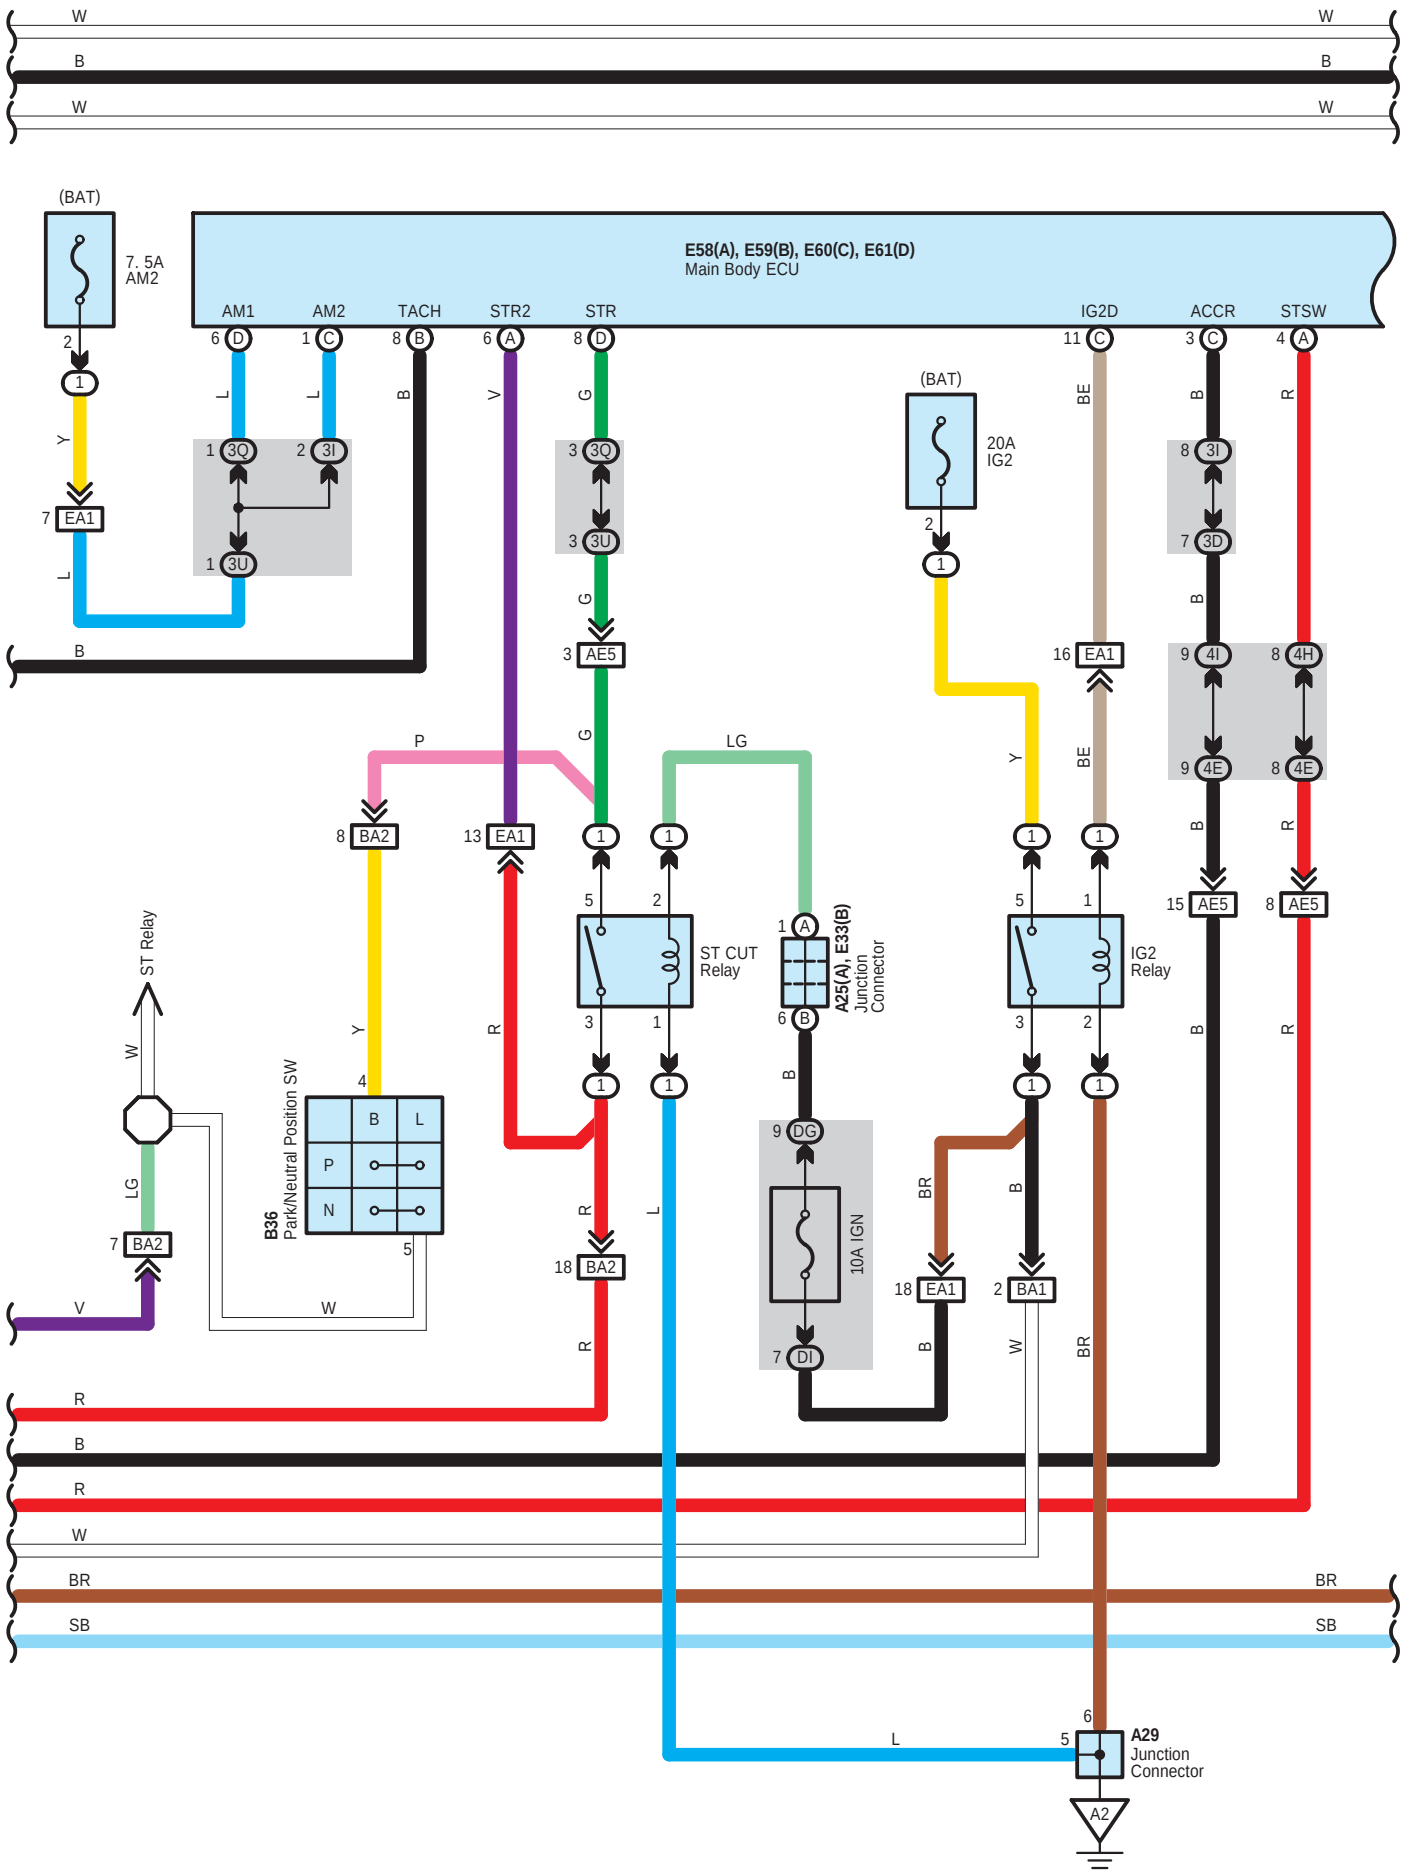


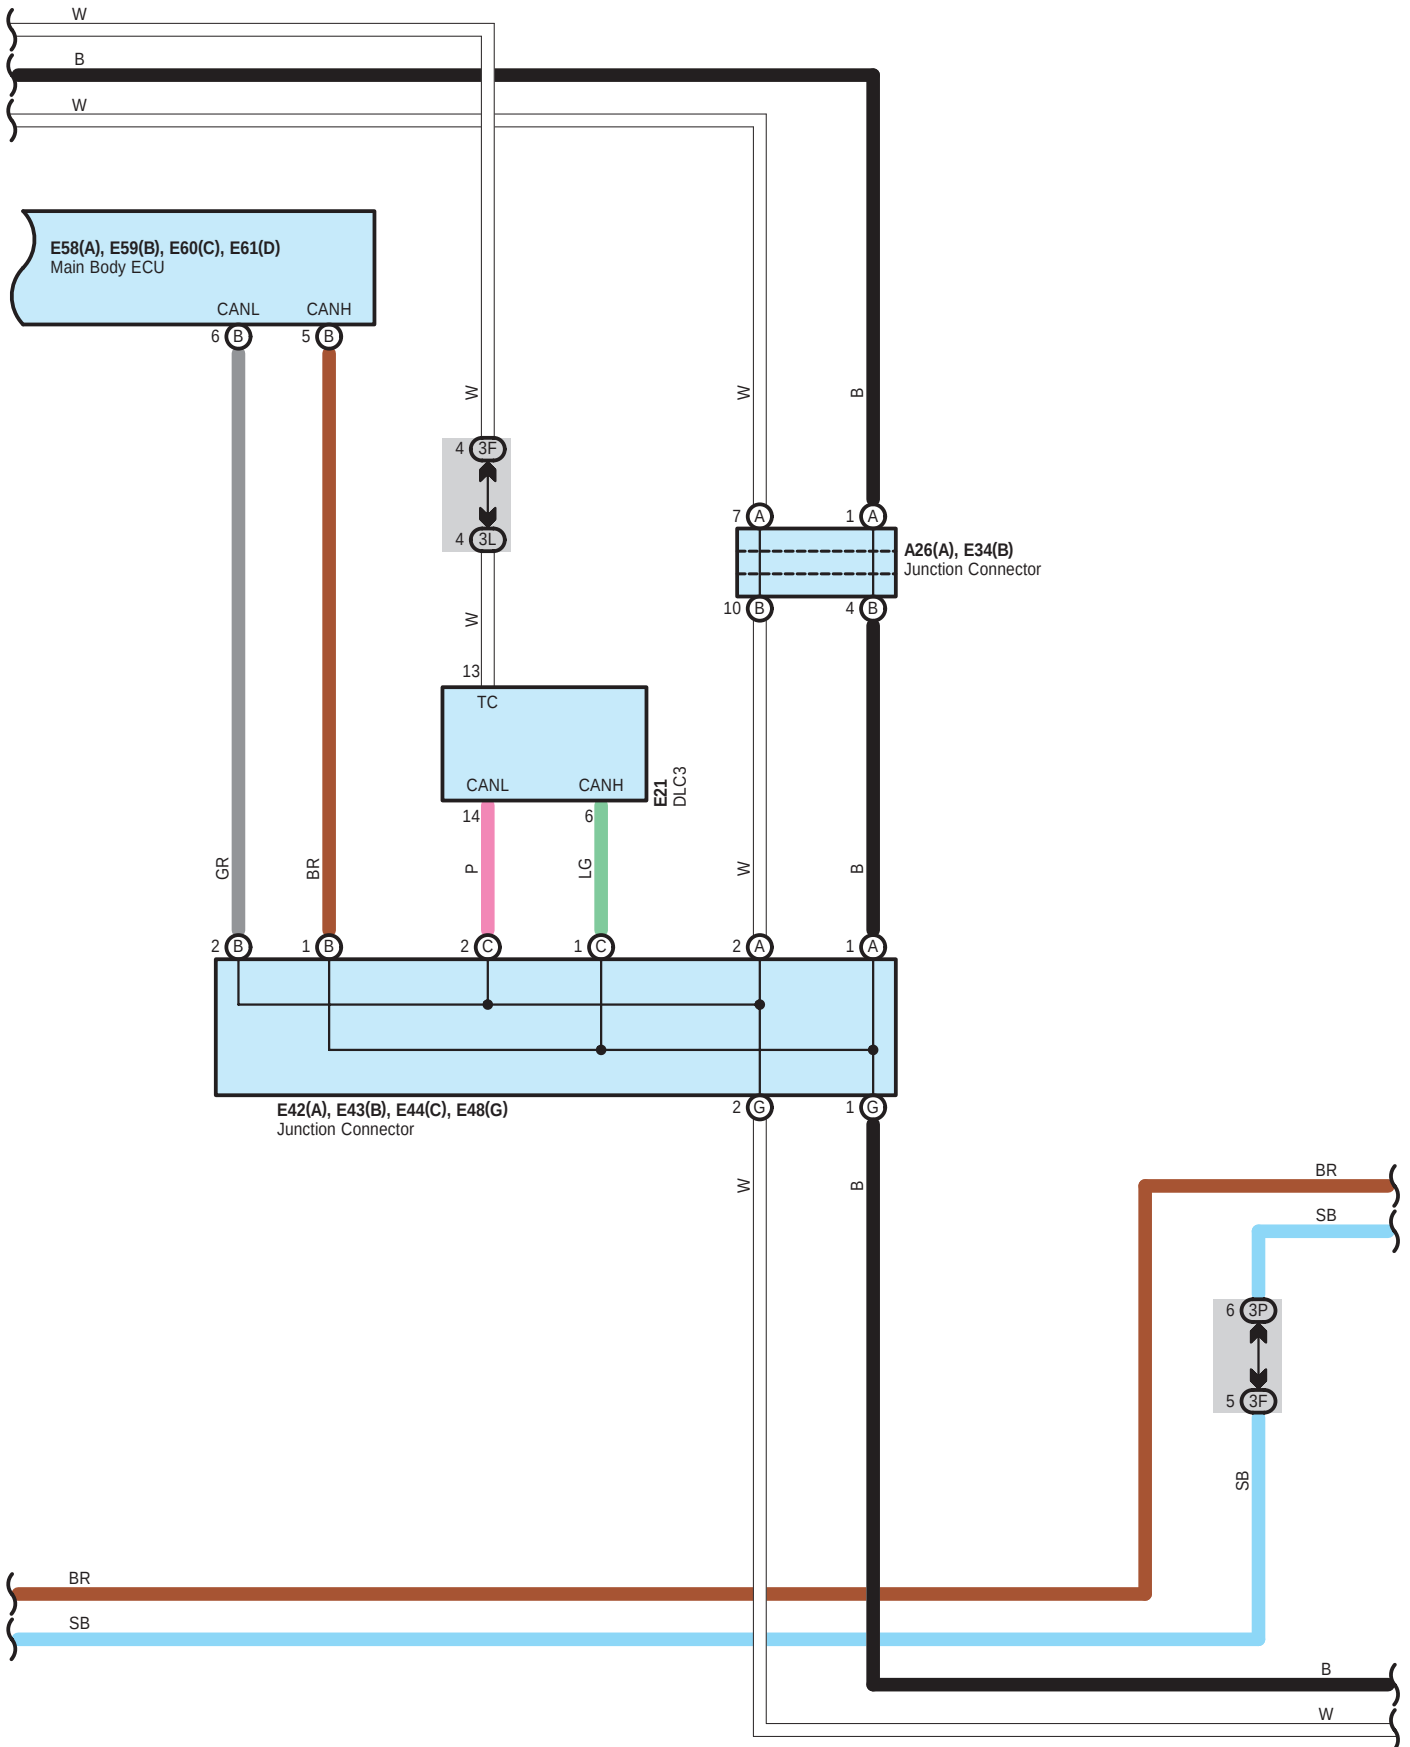

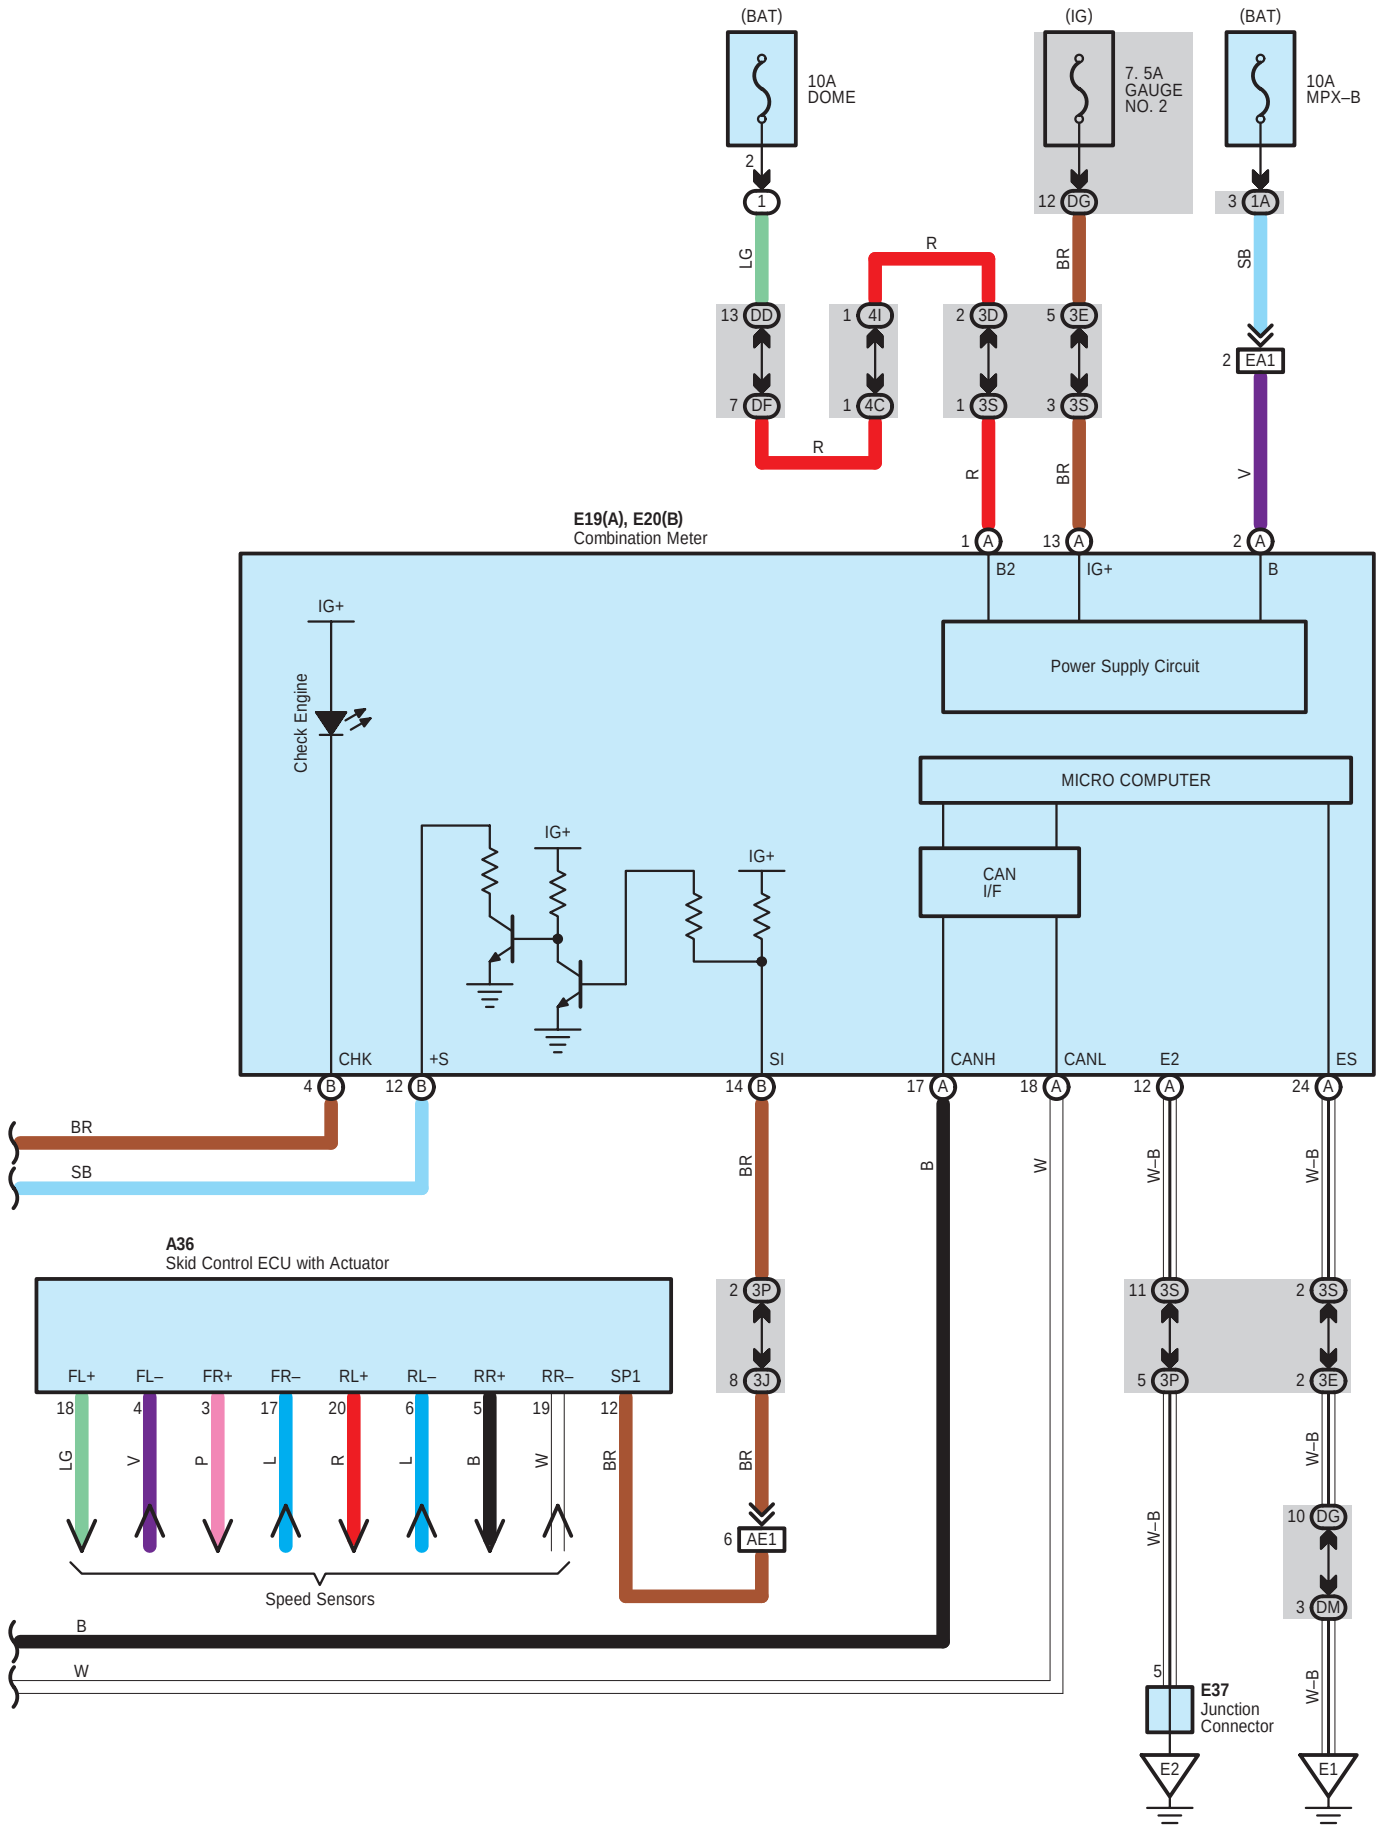


A 2

Black

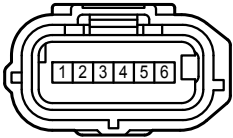


A 25

Black

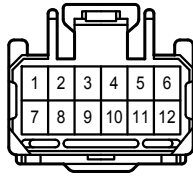


A 26

Blue

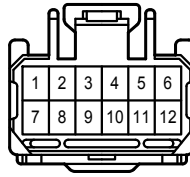


A 27

White

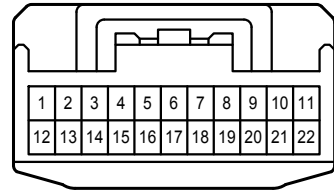

A 28

White

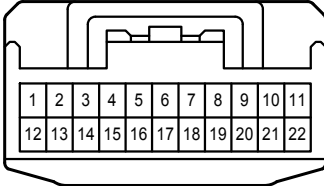


A 29

Gray




A 36

Black

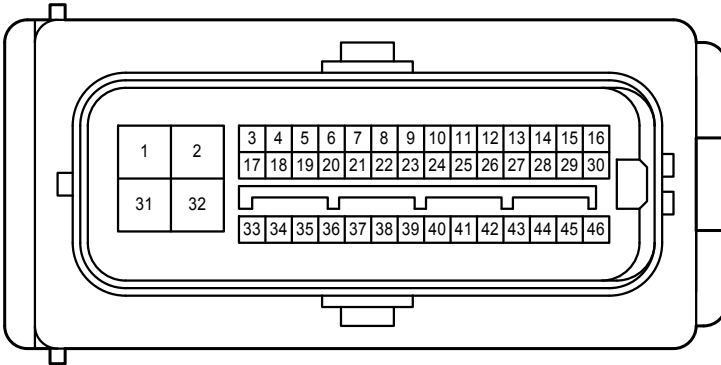


A 40

Blue

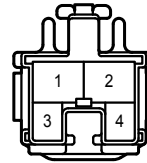

A 64

Black

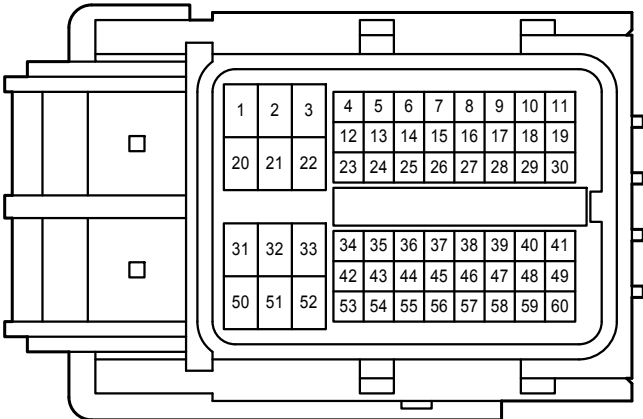

B 3

Dark Gray




B 13

Black




B 16

Gray




B 17

Gray




B 18

Gray



B 19

Gray




B 22


Black




B 26
Black




B 27
Black



B 28
Black




B 29
Black



B 33
Black




B 36
Gray

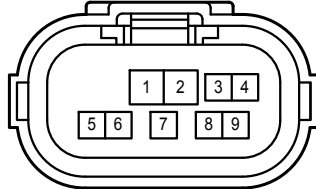


B 37
Black



B 39
Black

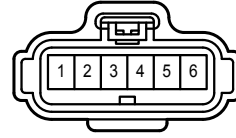

B 42
Black

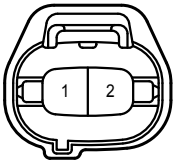


B 48
Black




B 49
White



B 50
Black

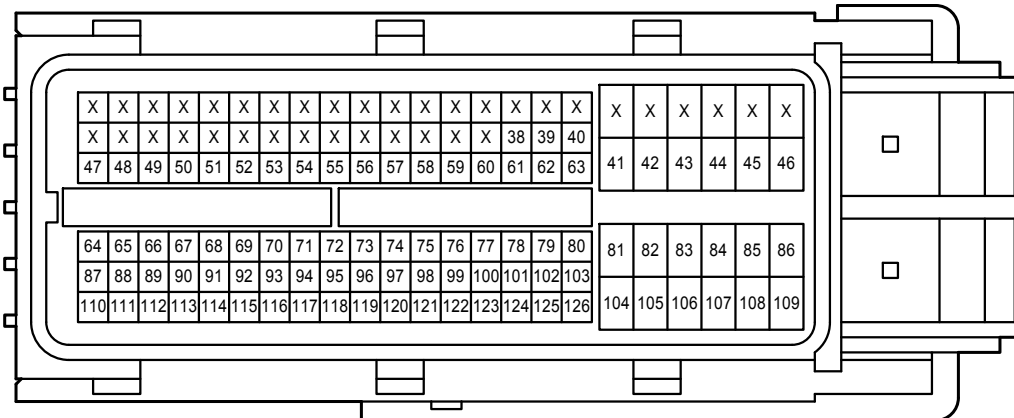

B 54
Gray




B 55
Black




B 56
Black




















E 19
White

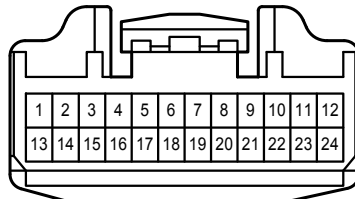


E 20
White

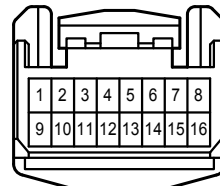


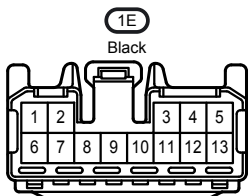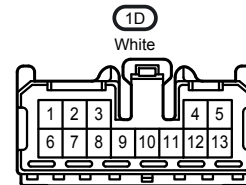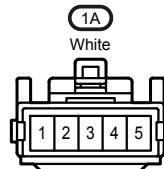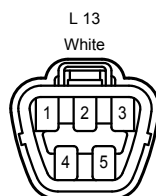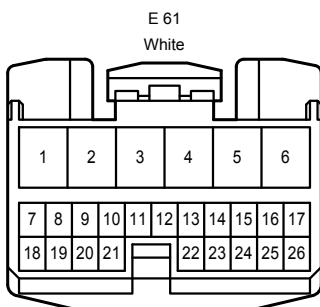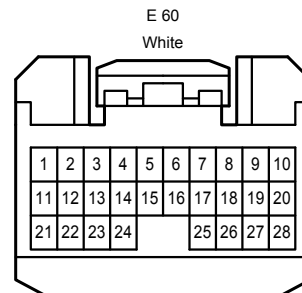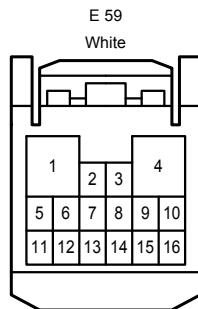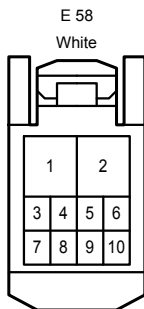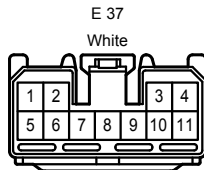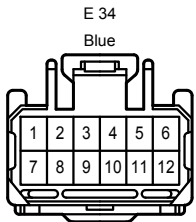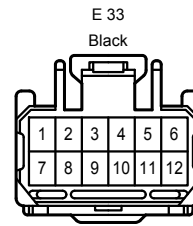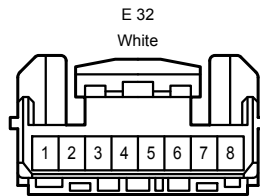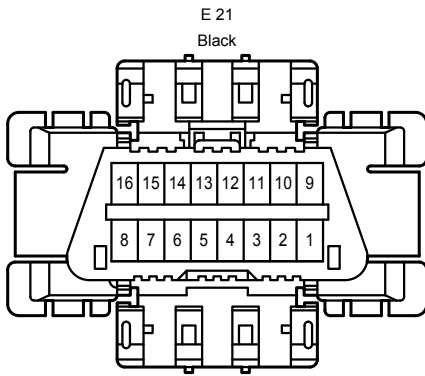


3I
White




3J
Gray




3L
Gray




3P
White




3Q
Gray




3S
Gray




3U
Gray




4C
White




4E
White




4H
Gray




4I
White




4M
White




DC
White

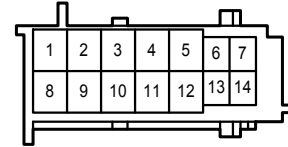


DD
White

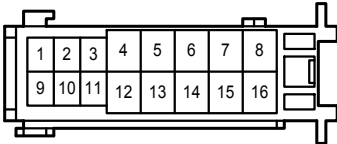


DF
White

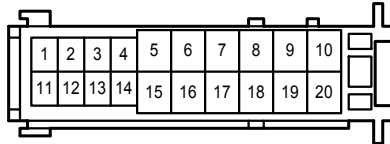


DG
White

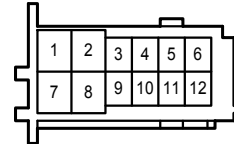


DI
White

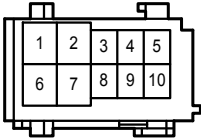


DM
White

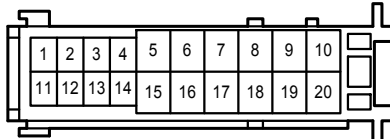


AE1
Gray

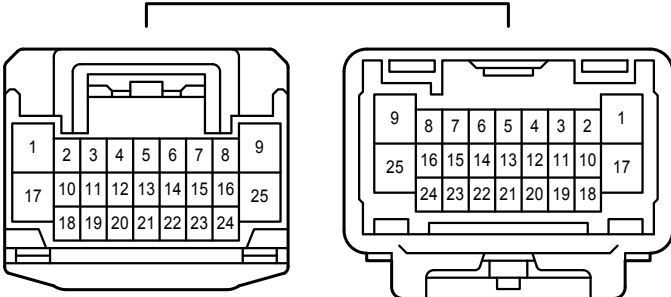

AE5
White

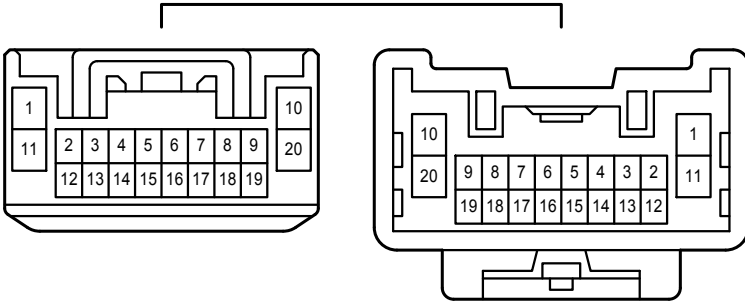


BA1
White

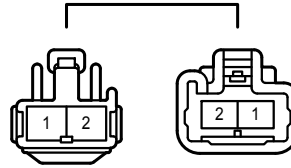


BA2


Black White

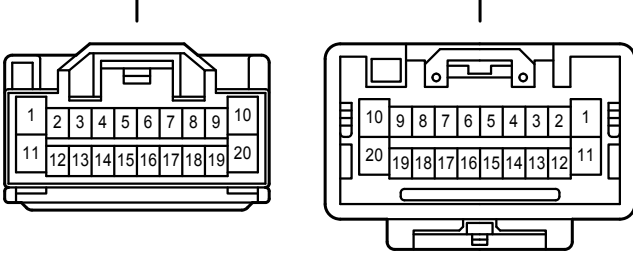

BA3
White

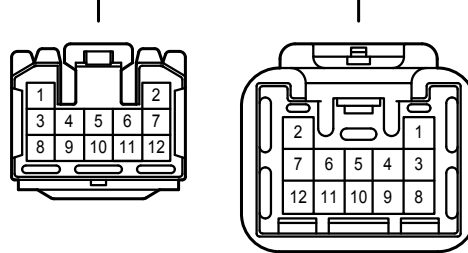

EA1
White

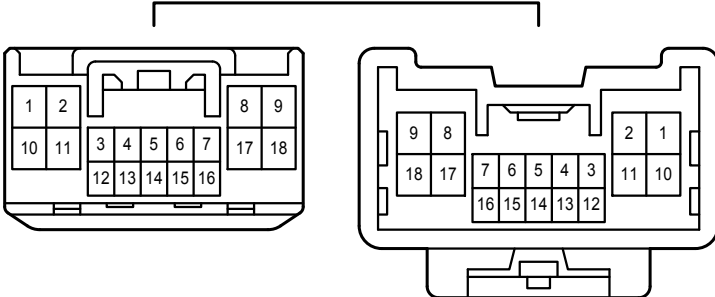

LA1
Black

