





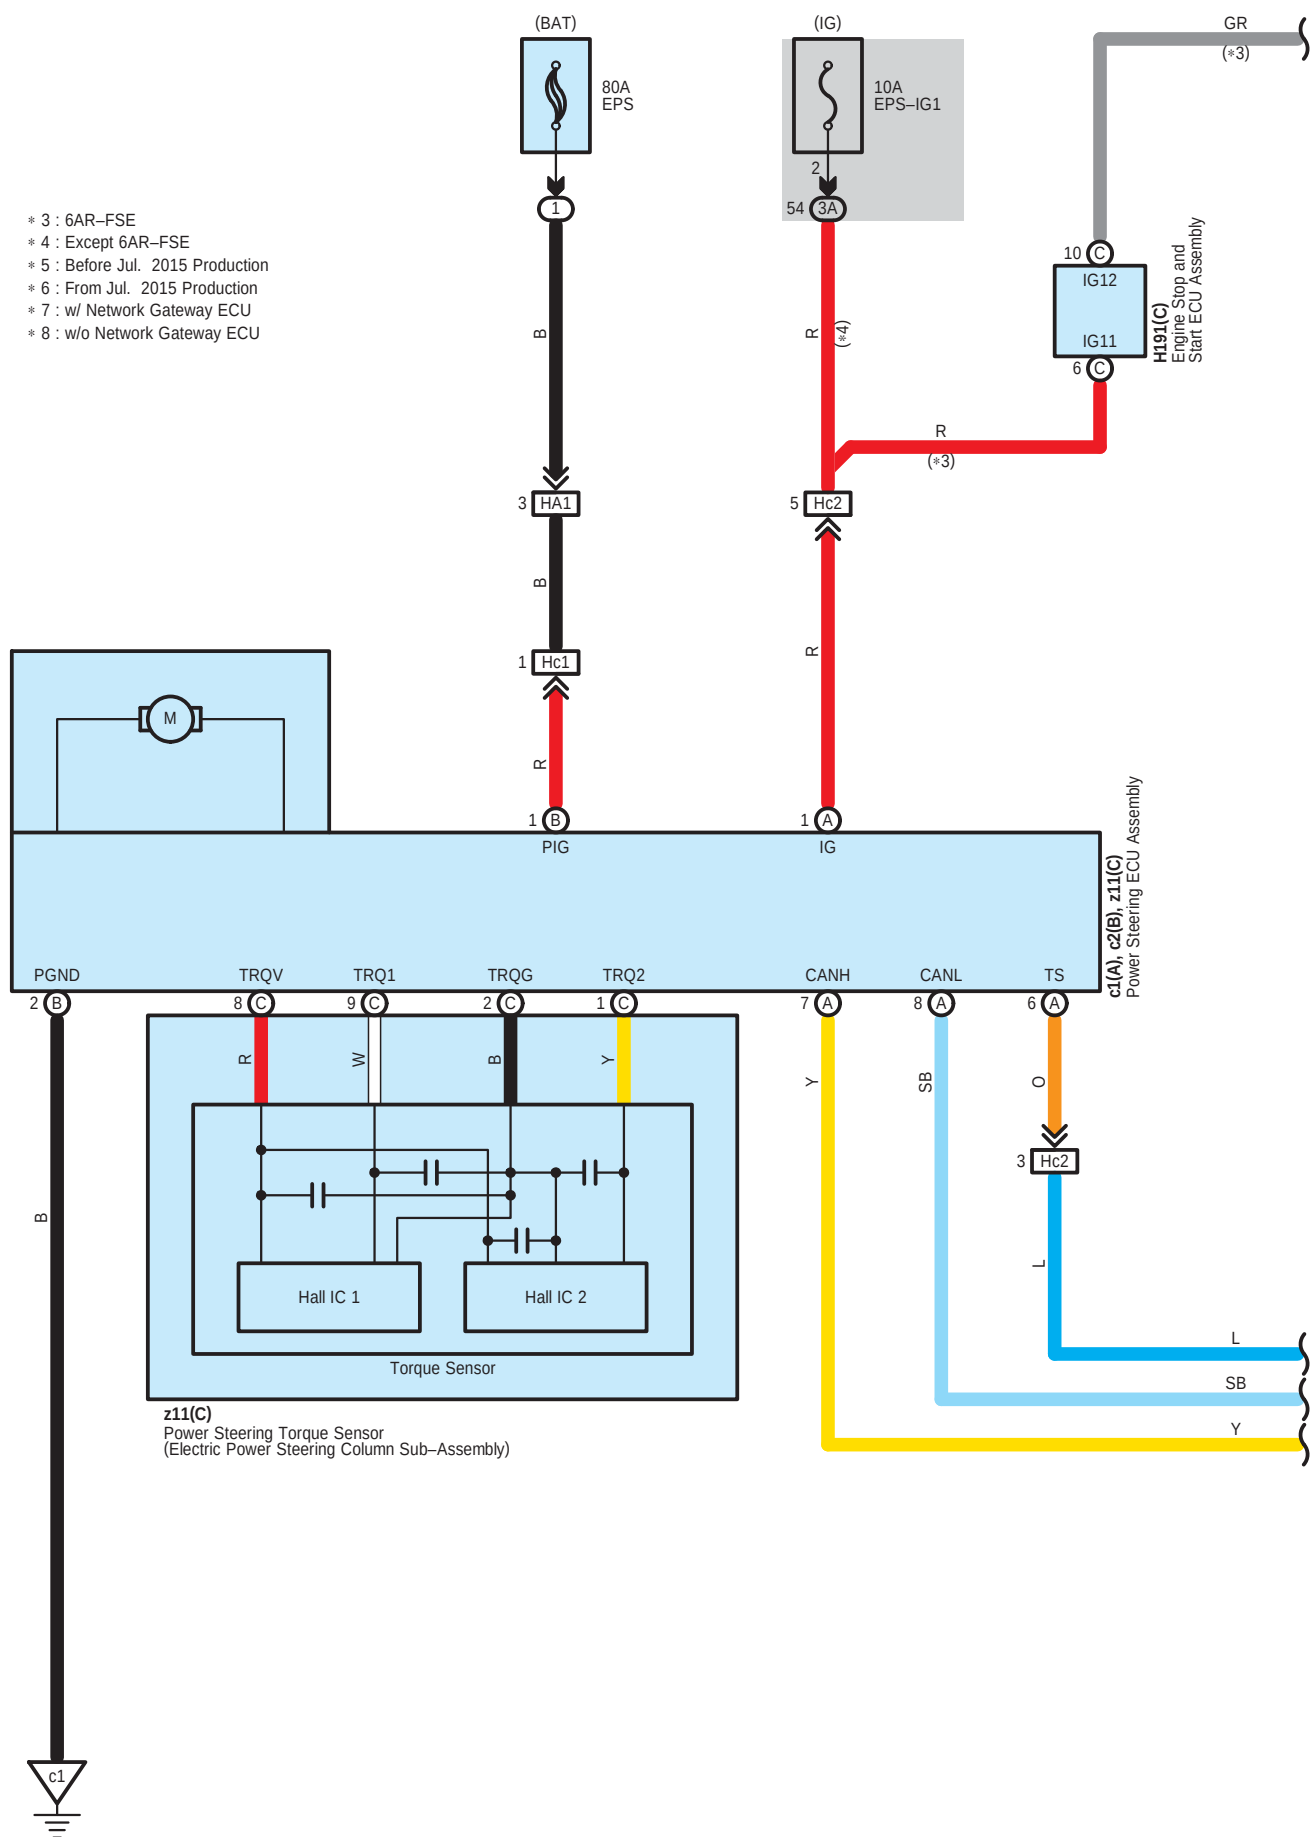


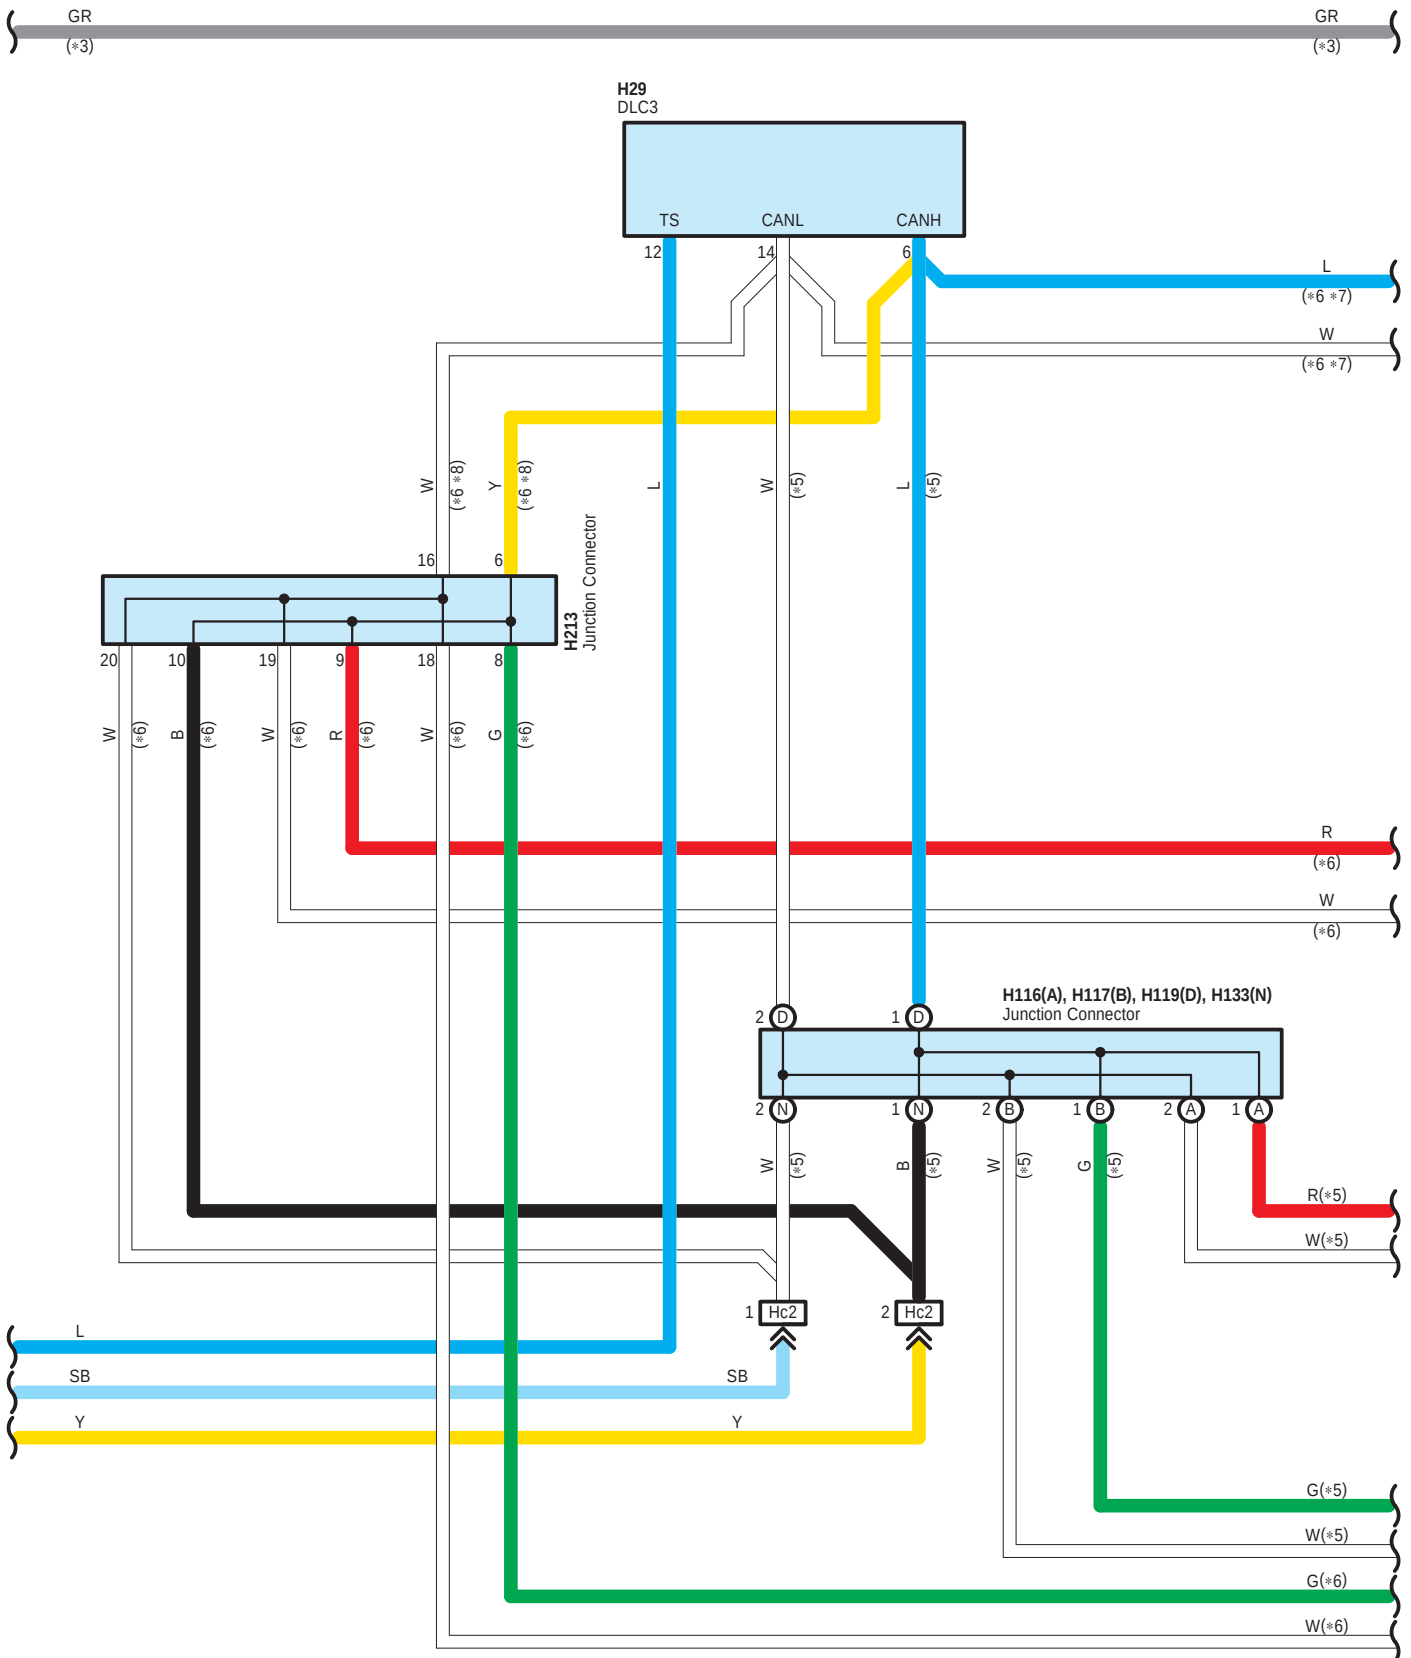

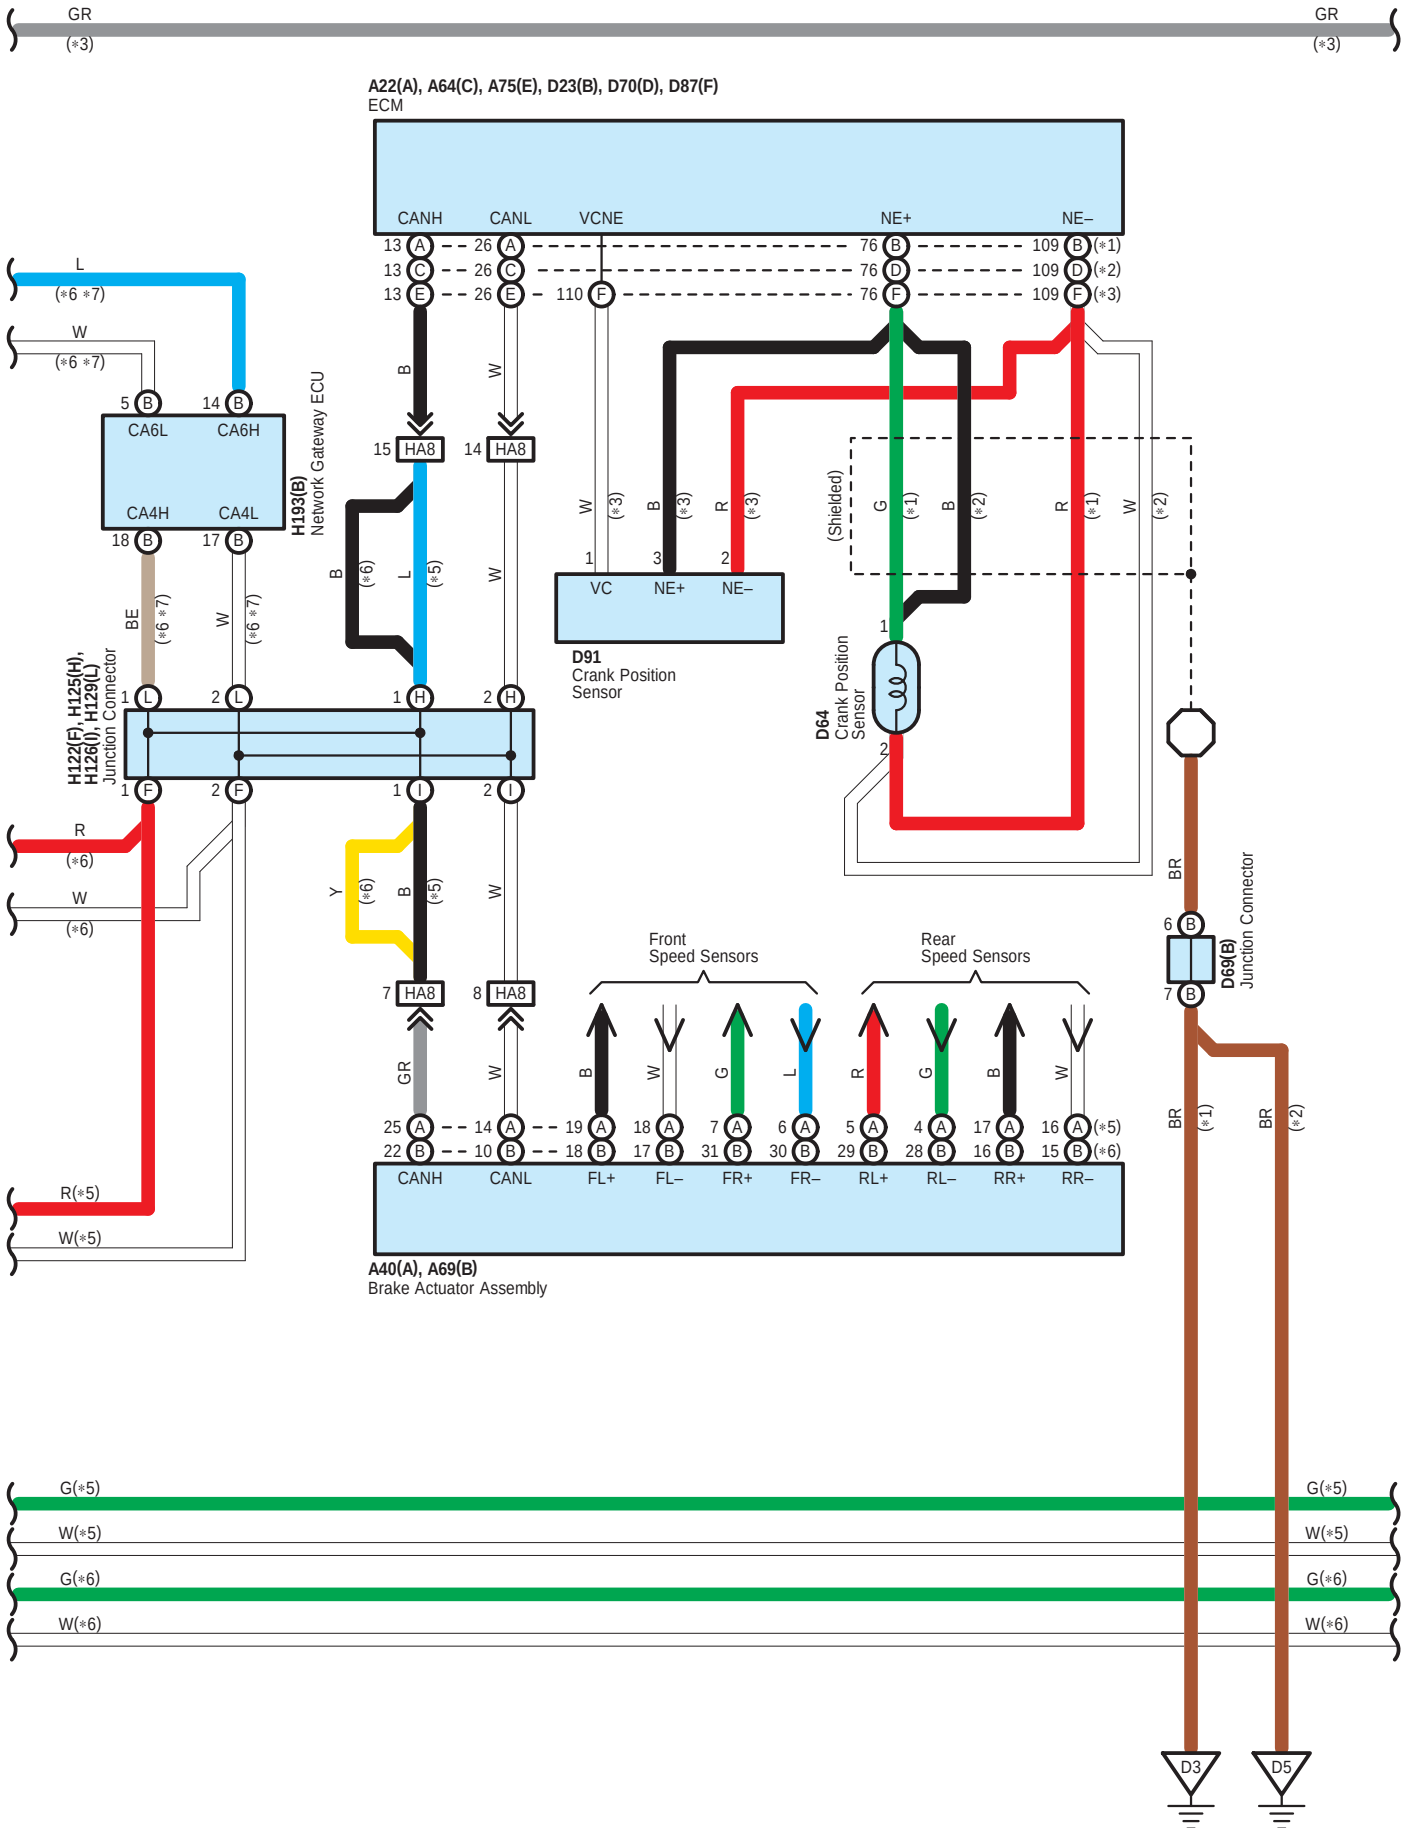


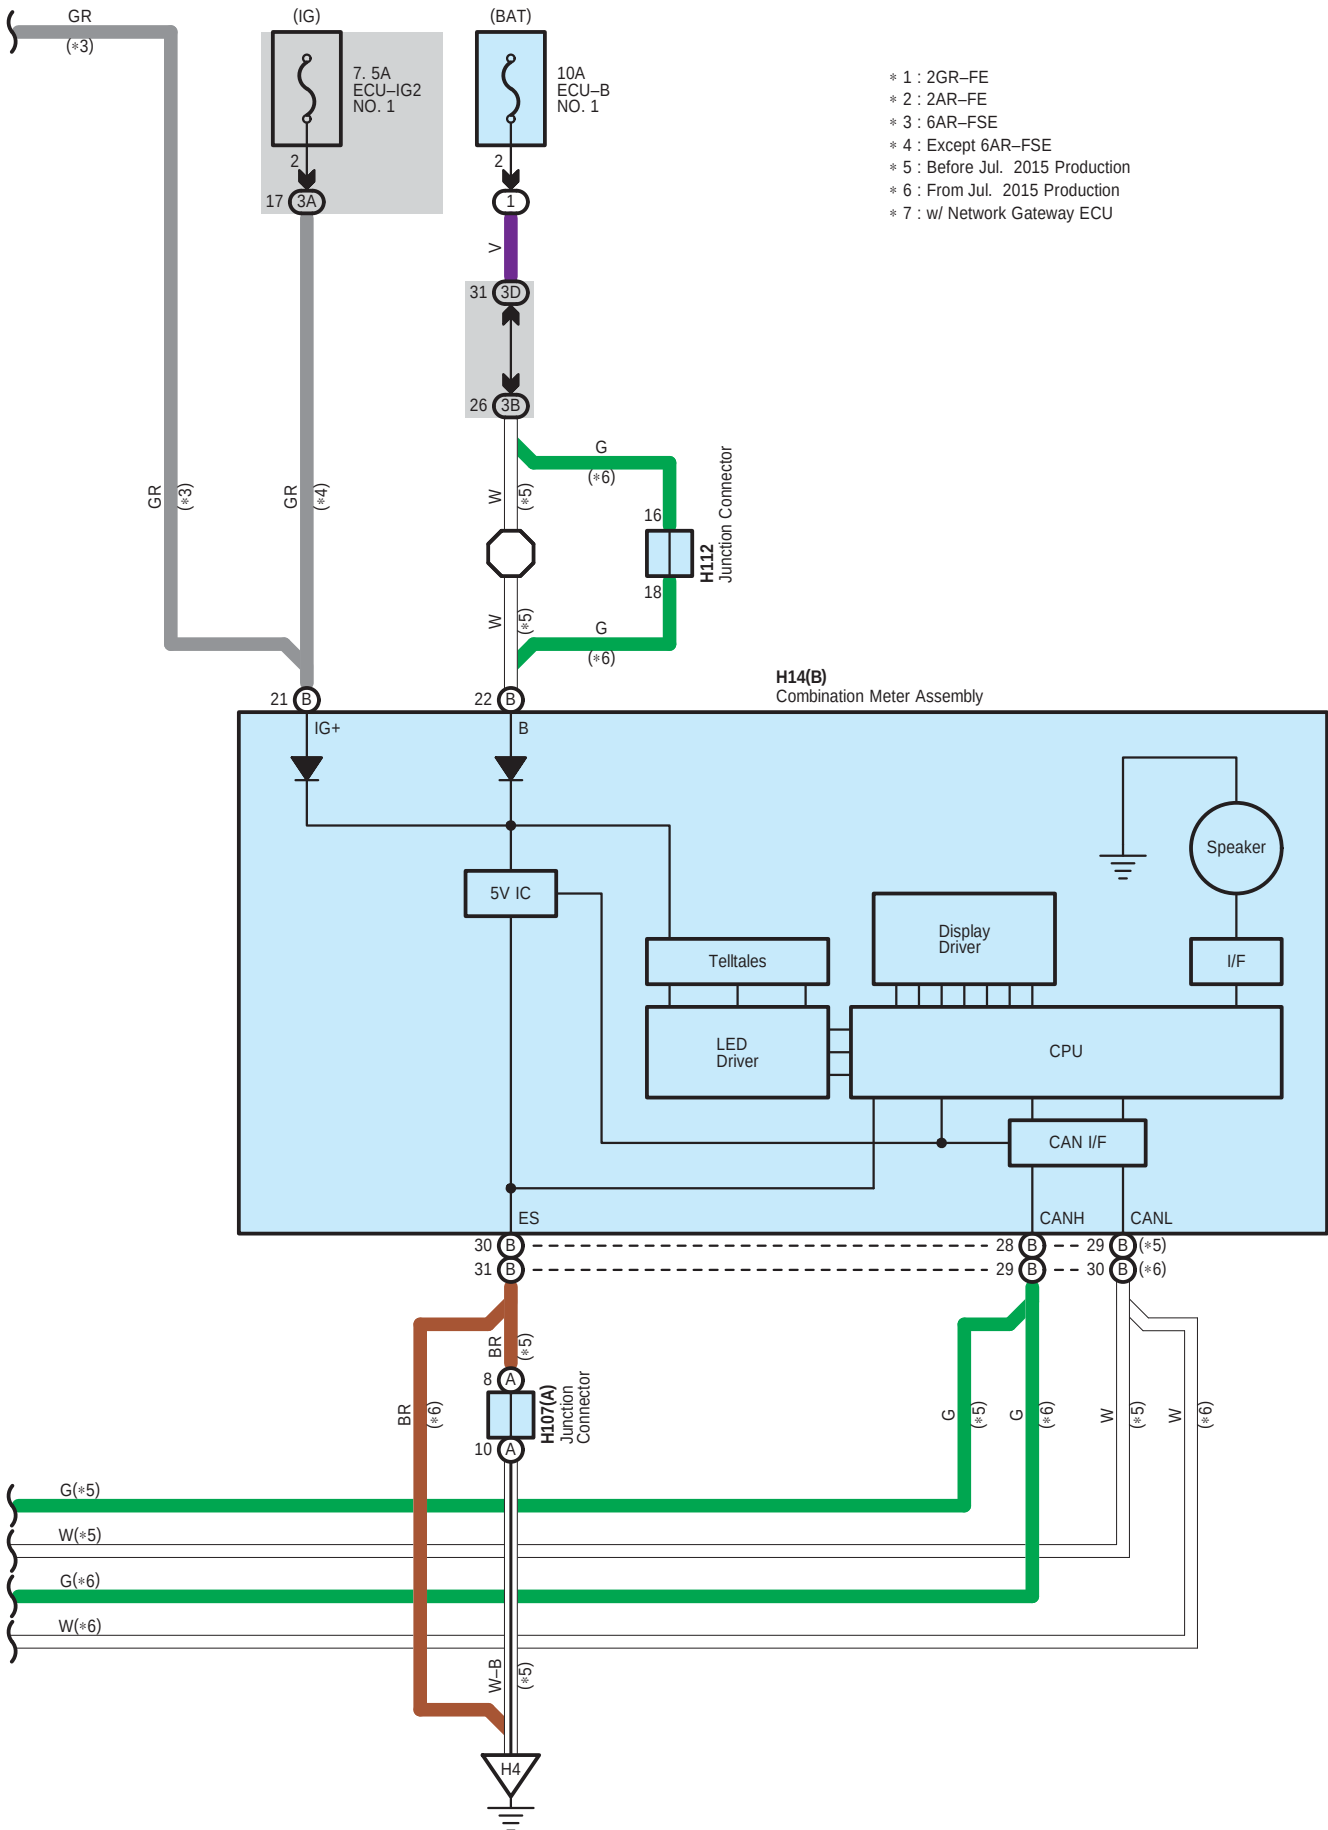


A 22
Black

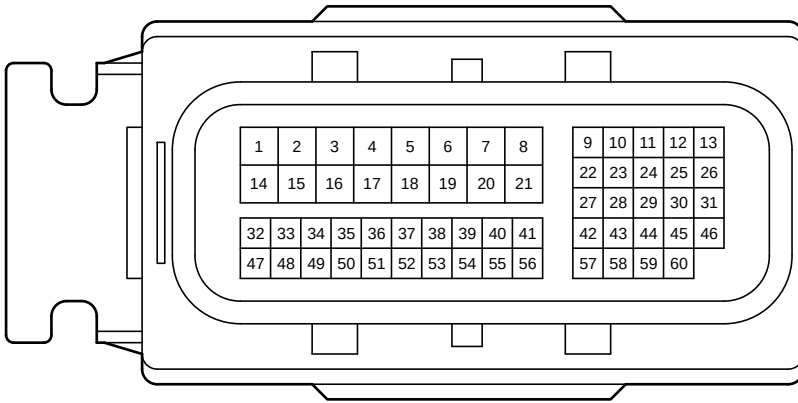


A 40
Black

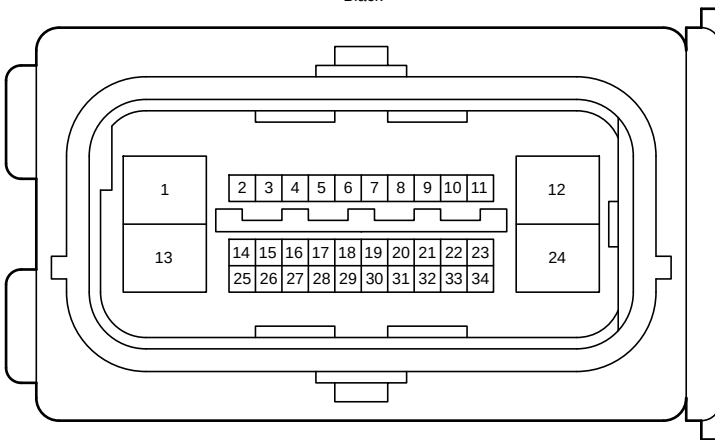


A 64
Black

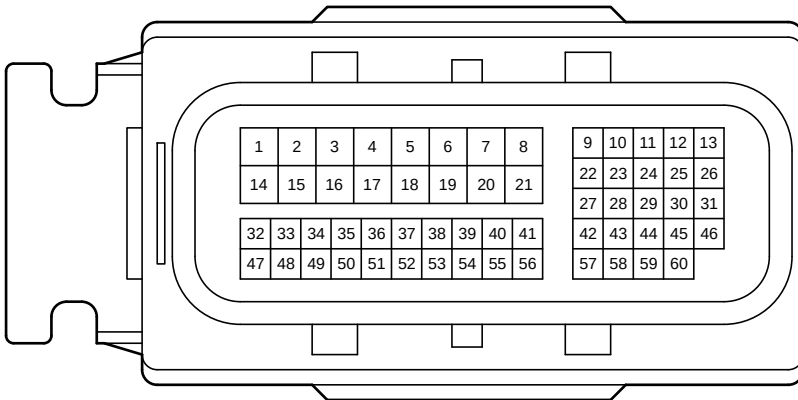


A 69
Black

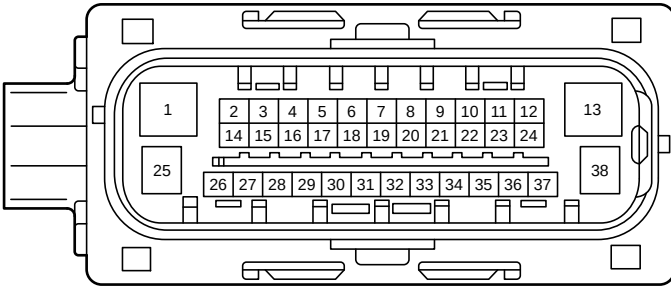


A 75
Black

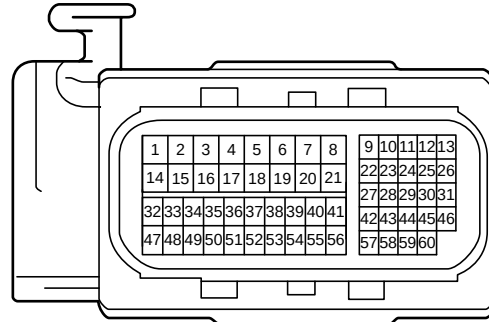


D 23
Black

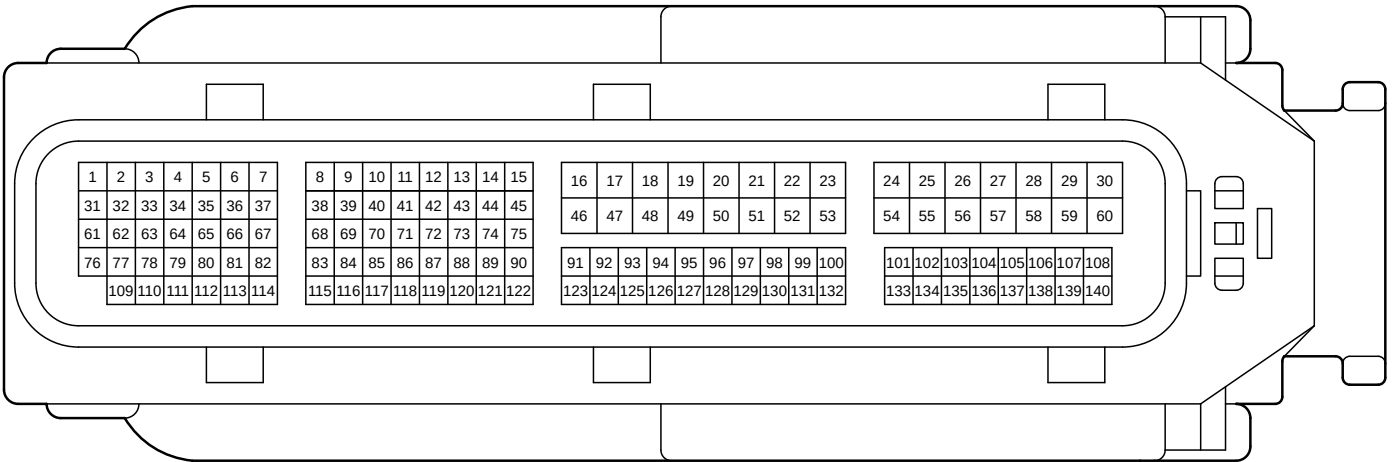


D 64
Black

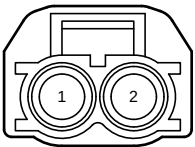


D 69
White

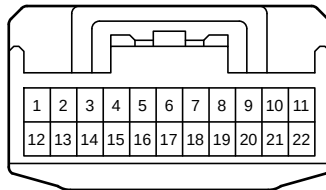


D 70
Black

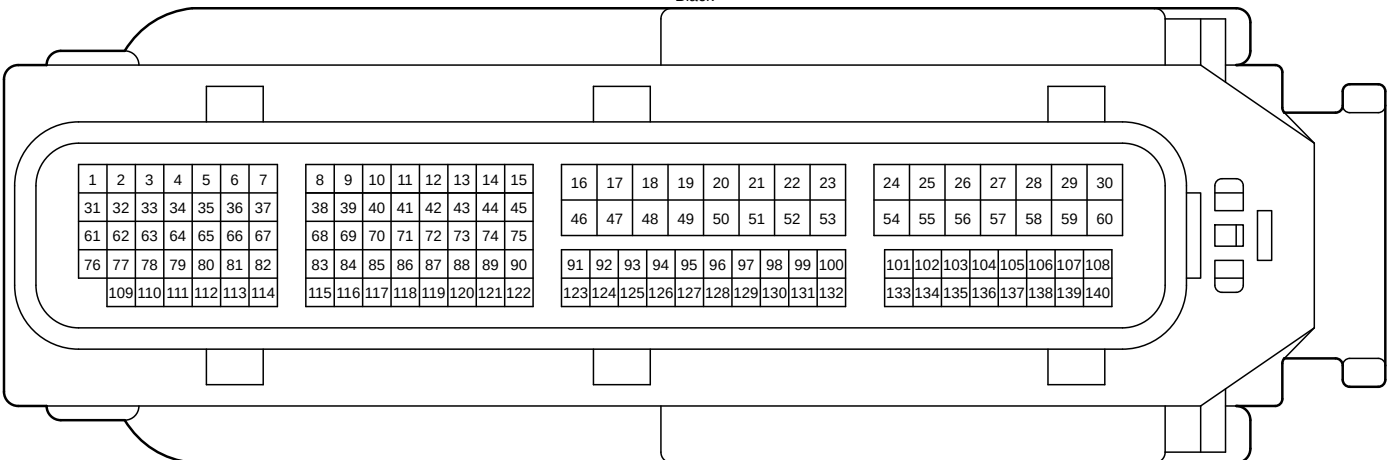


D 87
Black

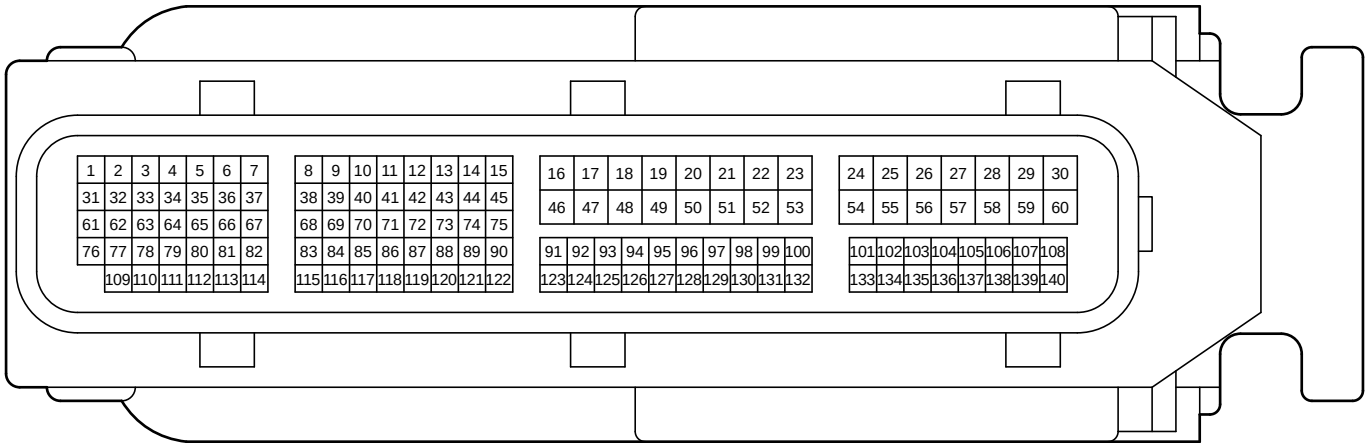


D 91
Black

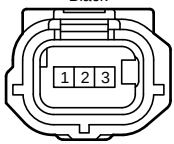


H 14
Black

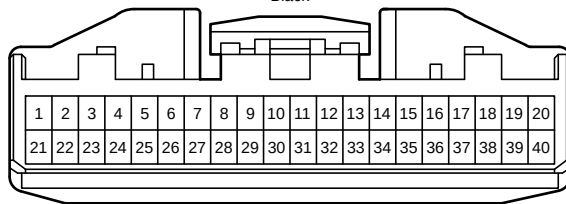


H 29
Black

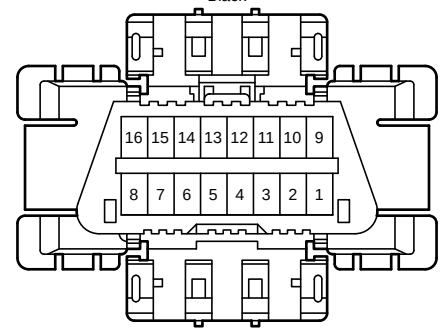

H107
Gray

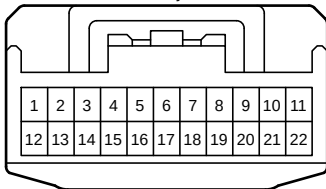


H112
White

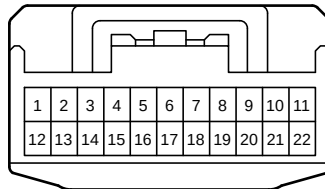


H116
White




H117
White




H119
White




H122
White




H125
White




H126
White




H129
White




H133
White




H191
Black

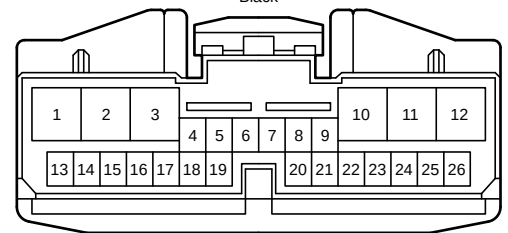


H193
Black

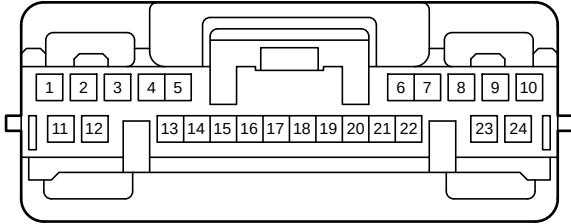


H213
White

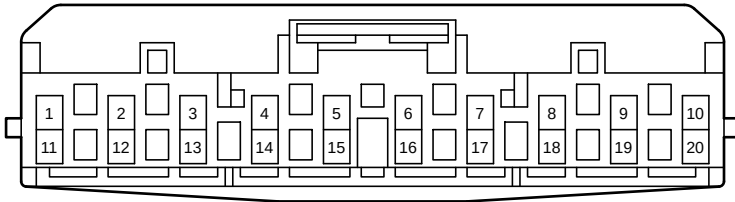


c 1
Black

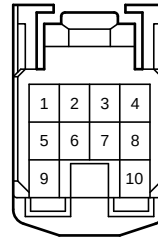


c 2
White

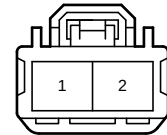


z 11
White

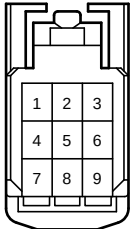


3A
White

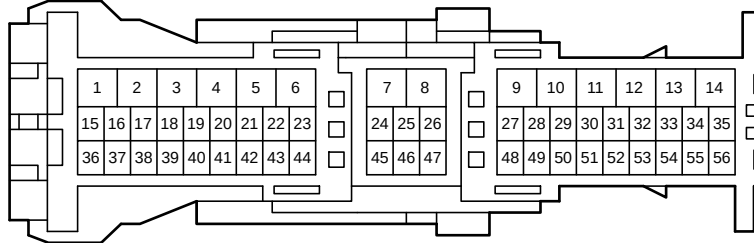


3B
White

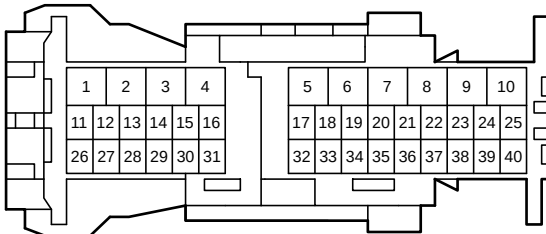

3D
White

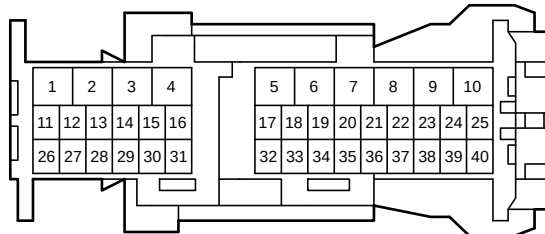

HA1
Gray

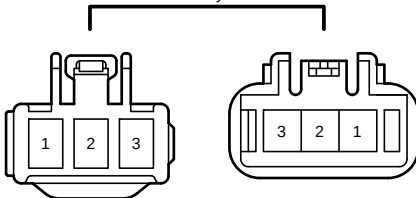

HA8
Gray

