





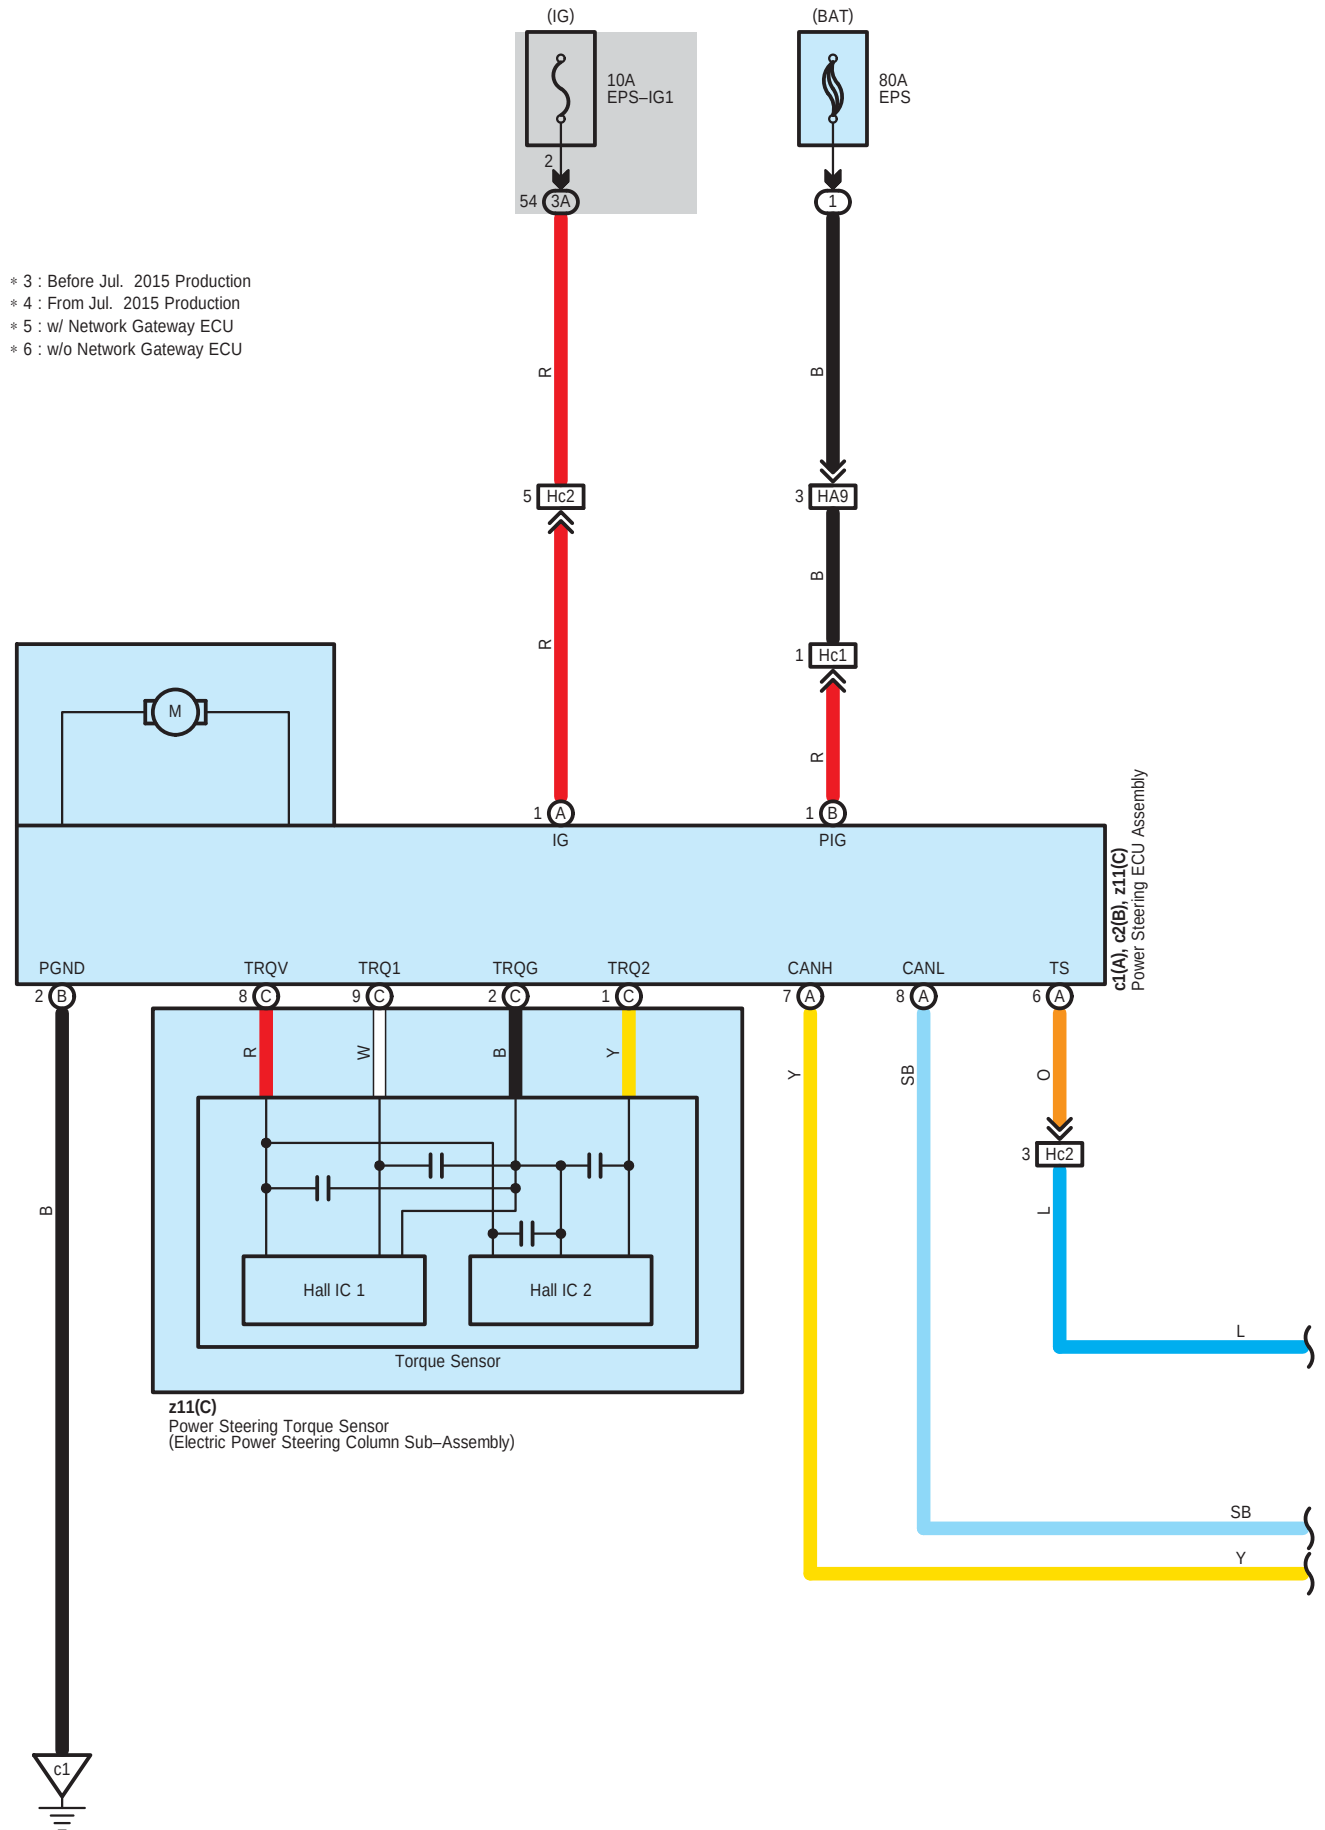


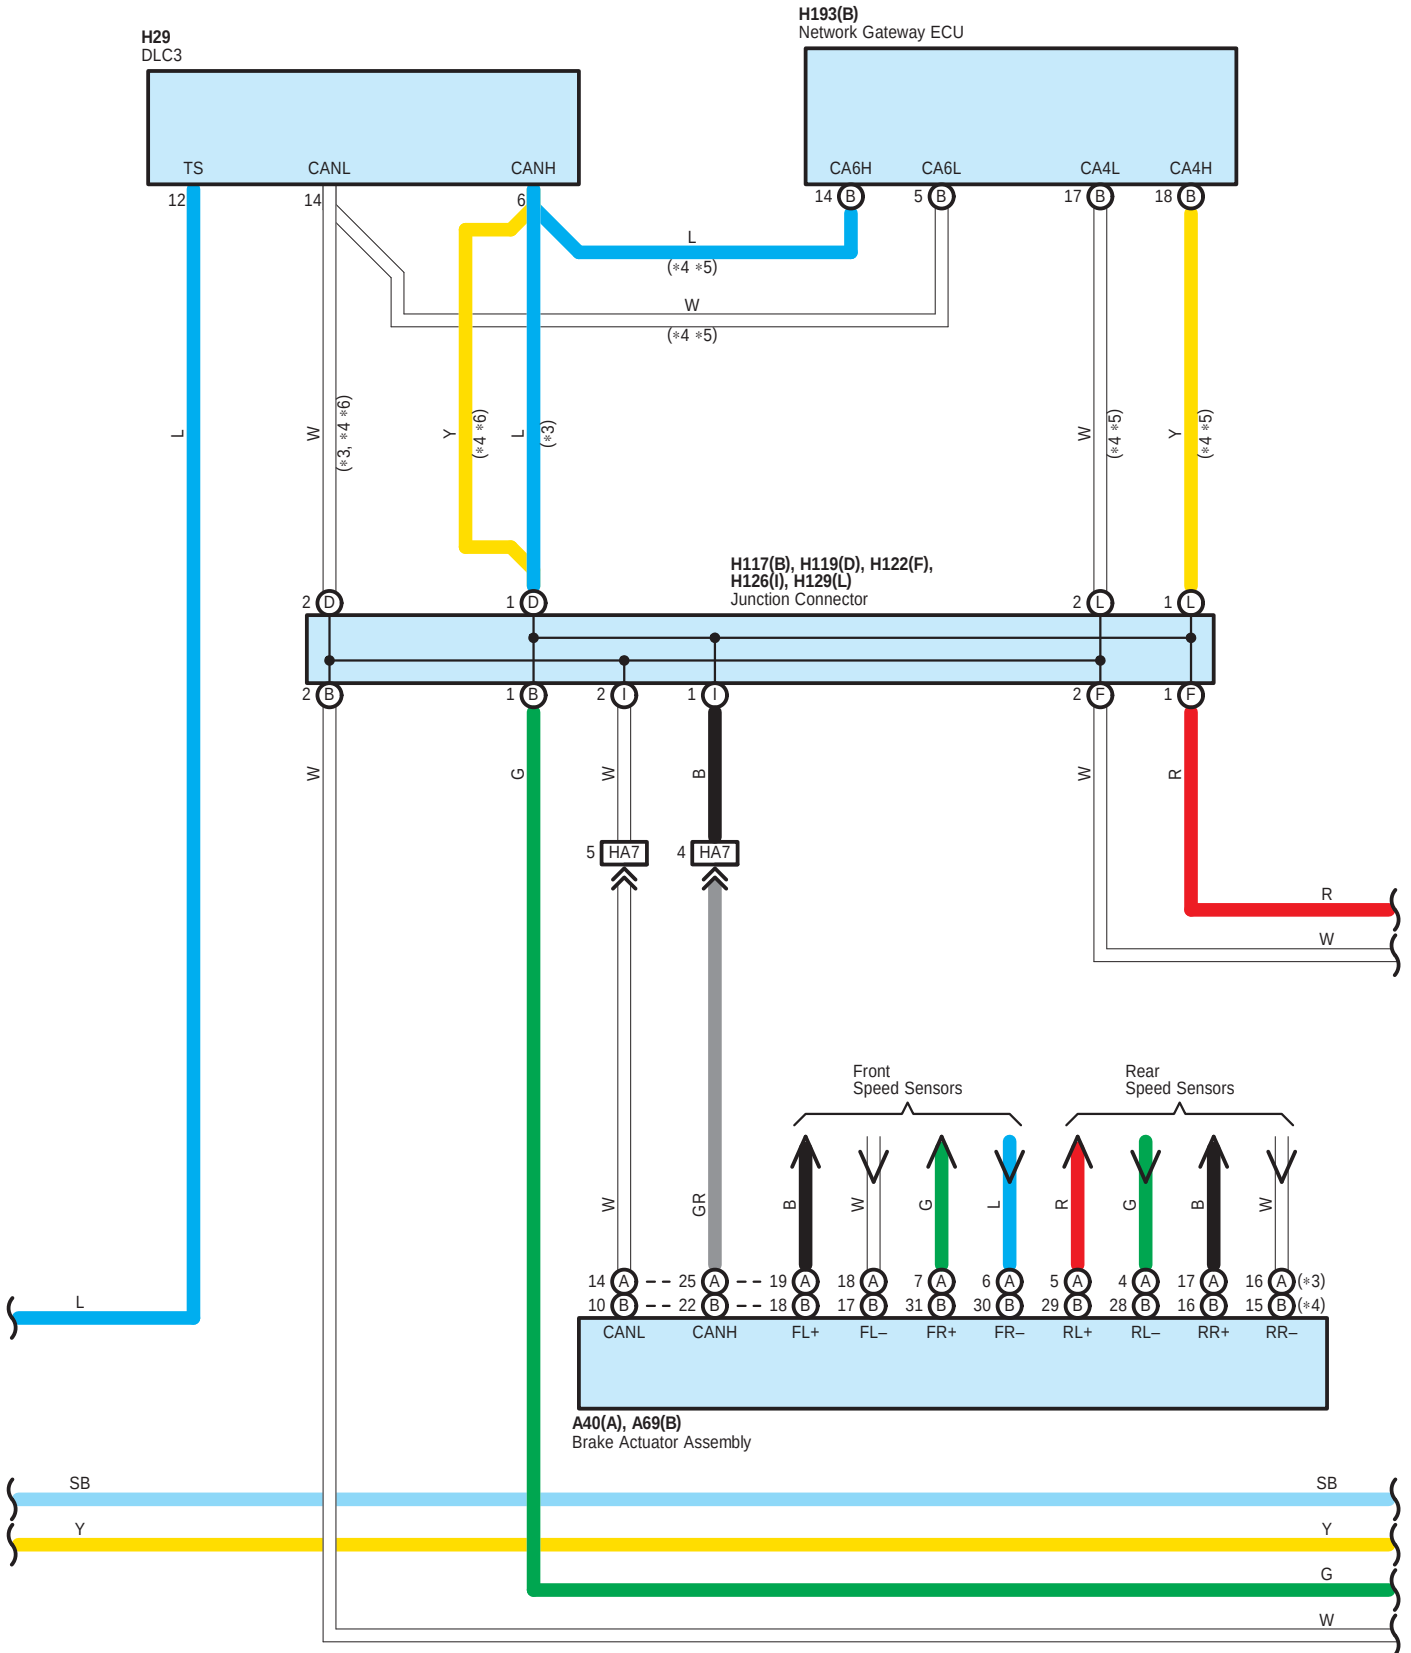

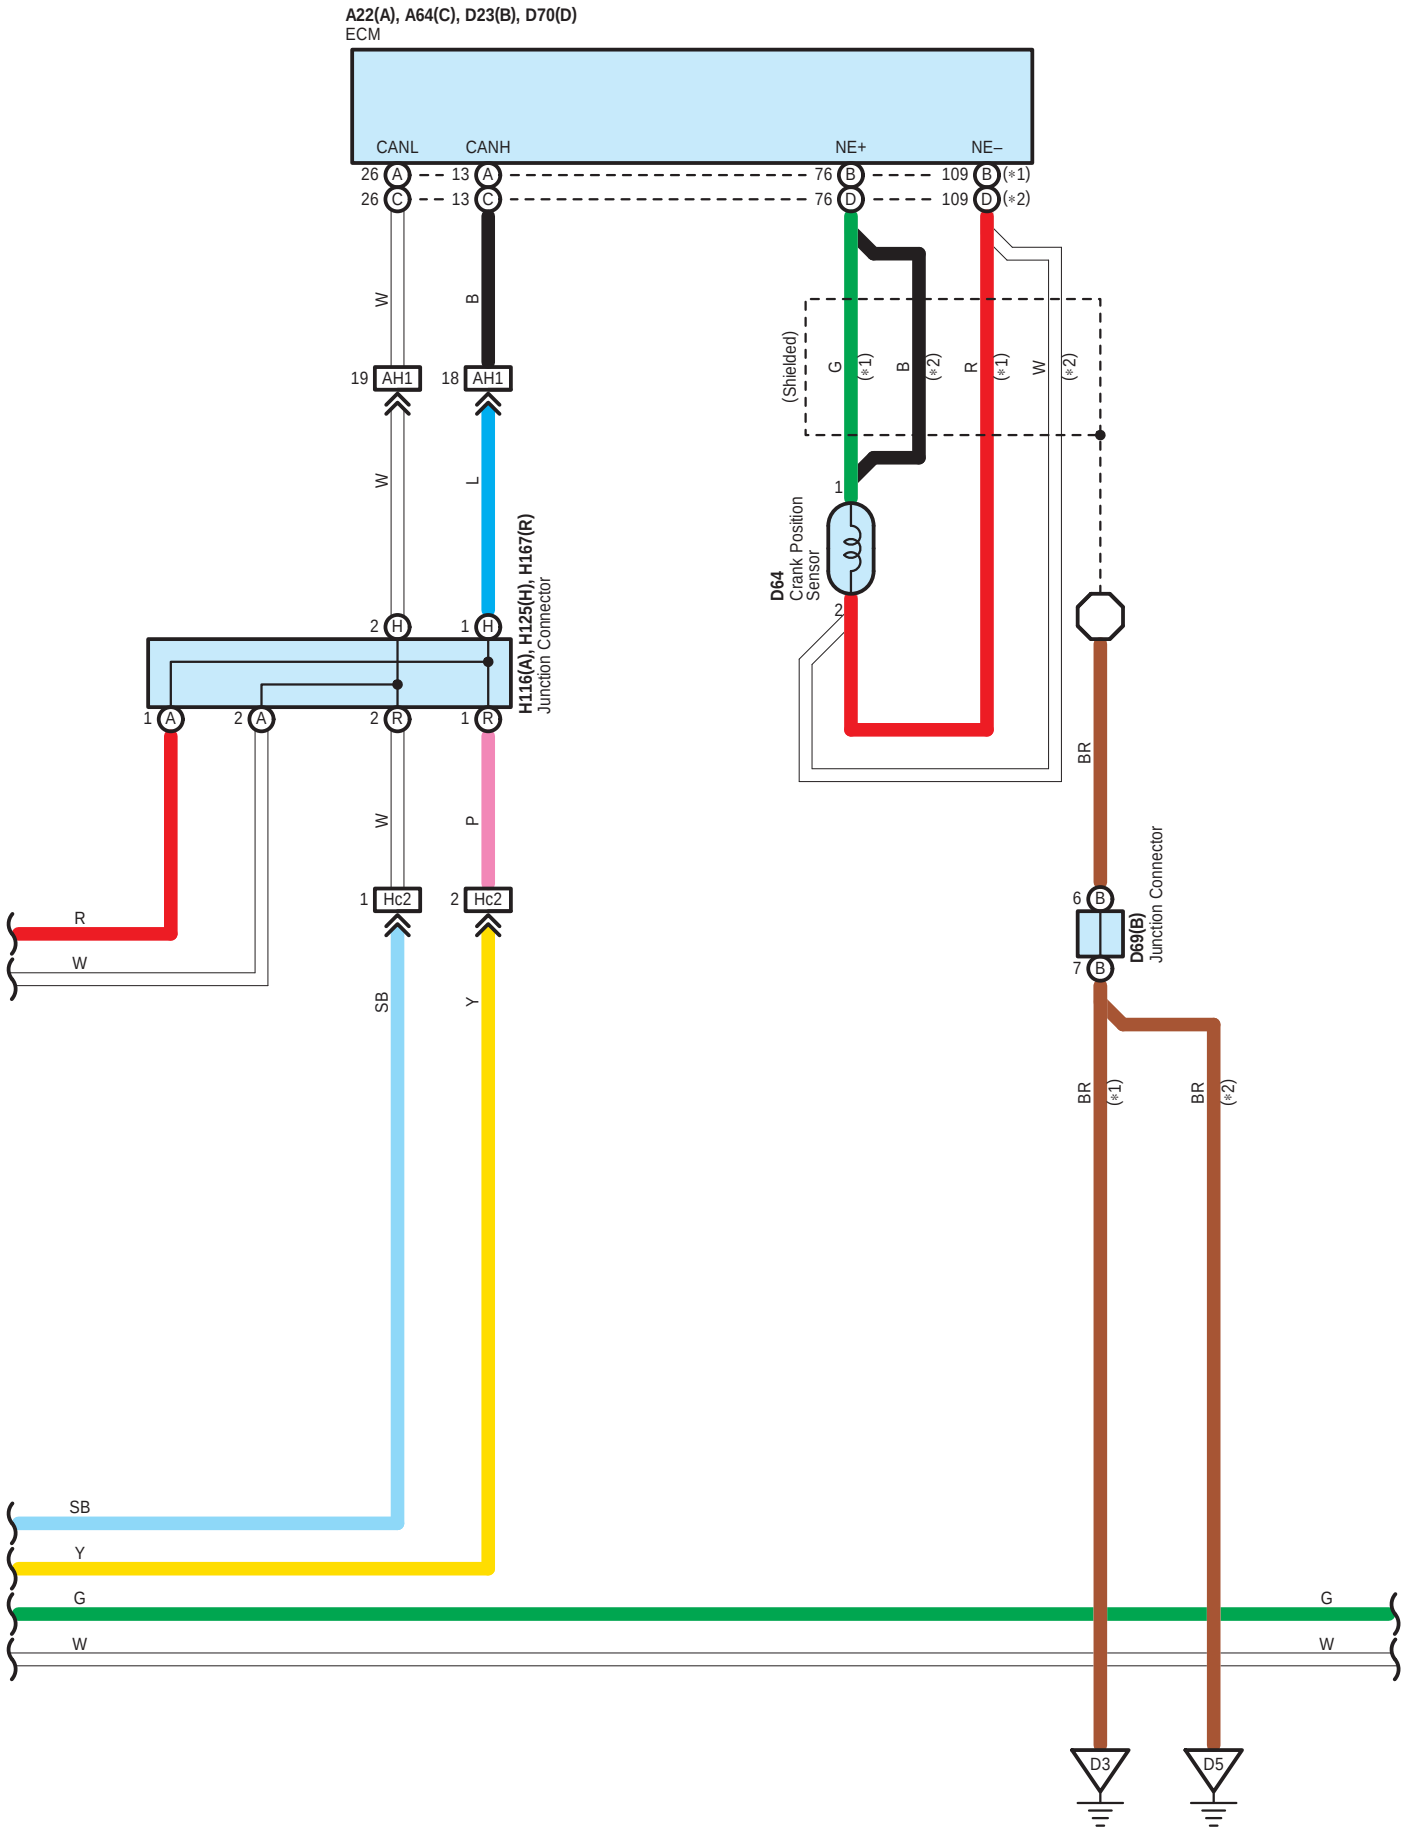


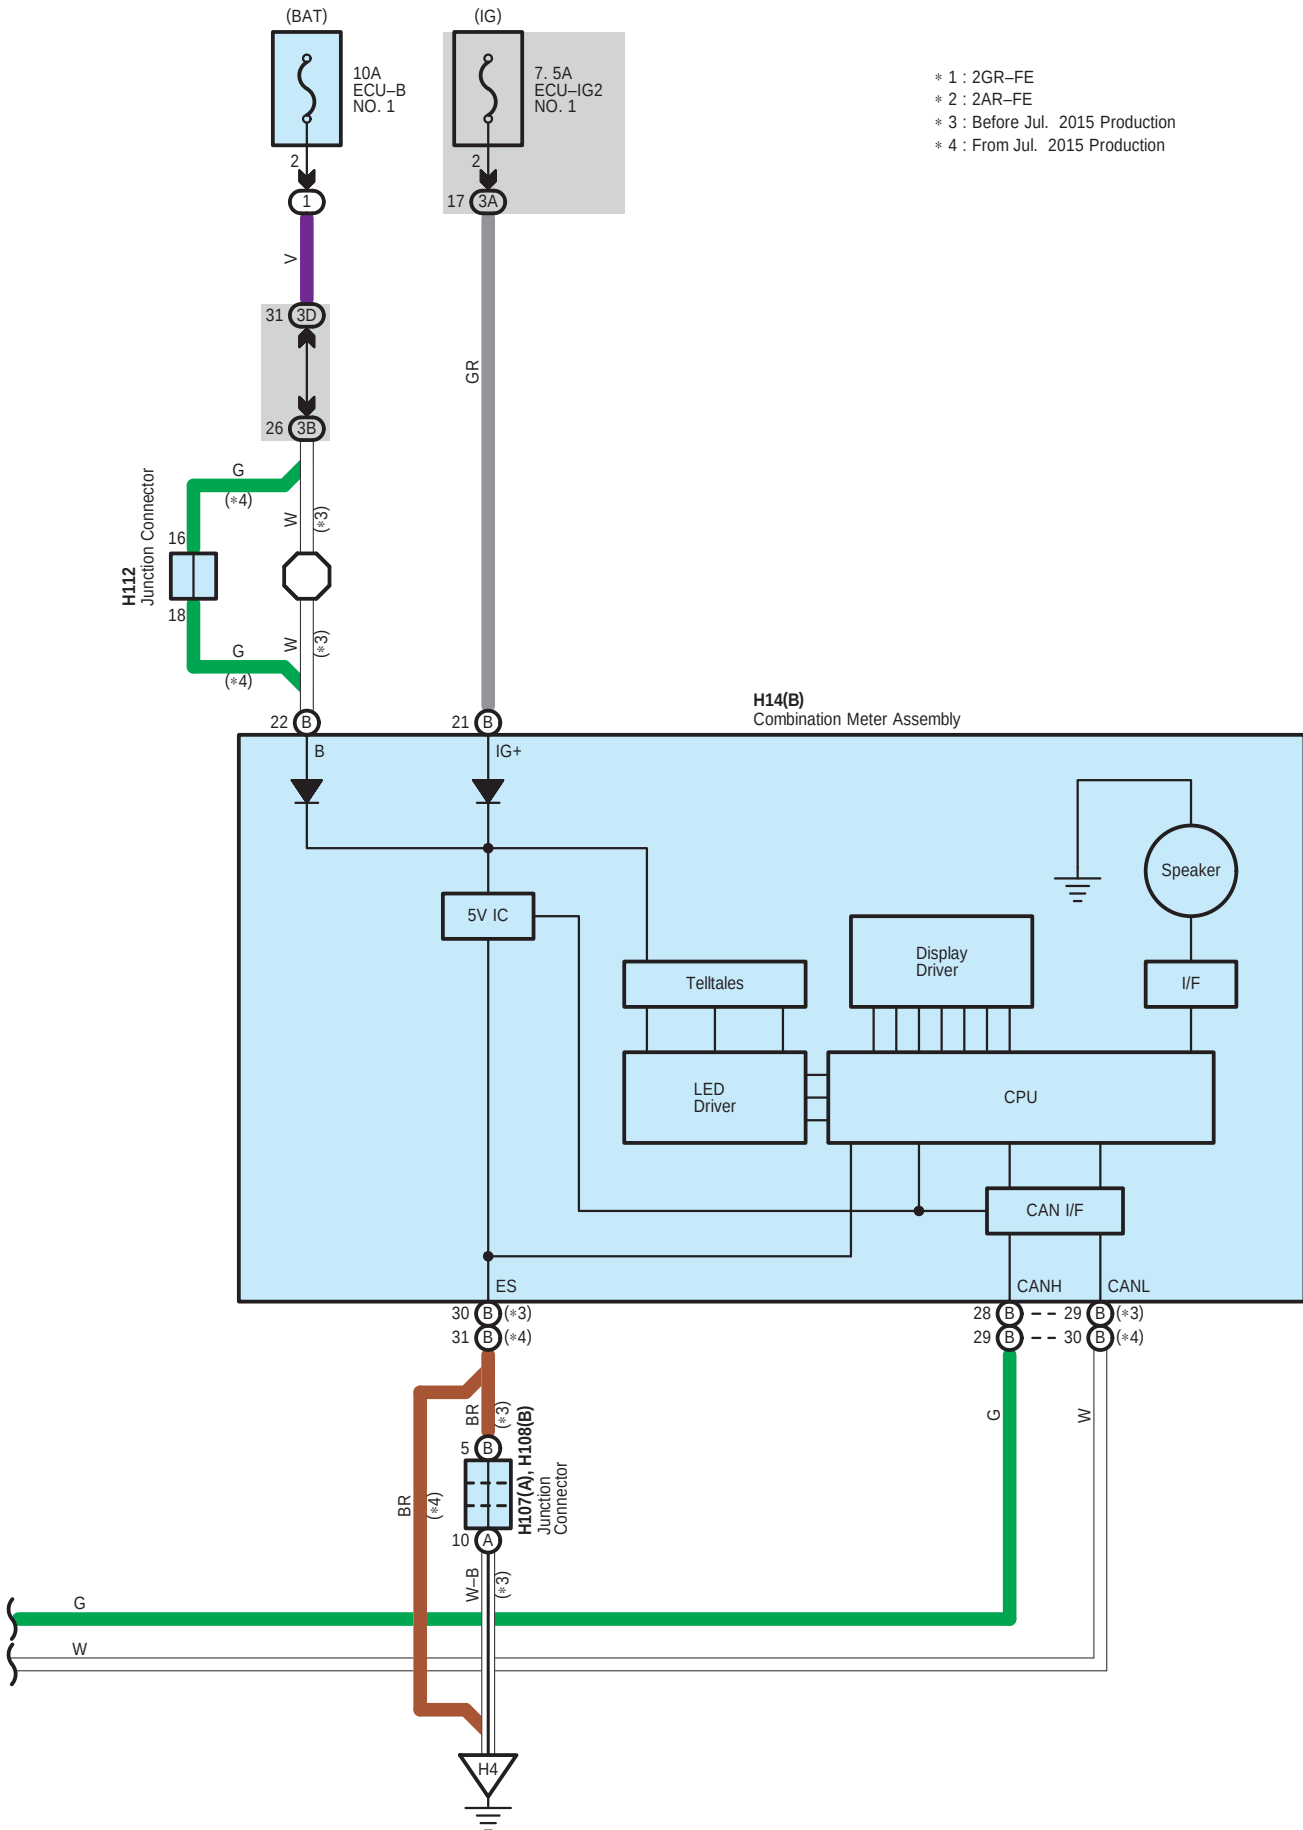


A 22
Black

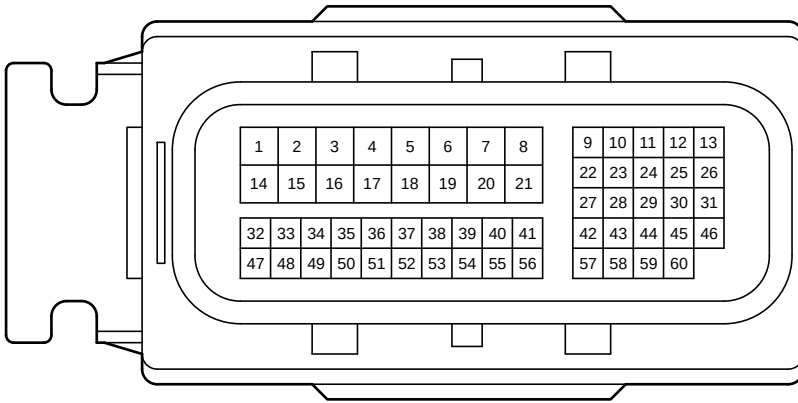


A 40
Black

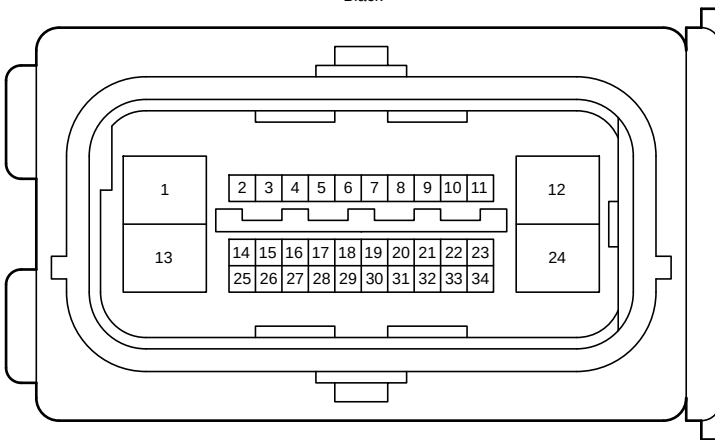


A 64
Black

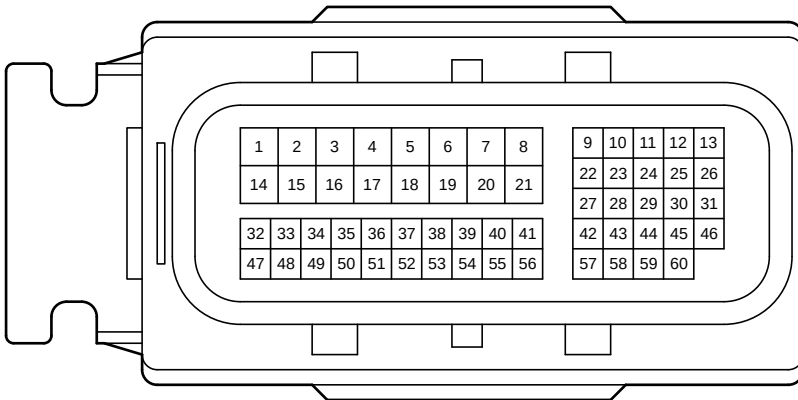


A 69
Black

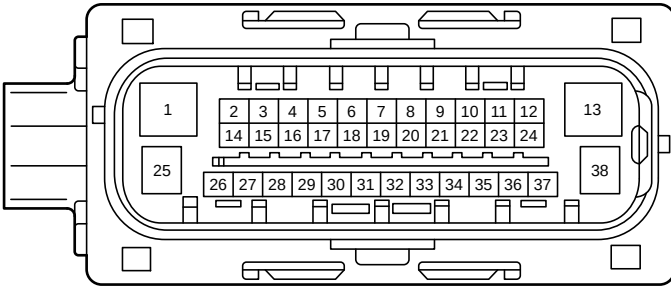


D 23
Black

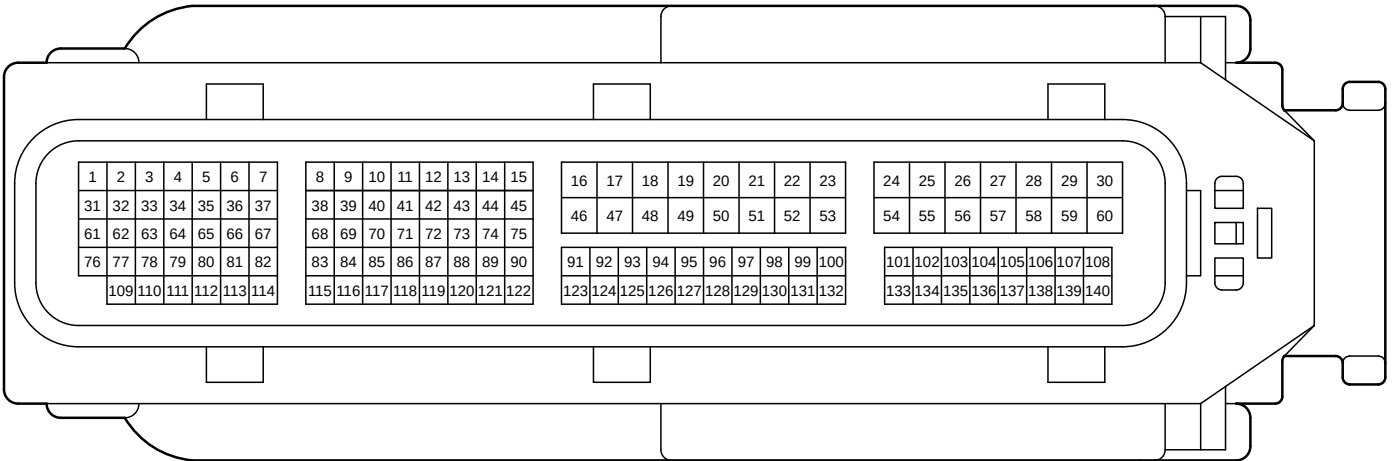


D 64
Black

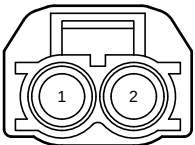


D 69
White

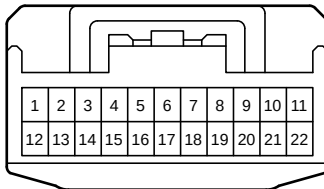


D 70
Black

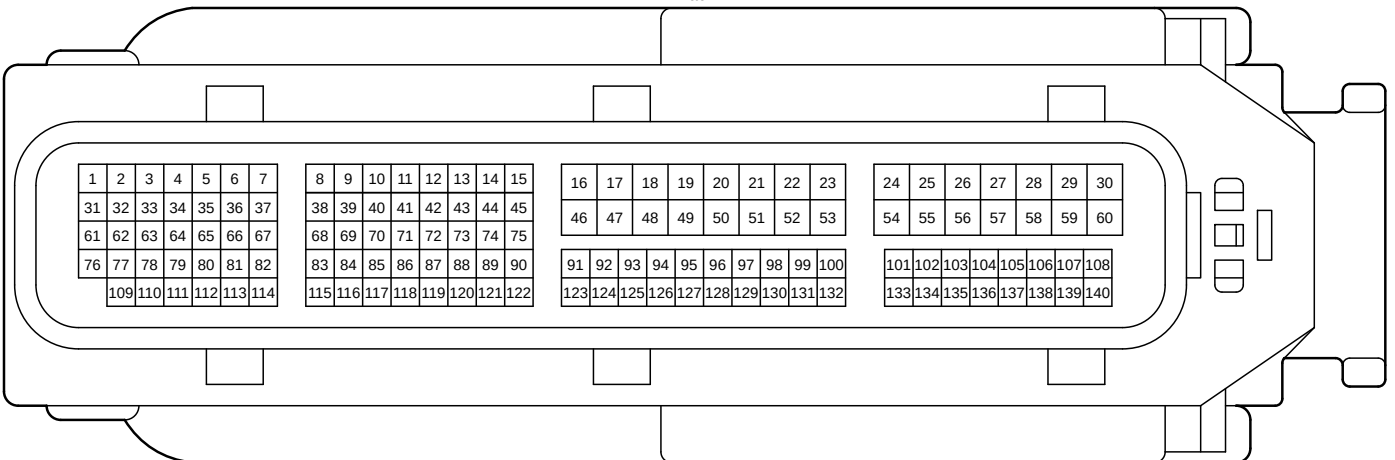


H 14
Black

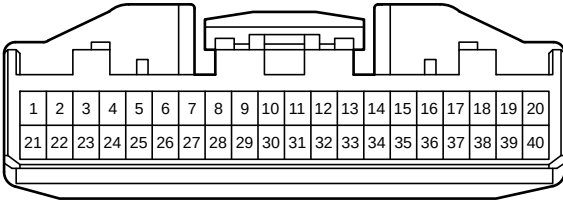


H 29
Black

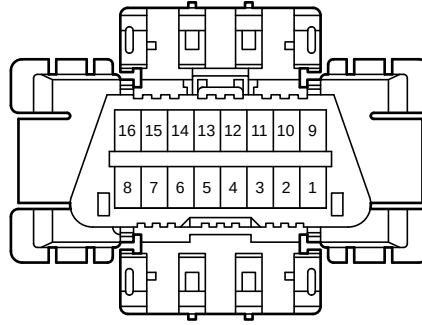


H107
Gray

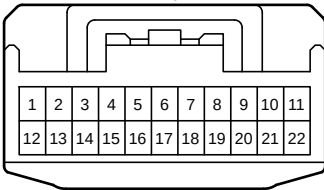


H108
Gray

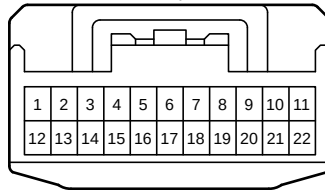


H112
White

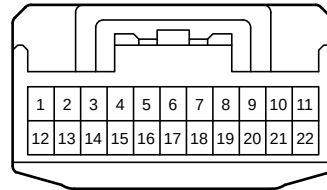


H116
White




H117
White




H119
White




H122
White




H125
White




H126
White




H129
White




H167
White




H193
Black

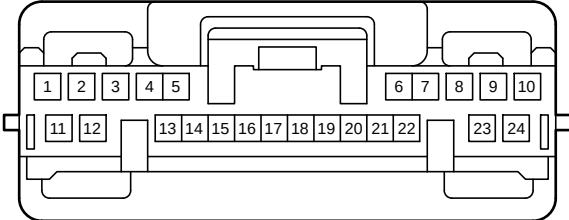


c 1
Black

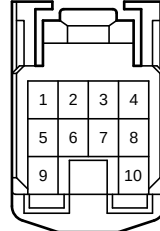

c 2
White

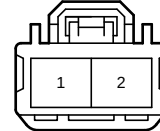

z 11
White

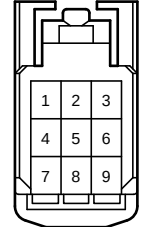

3A
White

