





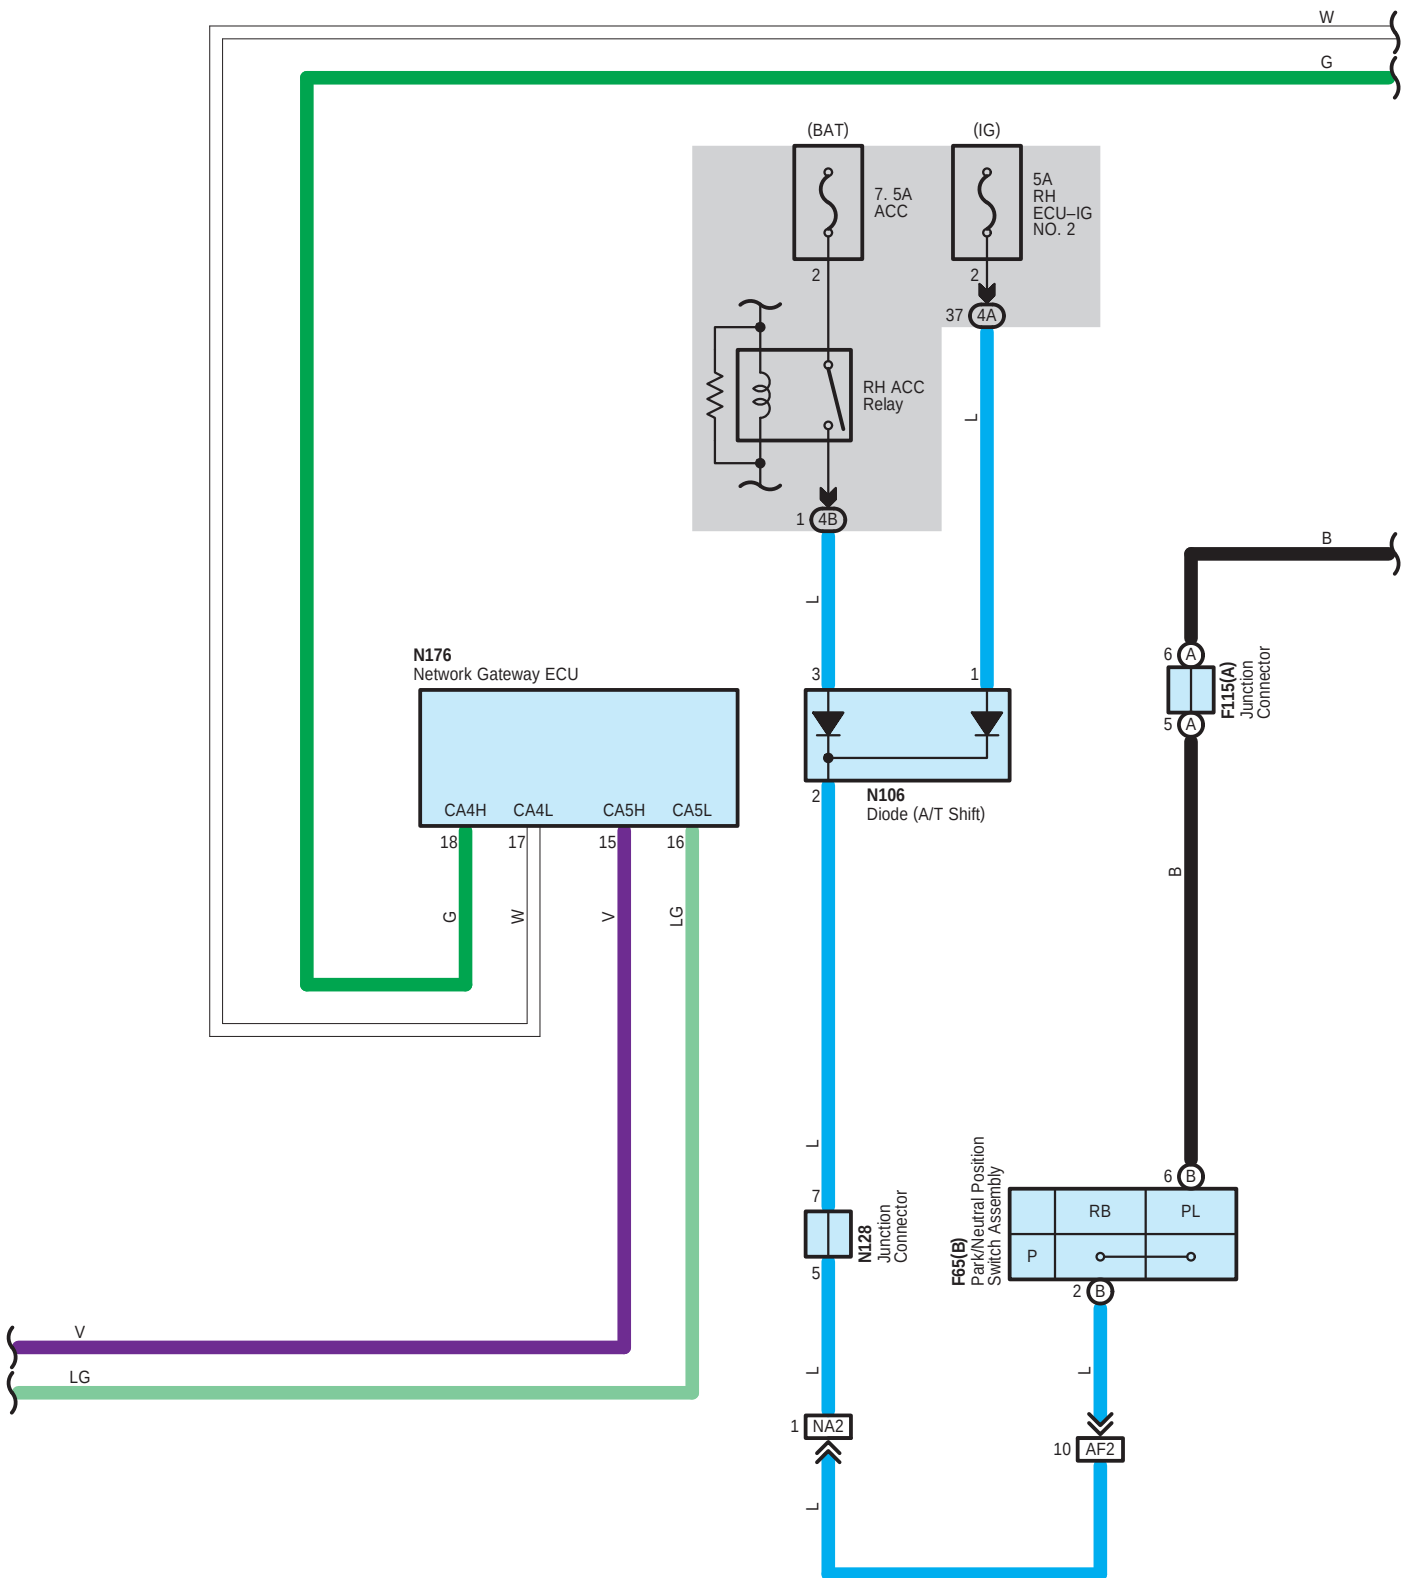

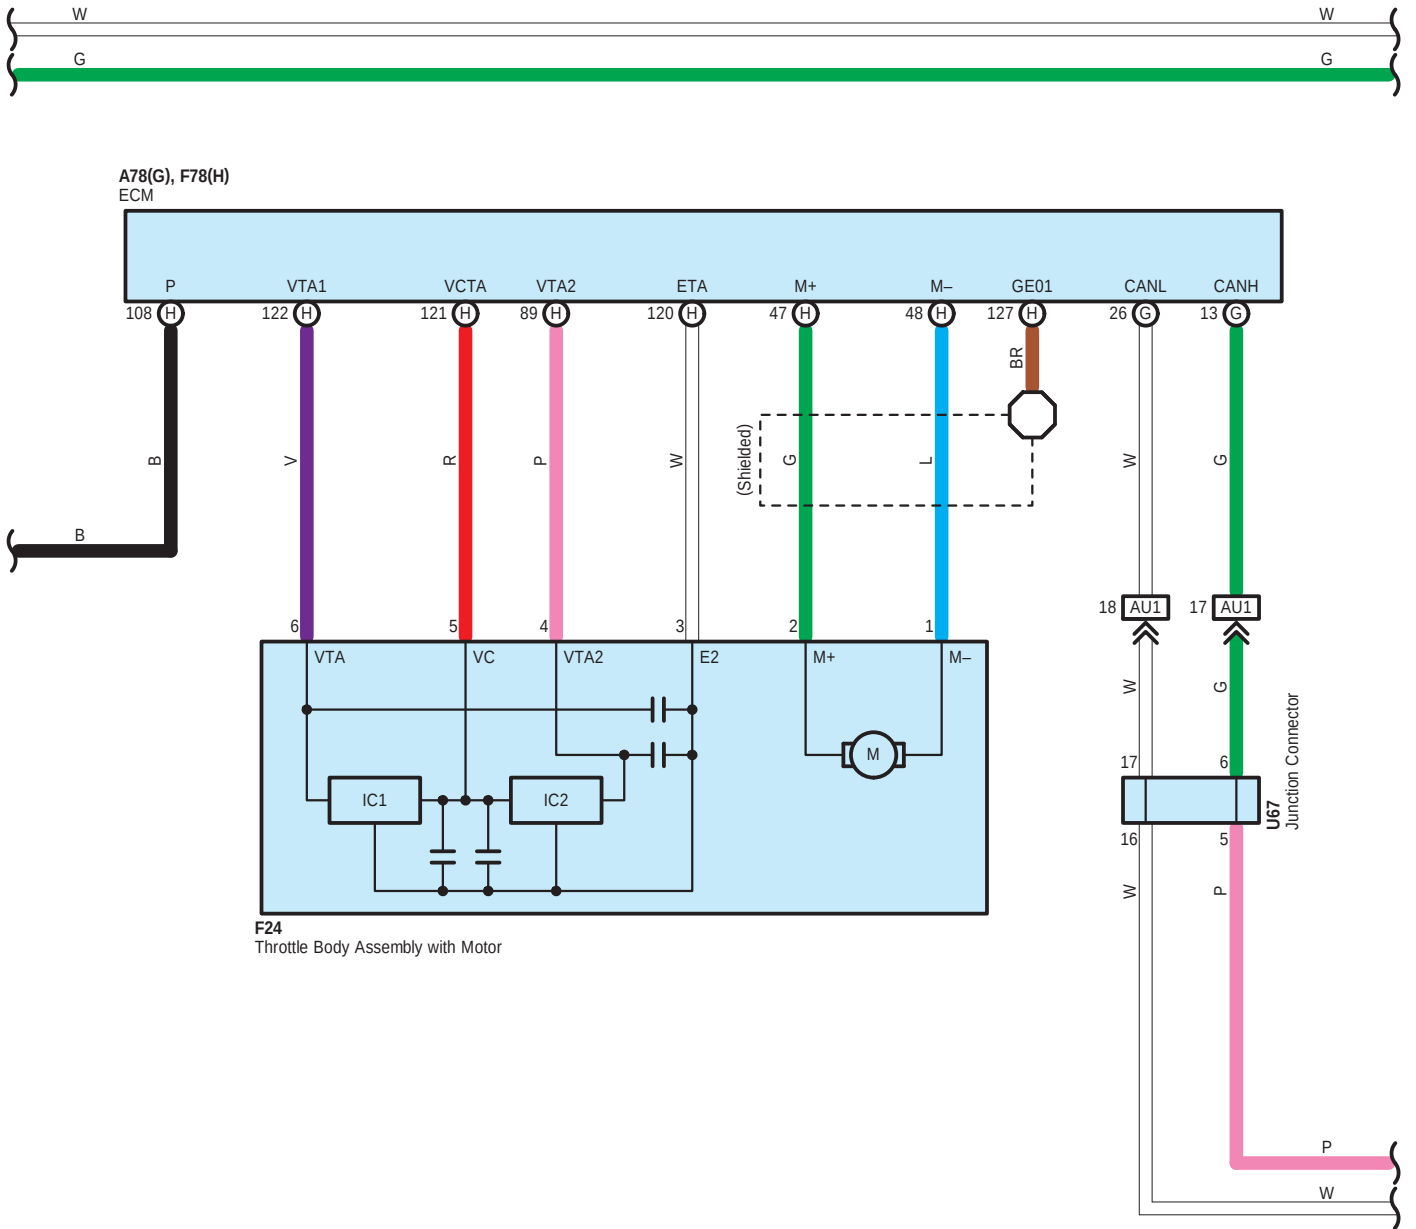


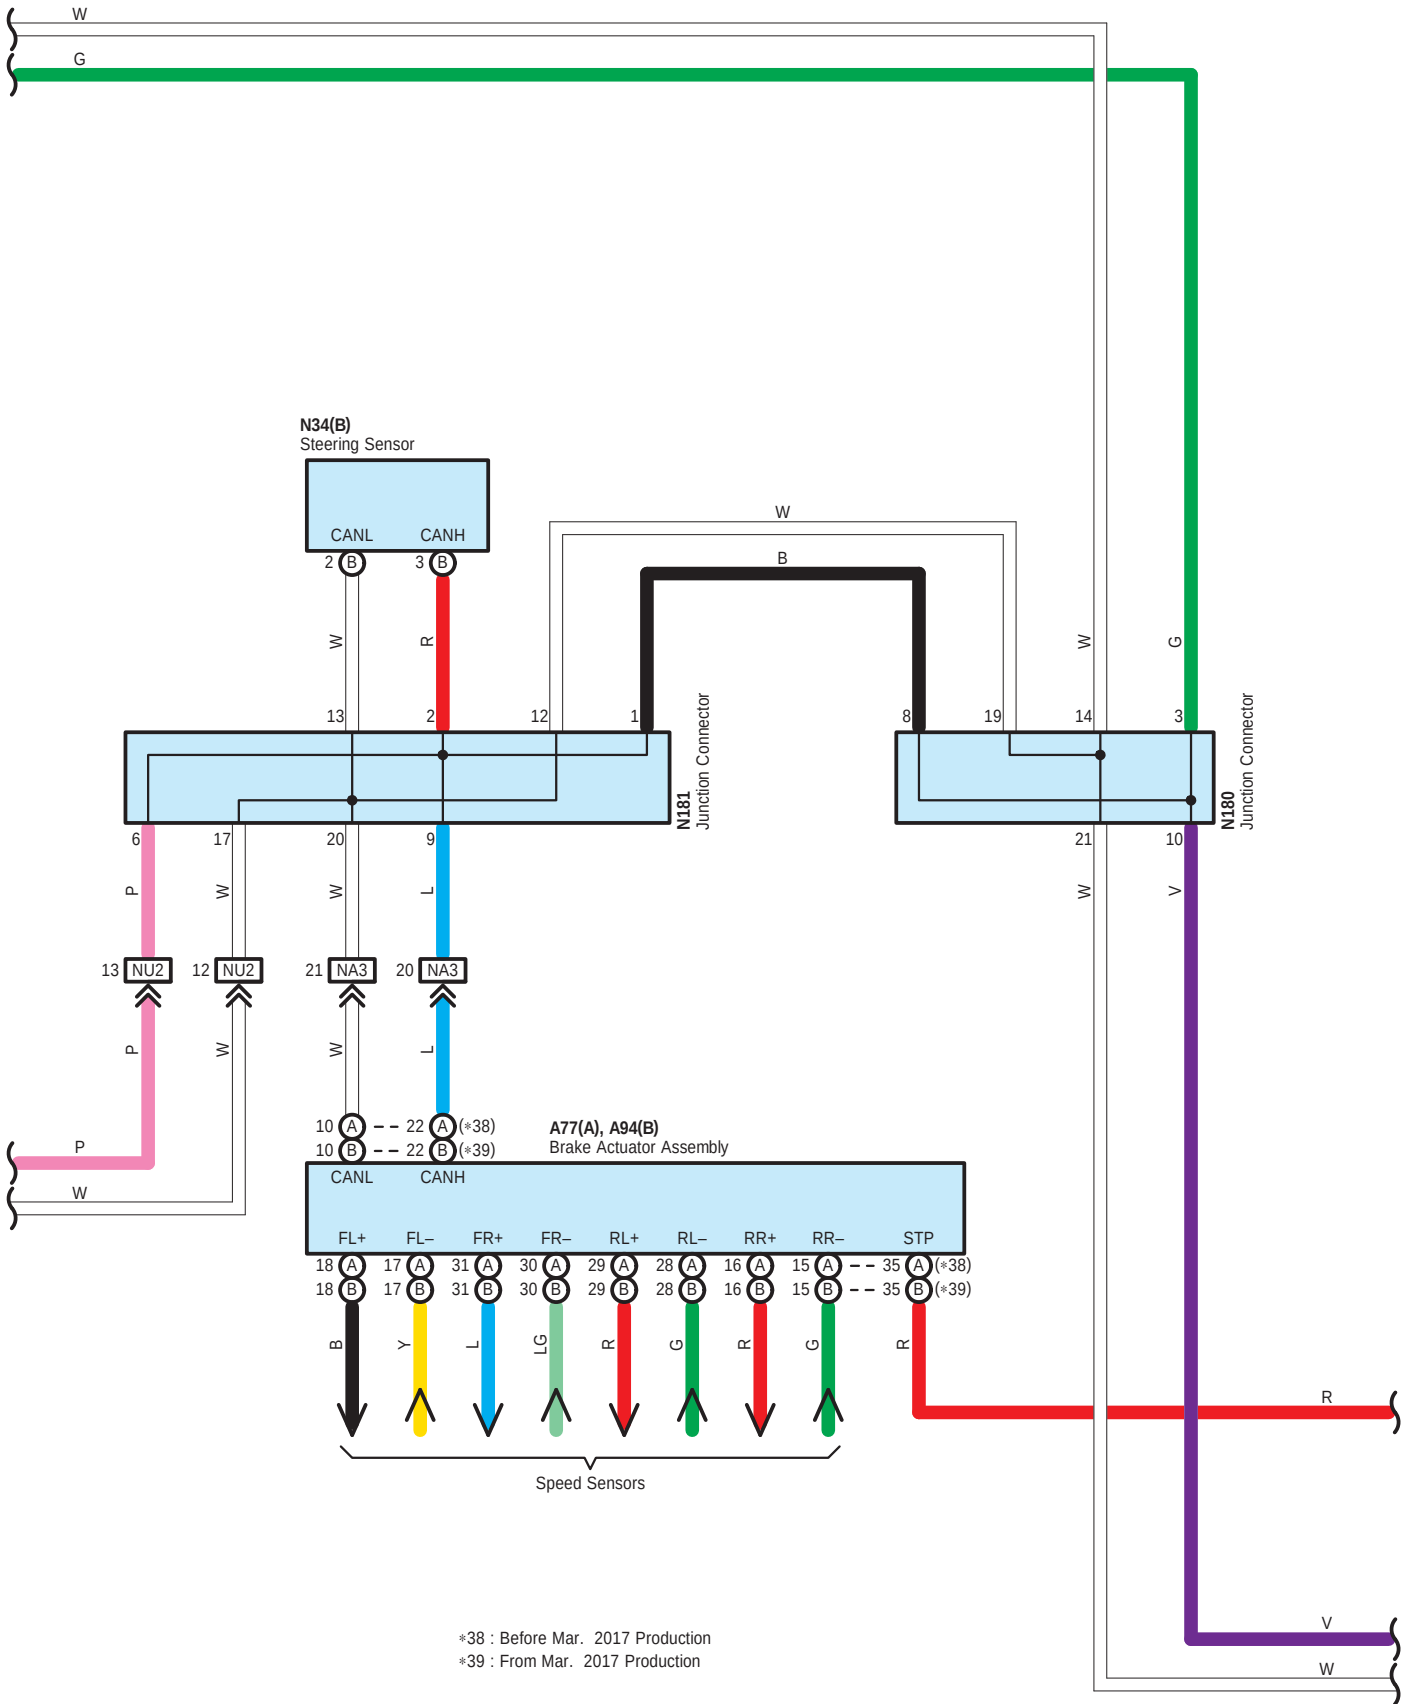

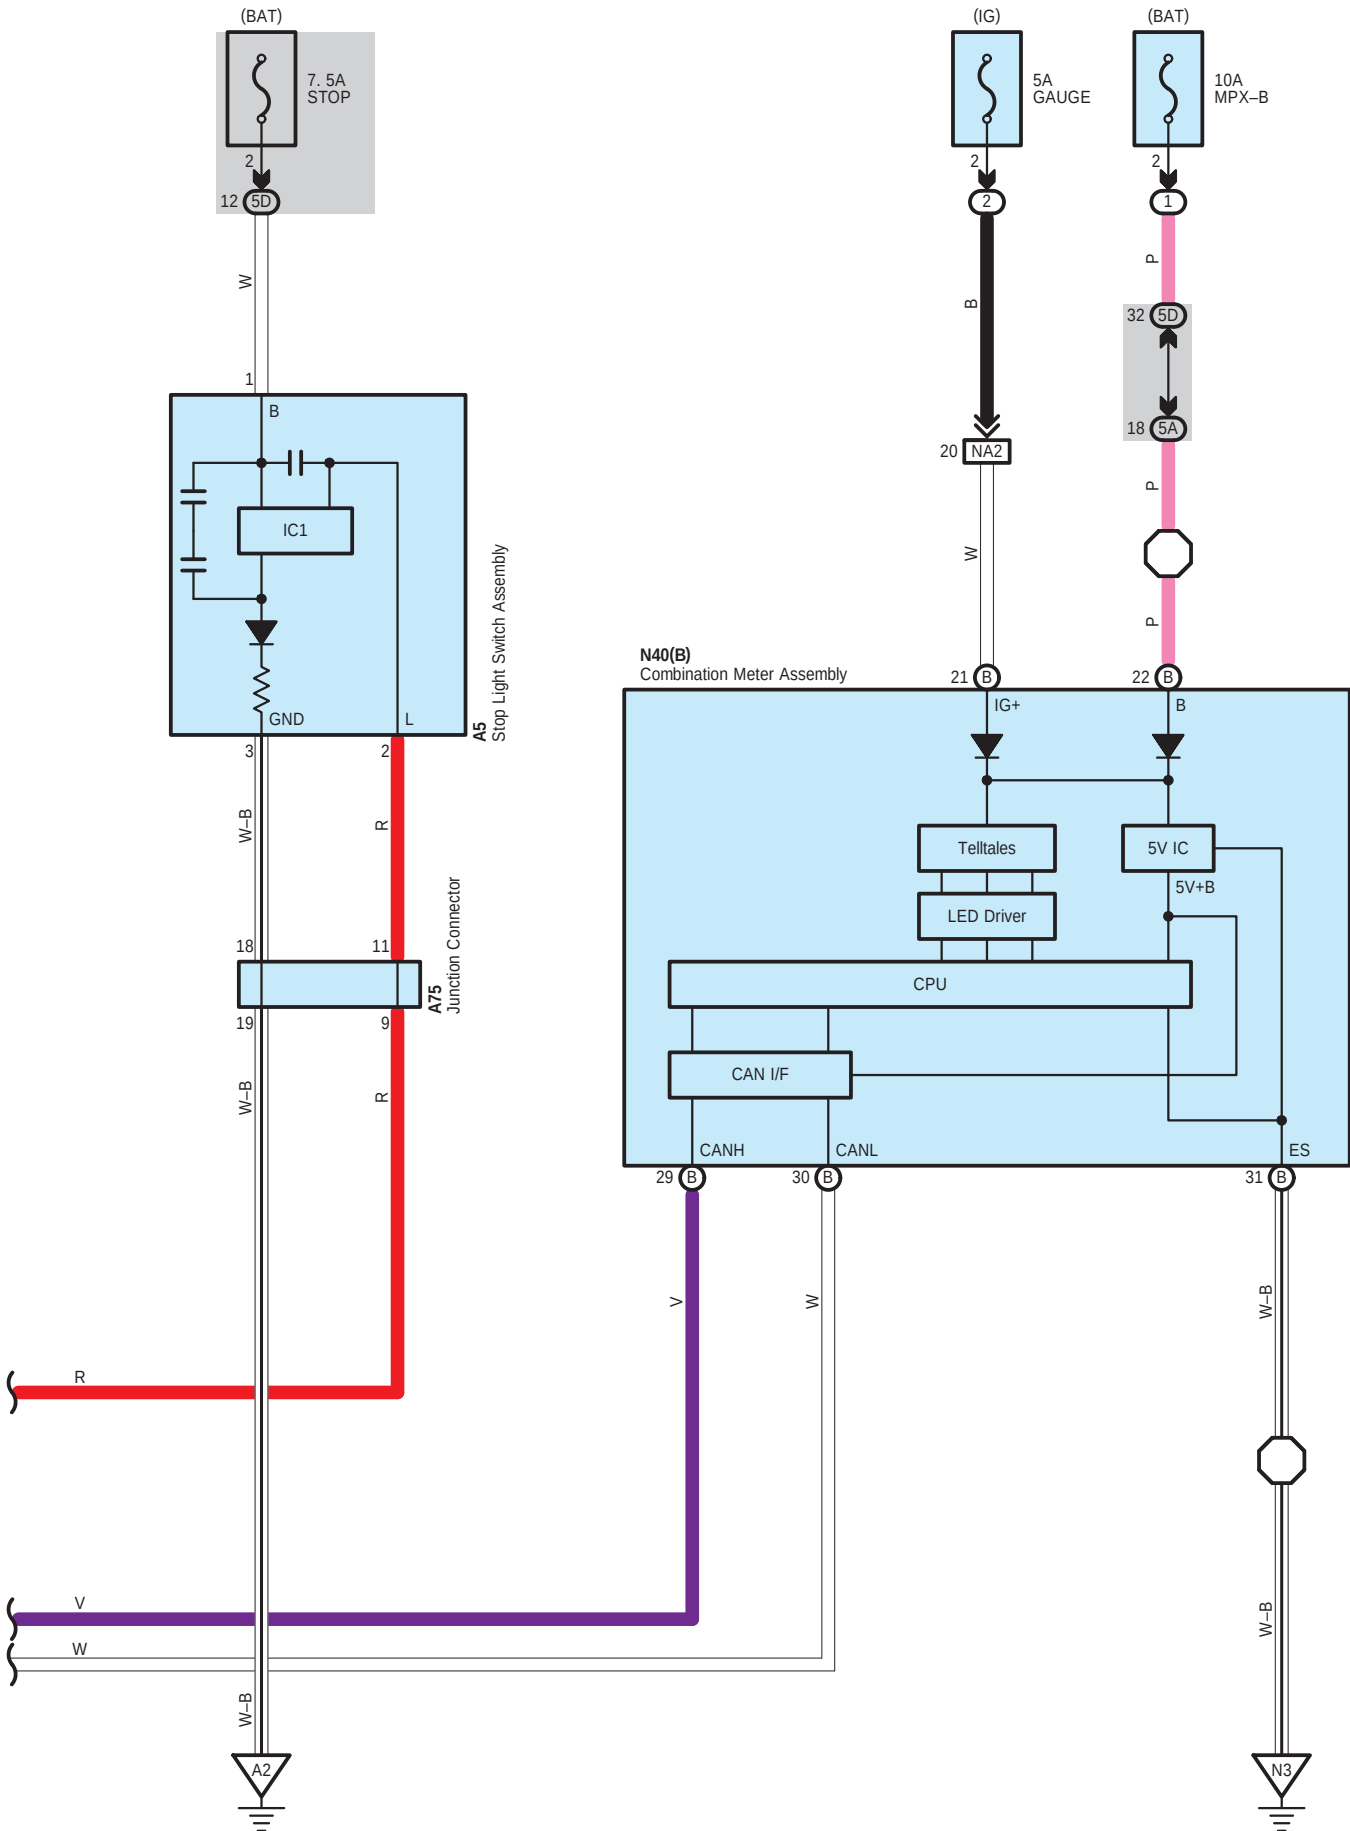





A 5
White

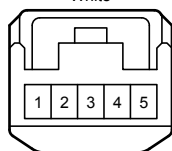


A 33
White

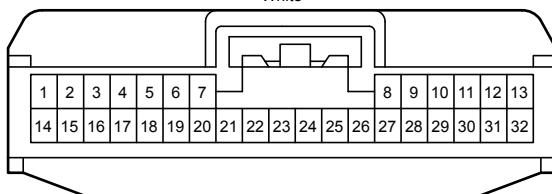


A 75
White

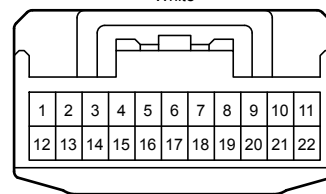


A 77
Black

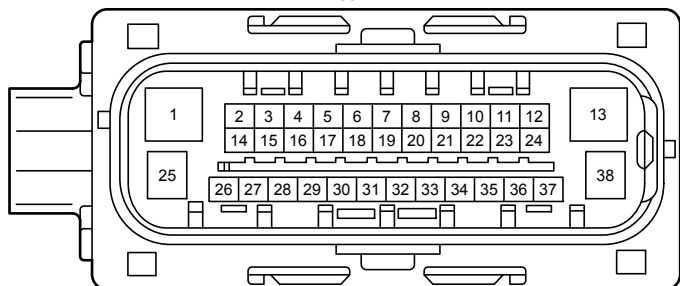


A 78
Black

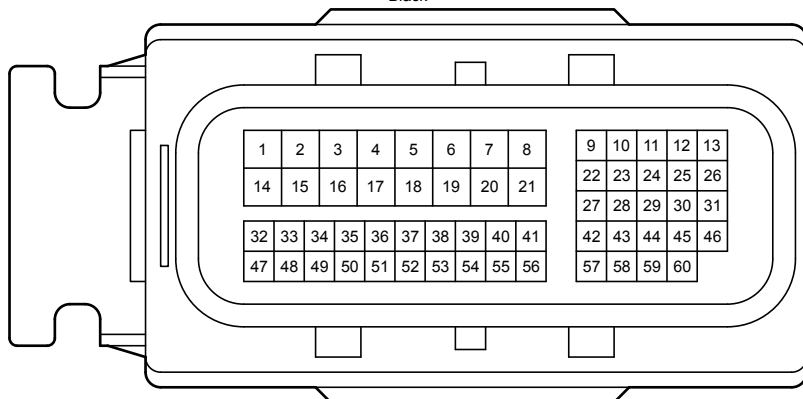


A 94
Black

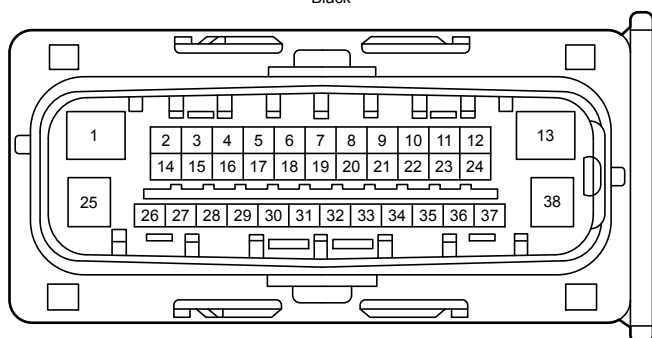


F 24
Black

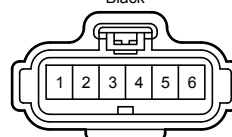

F 49
Gray

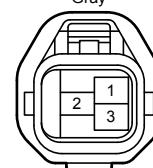


F 65
Gray

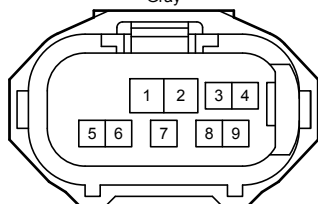


F 78

Black

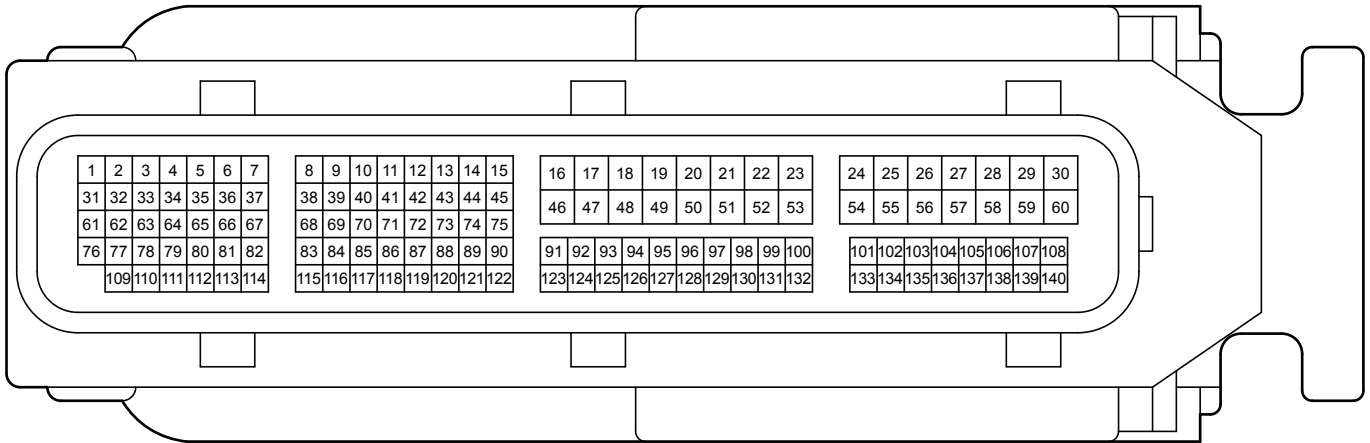


F115

Blue

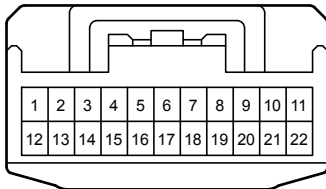


N 34

Black

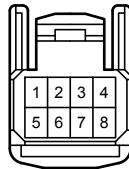


N 40

Black

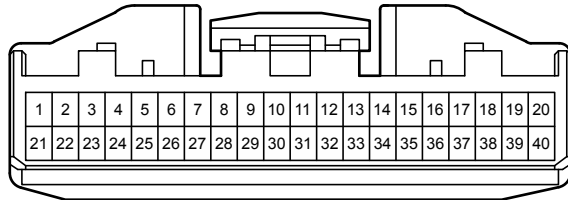


N106

Gray




N128

Blue

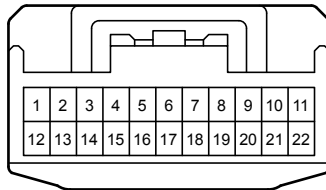


N176

Black

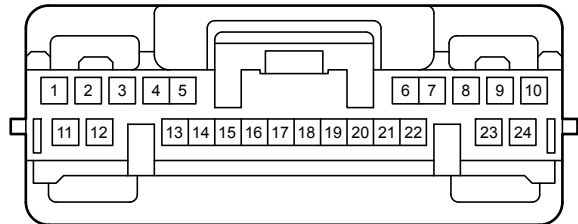


N179

Blue

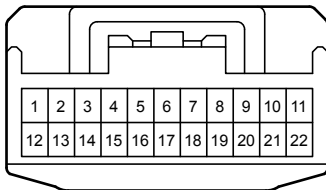


N180

Gray

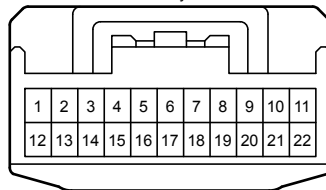


N181

Gray

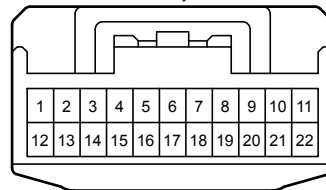


U 67

Gray

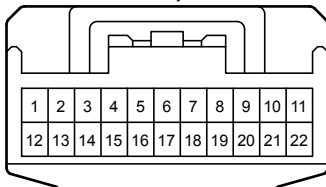


4A

White

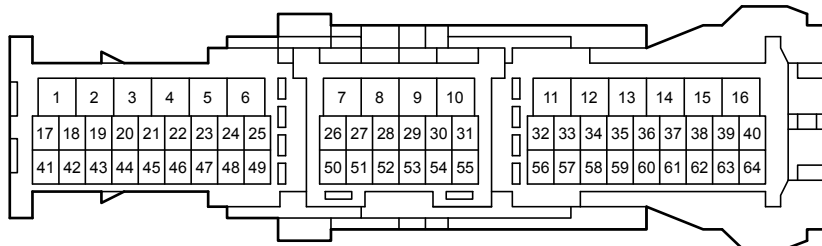


4B

White

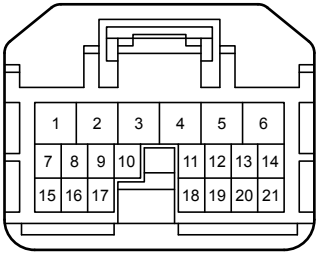


4D

White

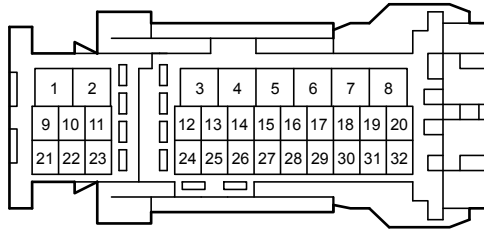


5A

White

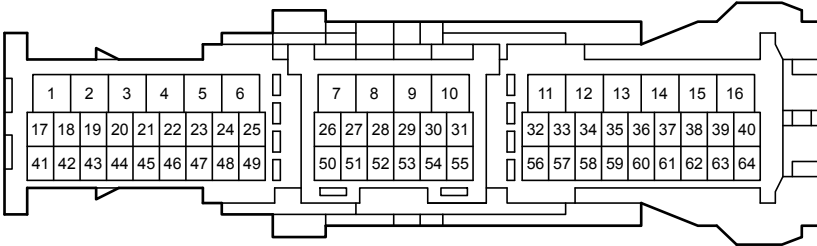


5D

White

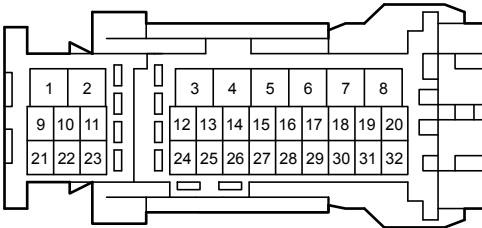


AF2

White

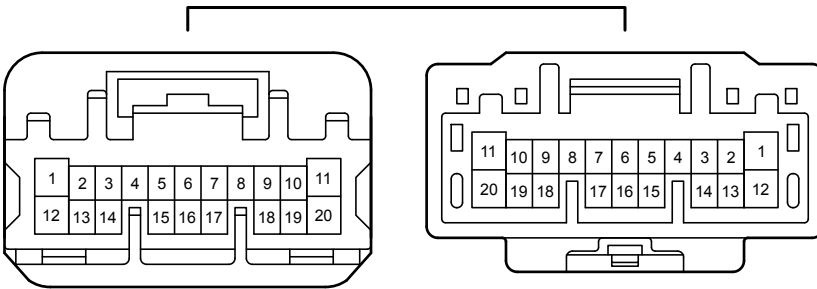


AU1


White

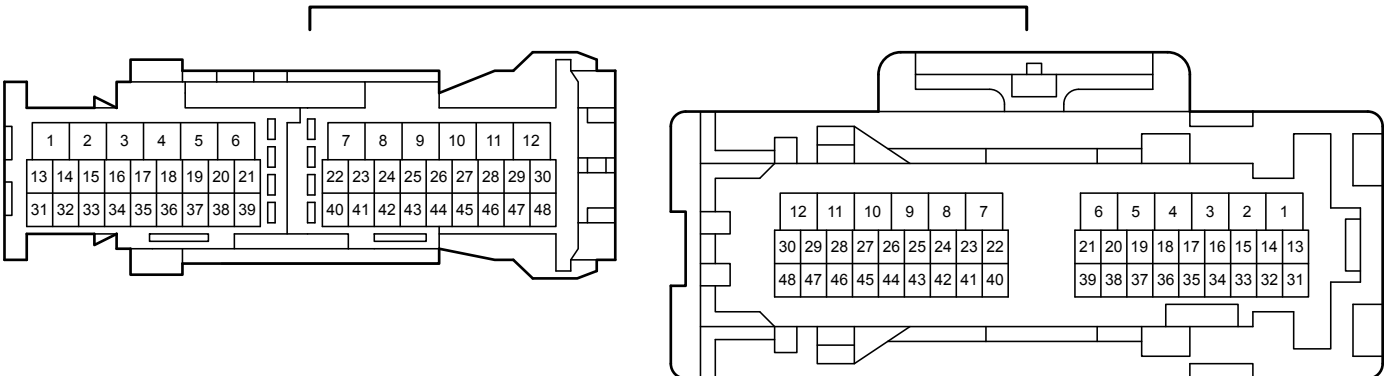


NA2
White

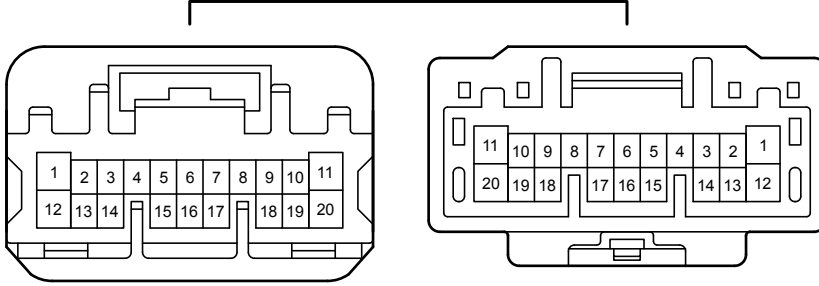

NA3
White

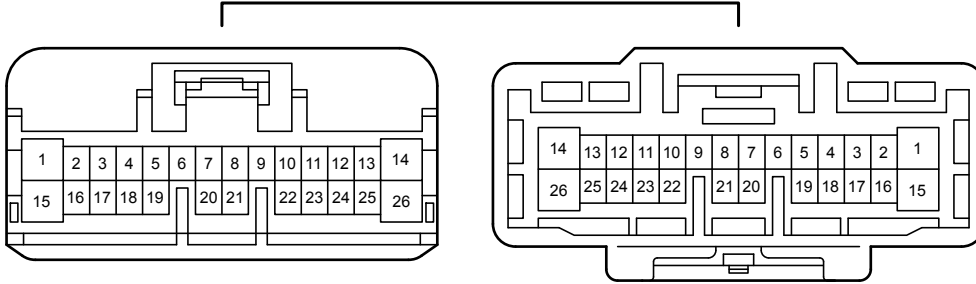

NA4
Gray

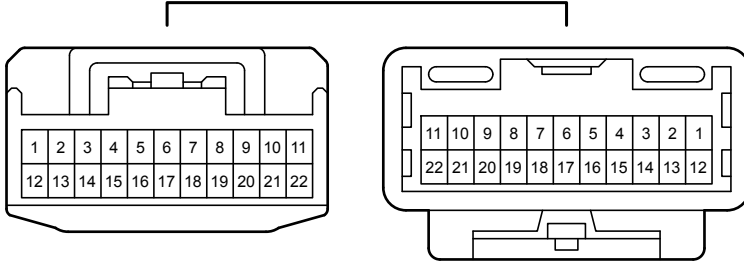

NU2
White

