





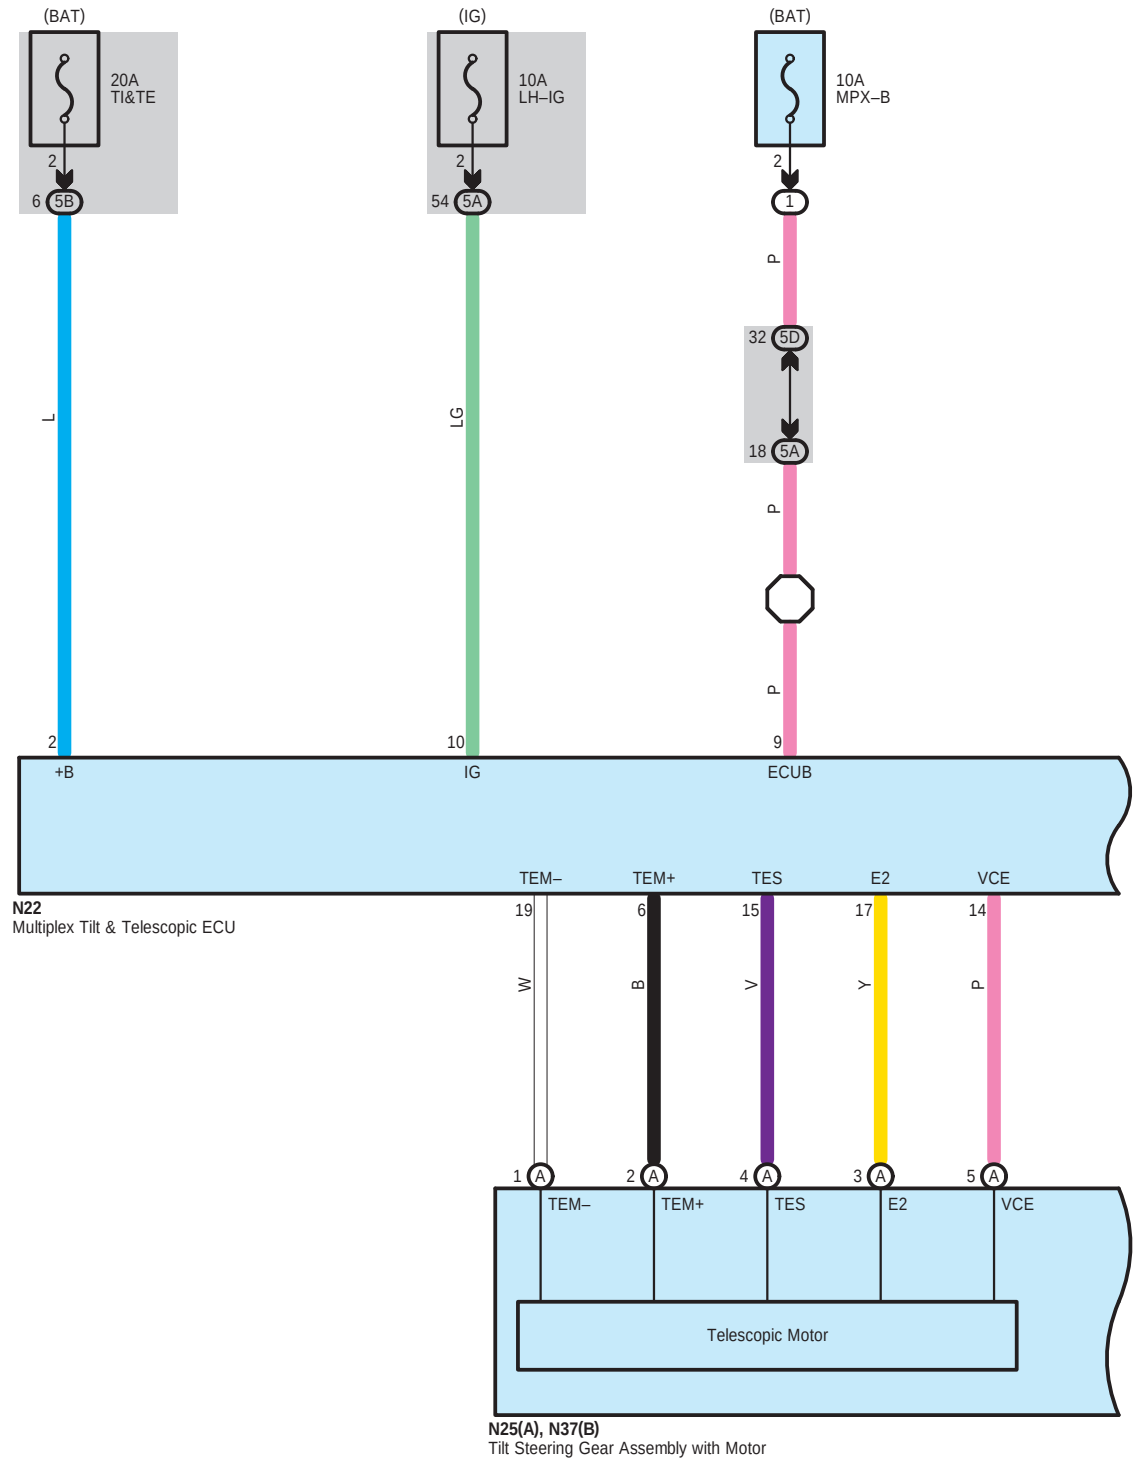


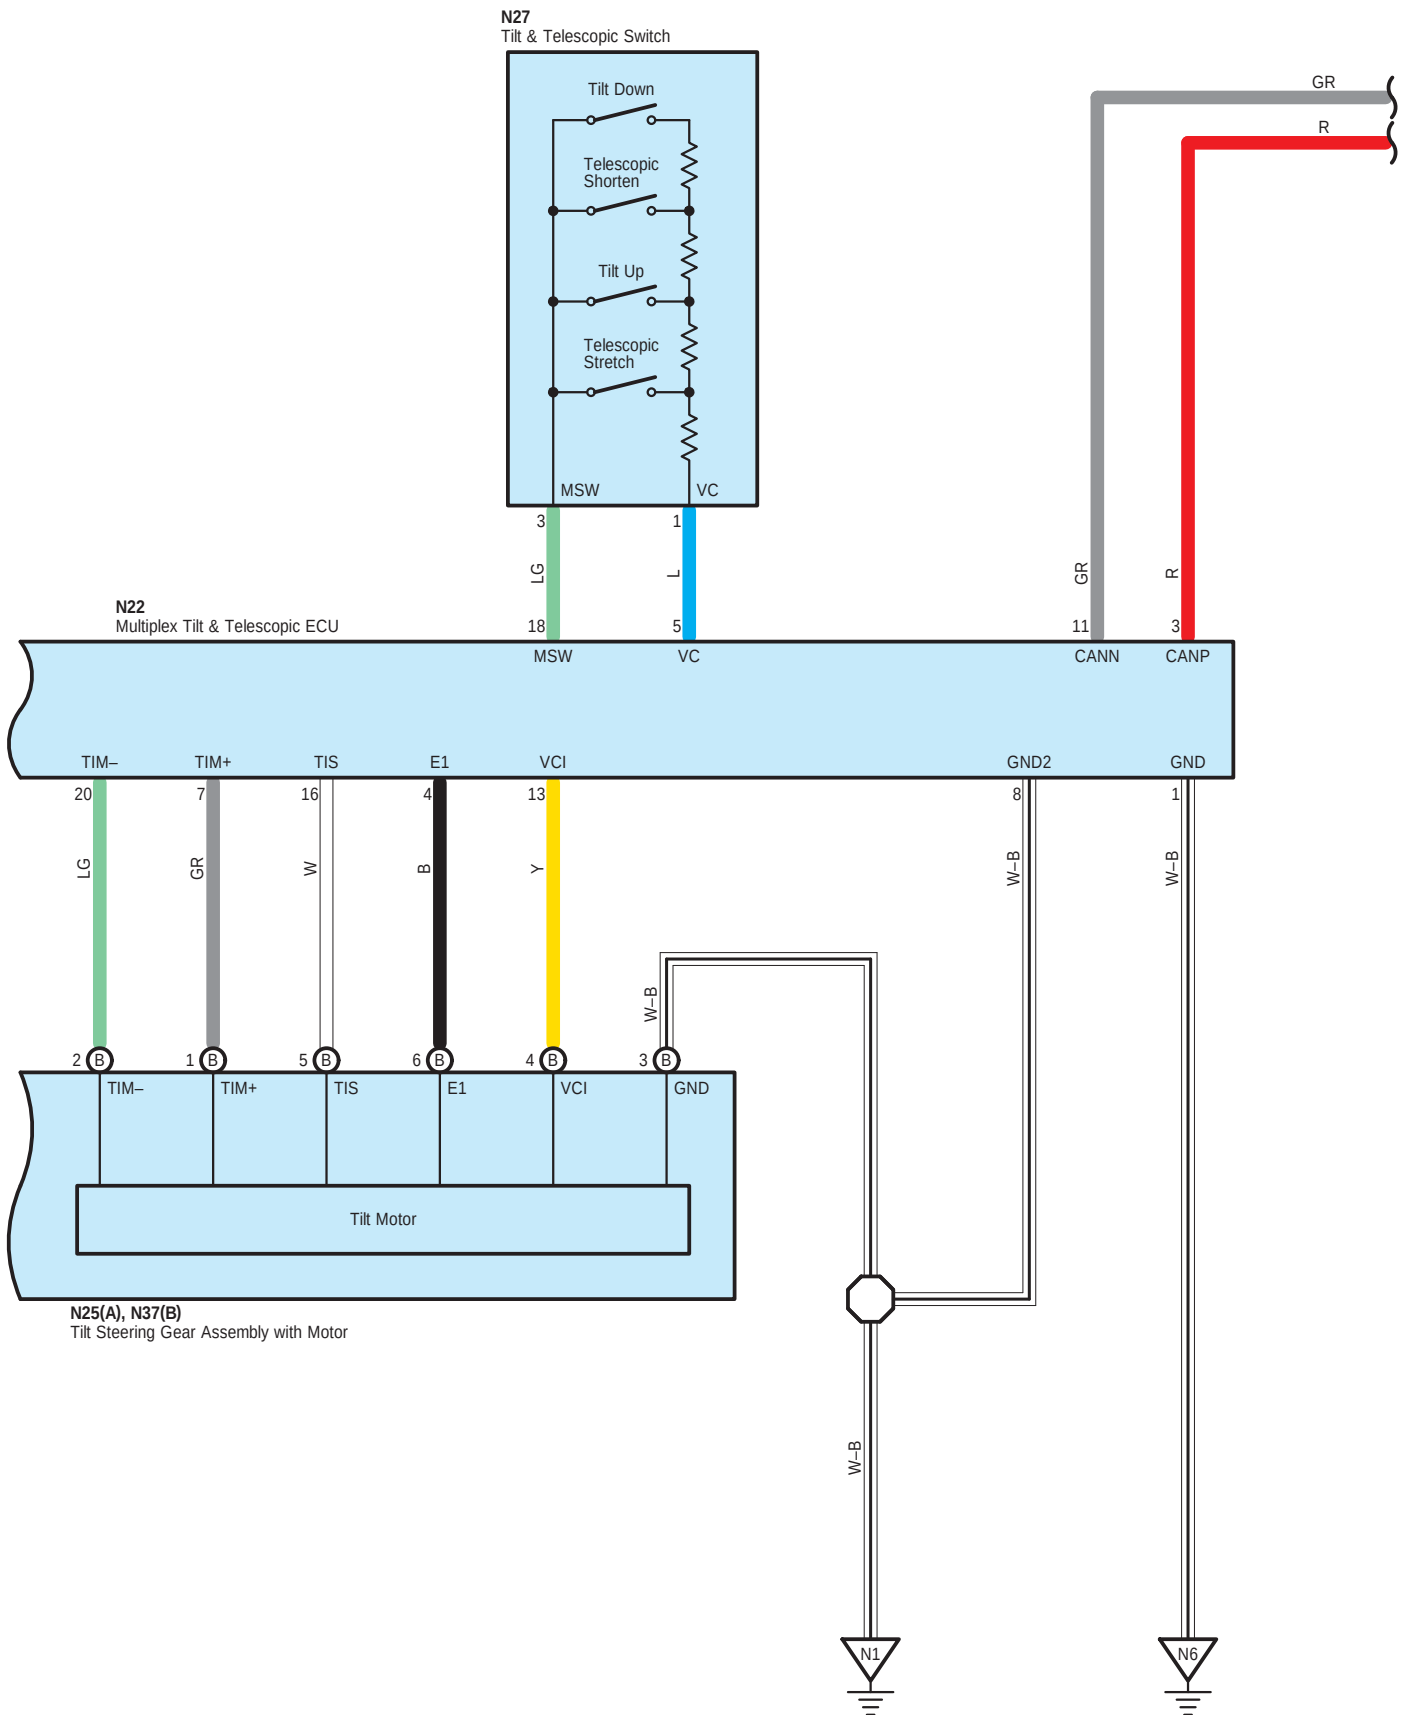



* 2 : Except 10-Way Seat Position
 * 3 : 10-Way Seat Position

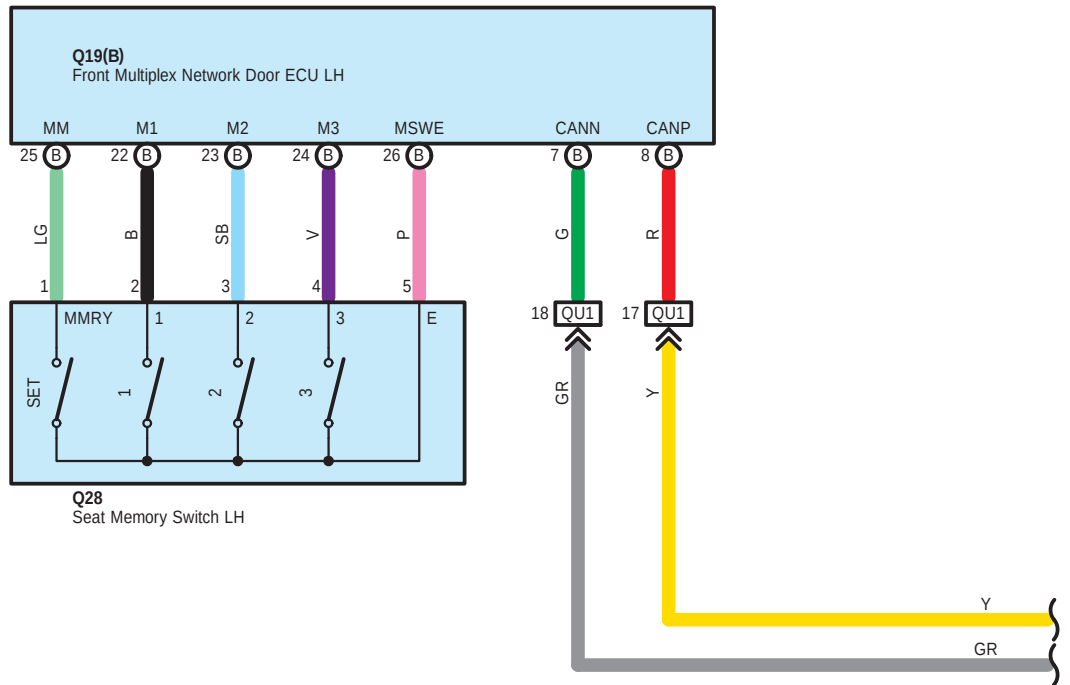


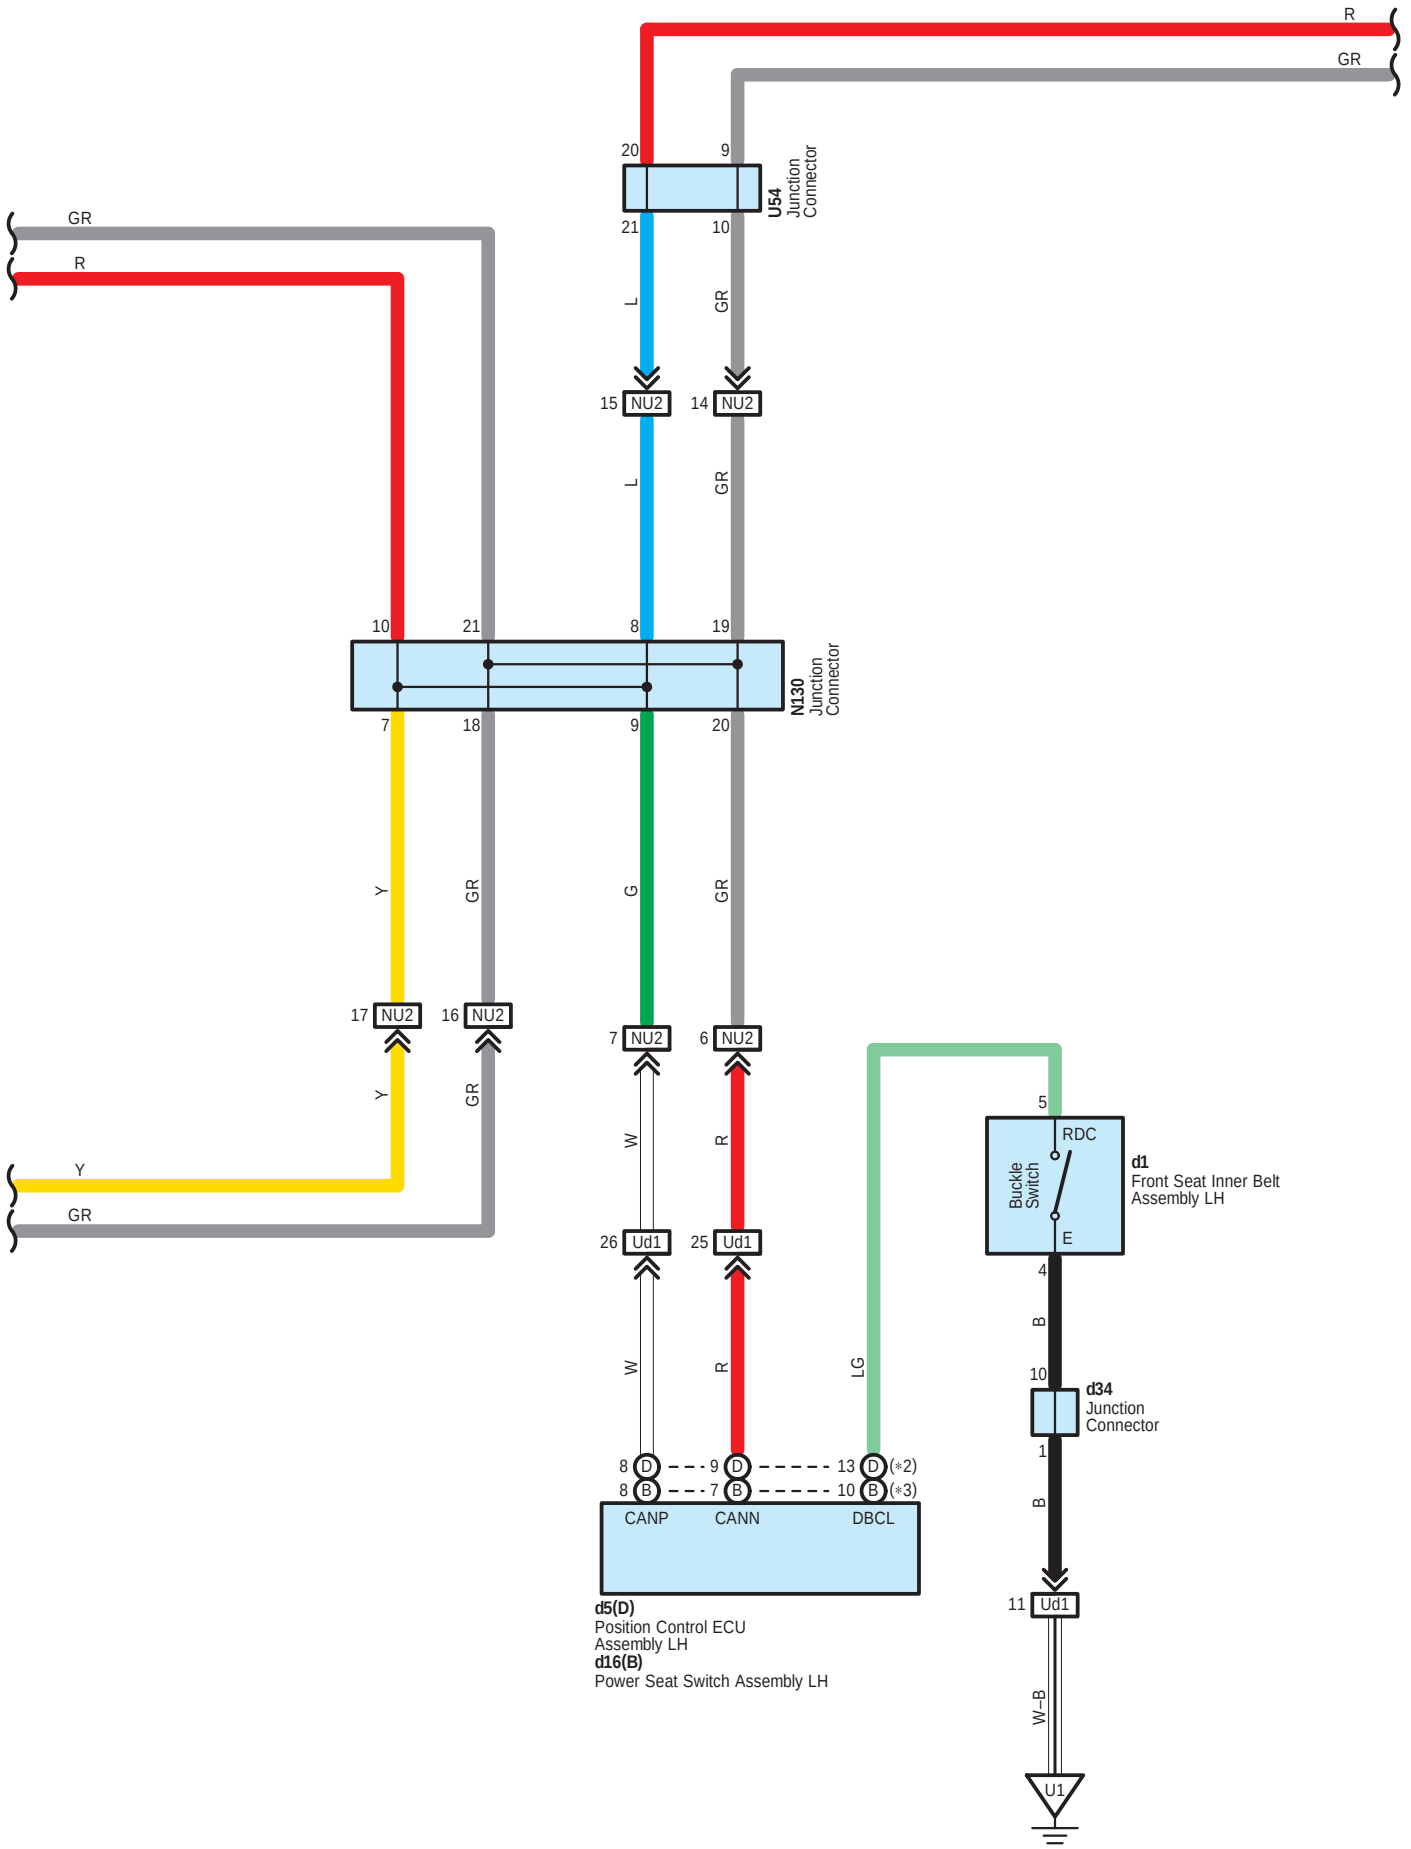

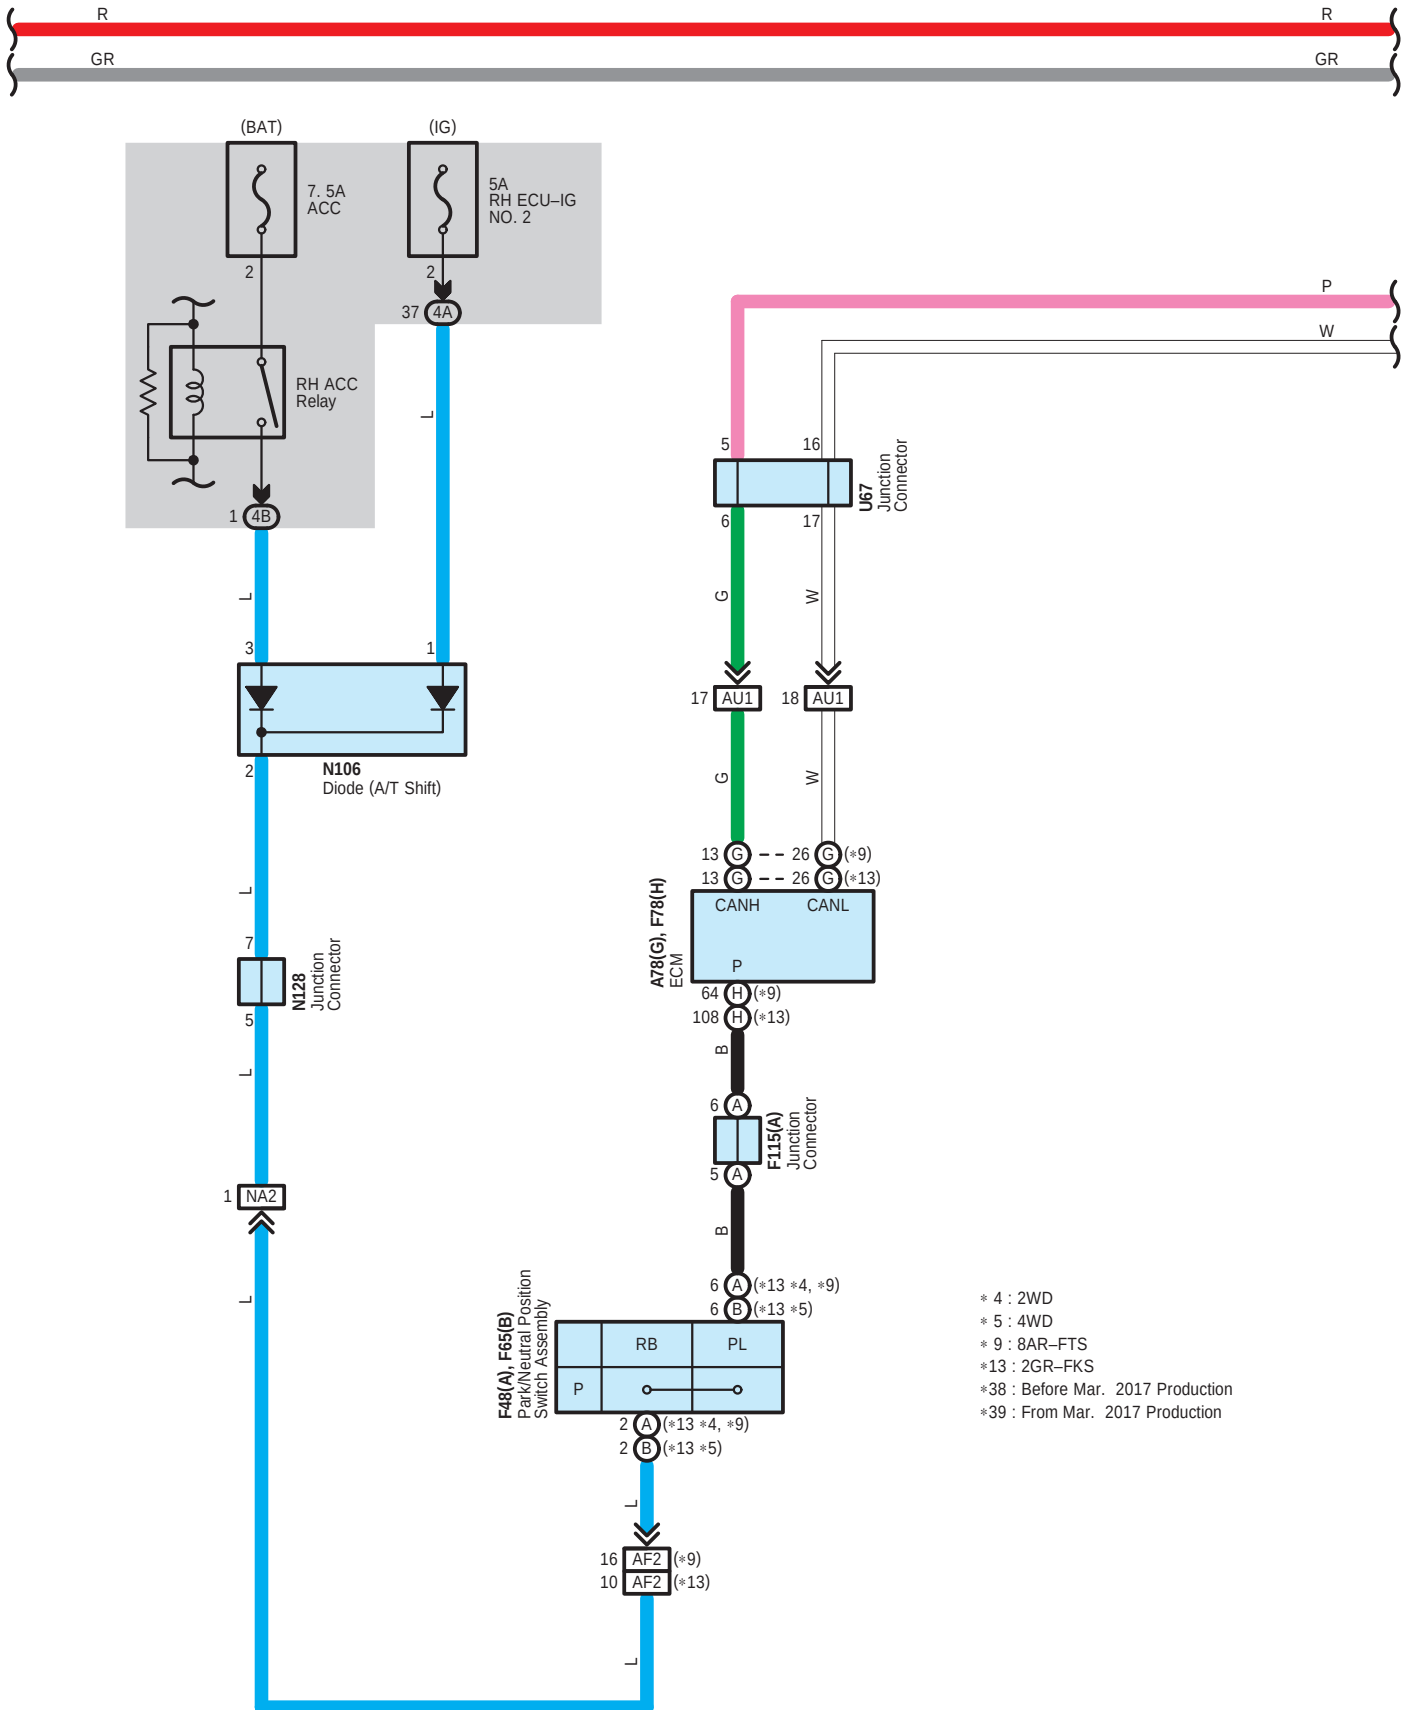

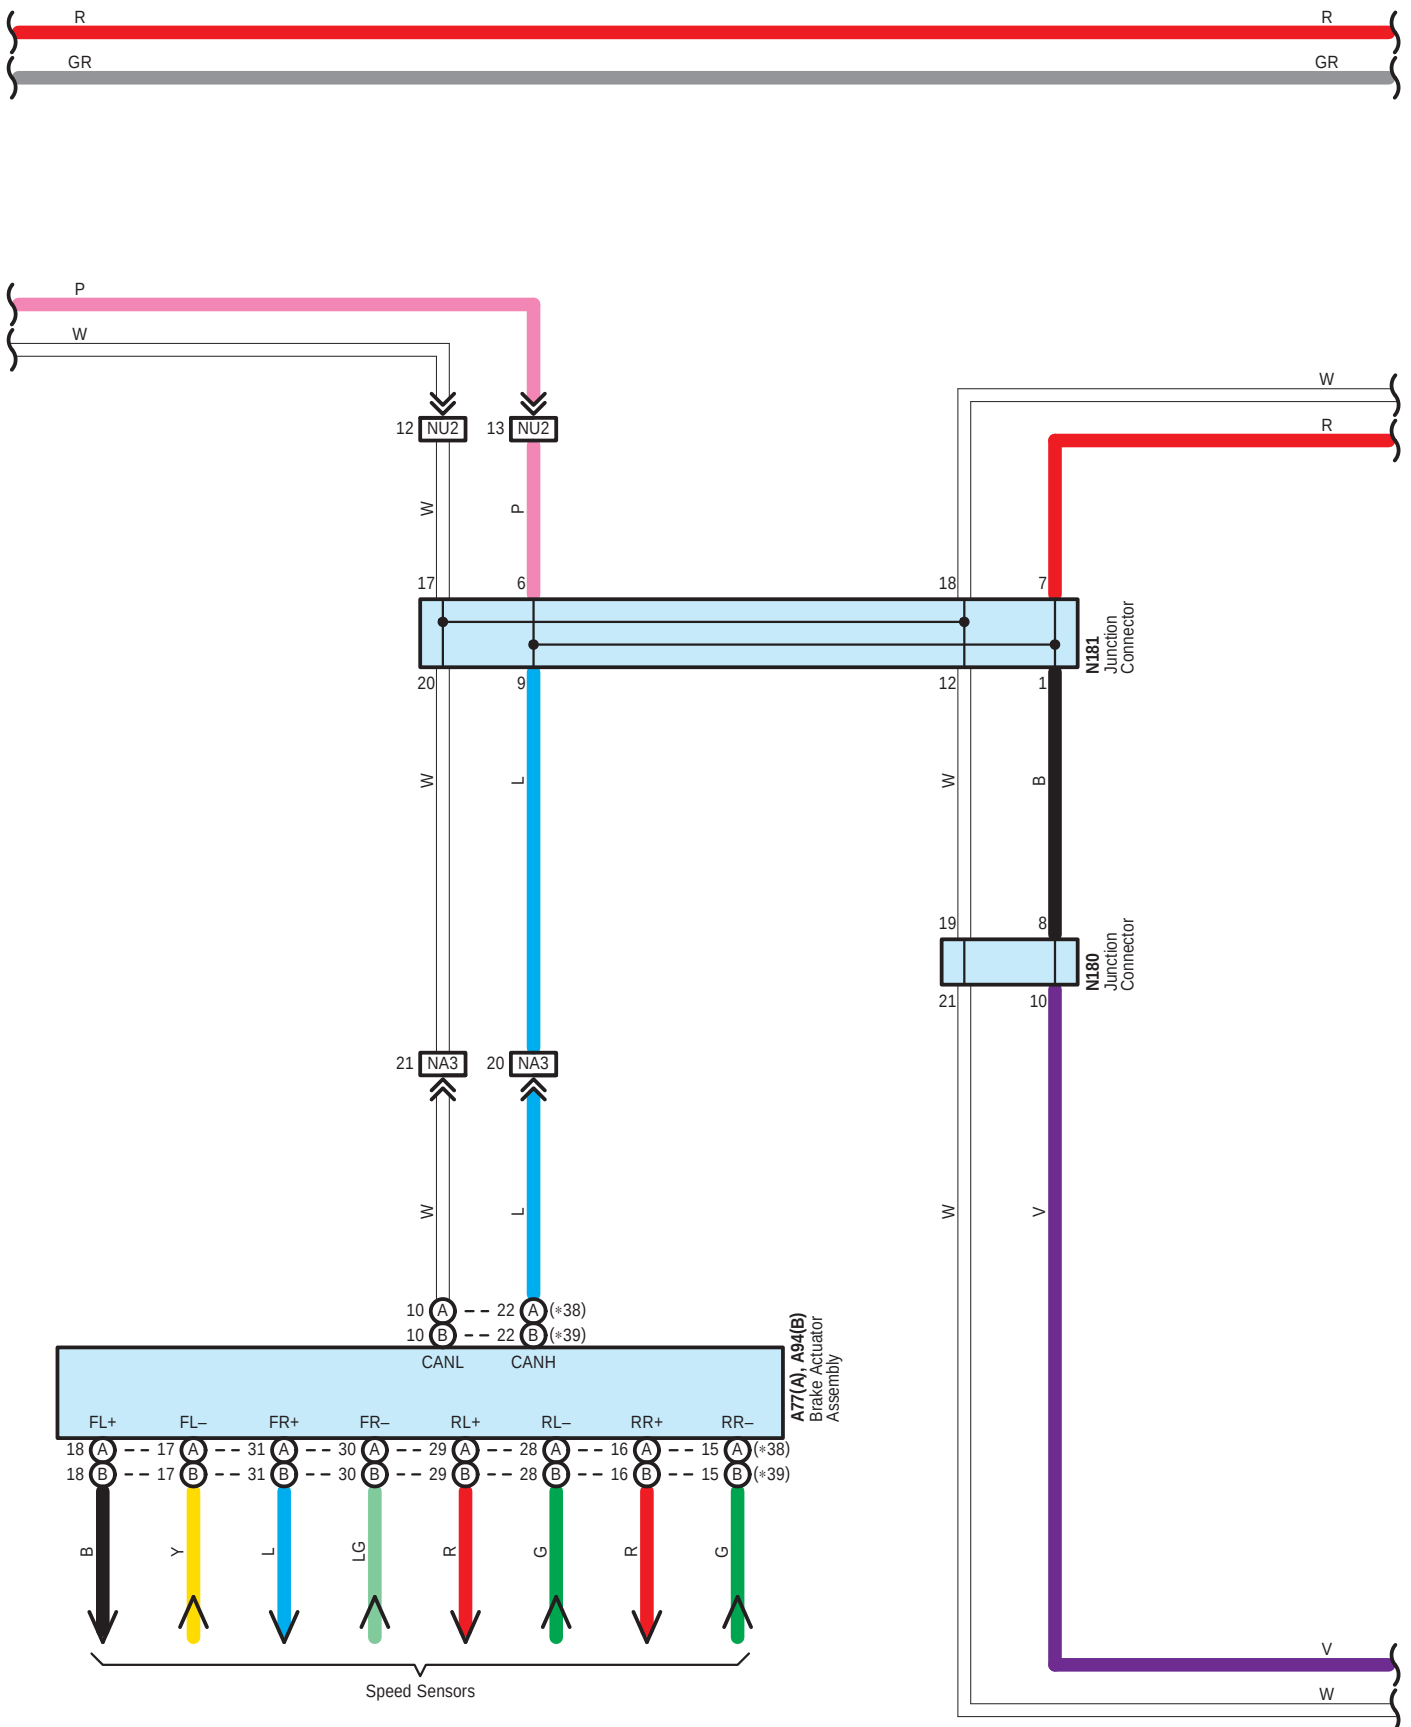


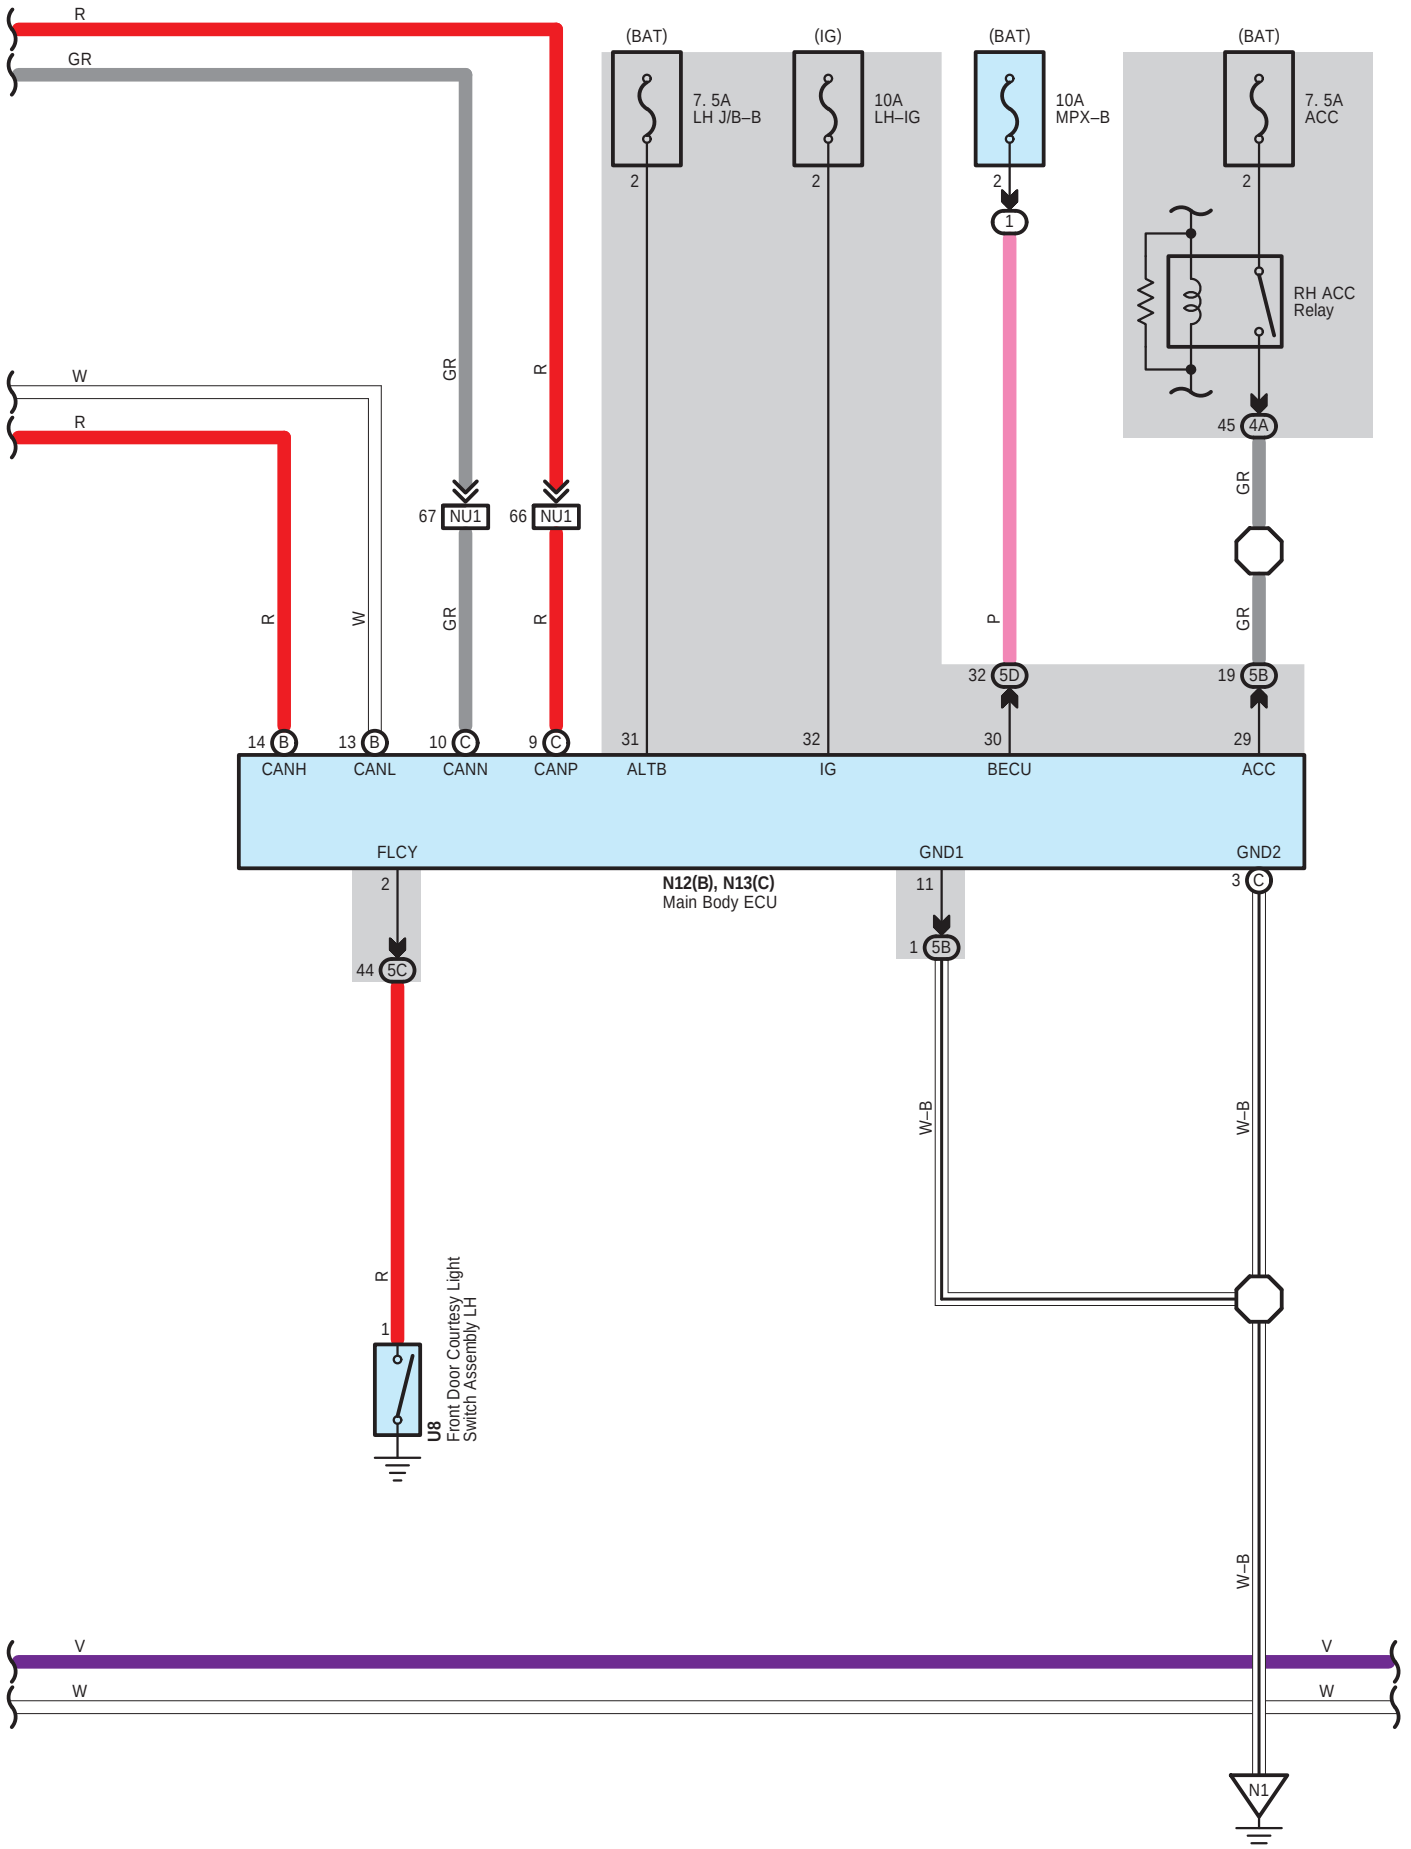

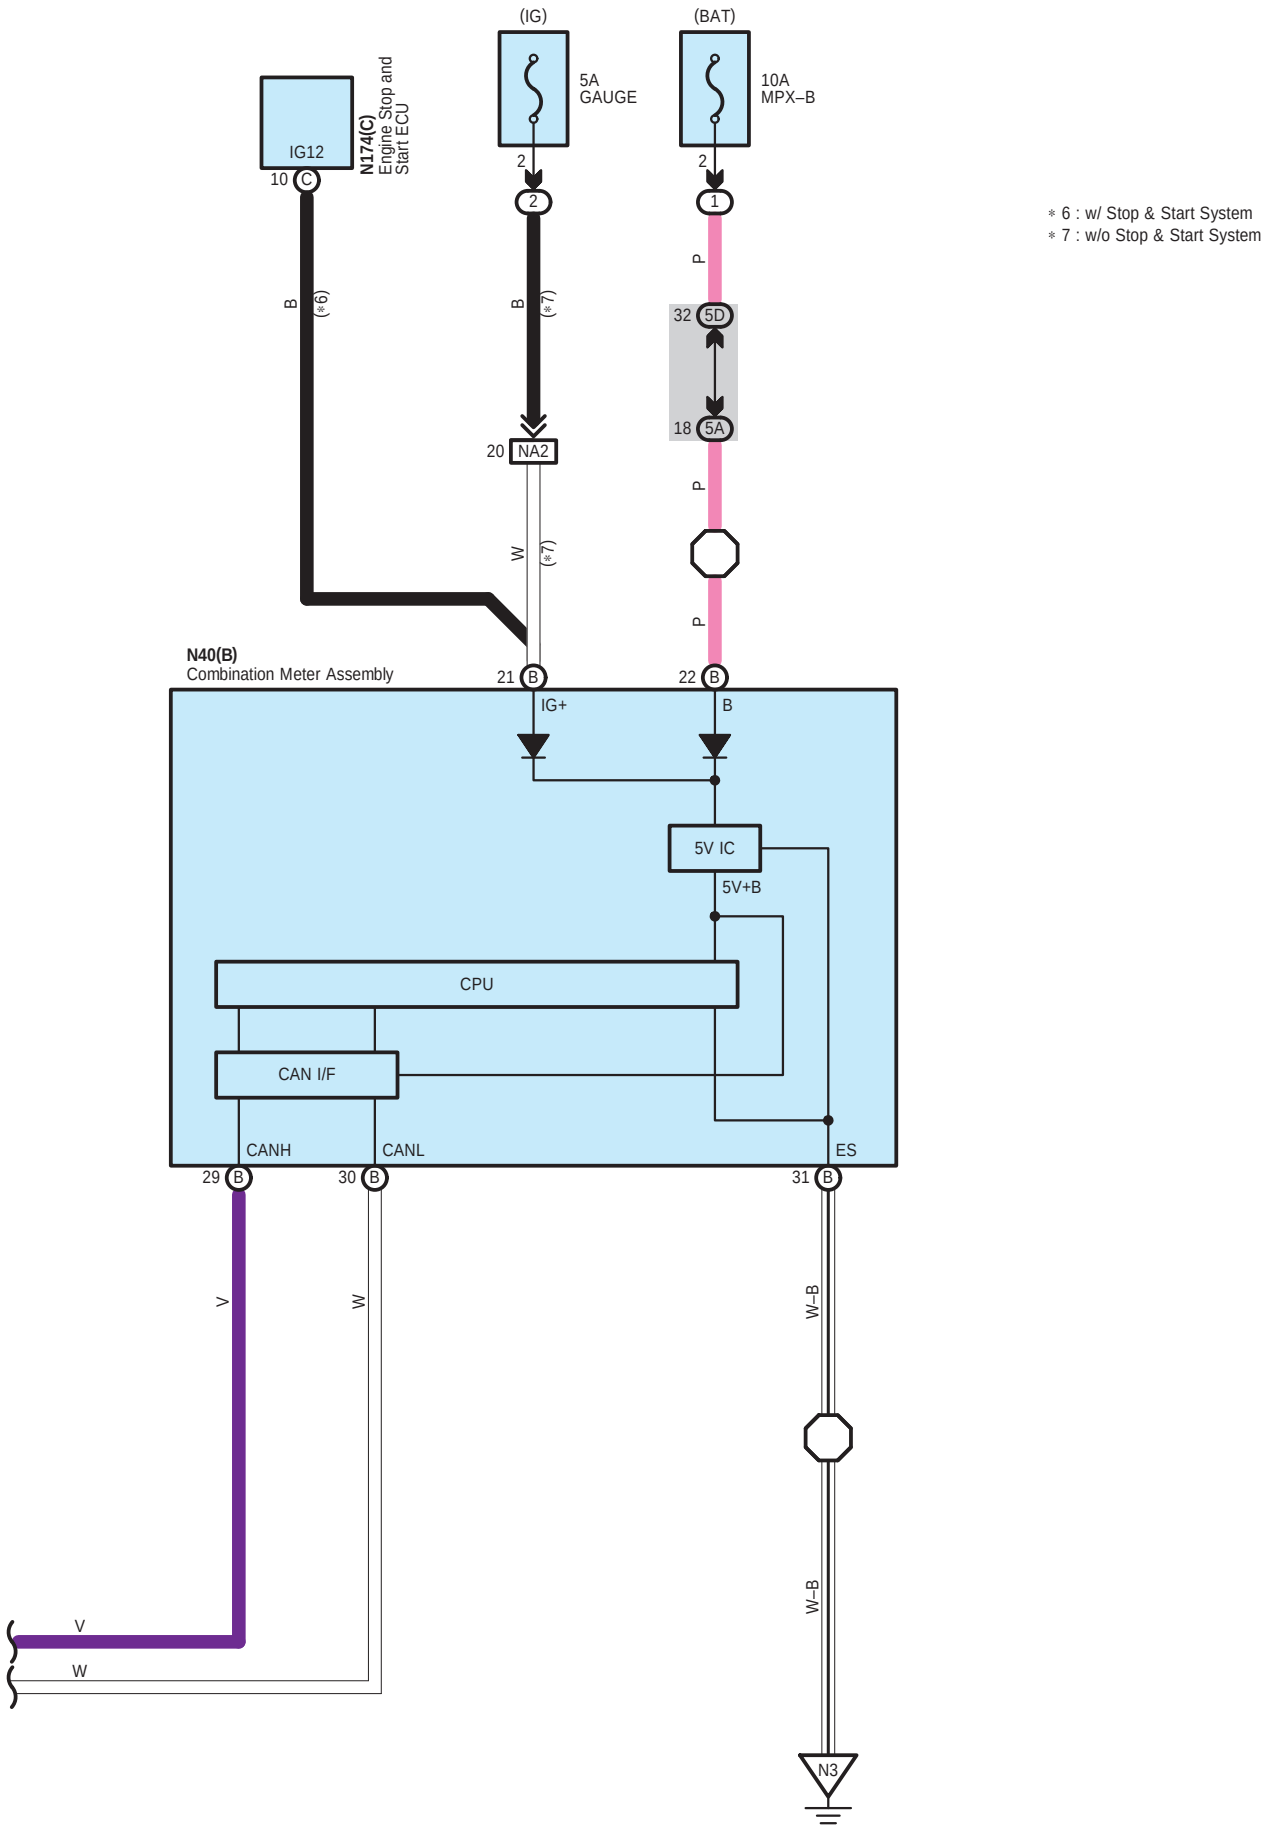


A 77

Black

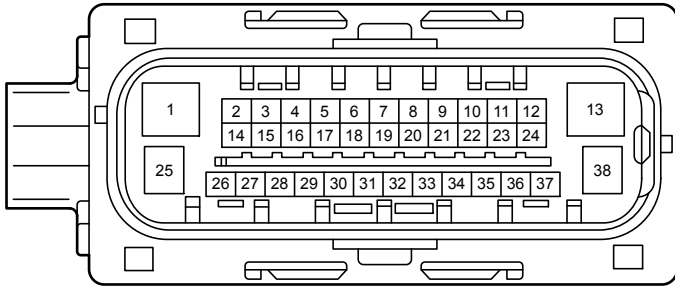


A 78

Black

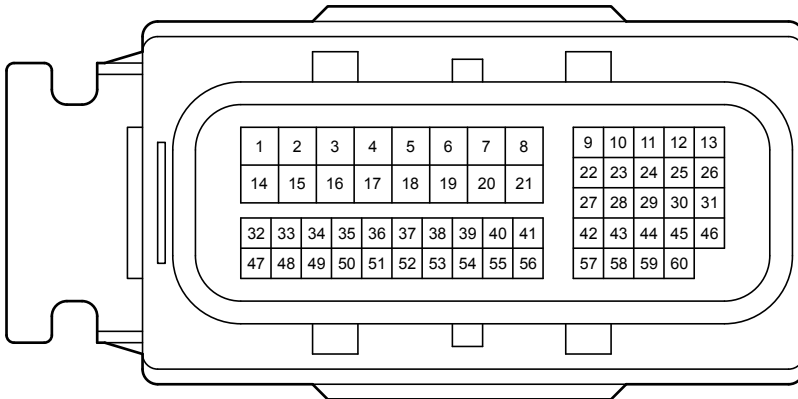


A 94

Black

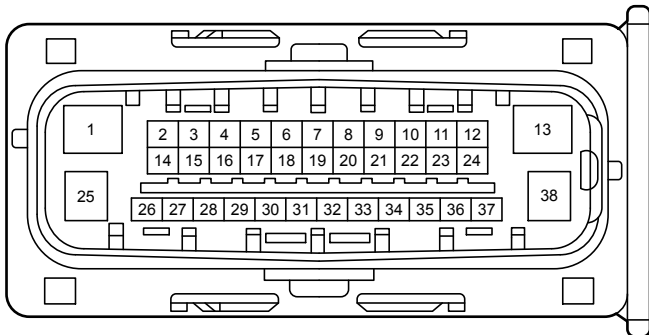


F 48

Black

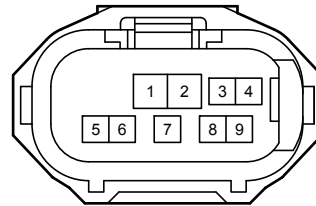


F 65

Gray

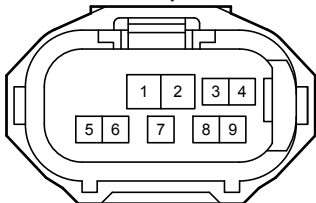


F 78

Black

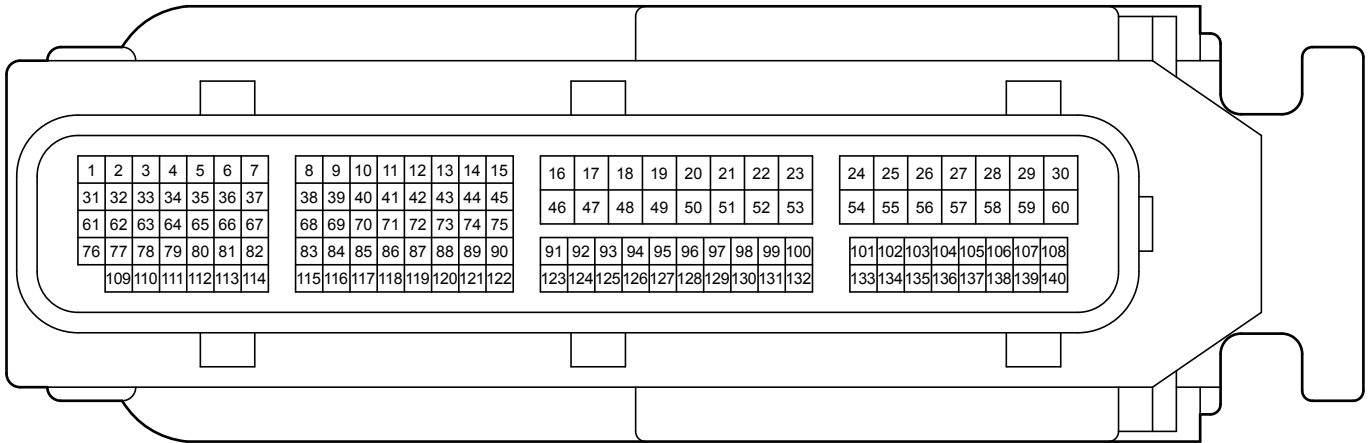


F115

Blue

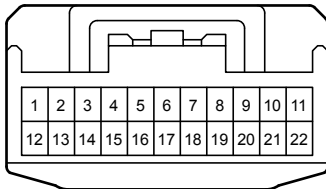


N 12

White

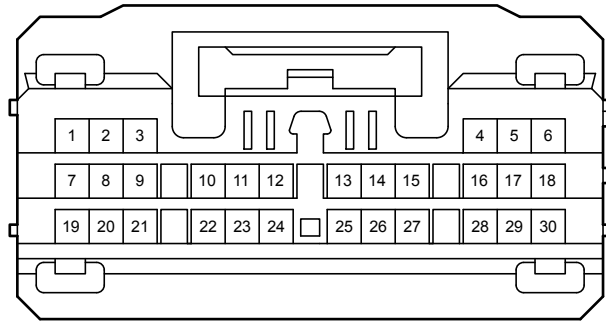


N 13

White

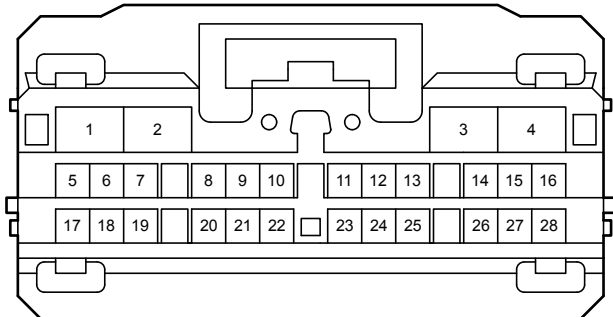


N 22

Black

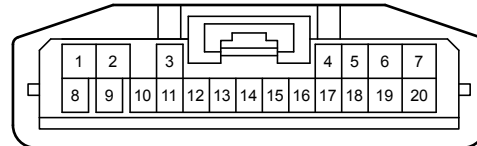


N 25

Black

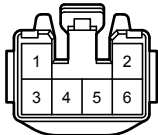


N 27

Black

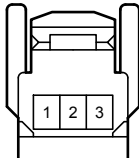


N 37

White

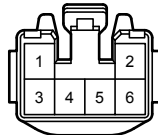

N 40

Black

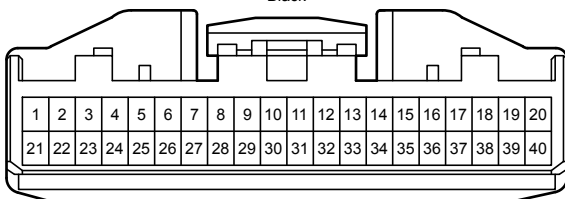


N106

Gray




N128


Blue

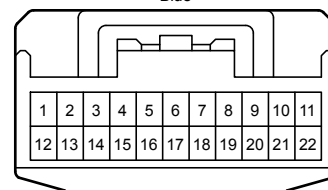


N130
Black

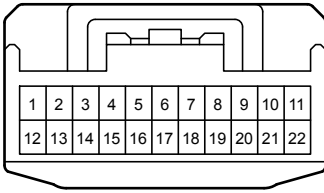


N174
Black

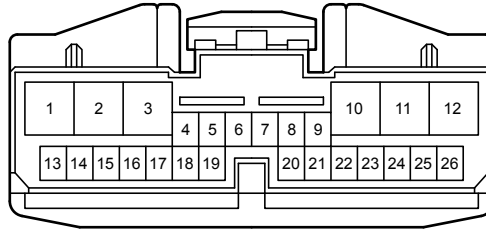


N180
Gray

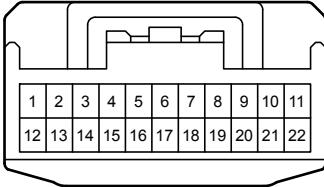


N181
Gray

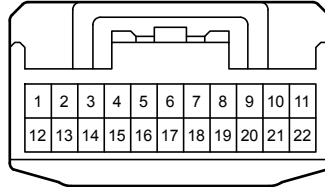

Q 19
White

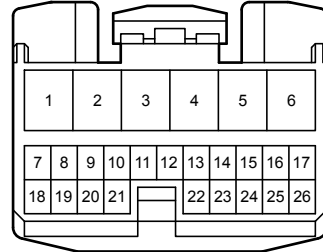


Q 28
White

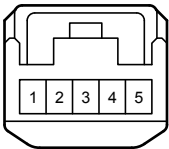


U 8
Black




U 54
Blue

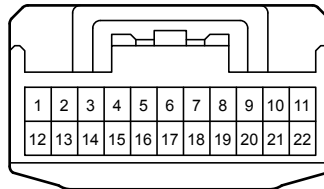


U 67
Gray

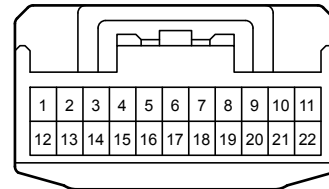


d 1
White

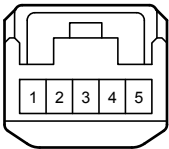


d 5
White

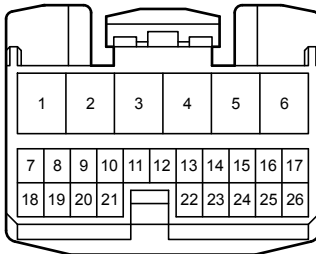


d 16
Black

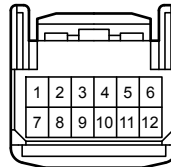


d 34
Black

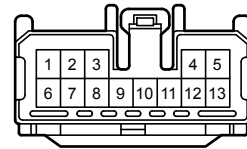

4A
White

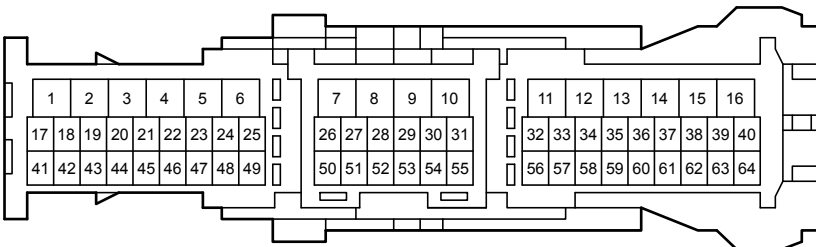


4B
White

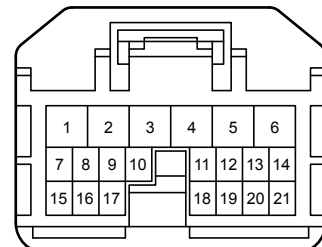


5A

White

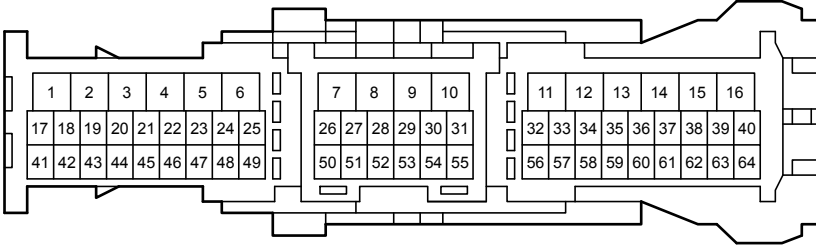


5B

White

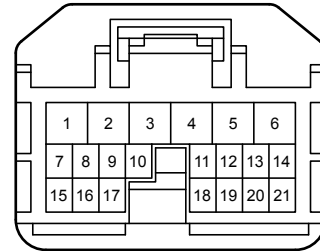


5C

White

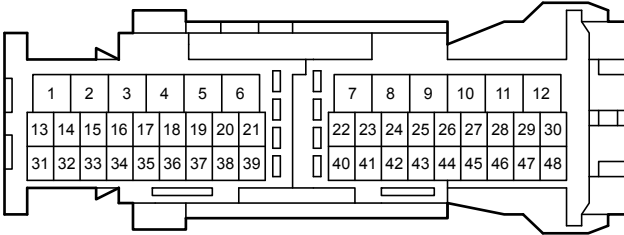



5D

White

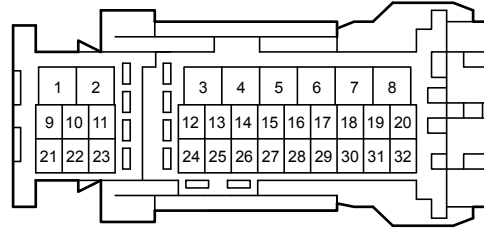



AF2

White

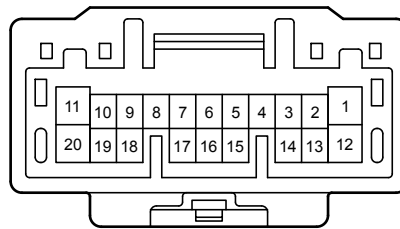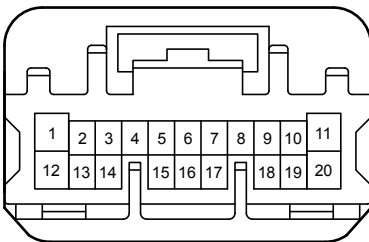



AU1

White

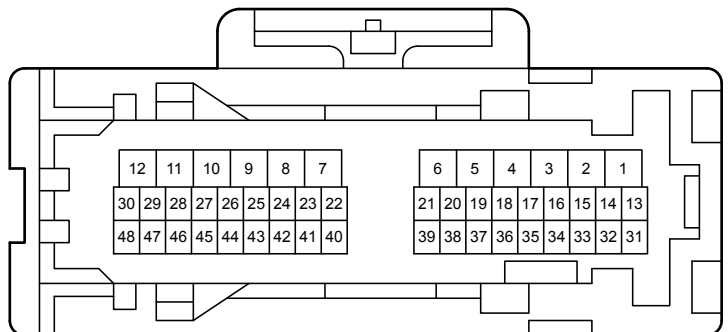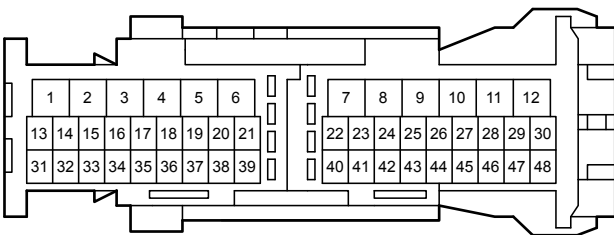


NA2


White

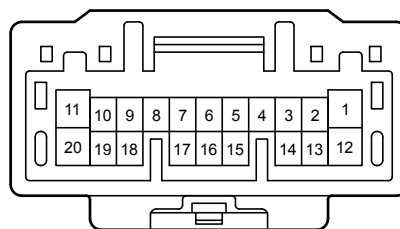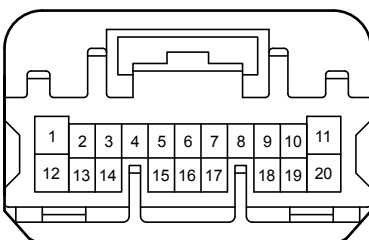


NA3
White

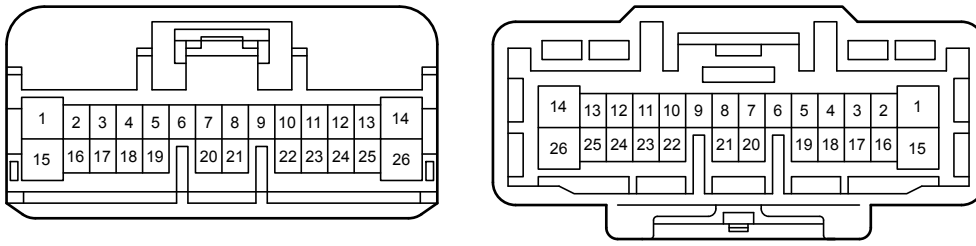

NU1
White

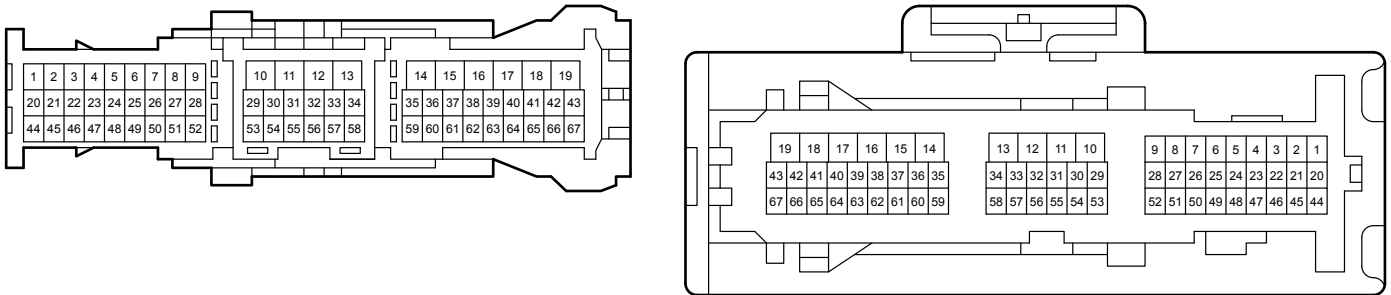

NU2
White

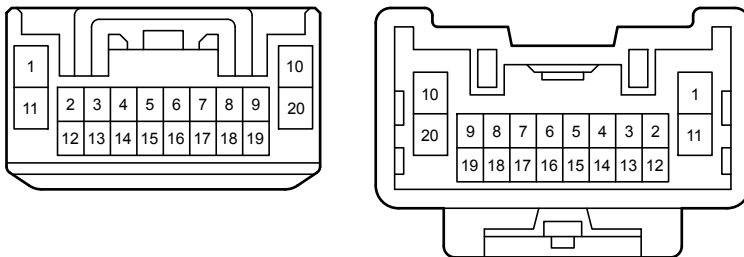

QU1
White

