




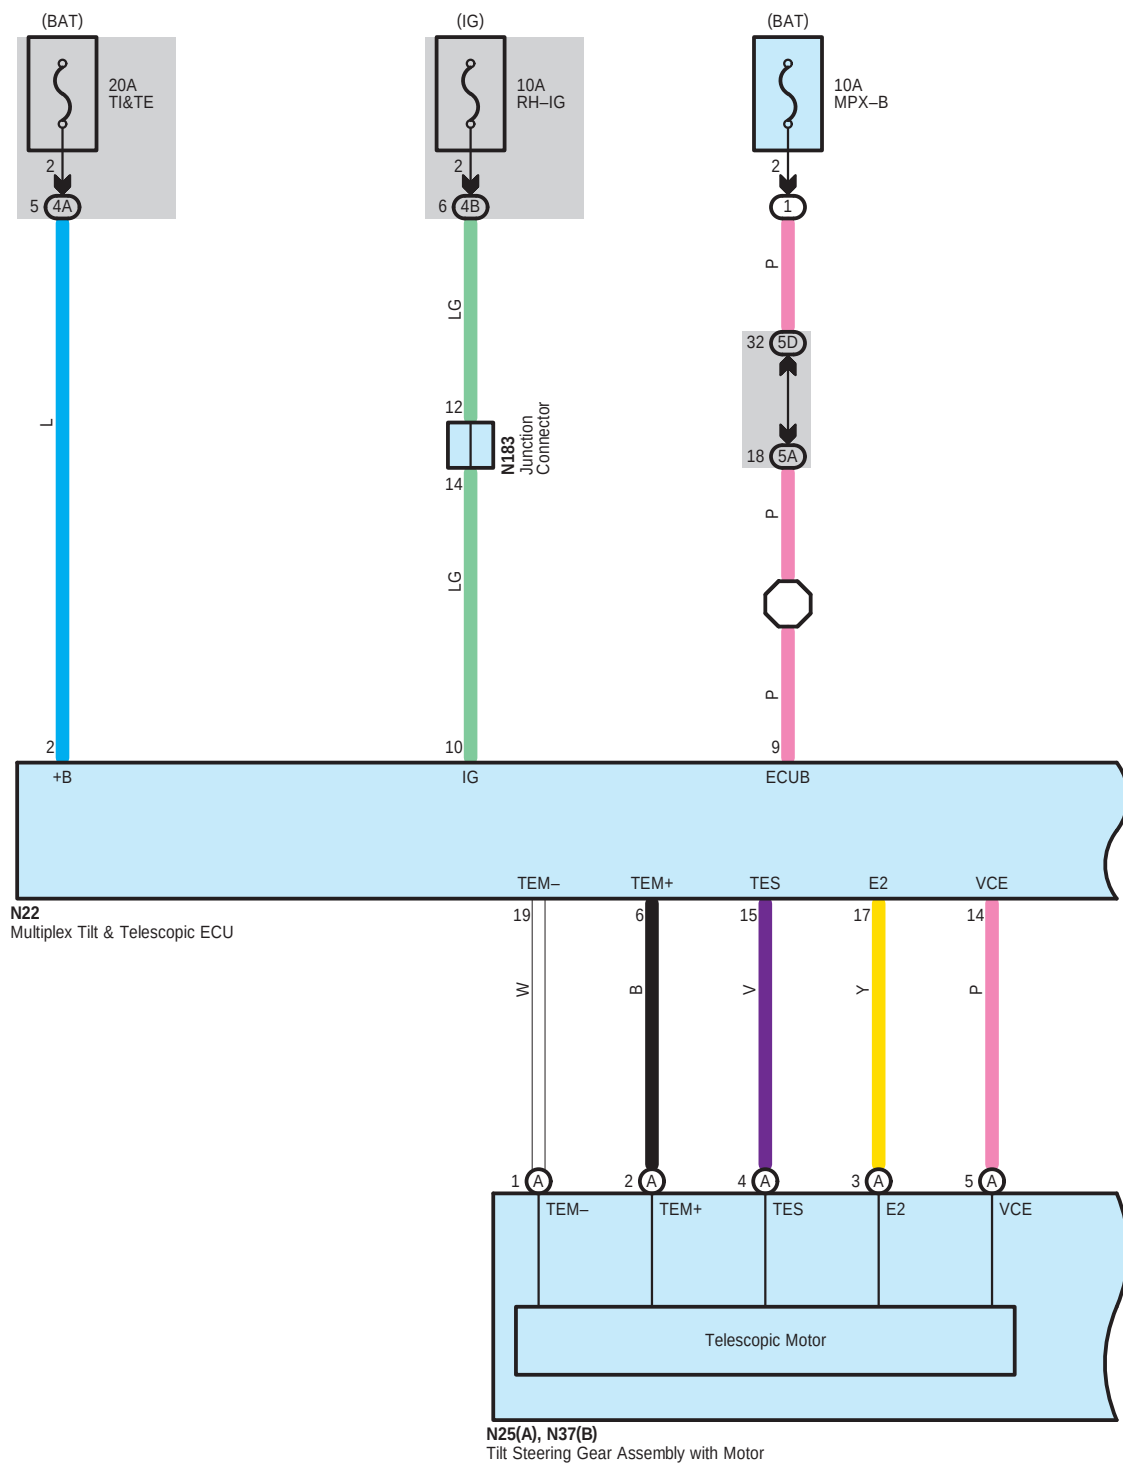


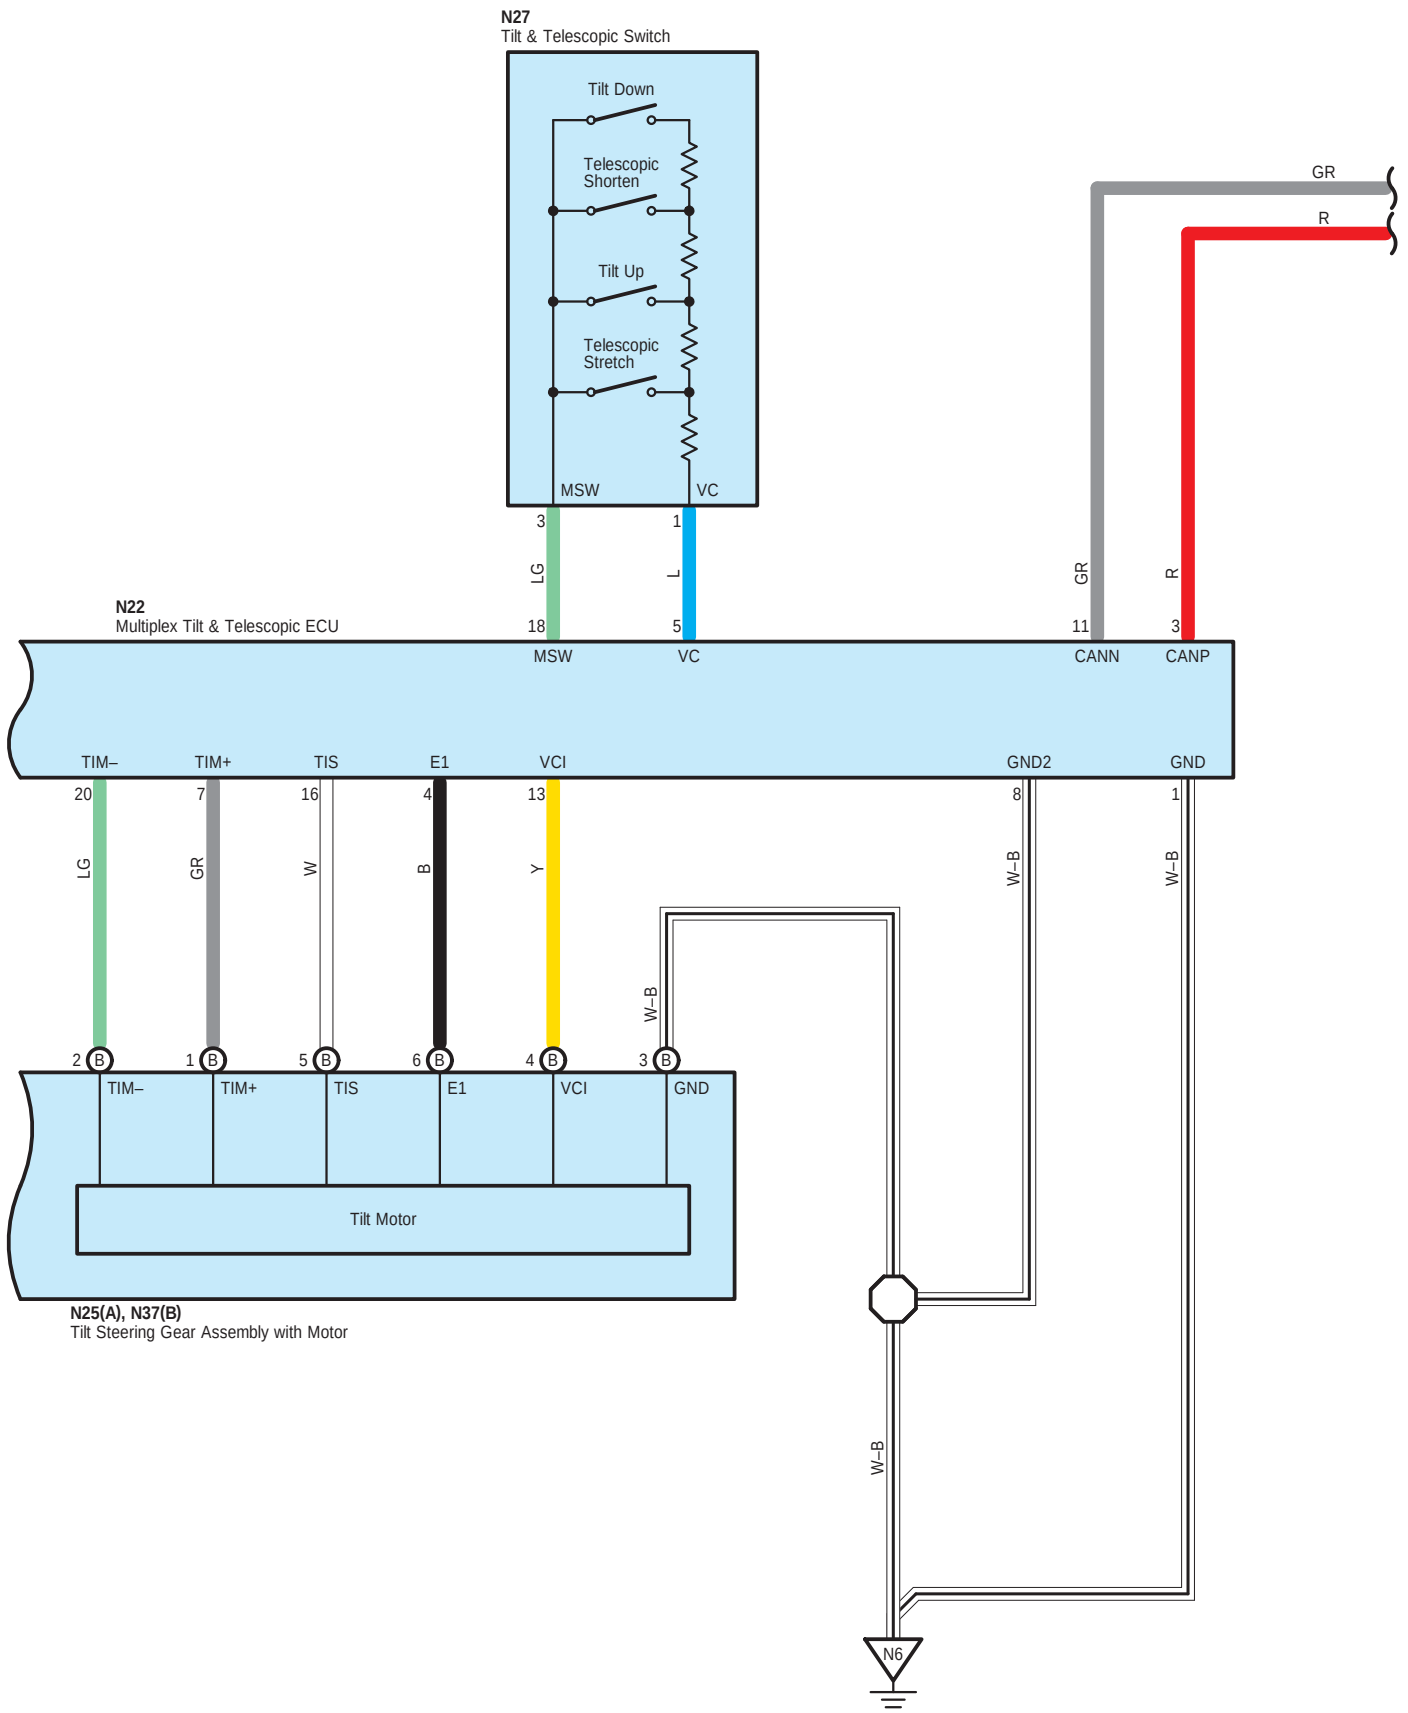


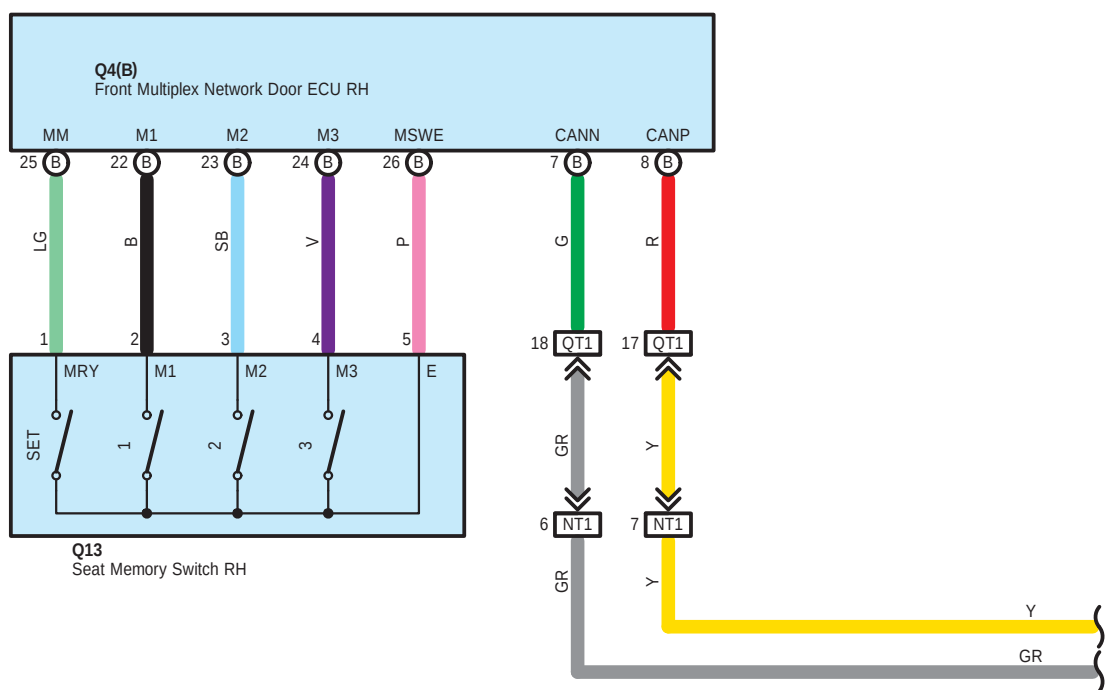



* 2 : Except 10-Way Seat Position


* 3 : 10-Way Seat Position

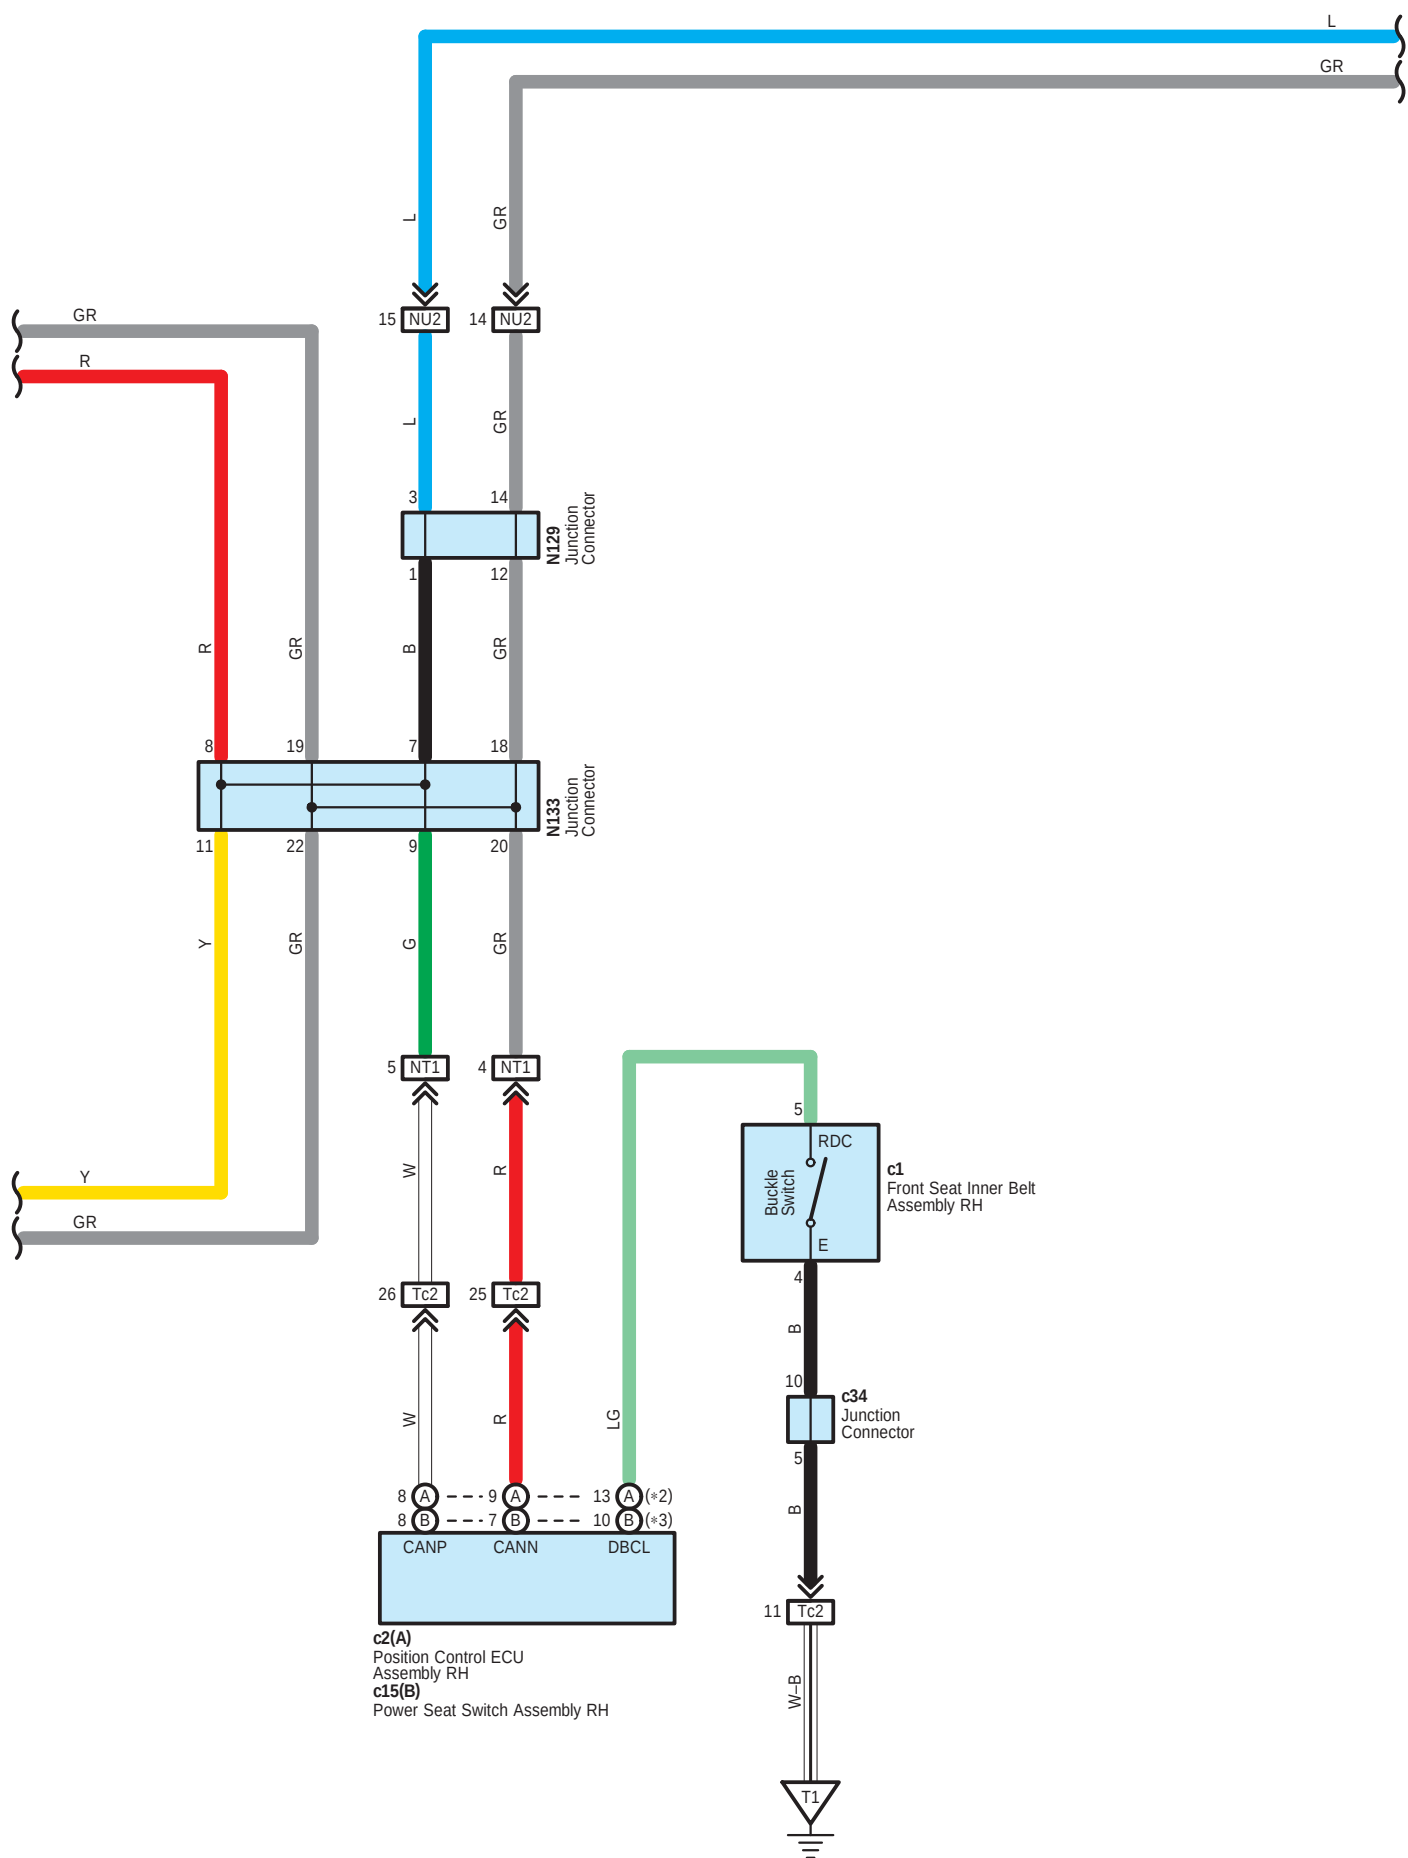



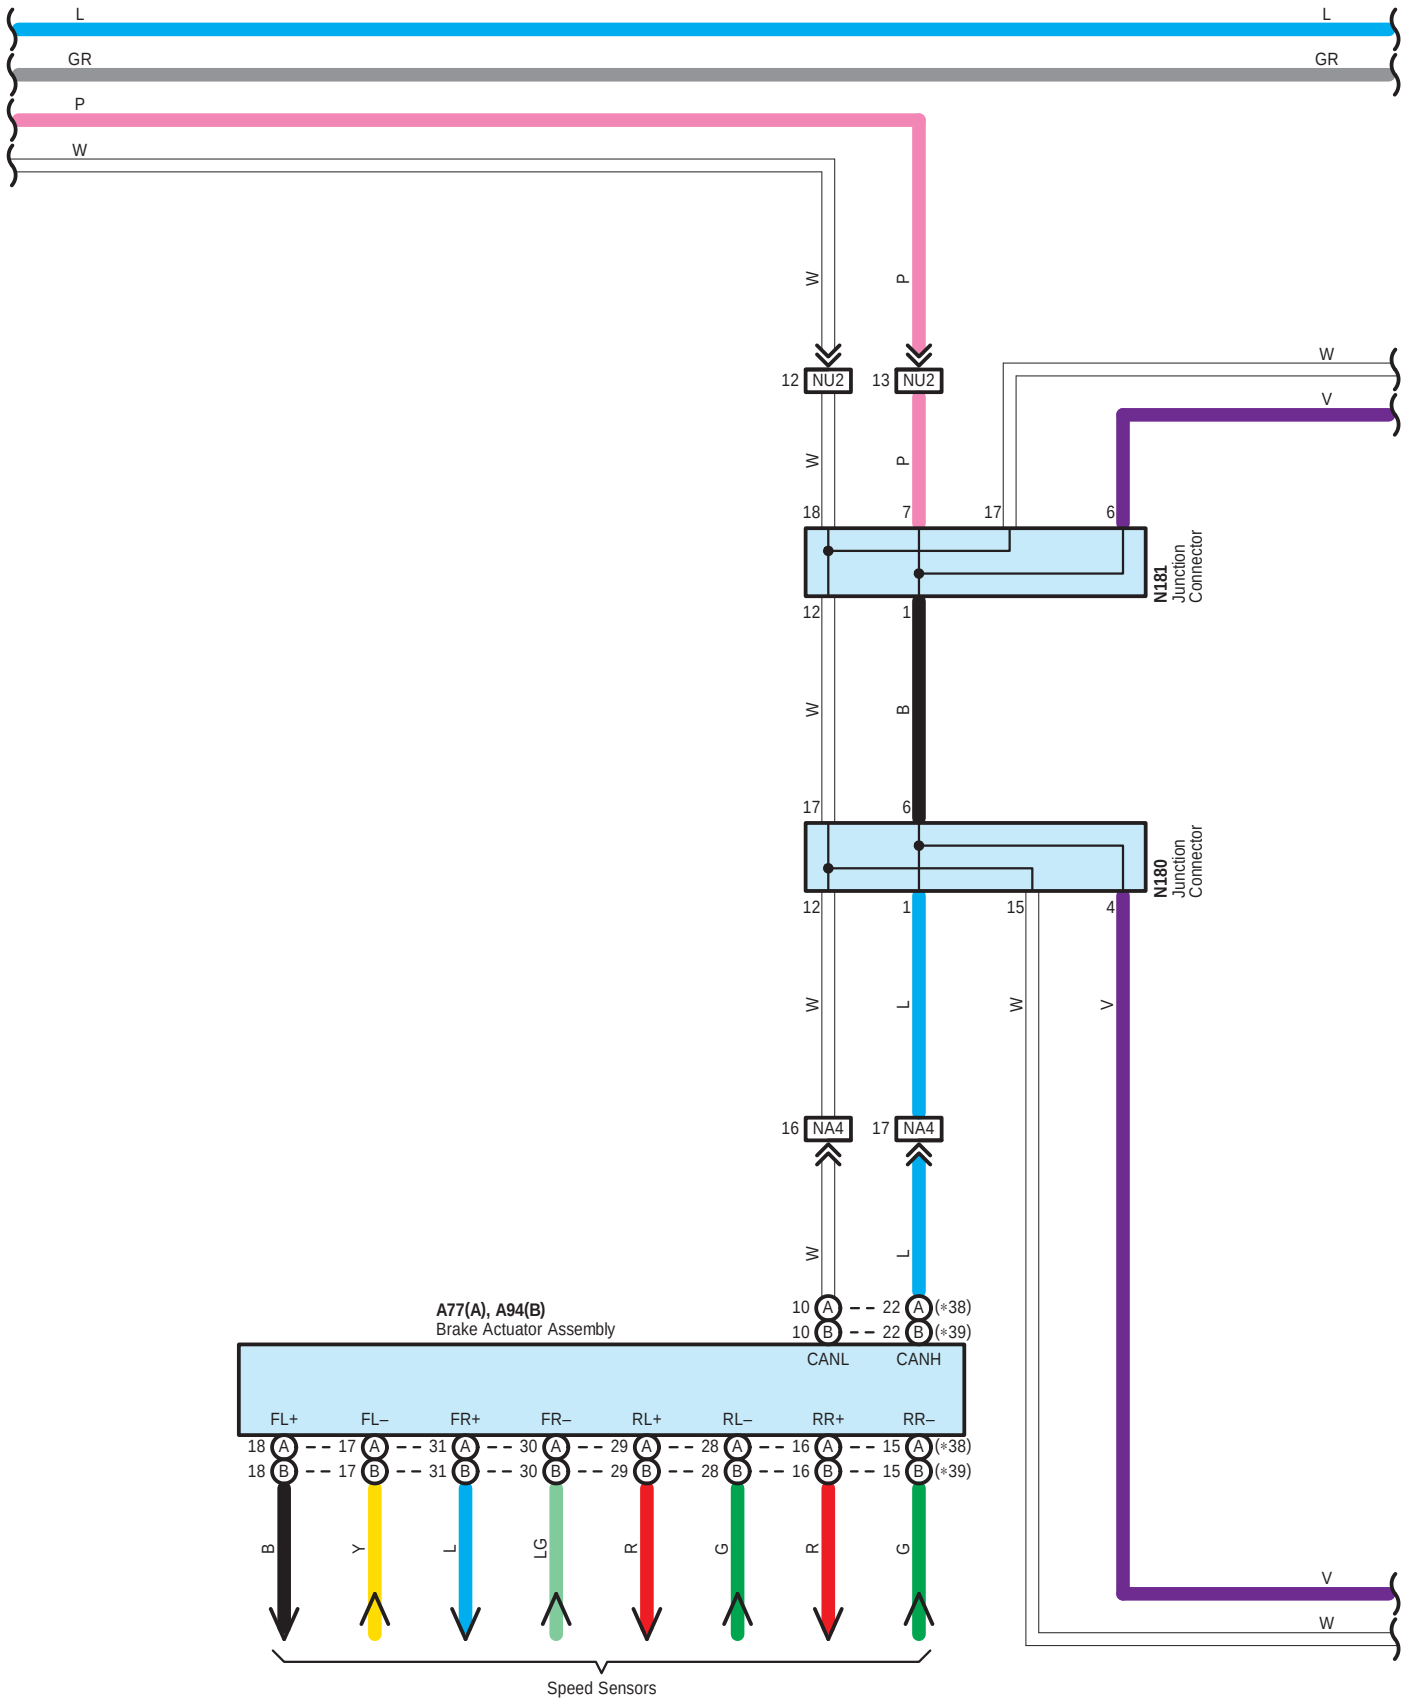


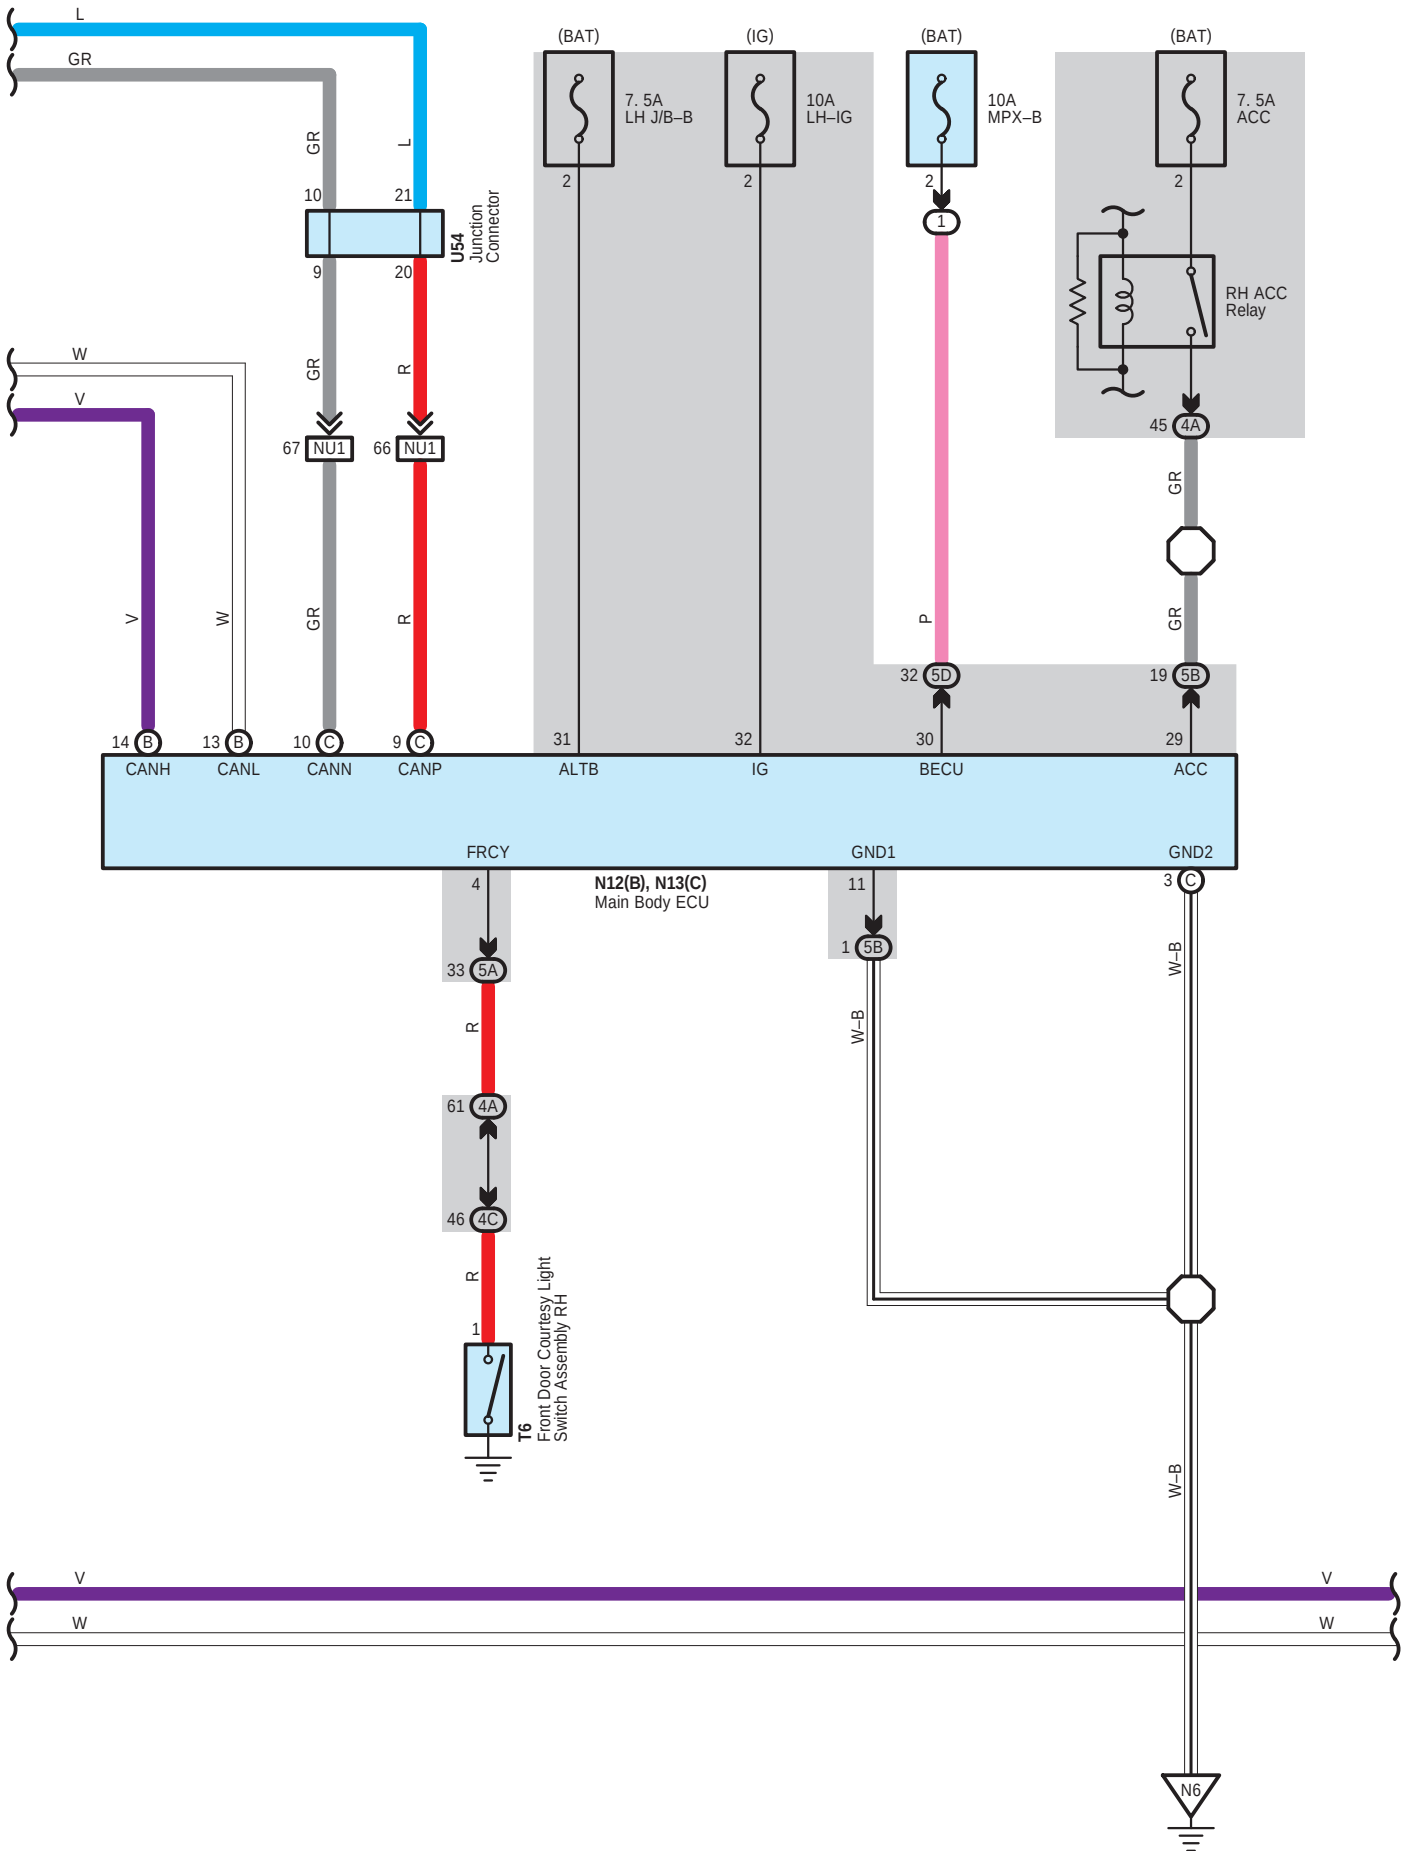

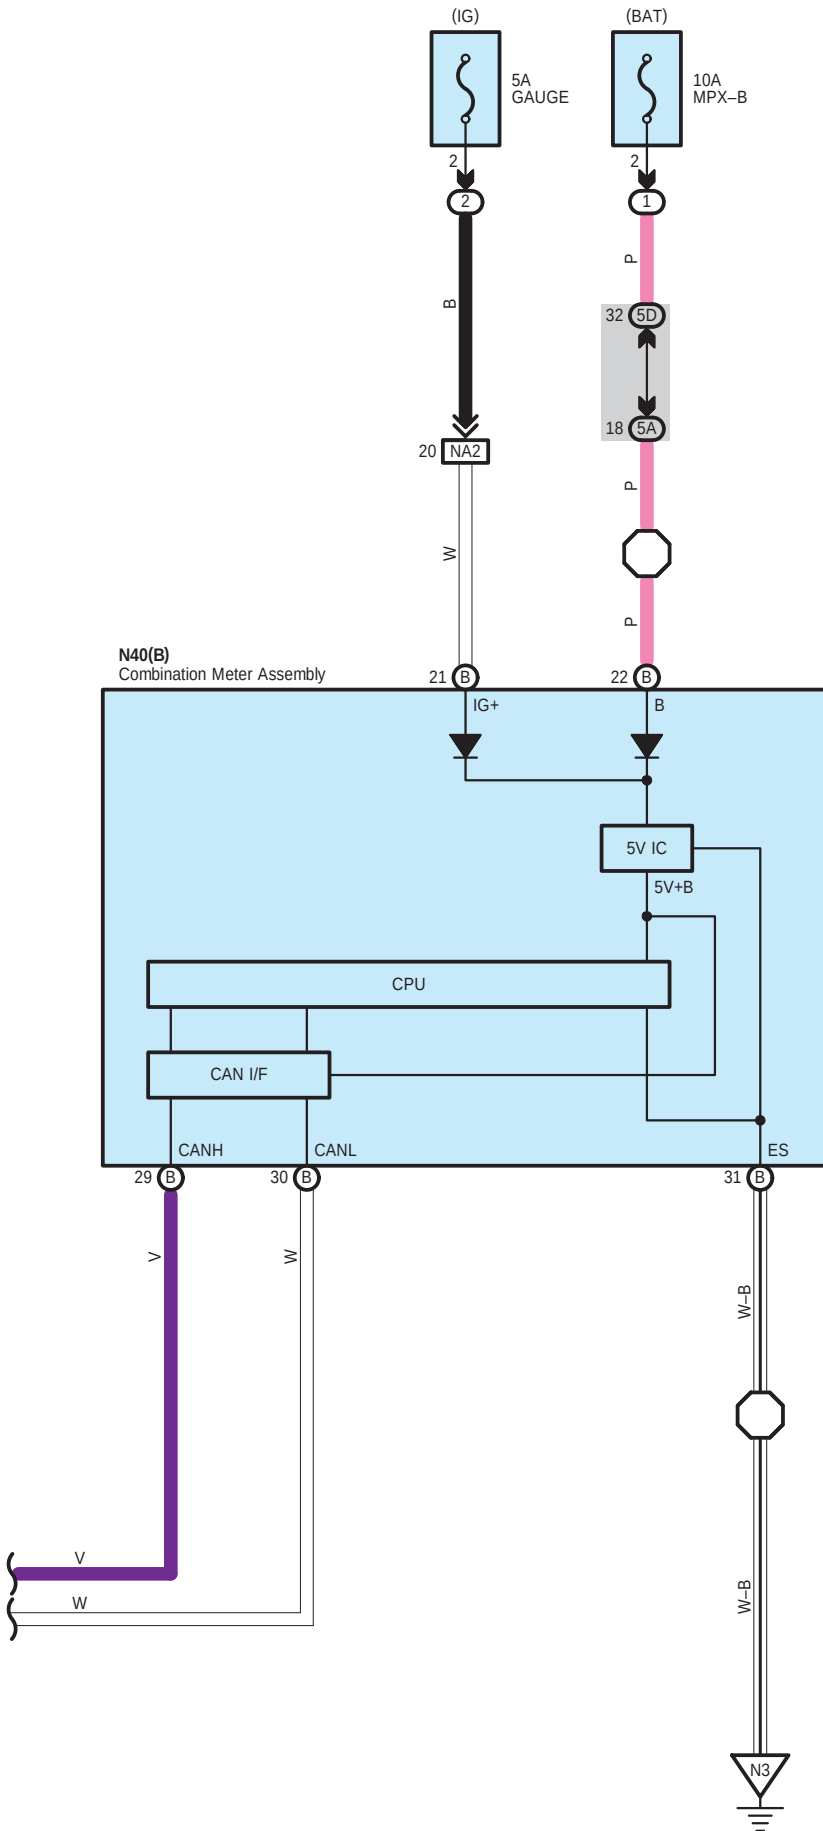


A 77

Black

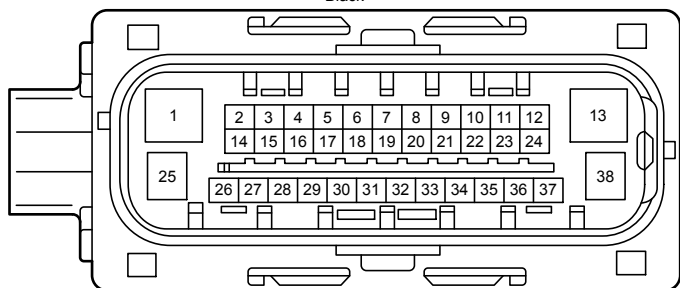


A 78

Black

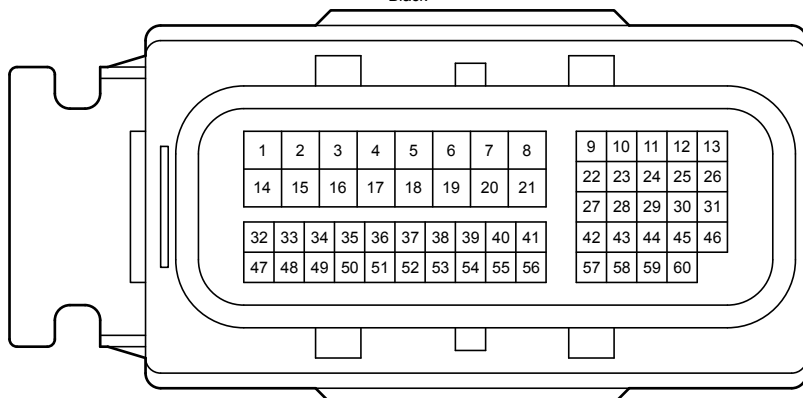


A 94

Black

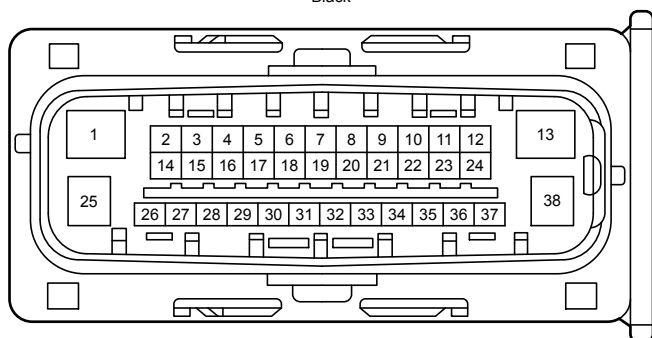


F 48

Black

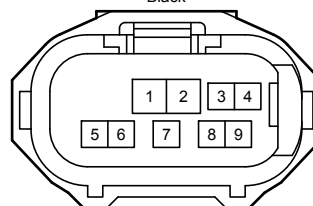


F 78


Black

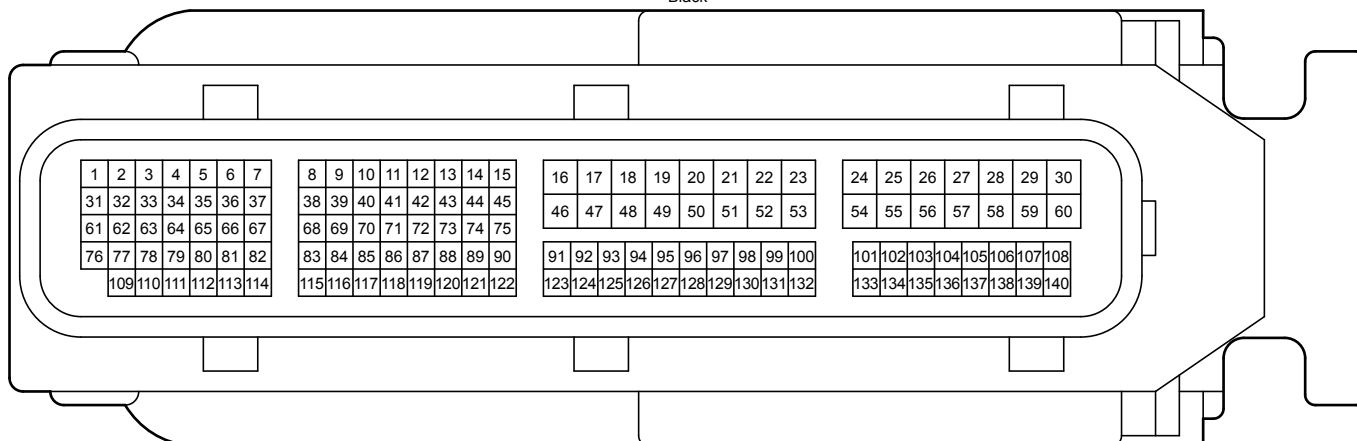


F115
Blue

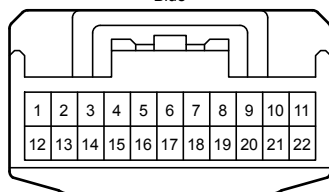


N 12
White

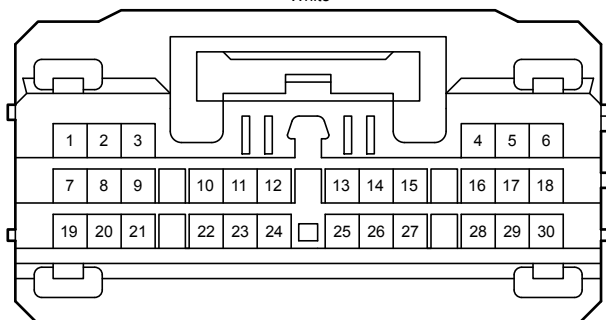


N 13
White

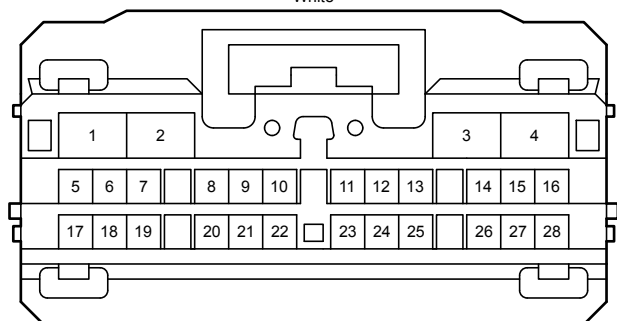


N 22
Black

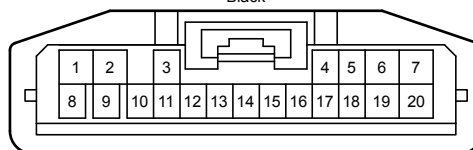


N 25
Black

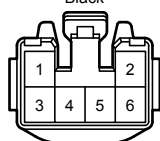


N 27
Black

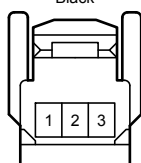


N 37
White

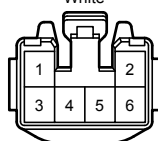


N 40
Black

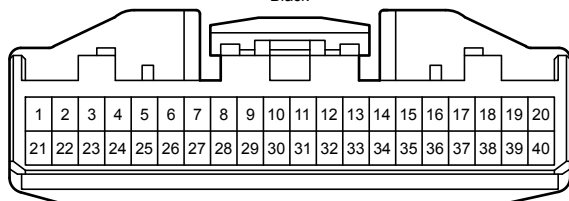


N106
Gray




N127
Blue

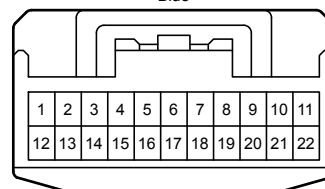


N129
Blue

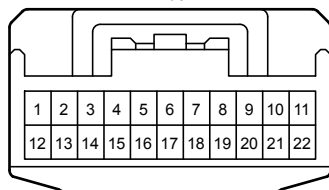


N133
Black

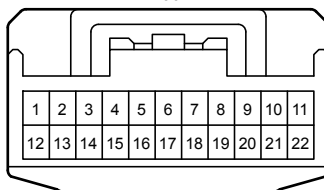


N180
Gray

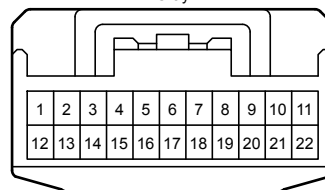


N181
Gray

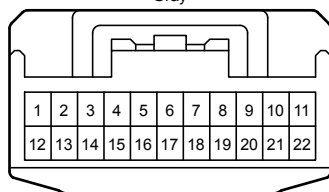


N183
Black

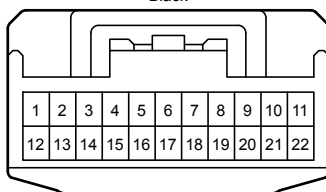

Q 4
White

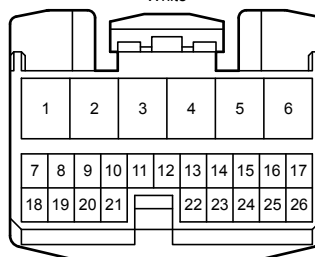


Q 13
White

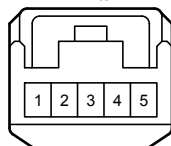


T 6
Black




U 54
Blue

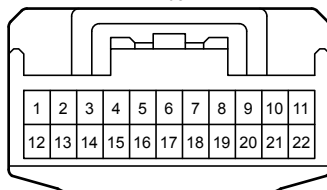


U 67
Gray

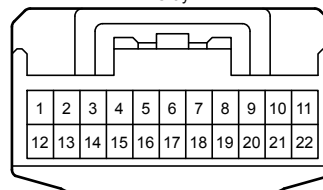


c 1
White

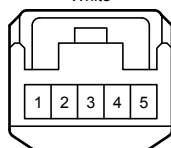


c 2
White

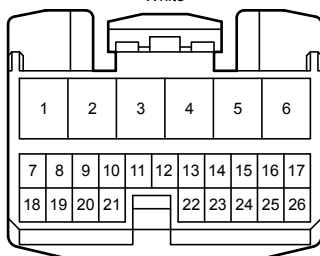


c 15
Black

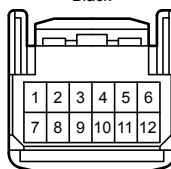


c 34
Black

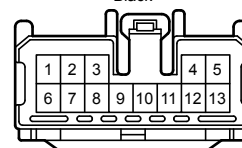


4A
White

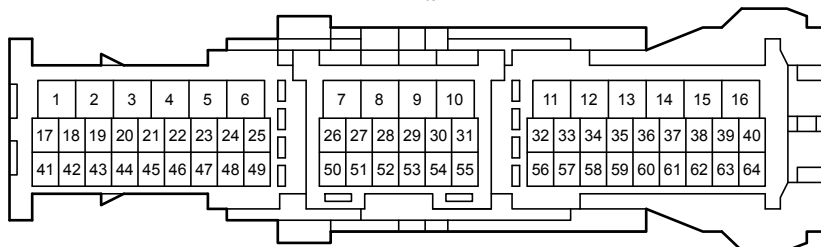

4B
White

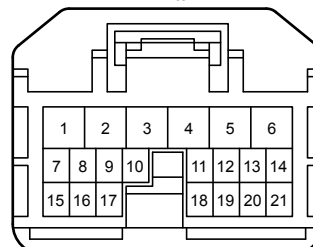


4C
White

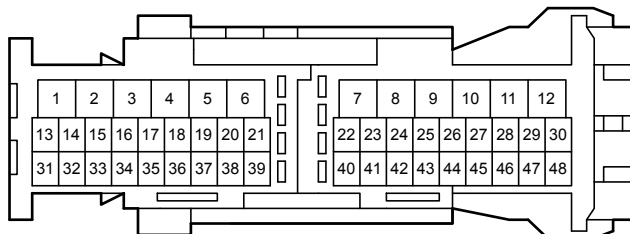


5A

White

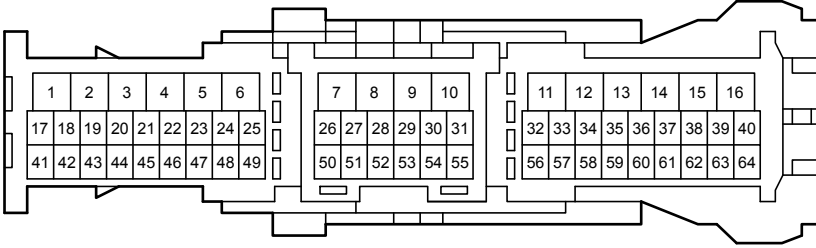


5B

White

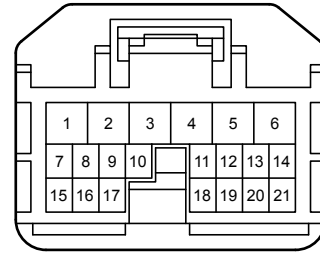


5D

White

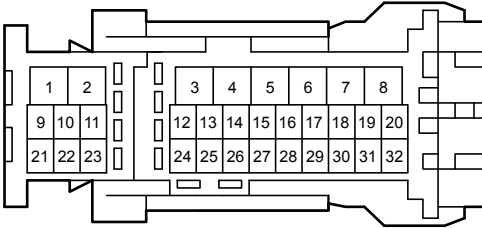


AF2

White

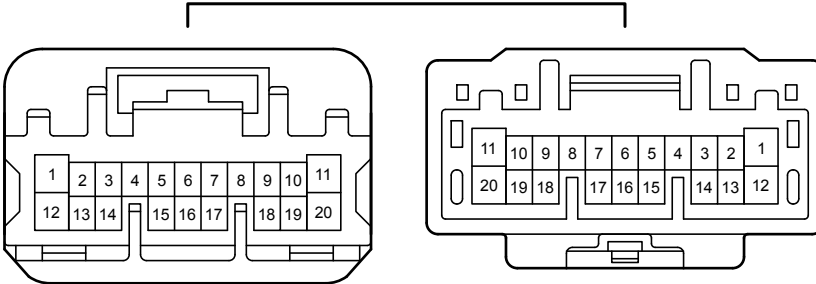


AU1

White

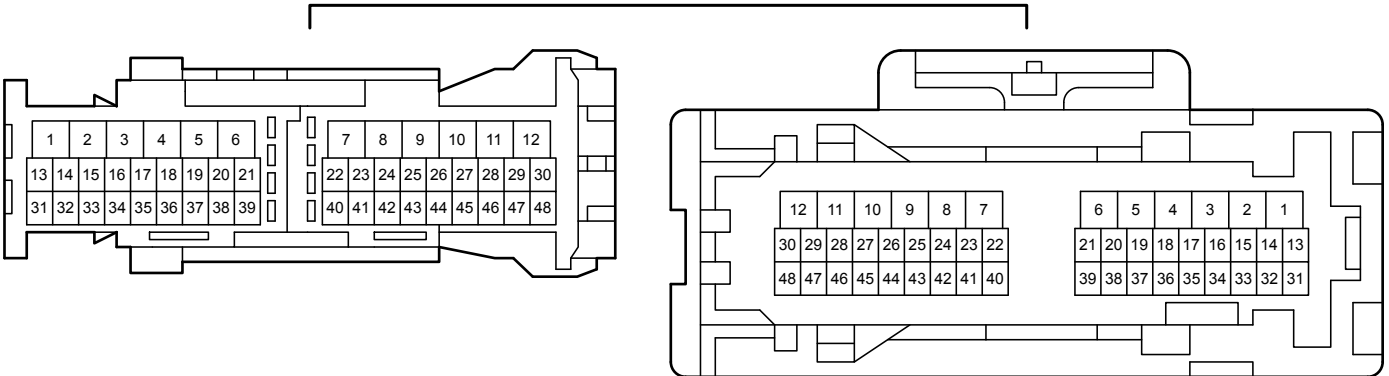


NA4

Gray

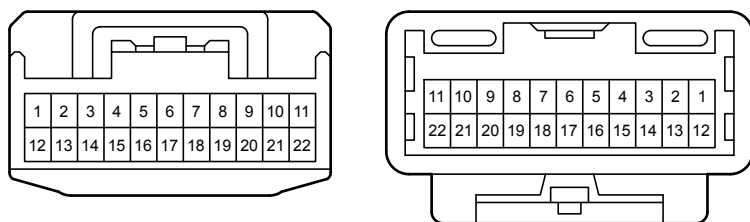


NT1

White

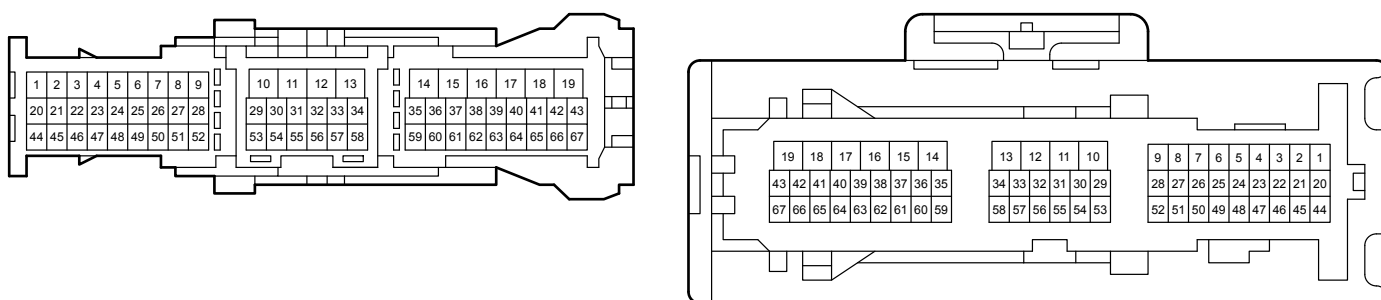


NU1

White


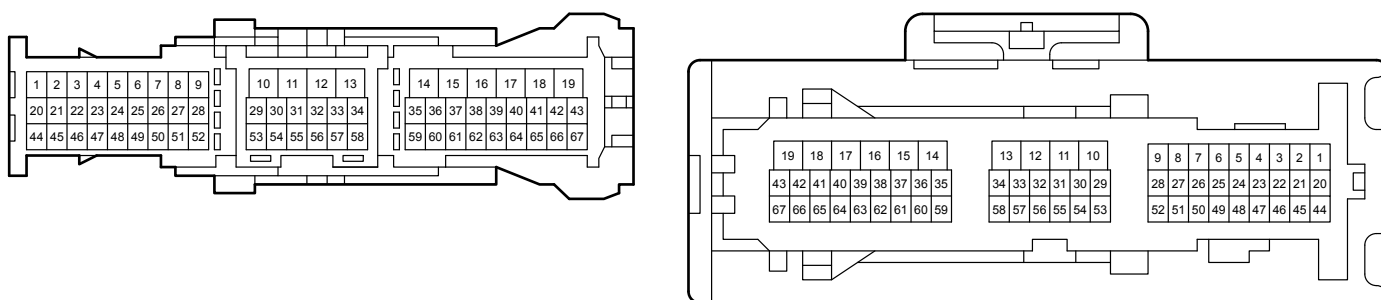


NU2

White

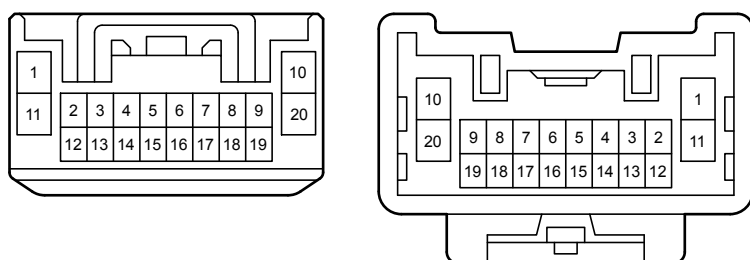

QT1
White

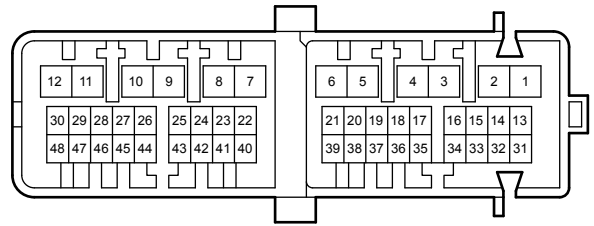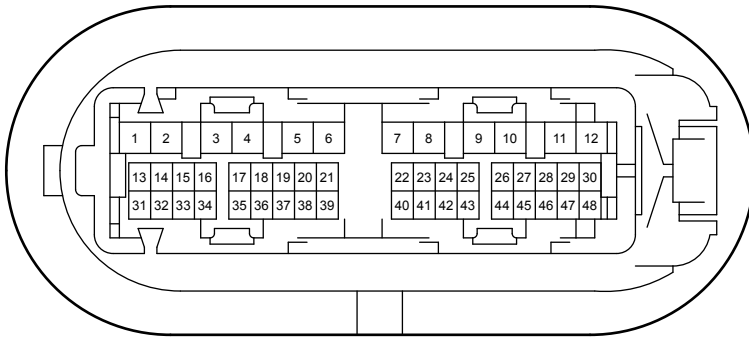

Tc2
White

