



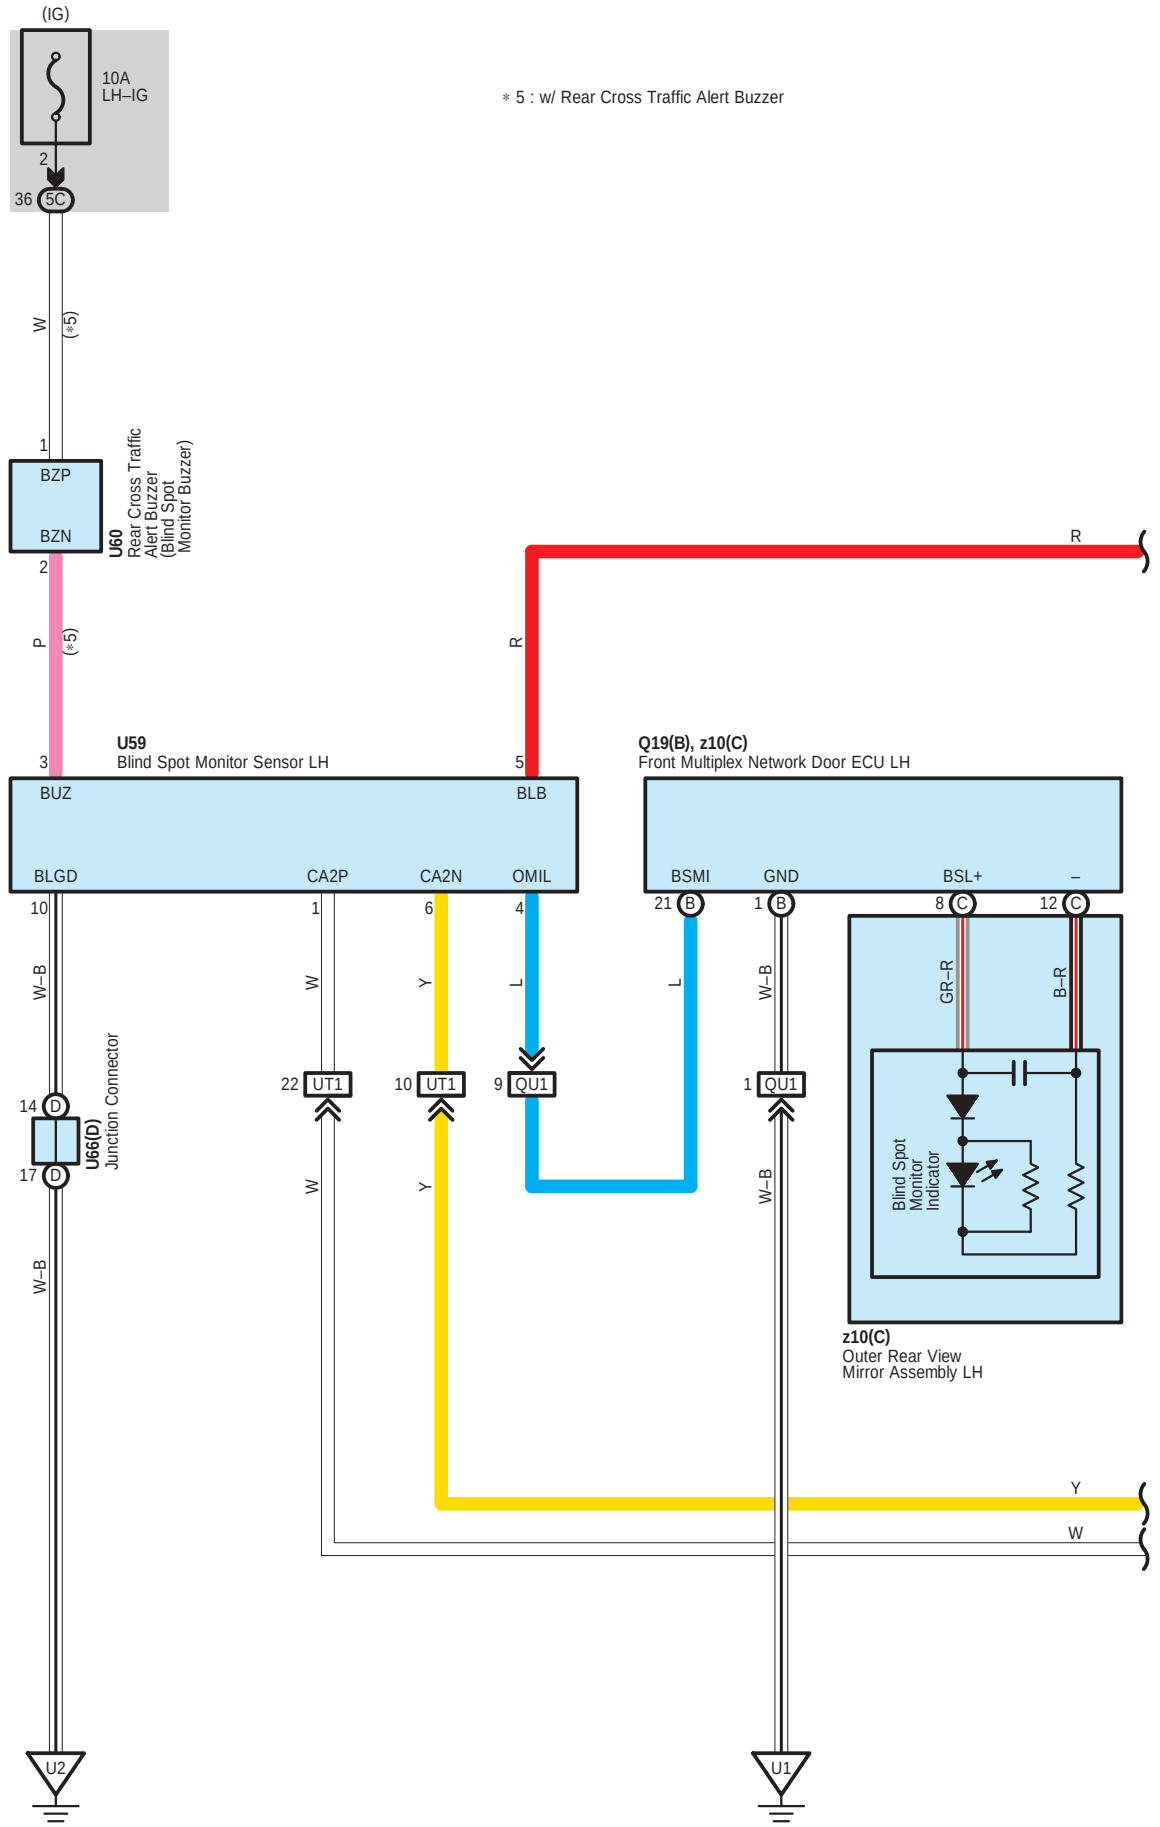


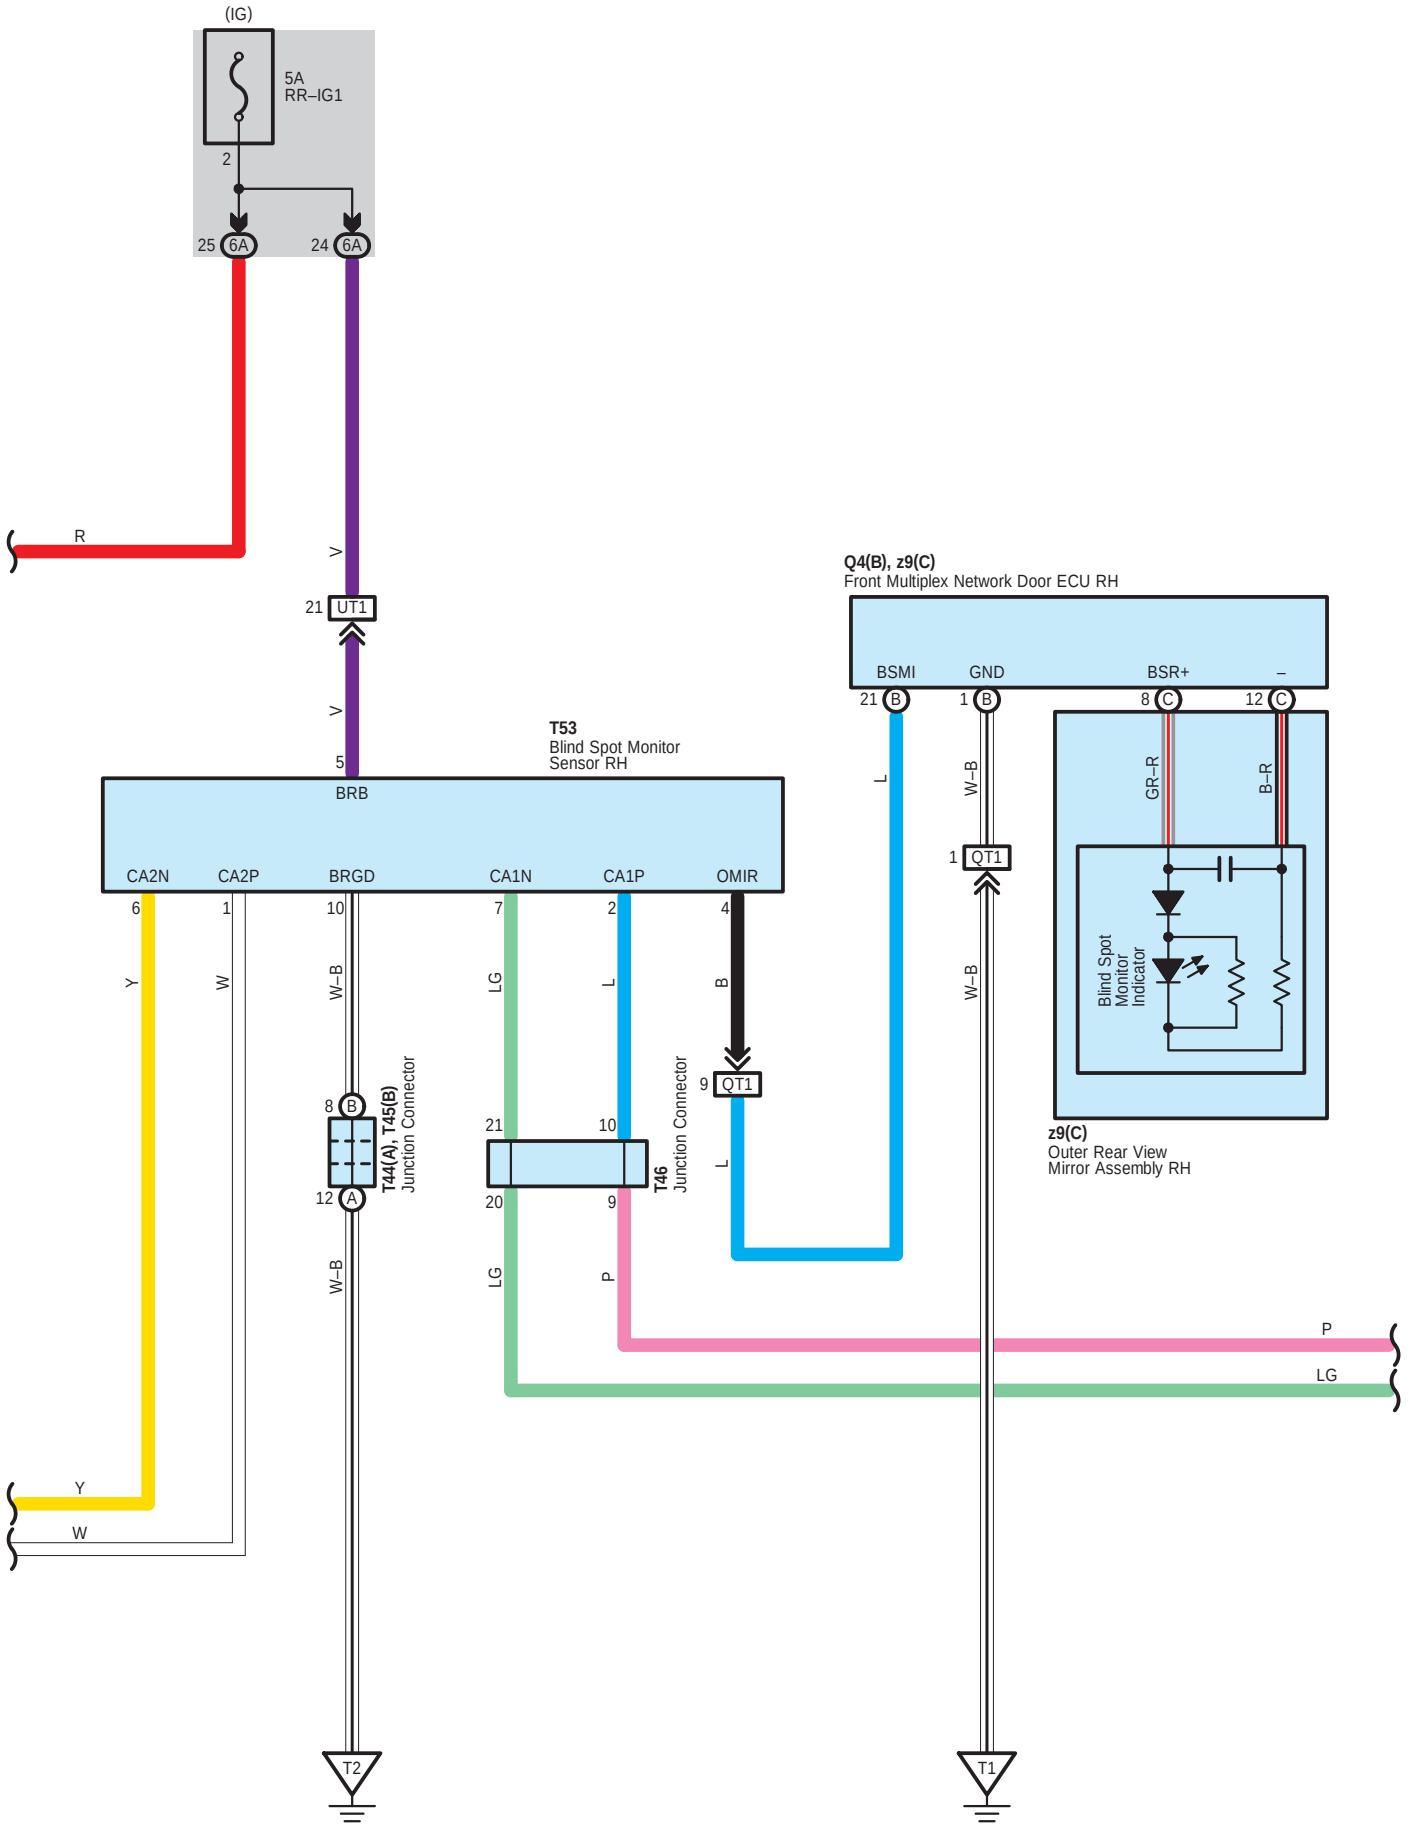


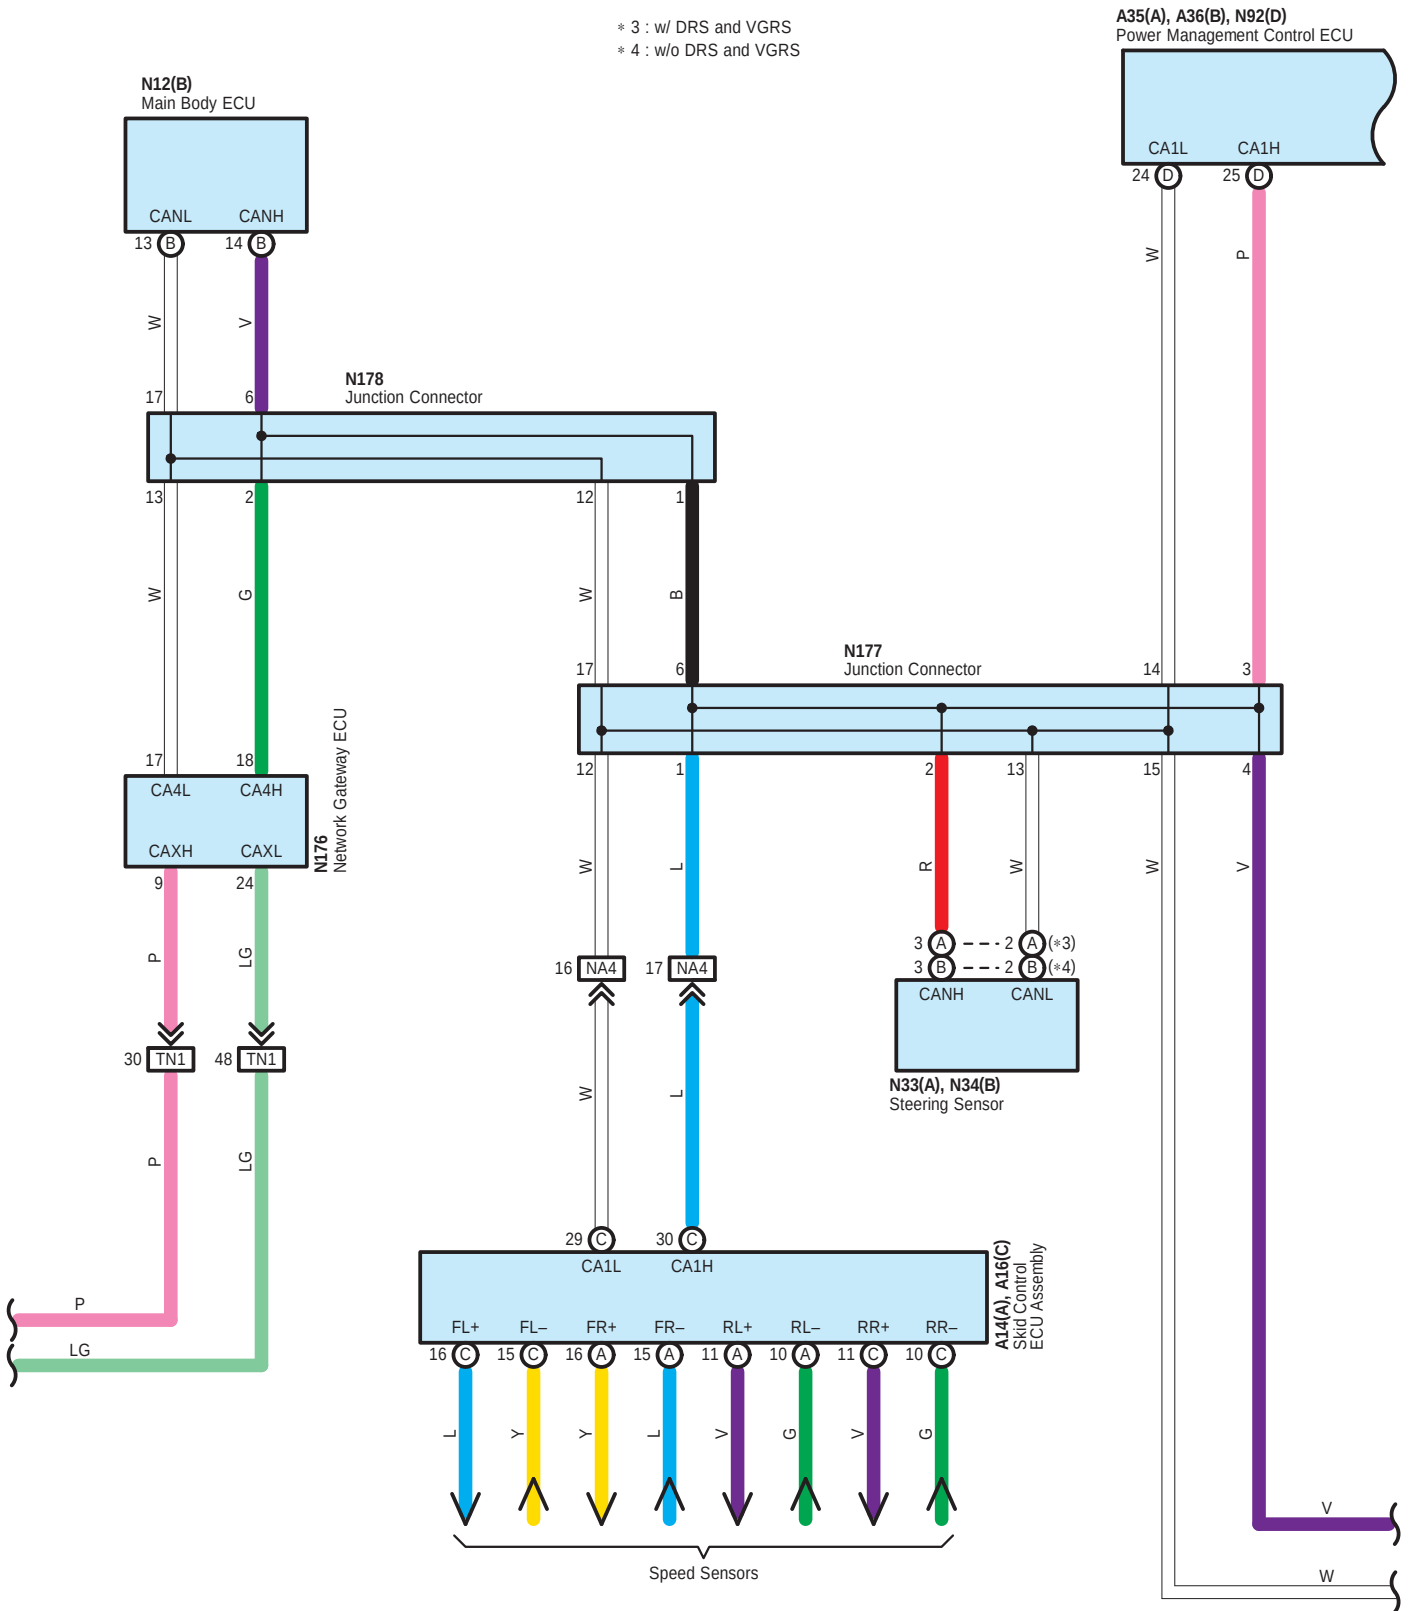

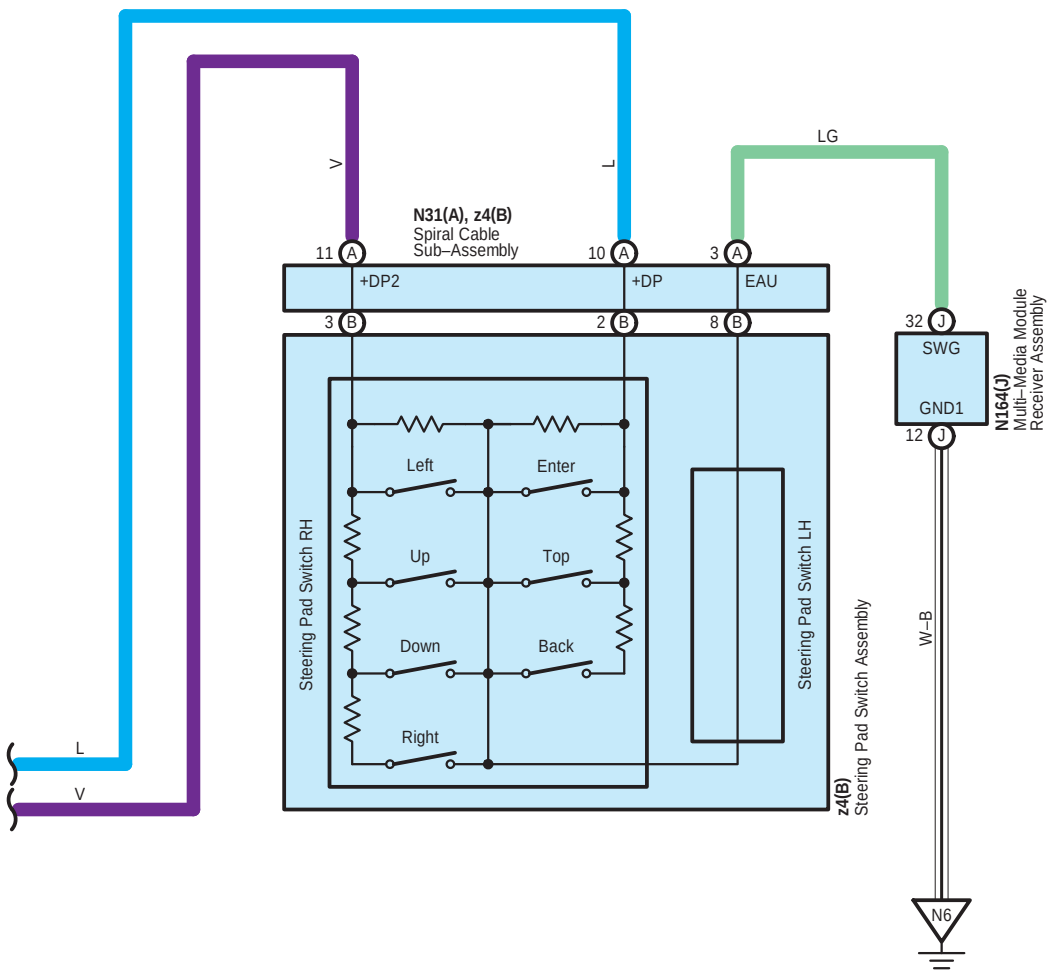


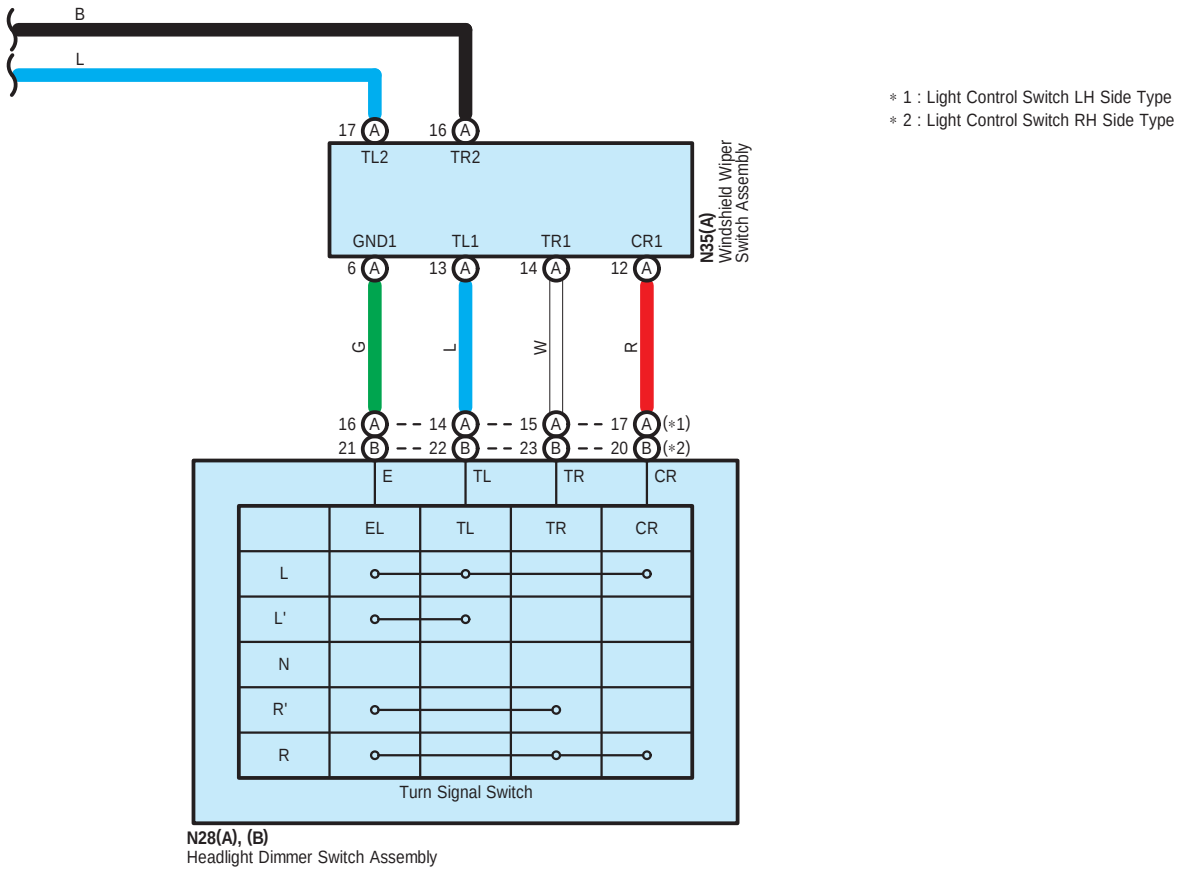


A 14
Black

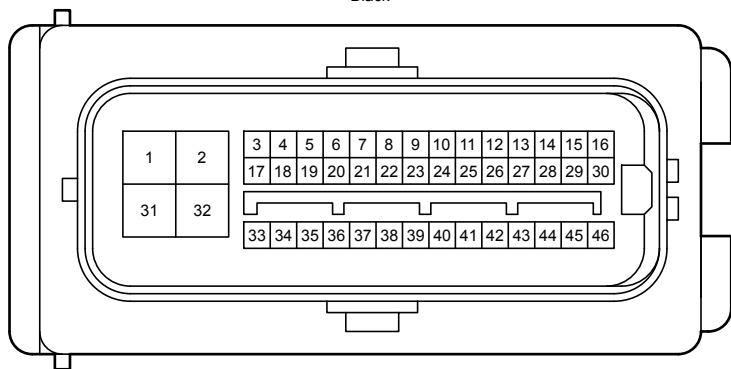


A 16
Gray

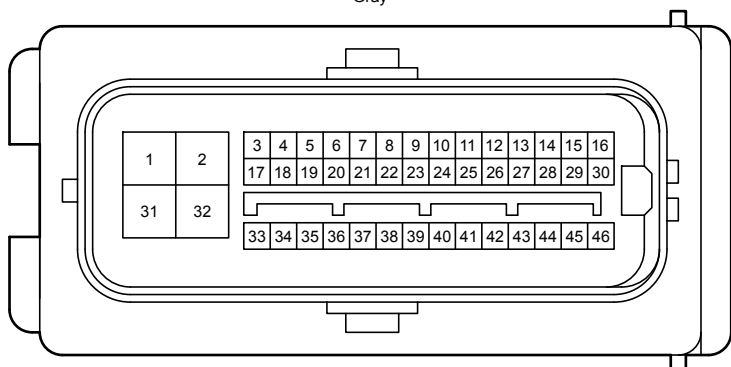


A 35
Gray

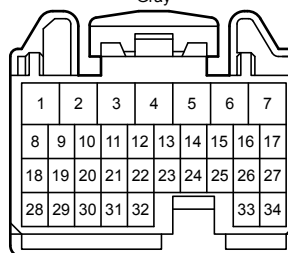


A 36
Gray

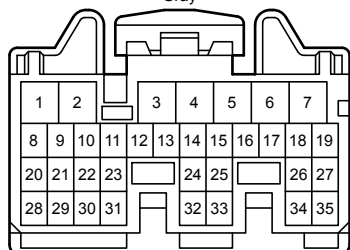


F 65
Gray

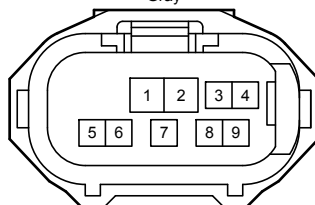

N 12
White

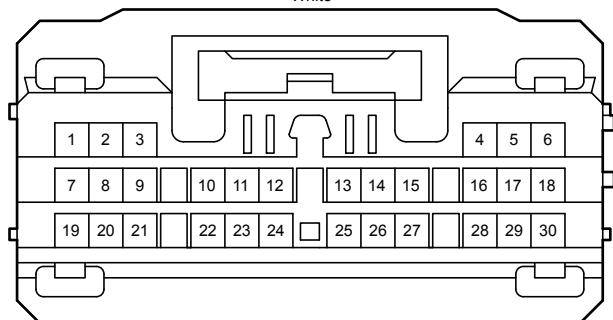


N 28
Black

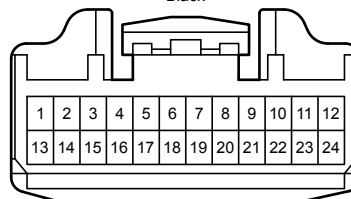


N 31

Black

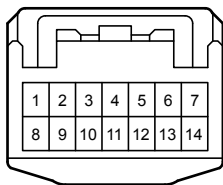


N 33

White

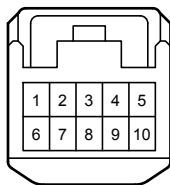


N 34

Black

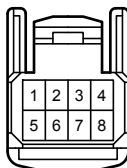


N 35

White

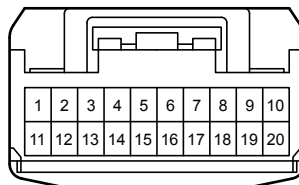


N 39

Black

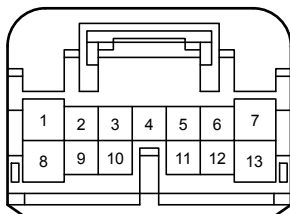


N 40

Black

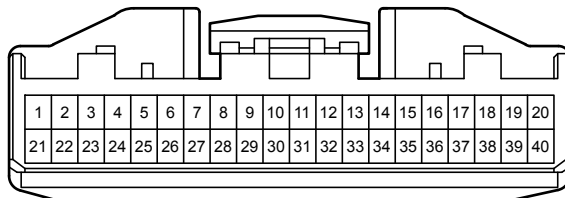


N 92

Gray

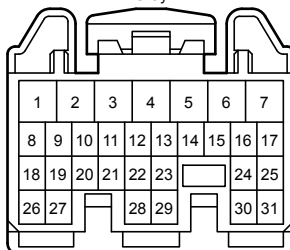


N164

White

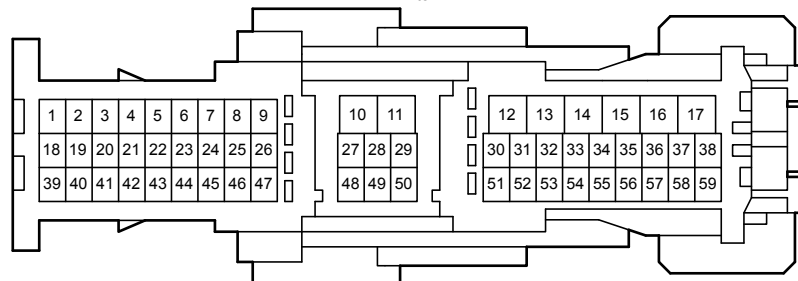


N176

Black

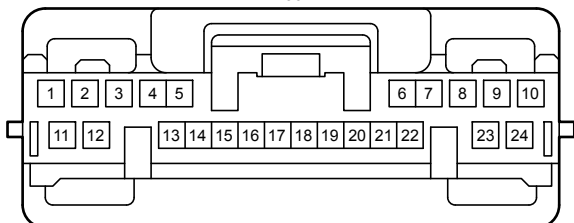


N177

Gray

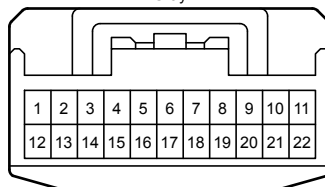


N178

Gray

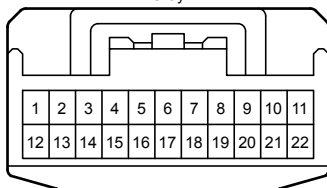


Q 4

White

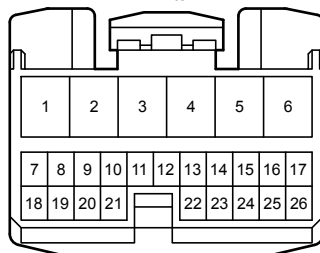


Q 19

White

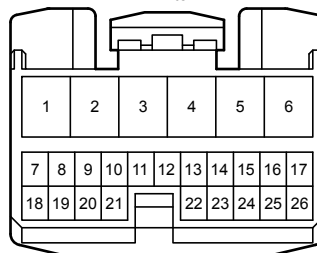


T 44

Blue

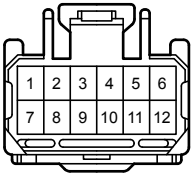


T 45

Blue

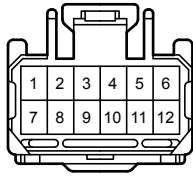


T 46

Black

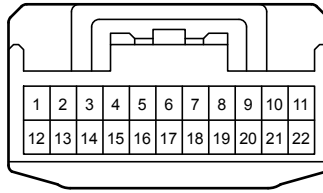


T 53

Black

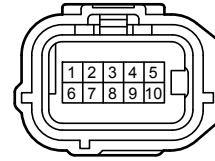


U 59

Black

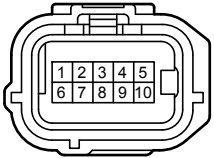


U 60

Black




U 66

Gray

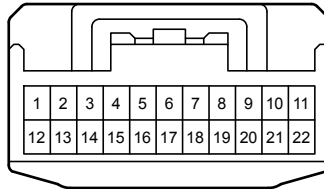


z 4

Black

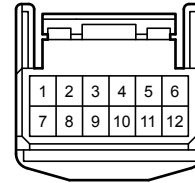


z 9

White

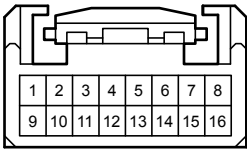


z 10

White

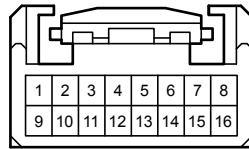


5A

White

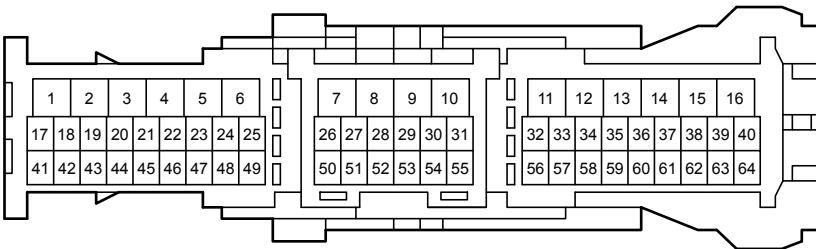


5C

White

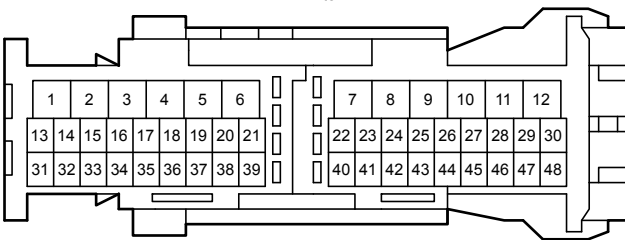


5D

White

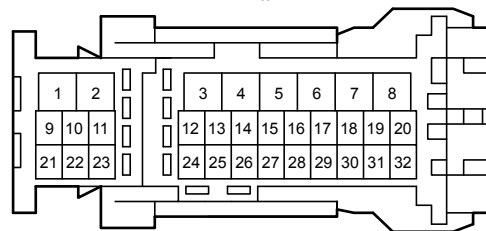


6A


White

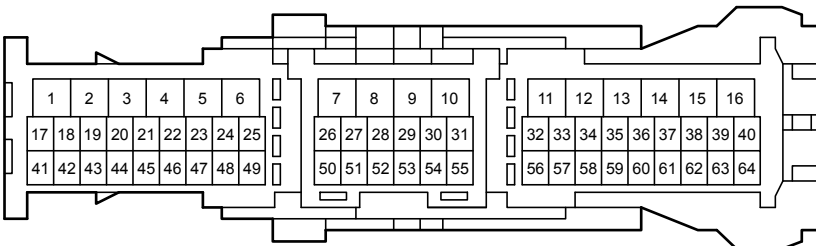


AF1
White

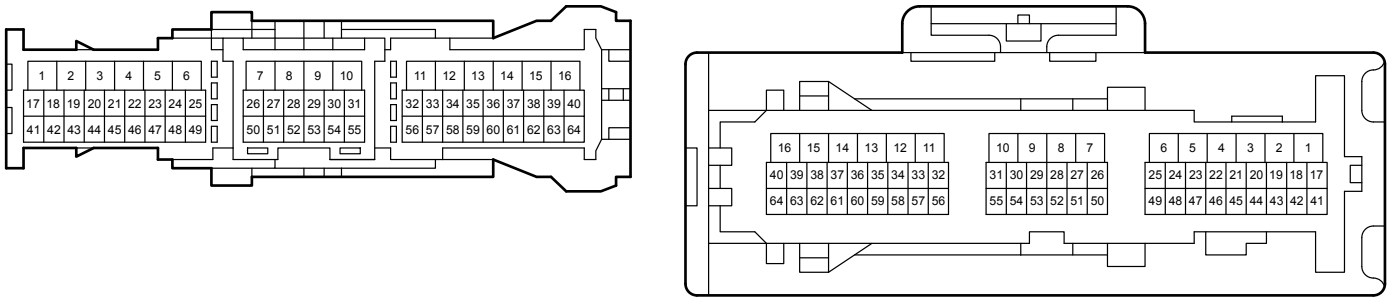


NA2
White

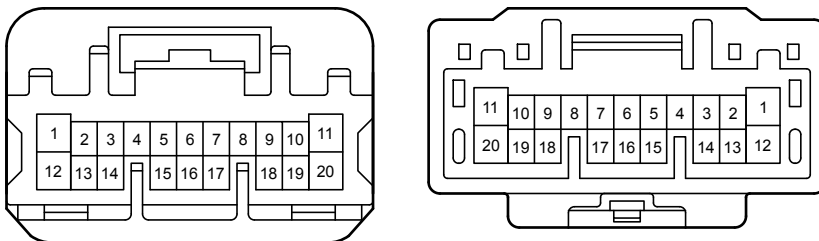


NA4
Gray

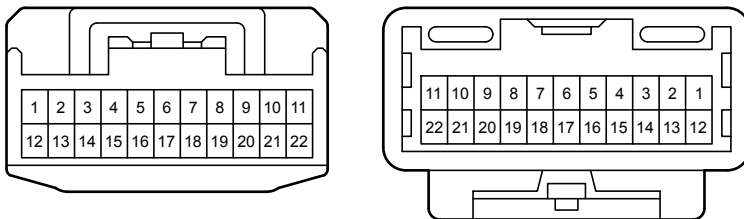


QT1
White

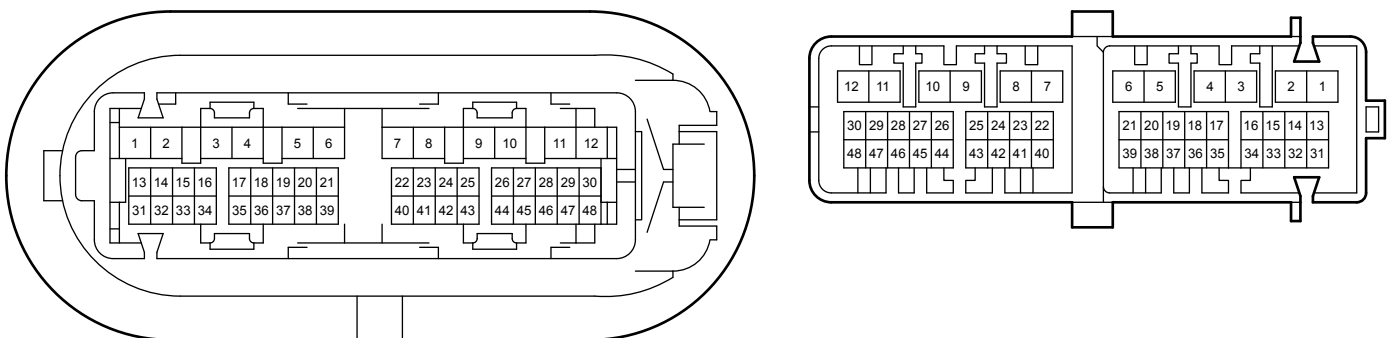

QU1
White

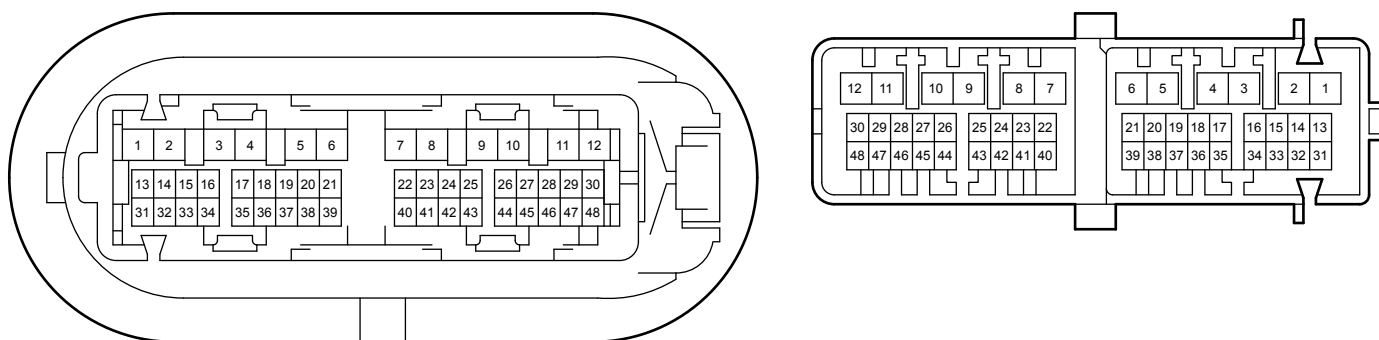

TN1
White

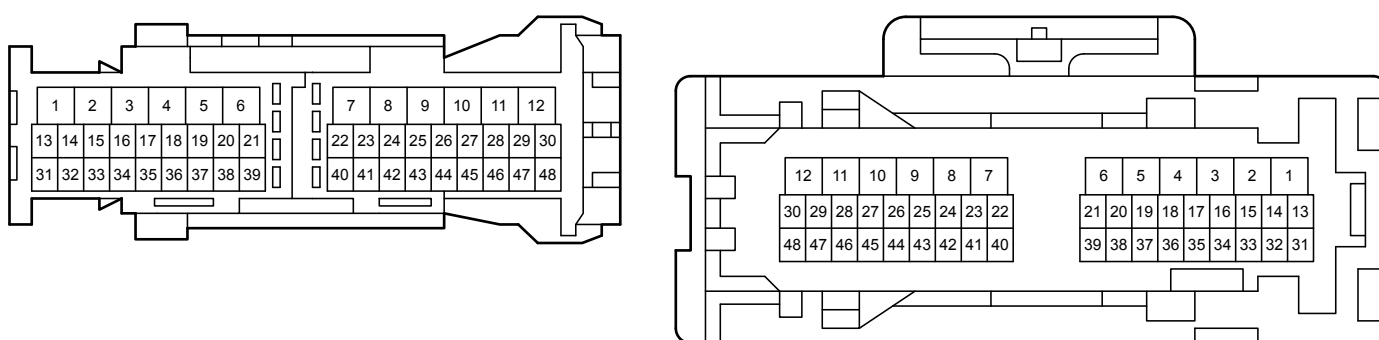

UT1
White

