





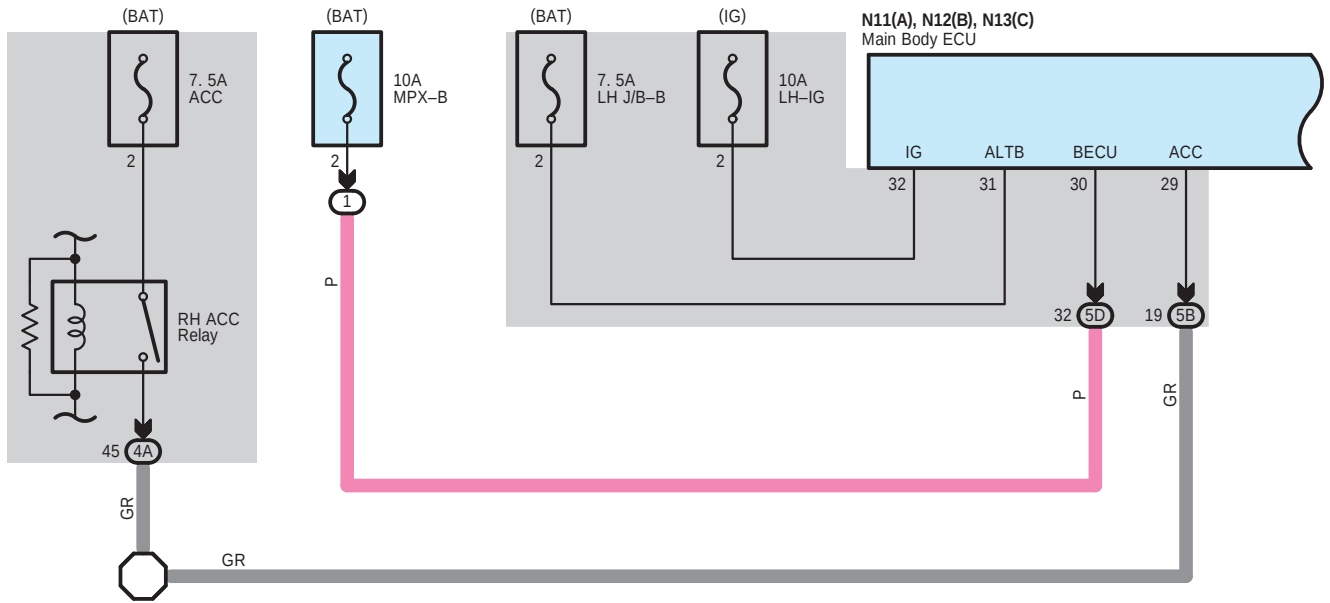


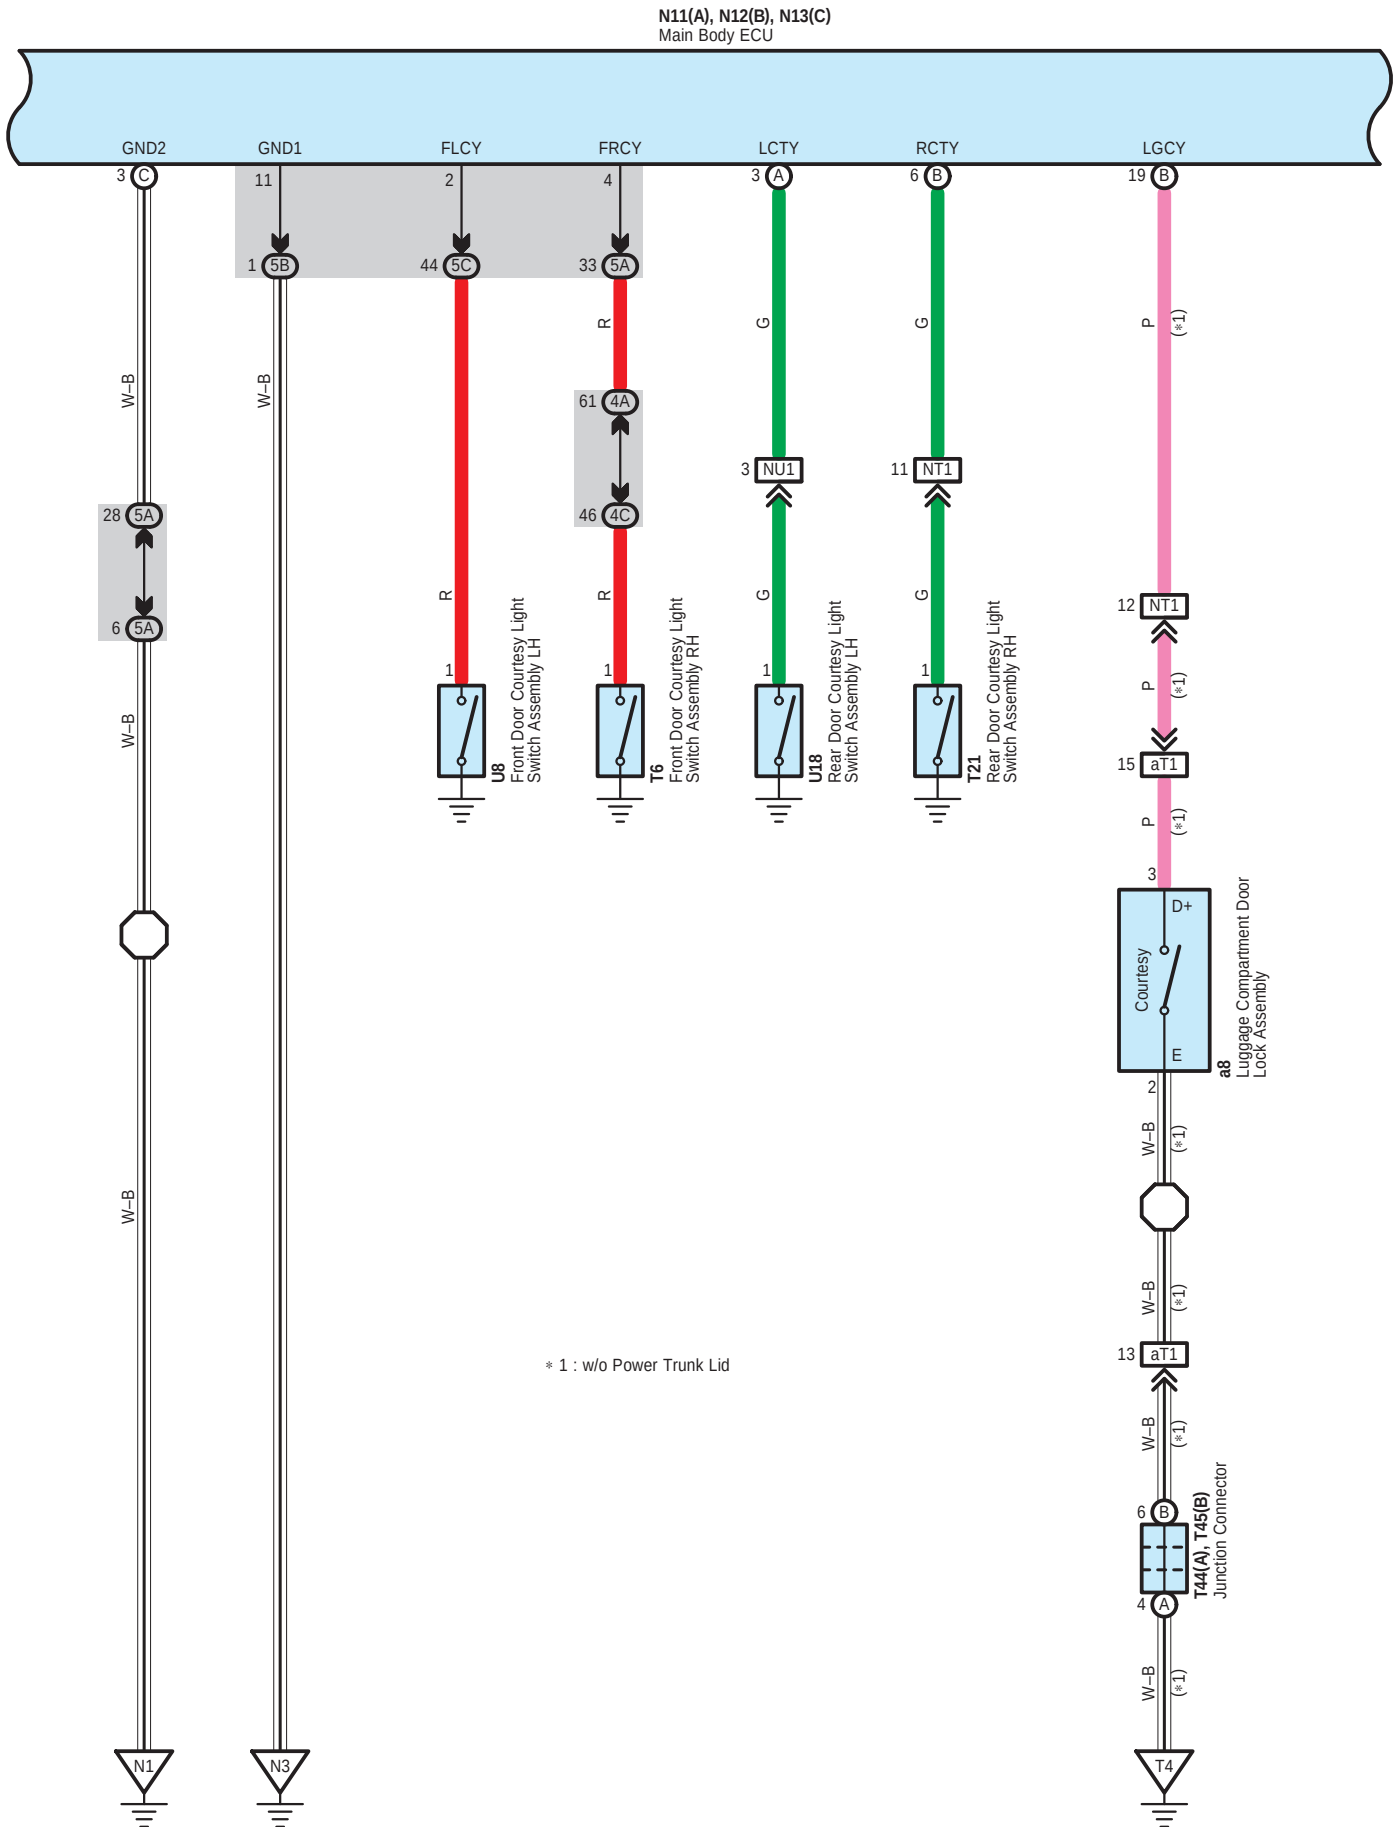



LSWL

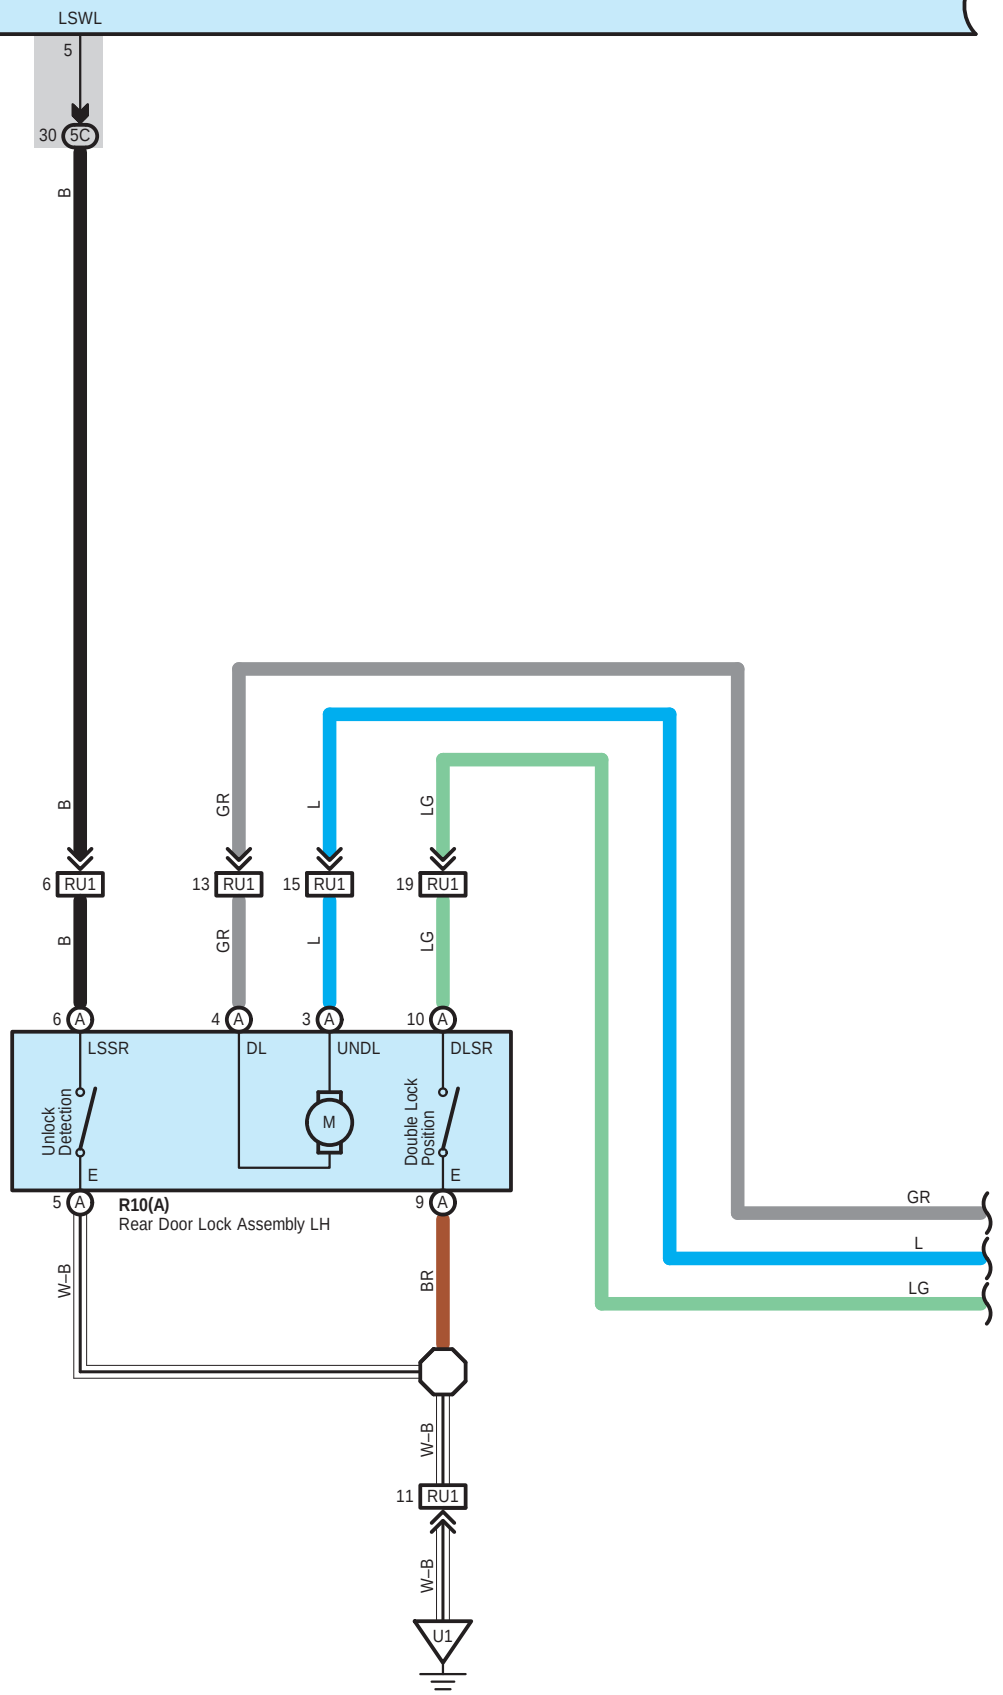


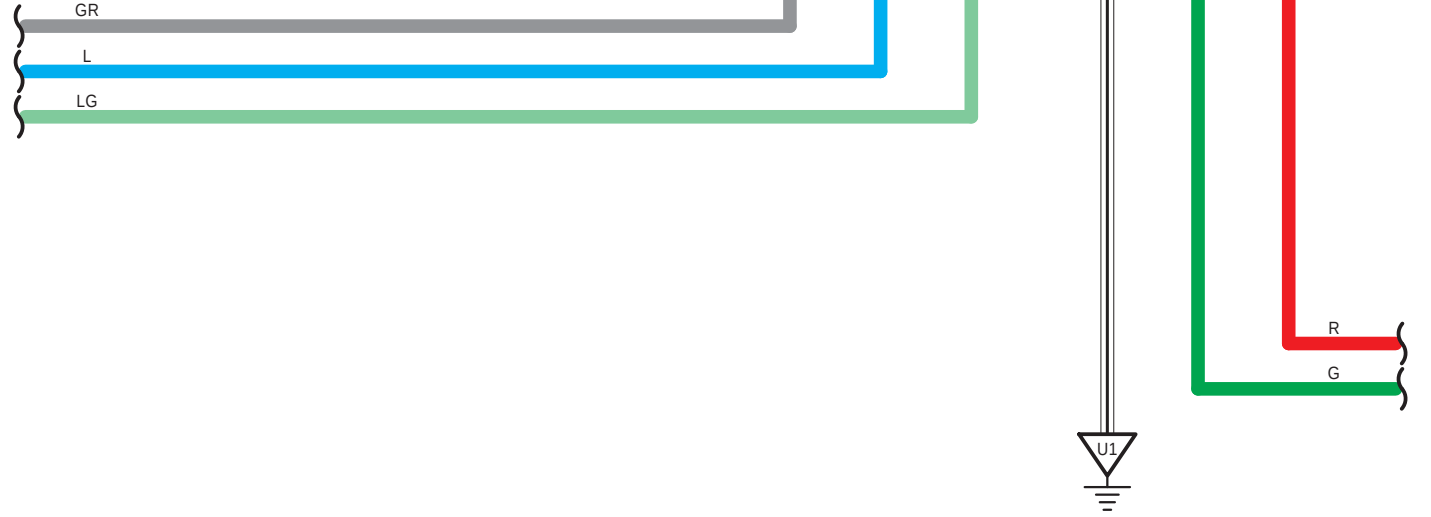

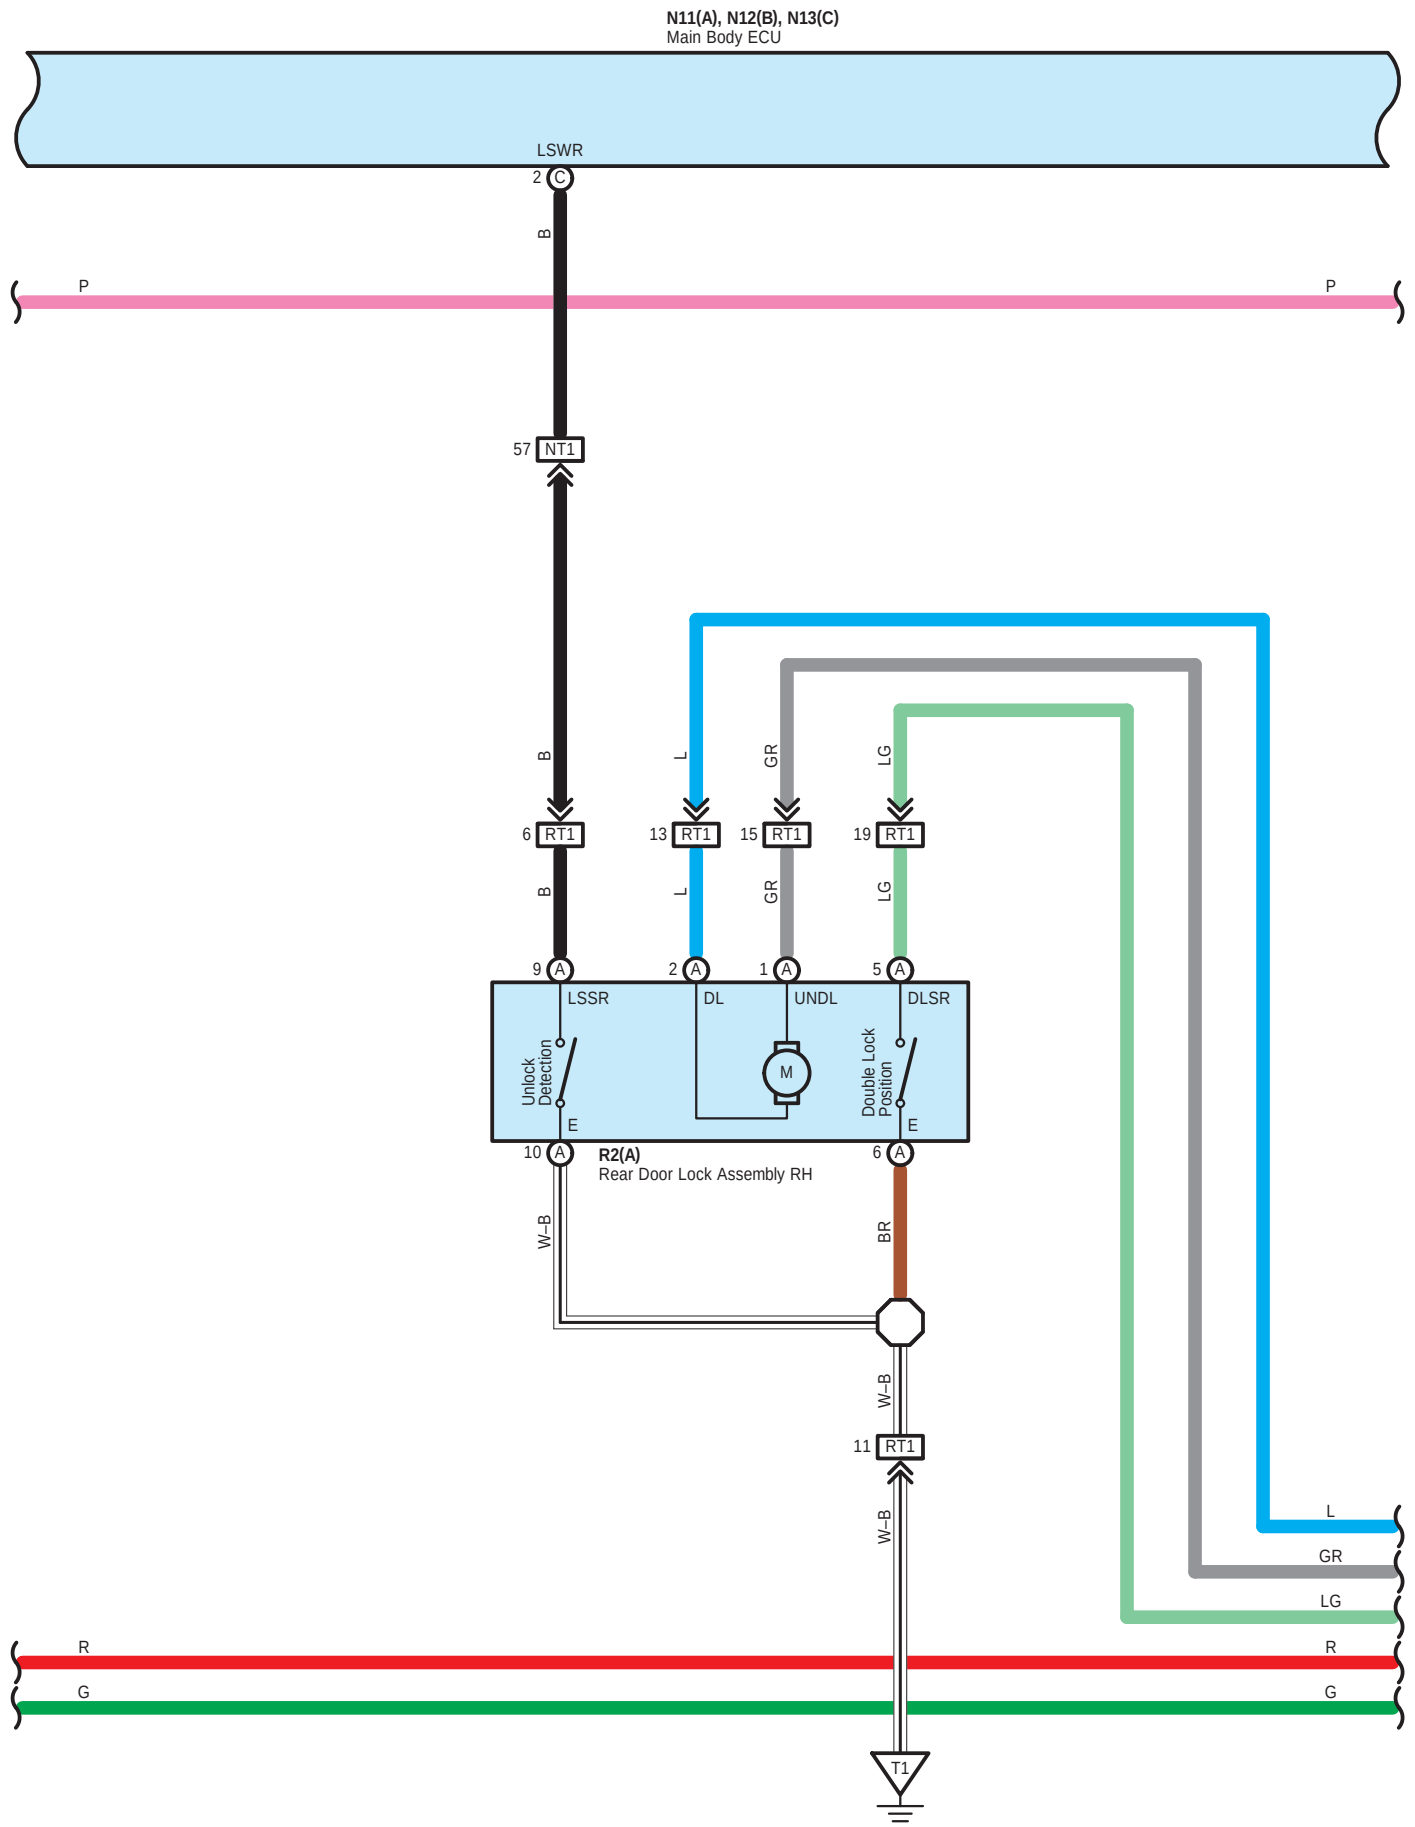


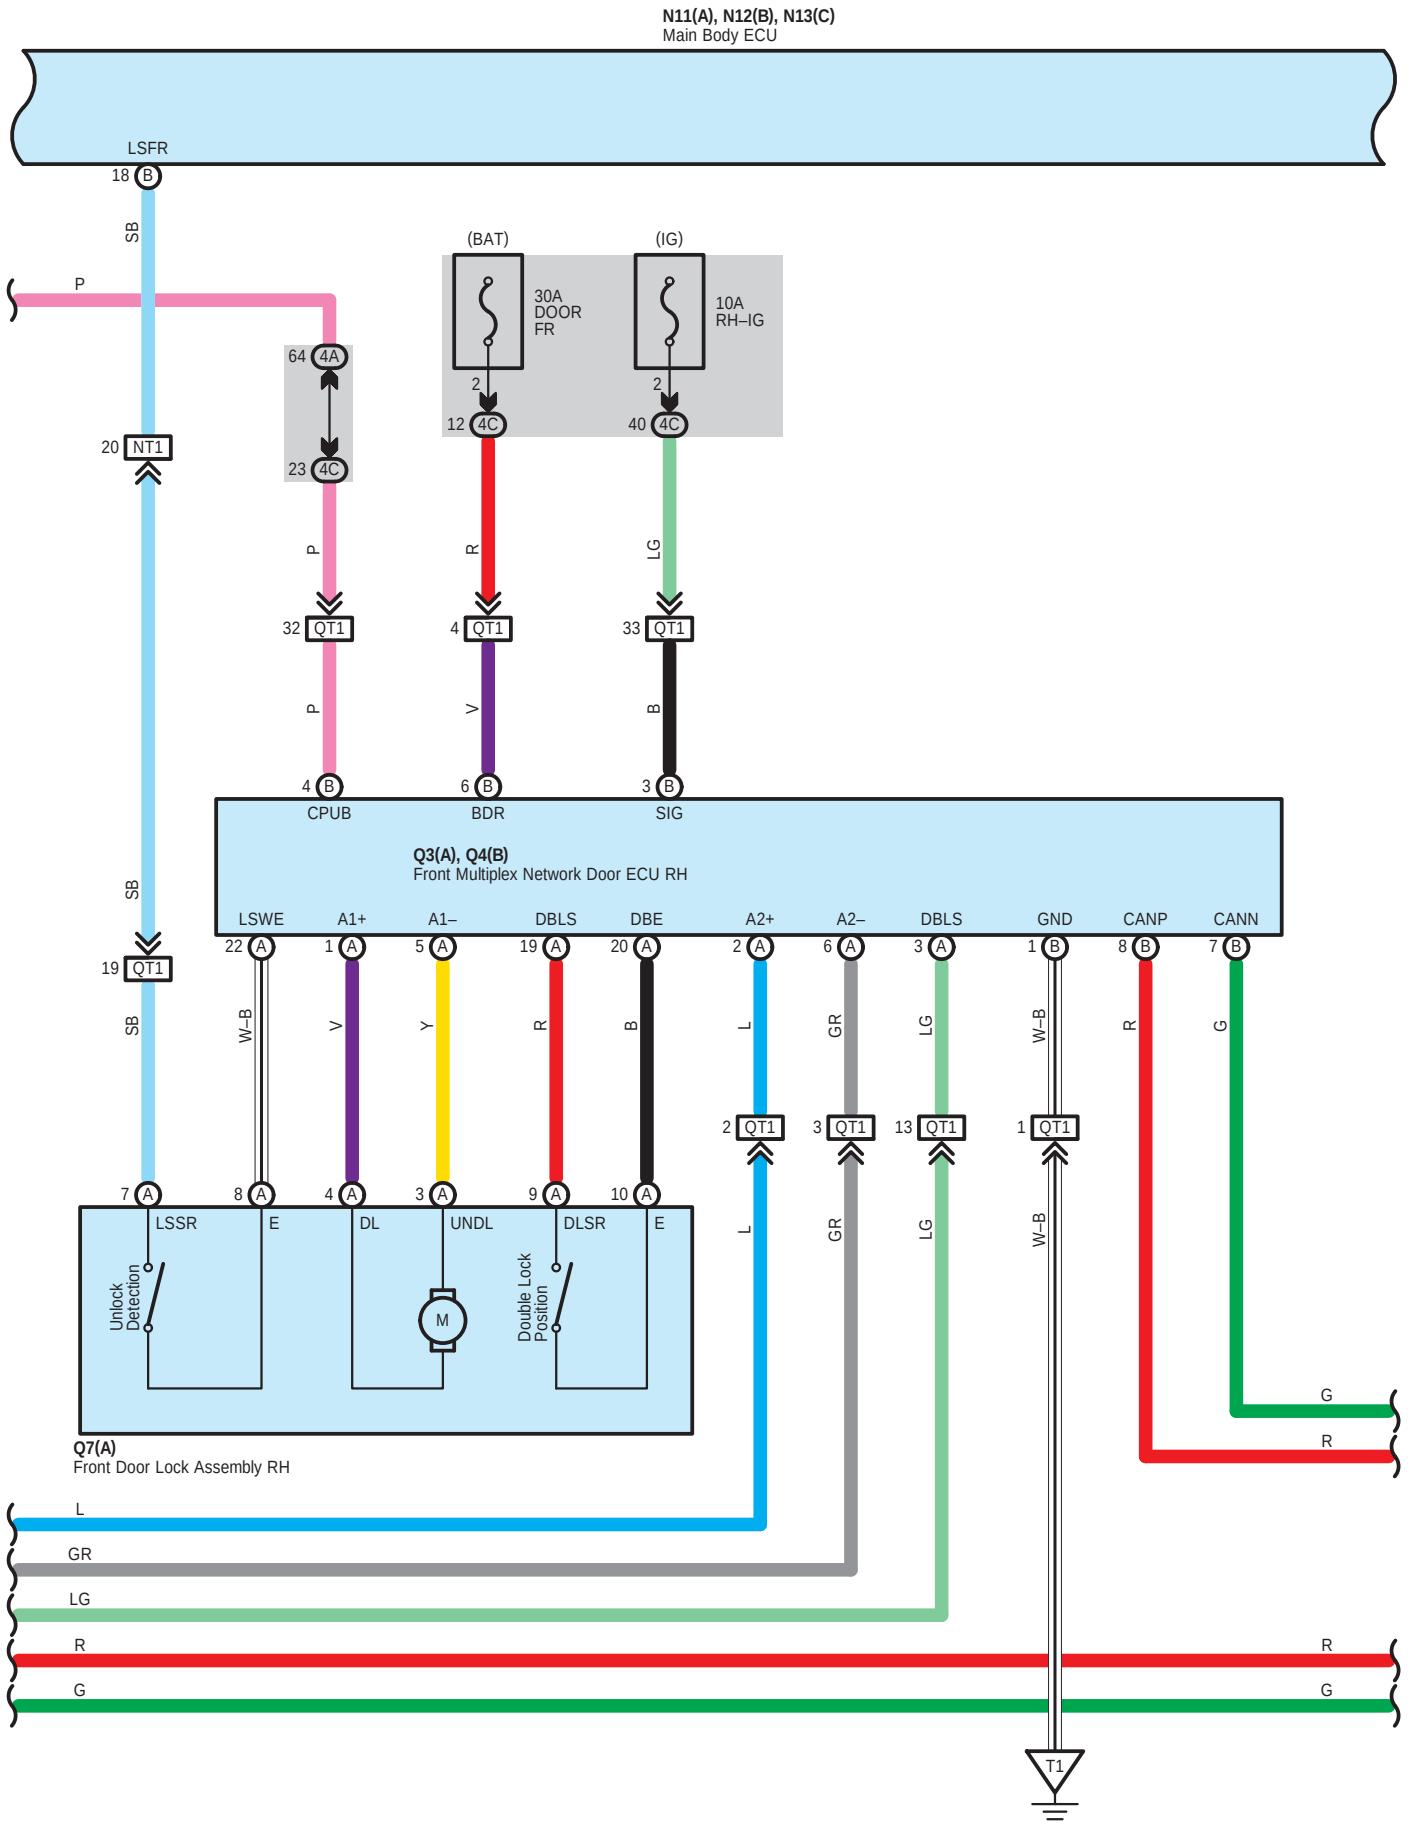

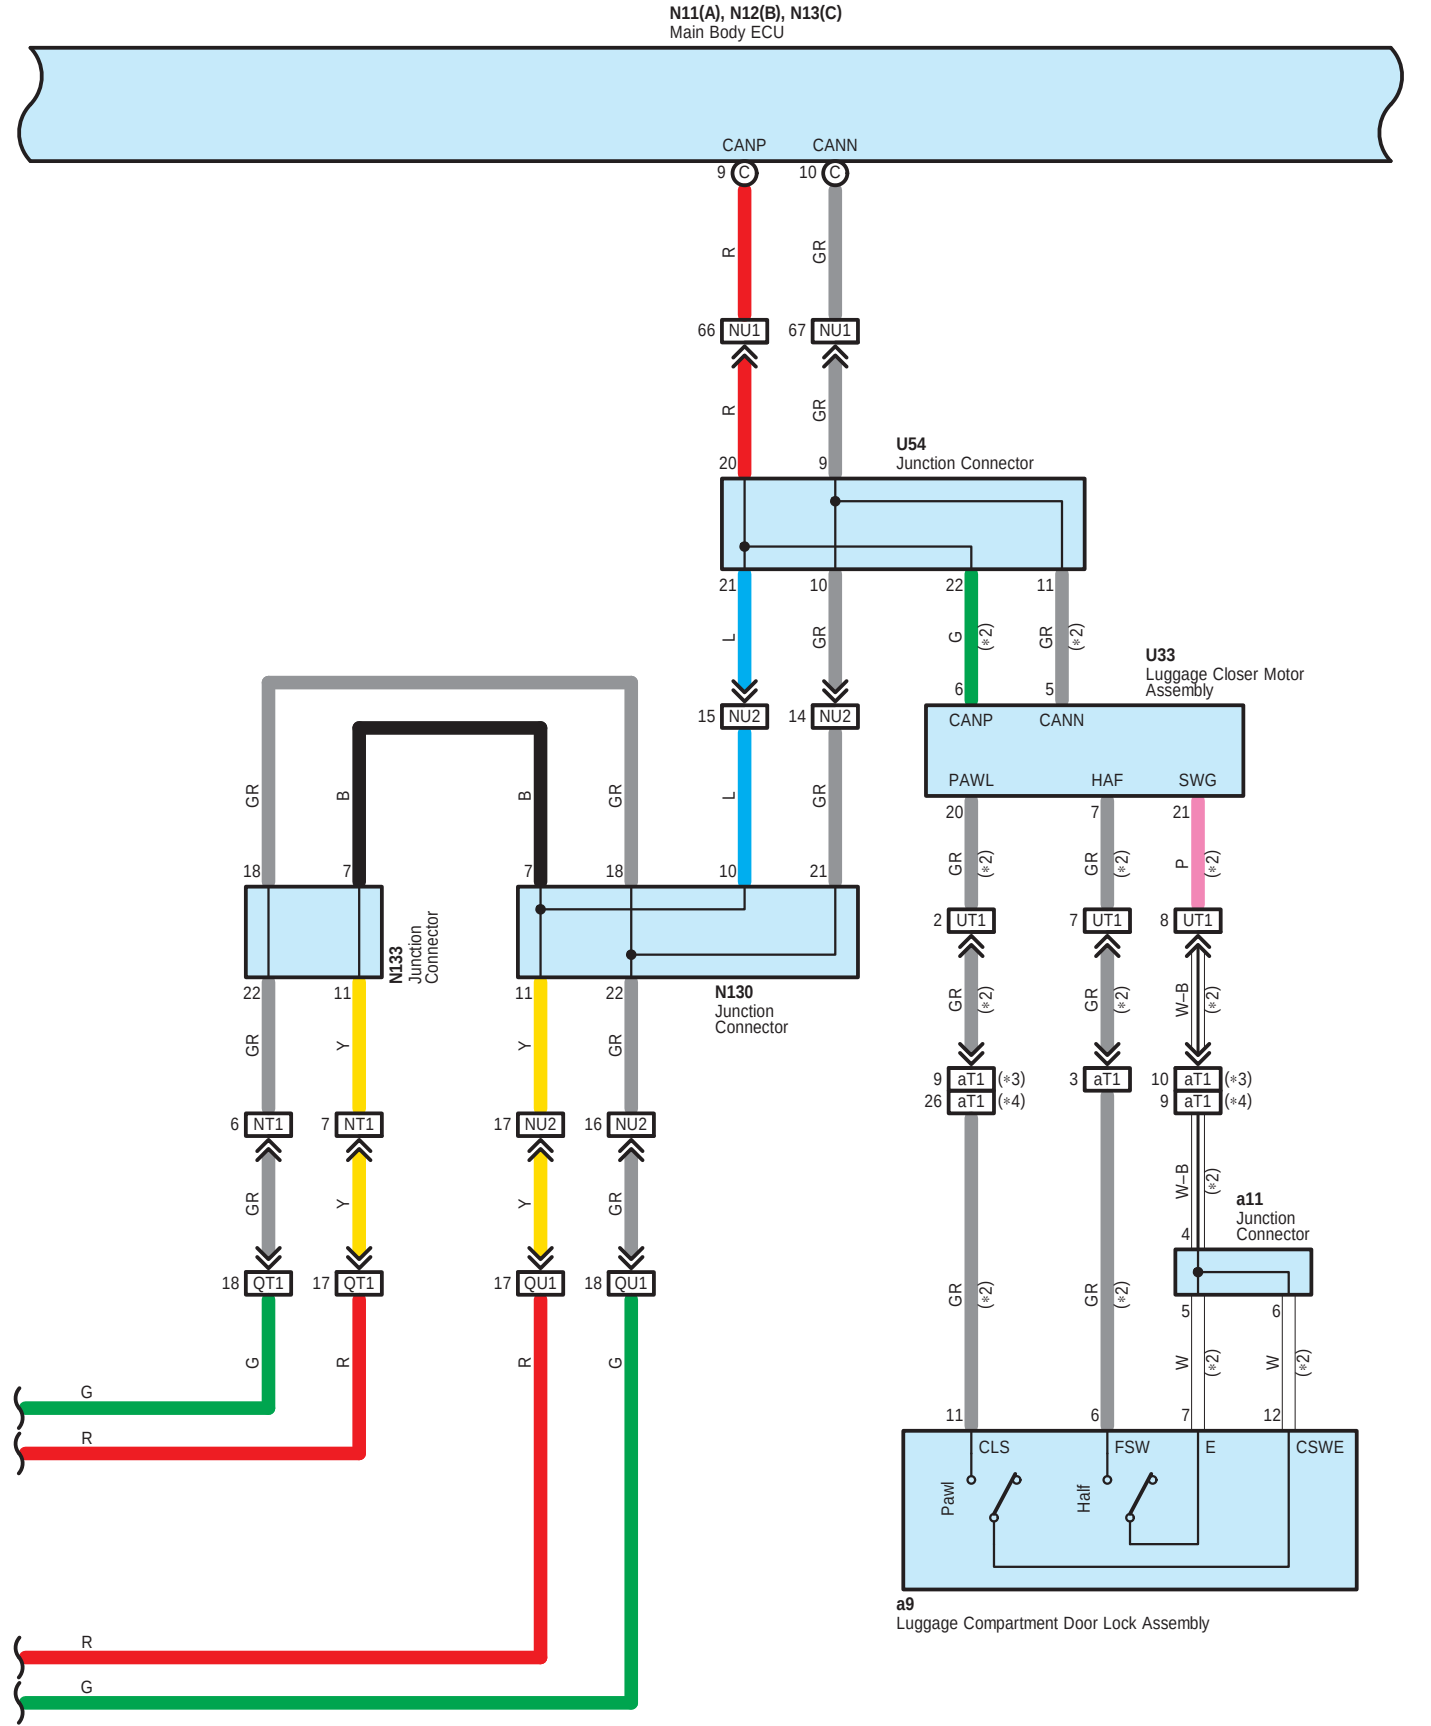


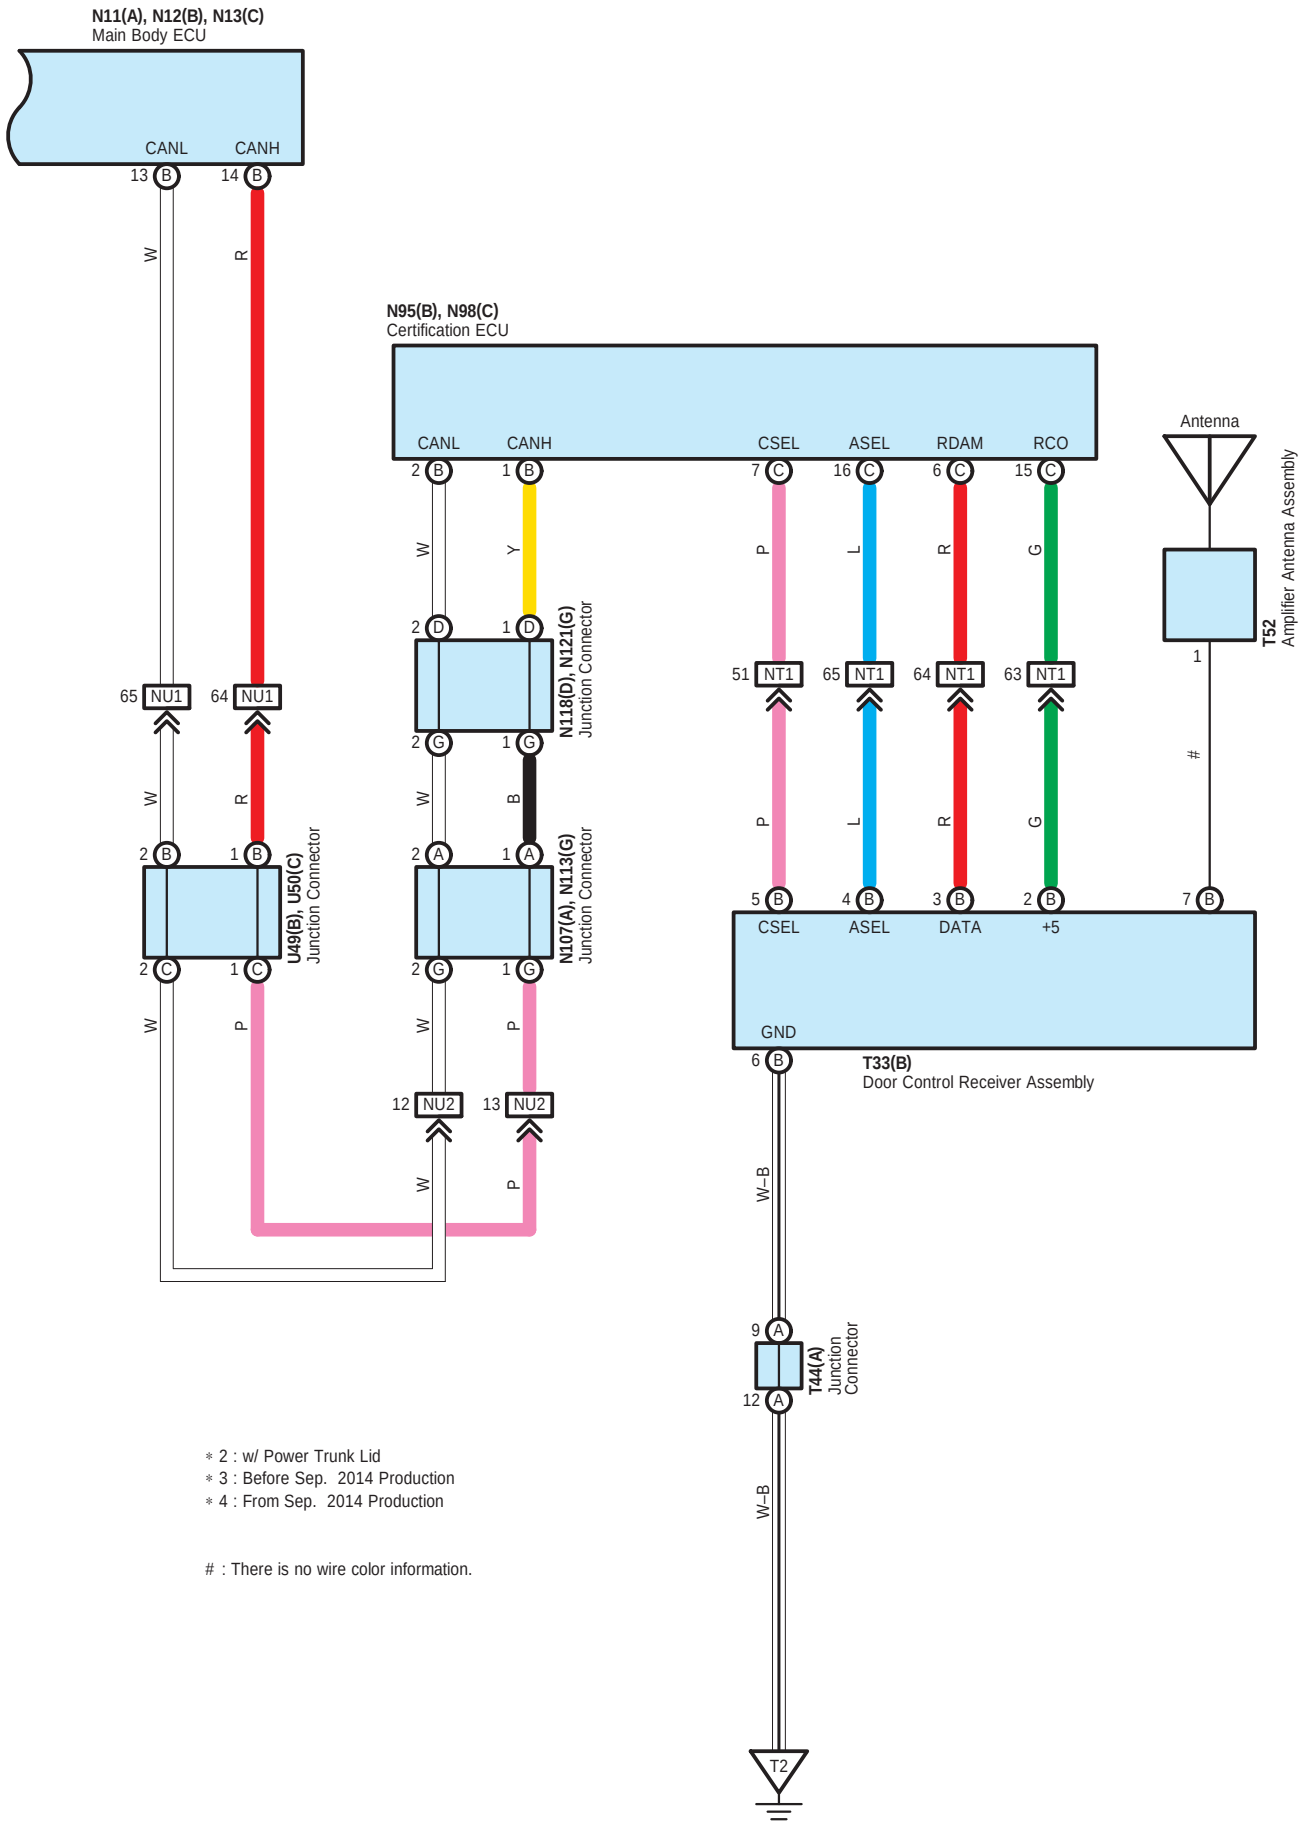


N 11
White

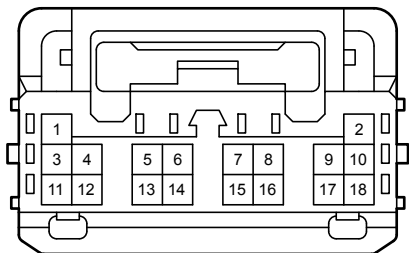


N 12
White

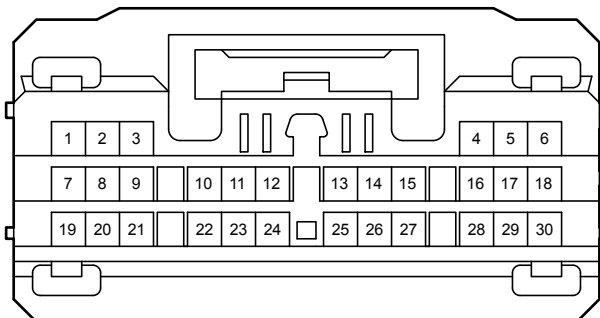


N 13
White

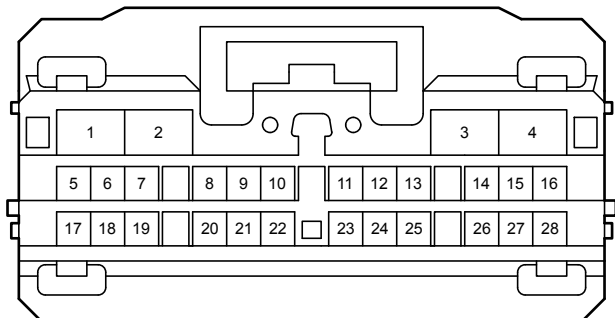


N 95
White

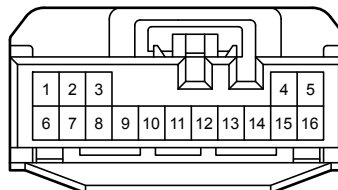


N 98
White

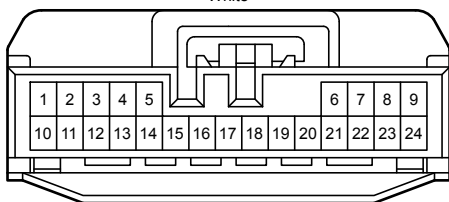


N107
White




N113
White




N118
White




N121
White




N130
Black

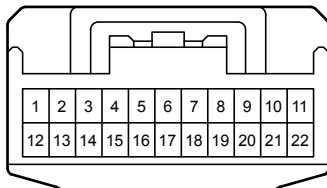


N133
Black

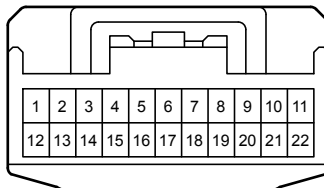


Q 3
White

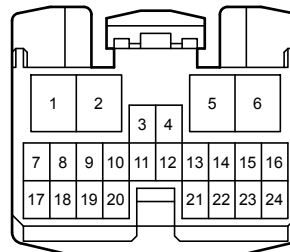


Q 4
White

















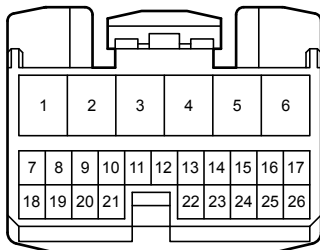


Q 7
White

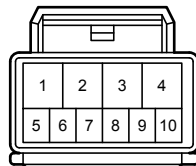


Q 18
White

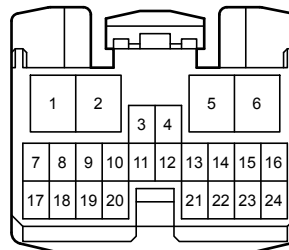


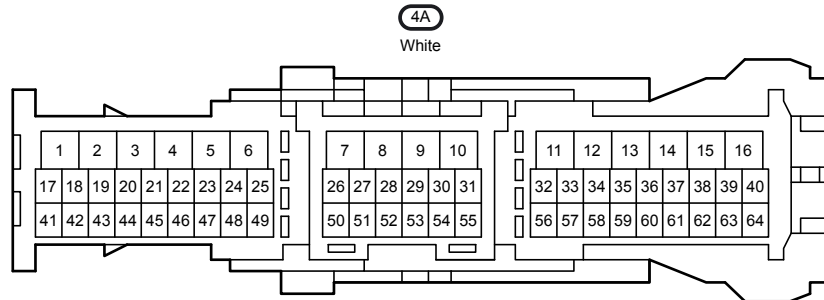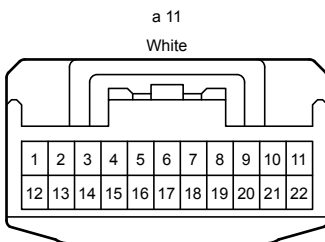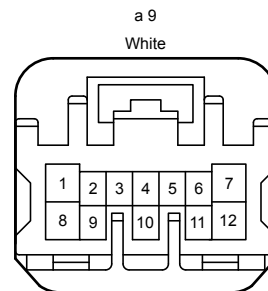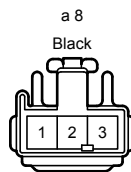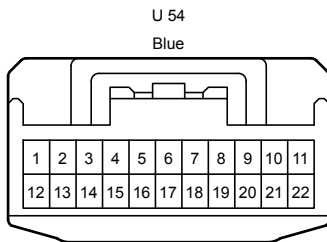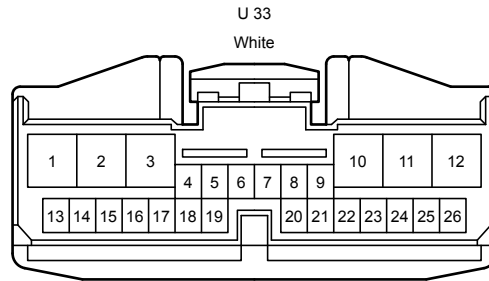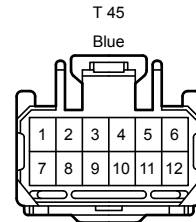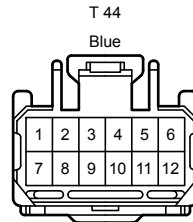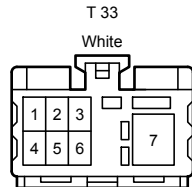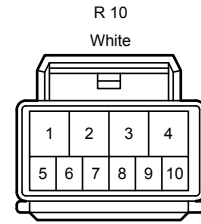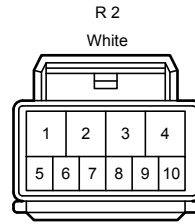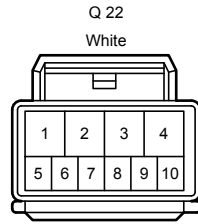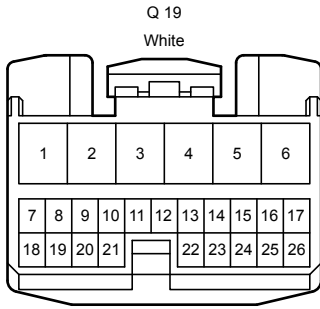


4C
White

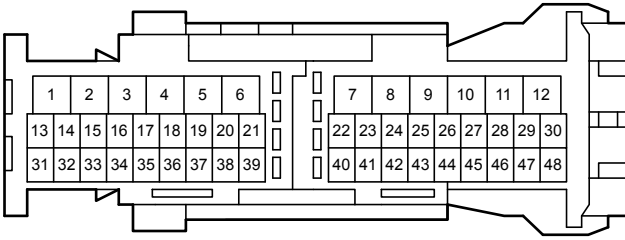


5A
White

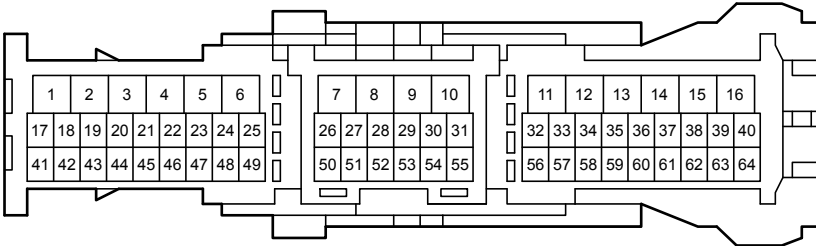


5B
White

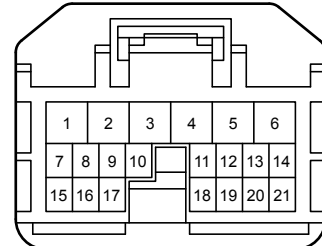



5C
White

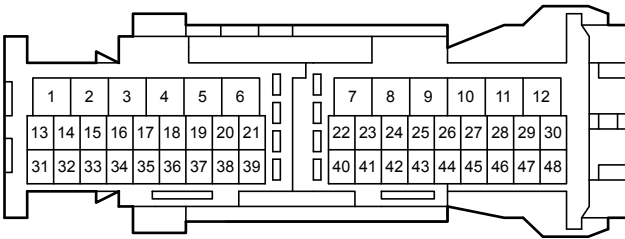



5D
White

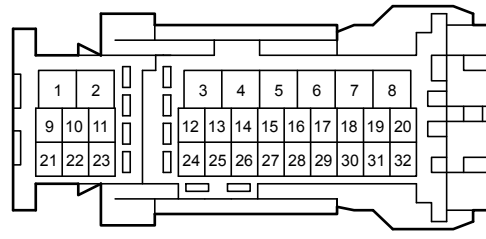


NT1
White

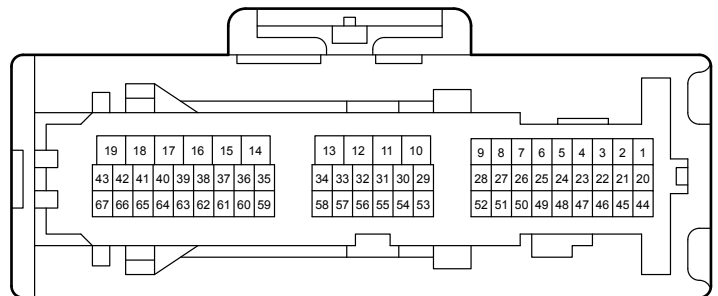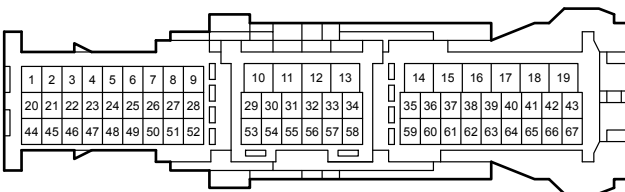


NU1
White

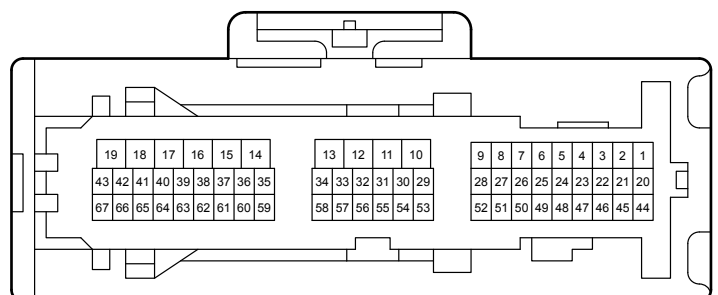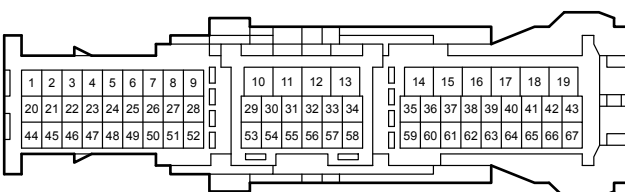


NU2
White

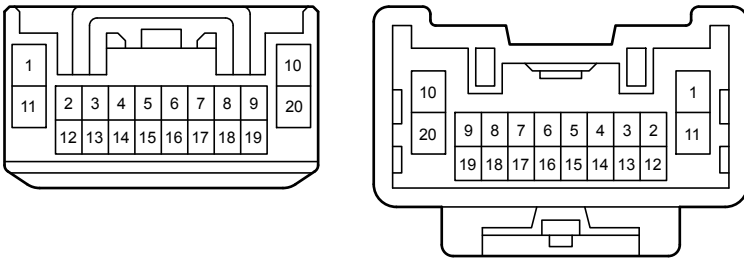


QT1
White

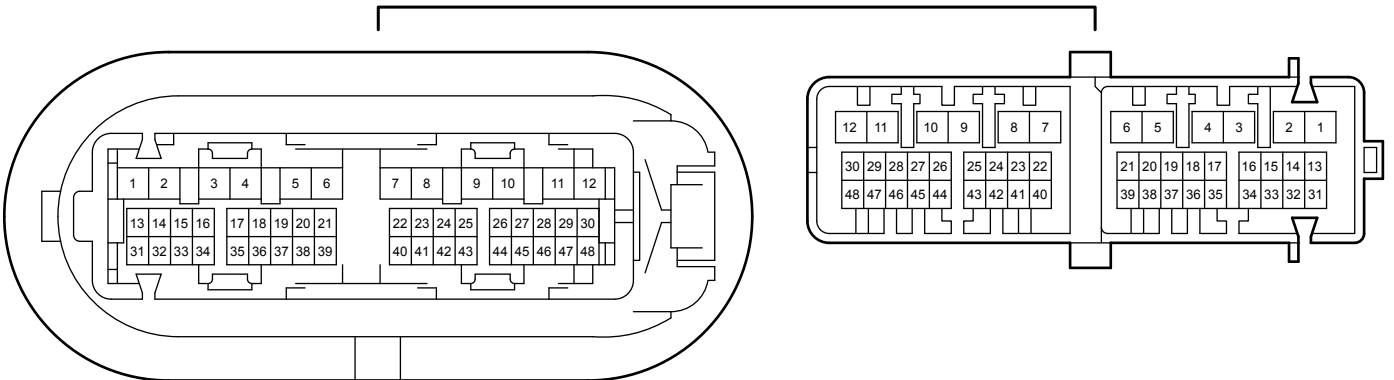


QU1
White

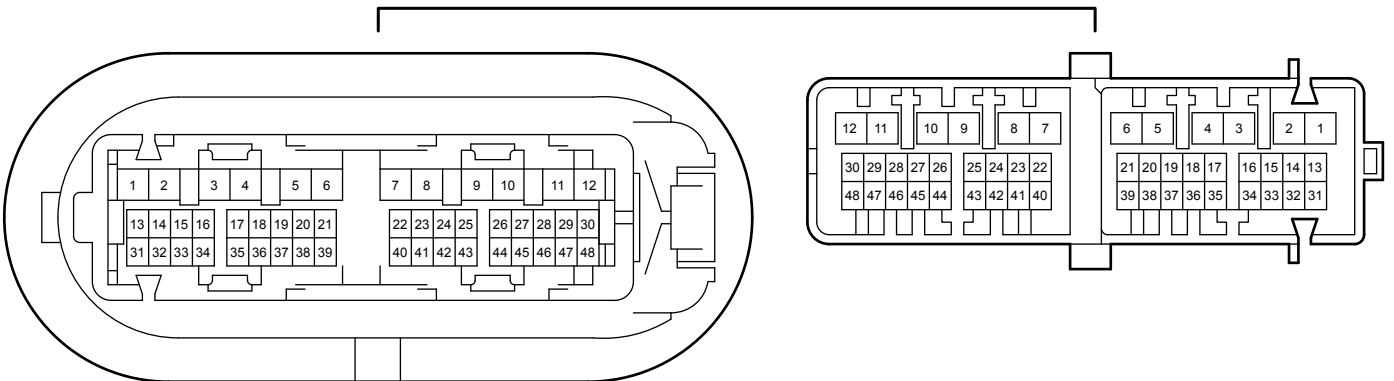


RT1
White

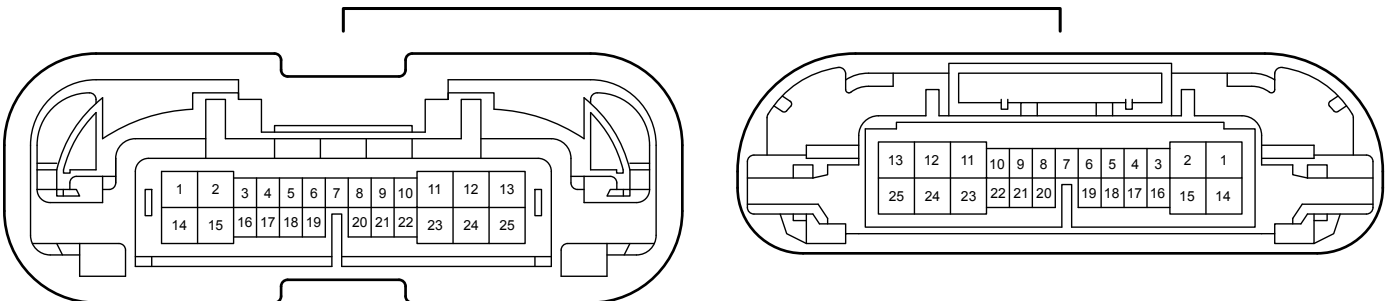

RU1
White

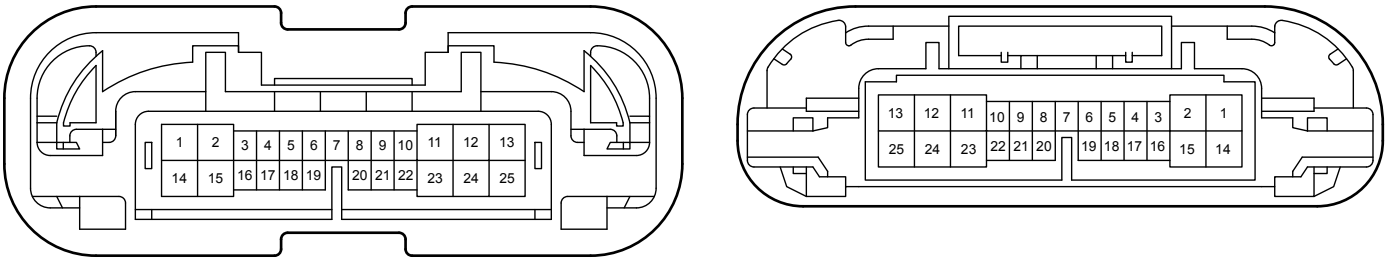

UT1
White

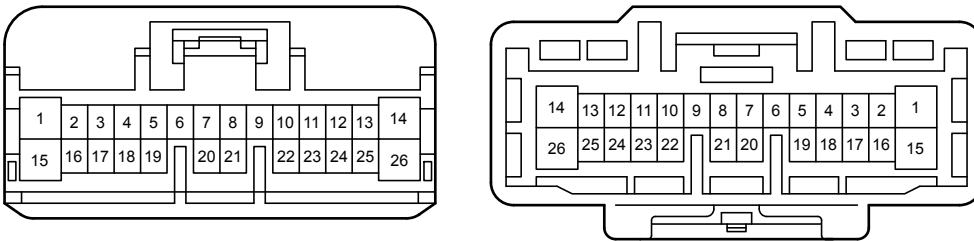

aT1
White

