





*24 : 16-Way or 18-Way Seat Position
*25 : 10-Way Seat Position


N22
Multiplex Tilt & Telescopic ECU

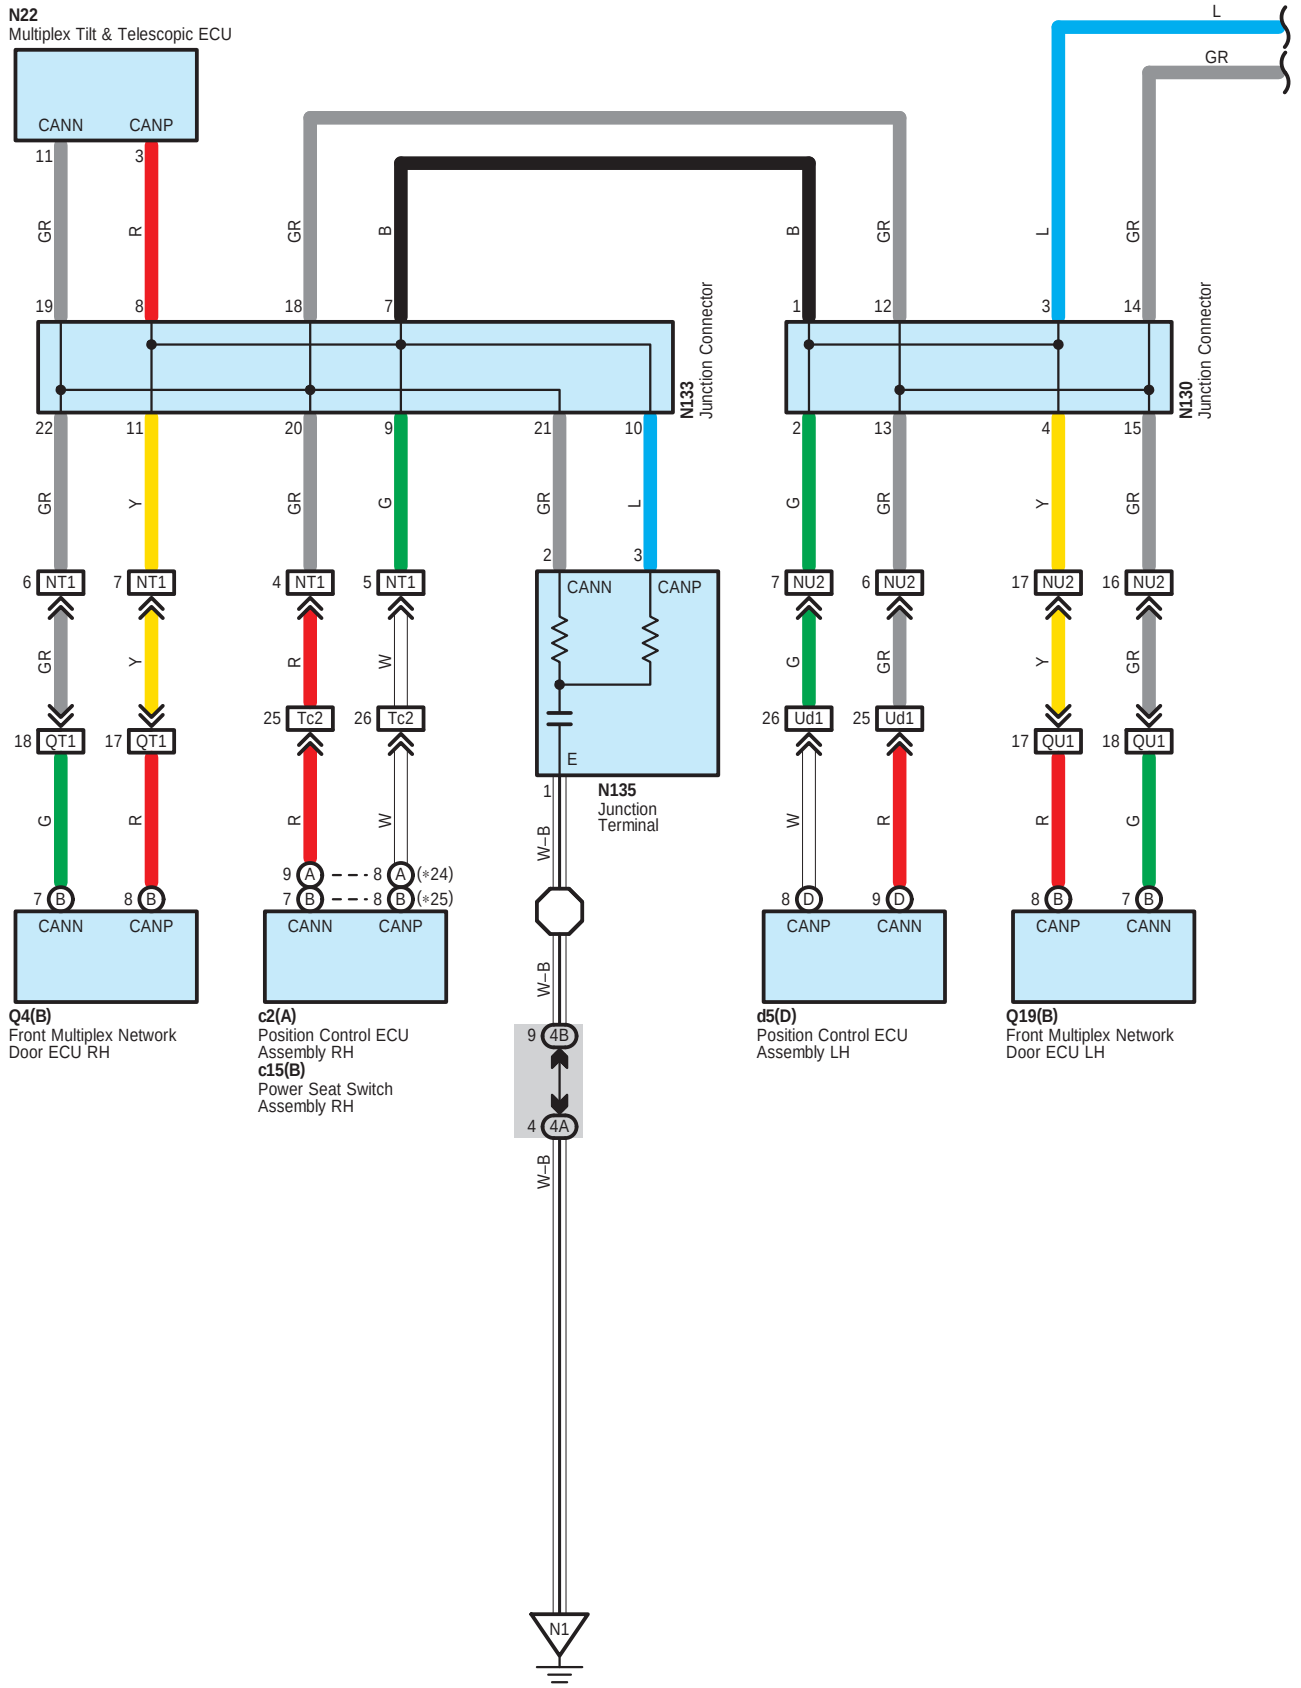


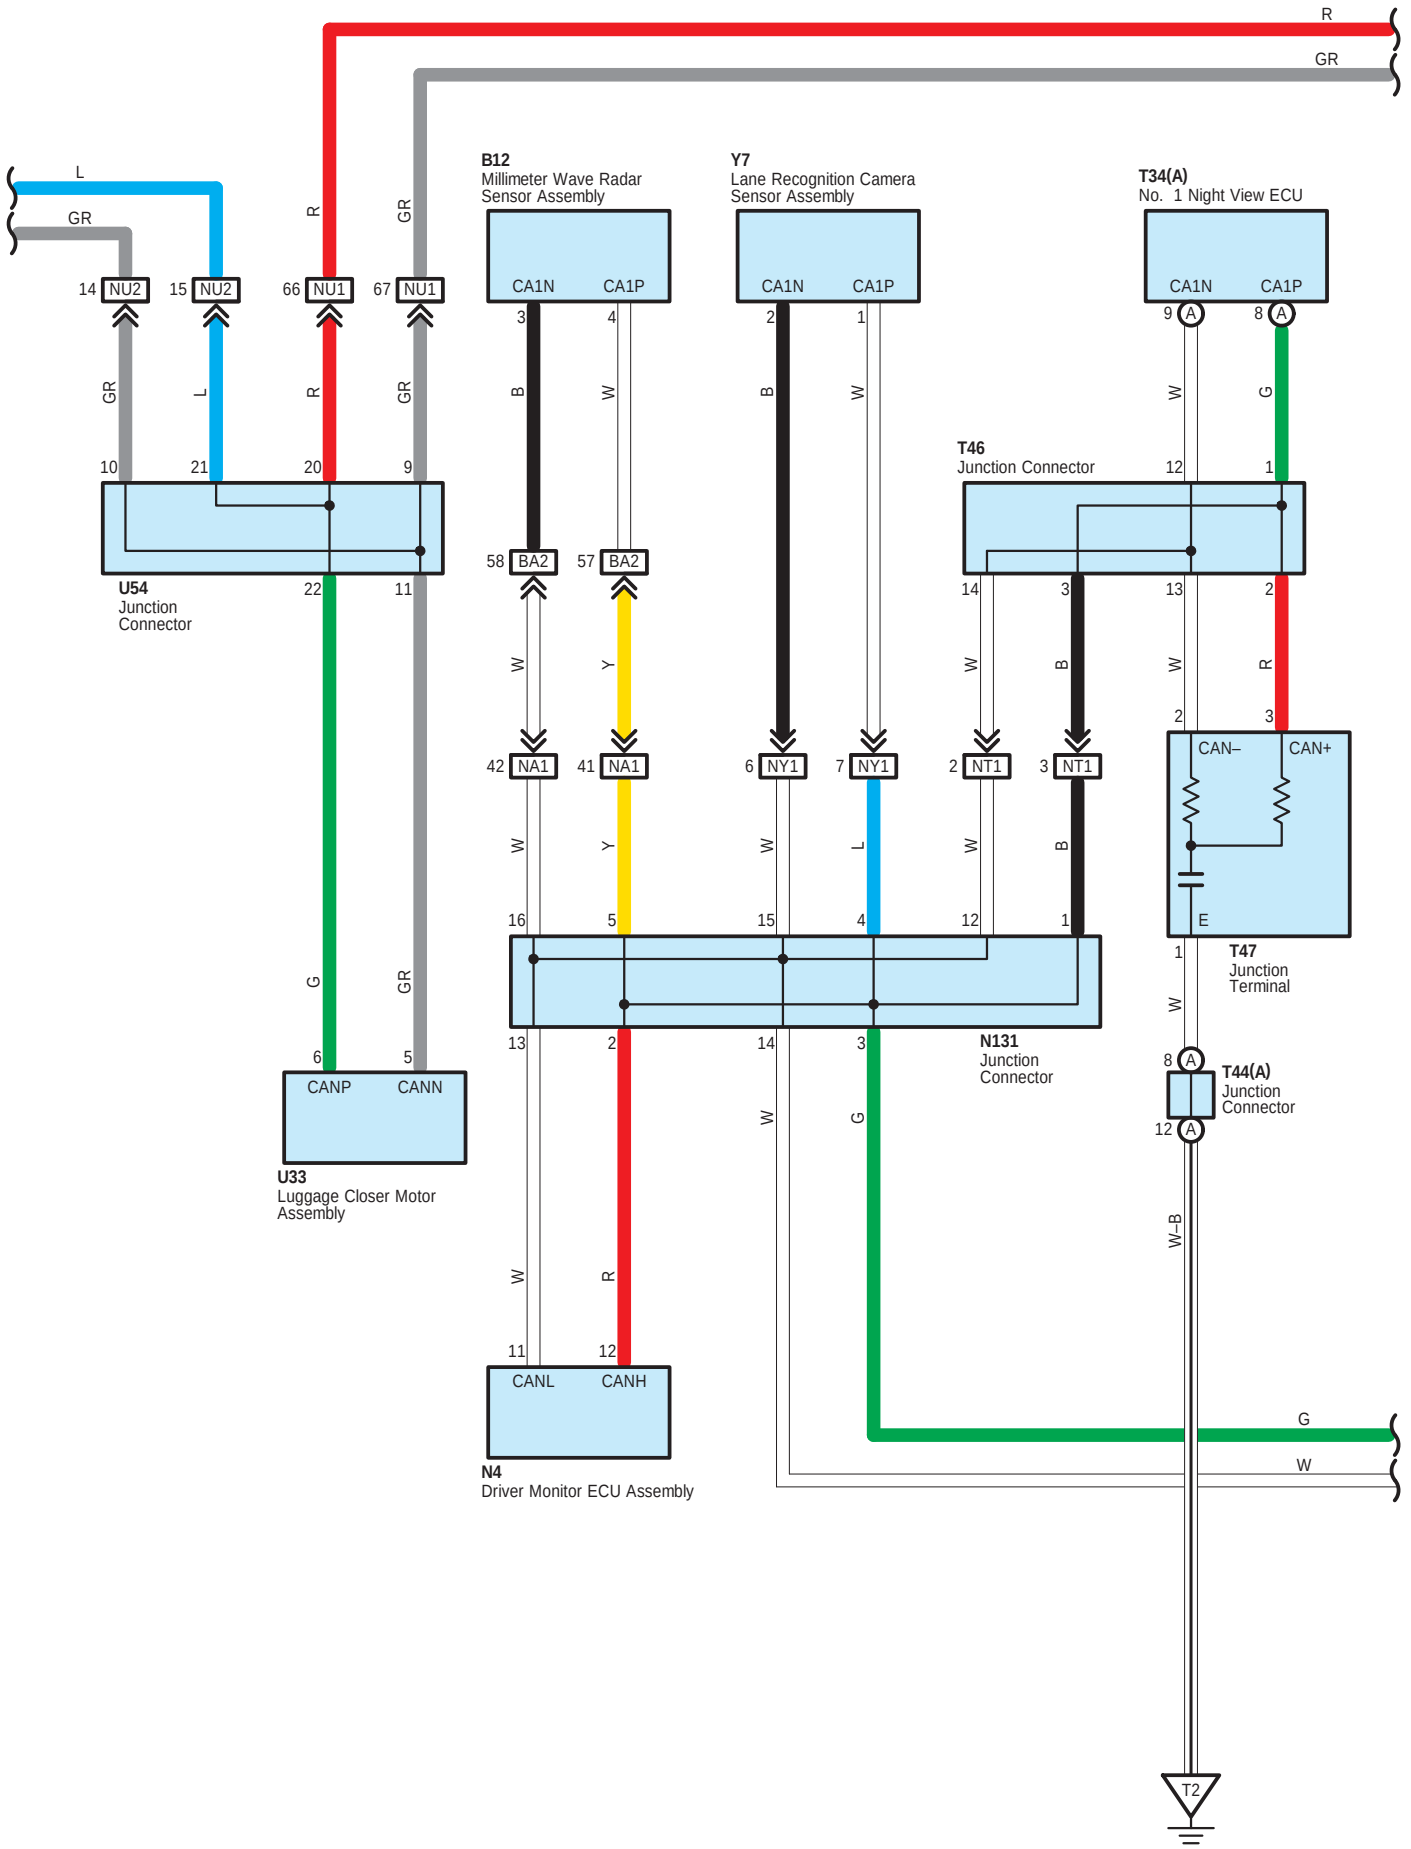


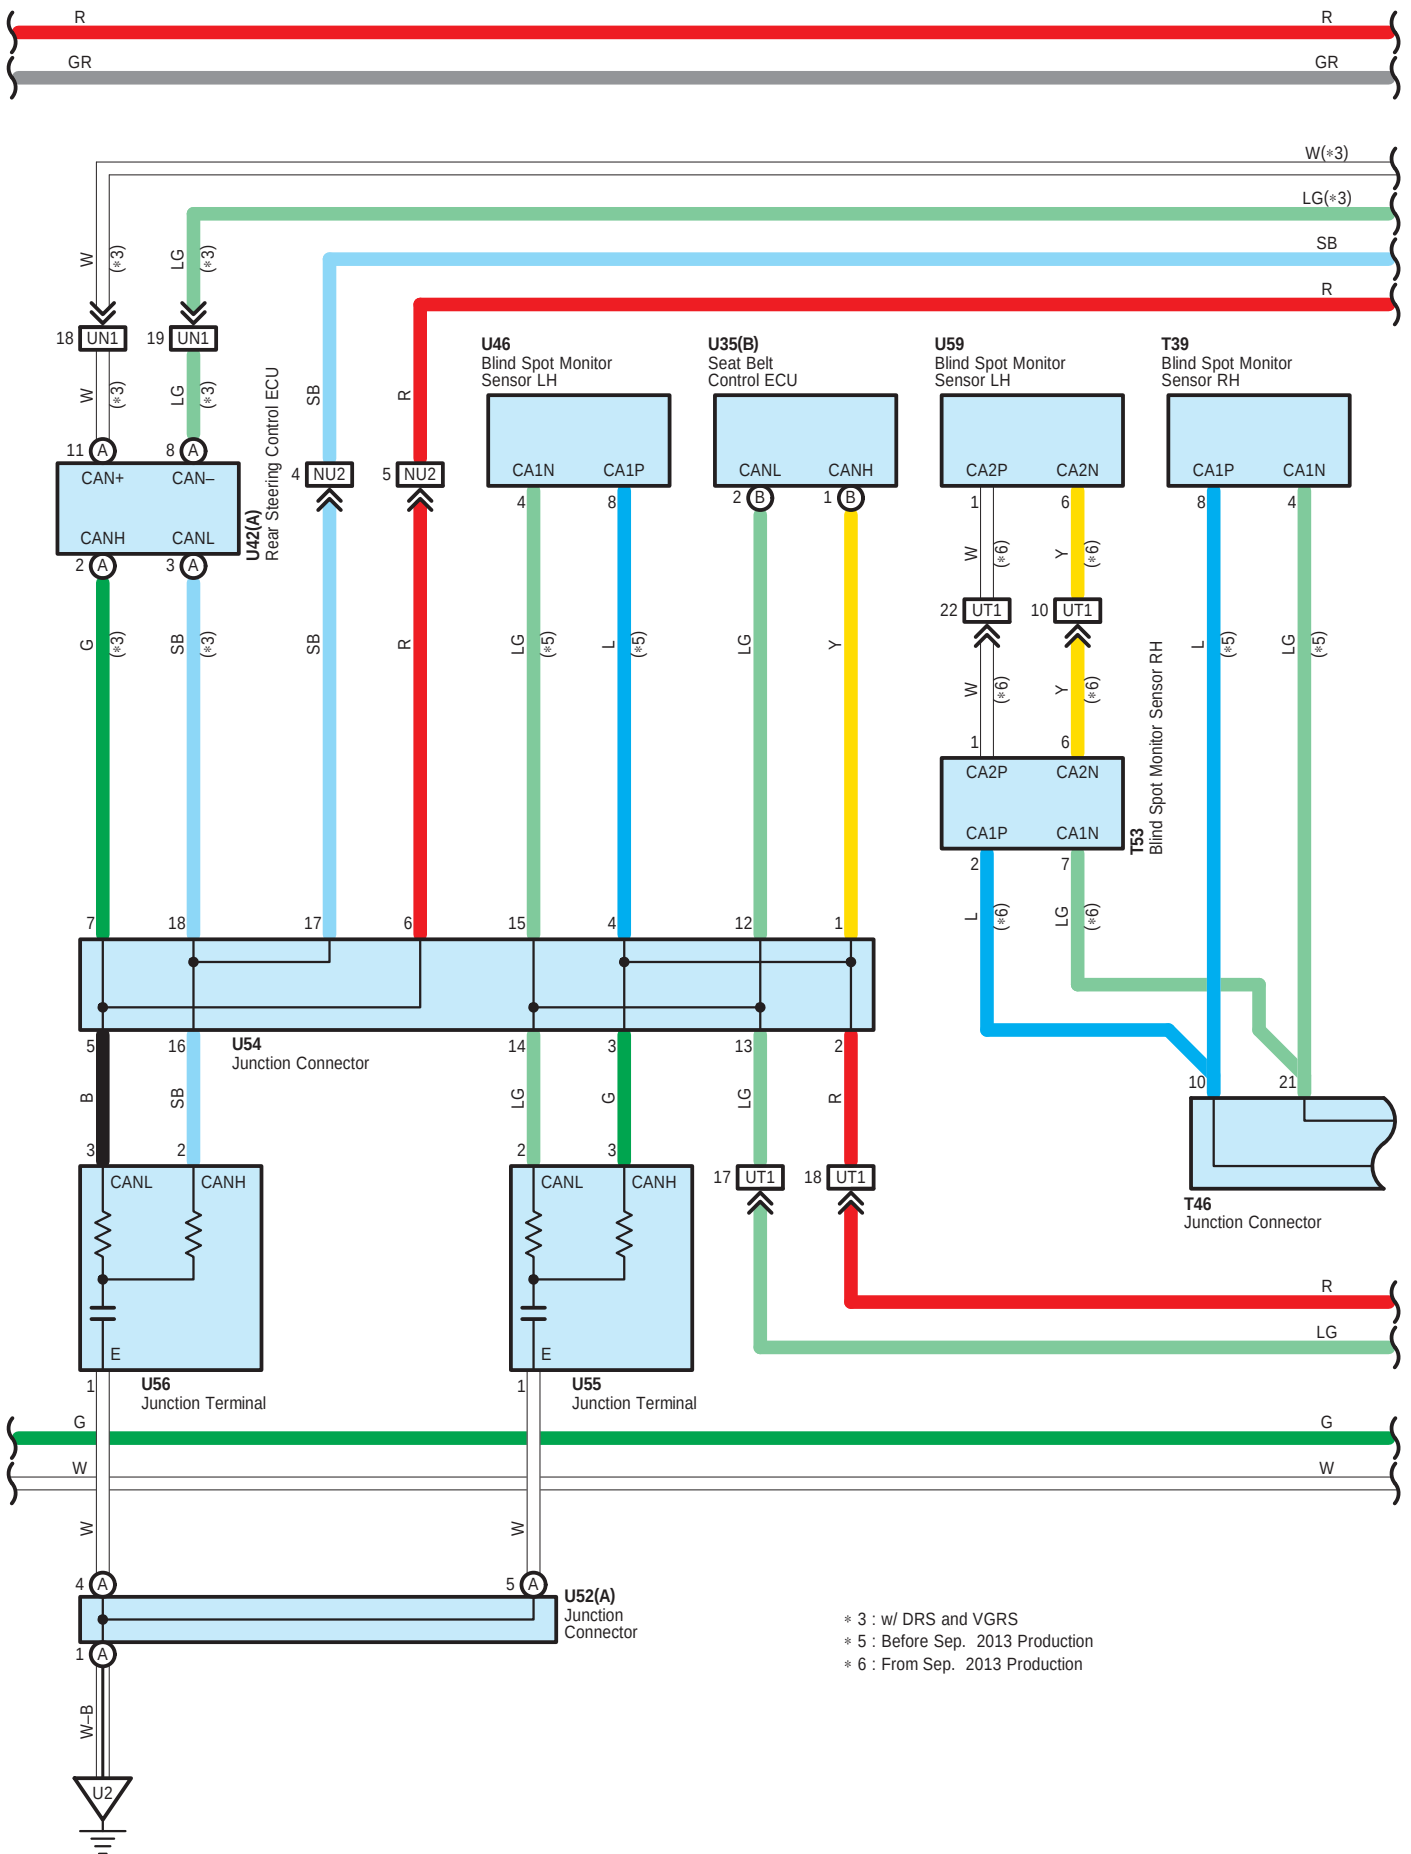


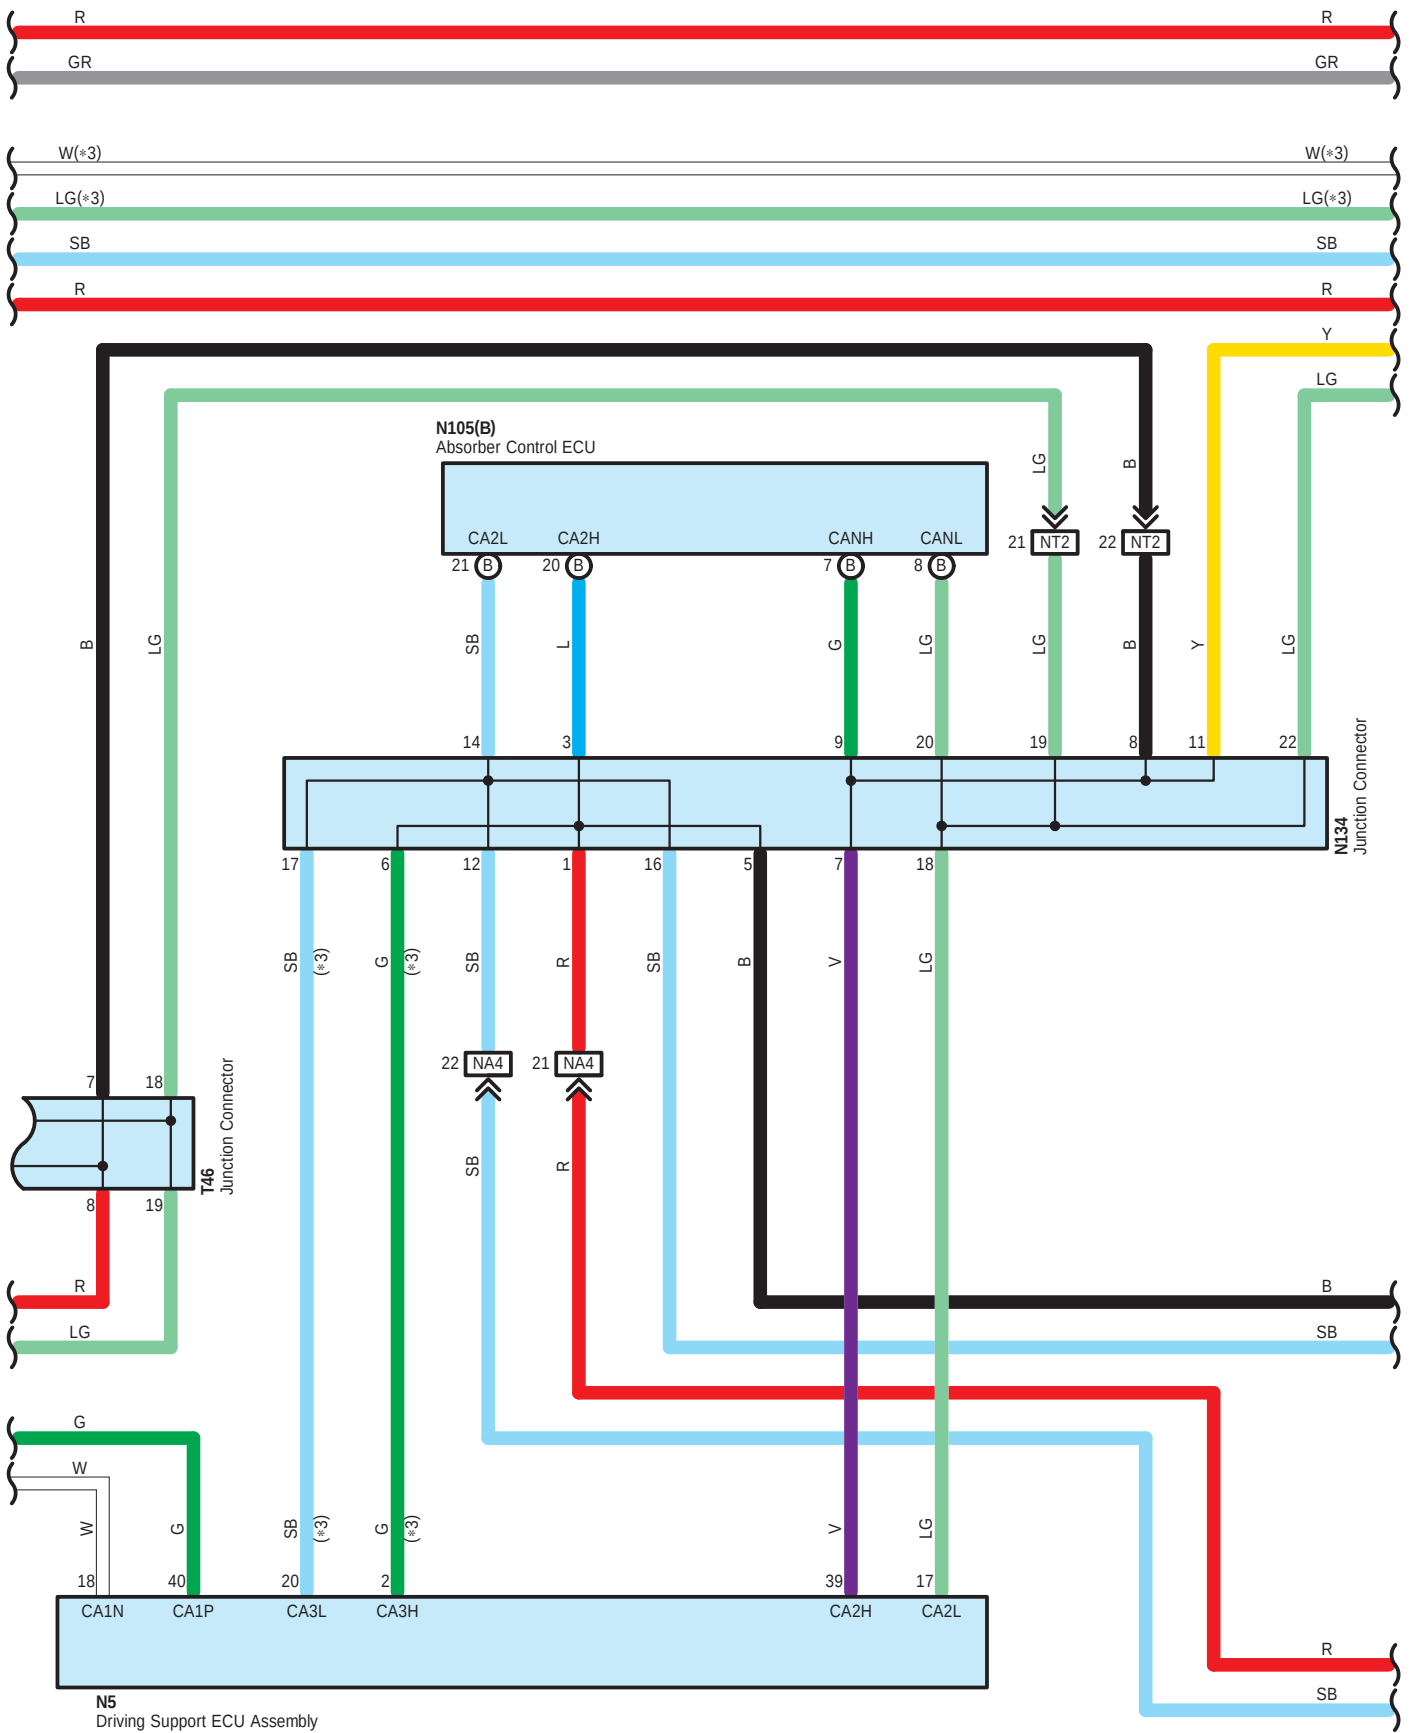


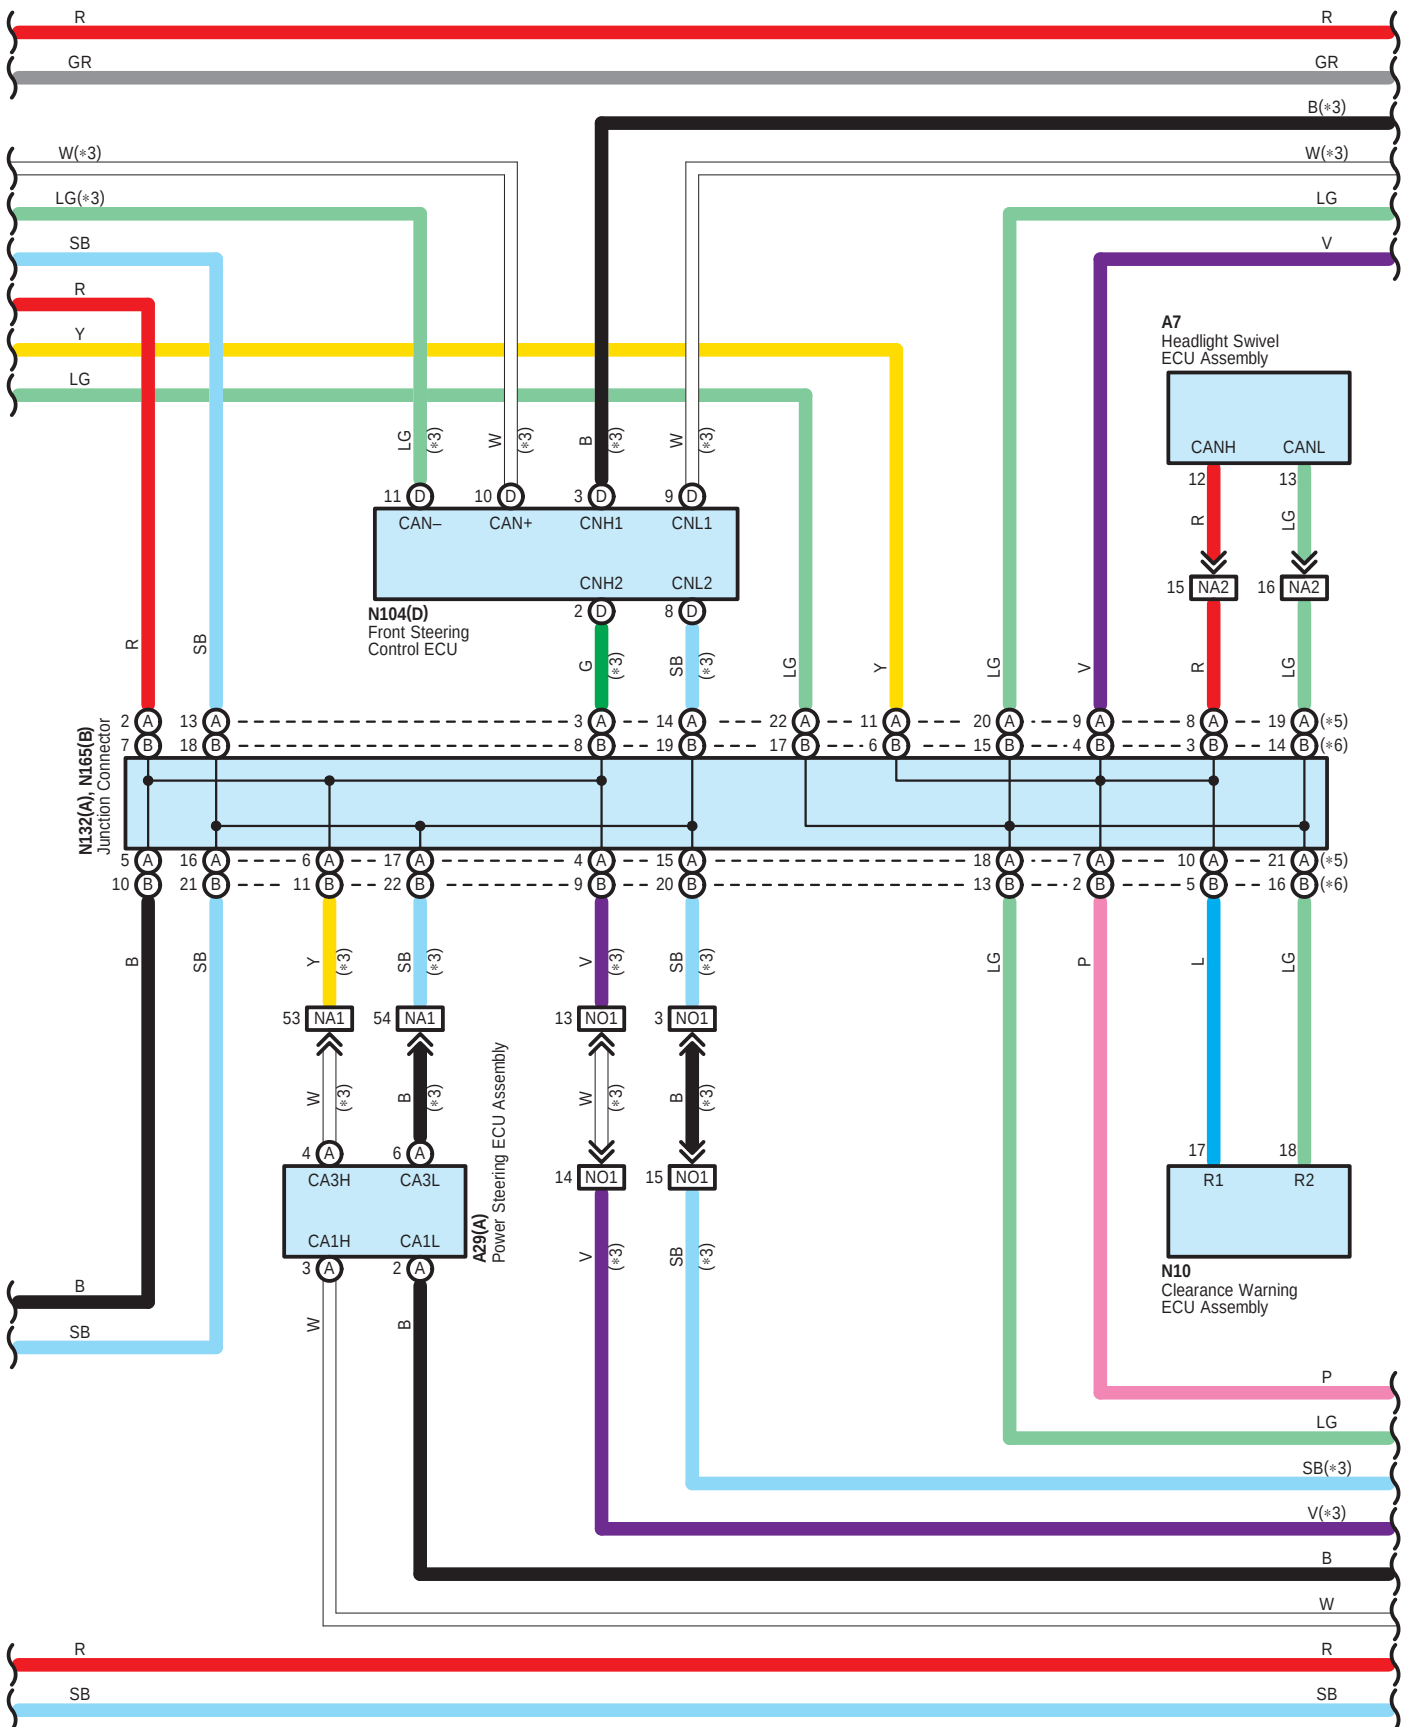

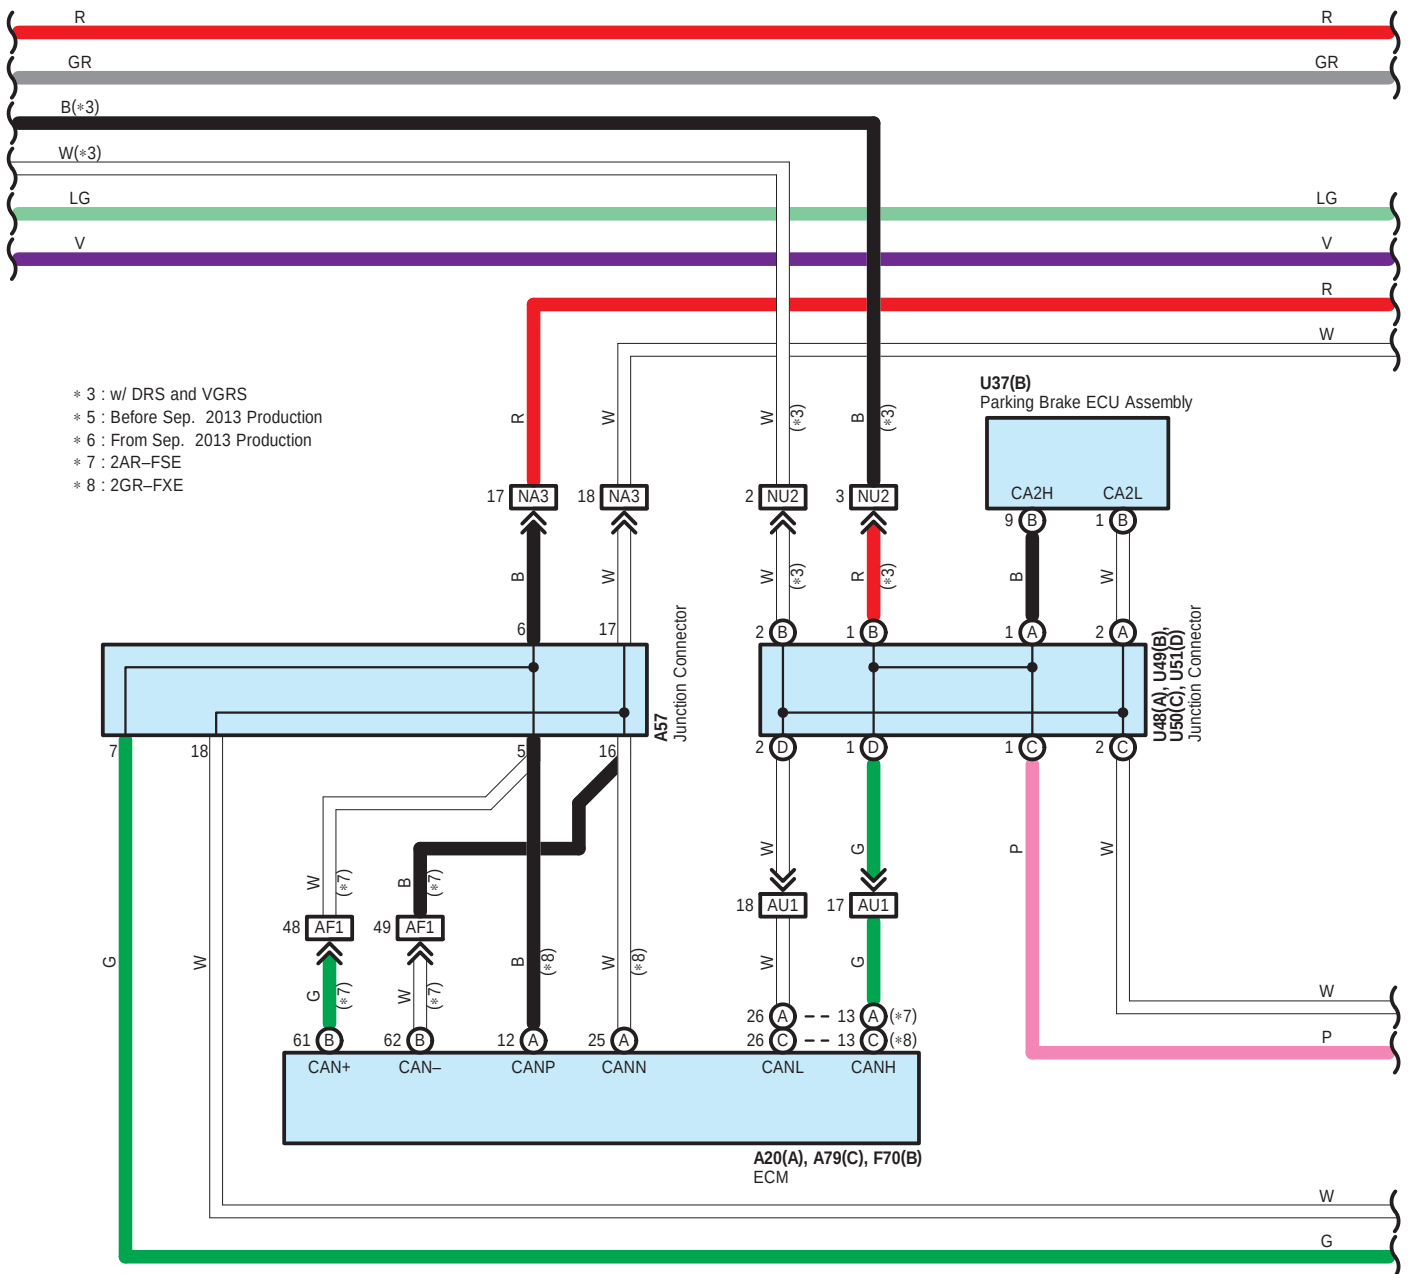


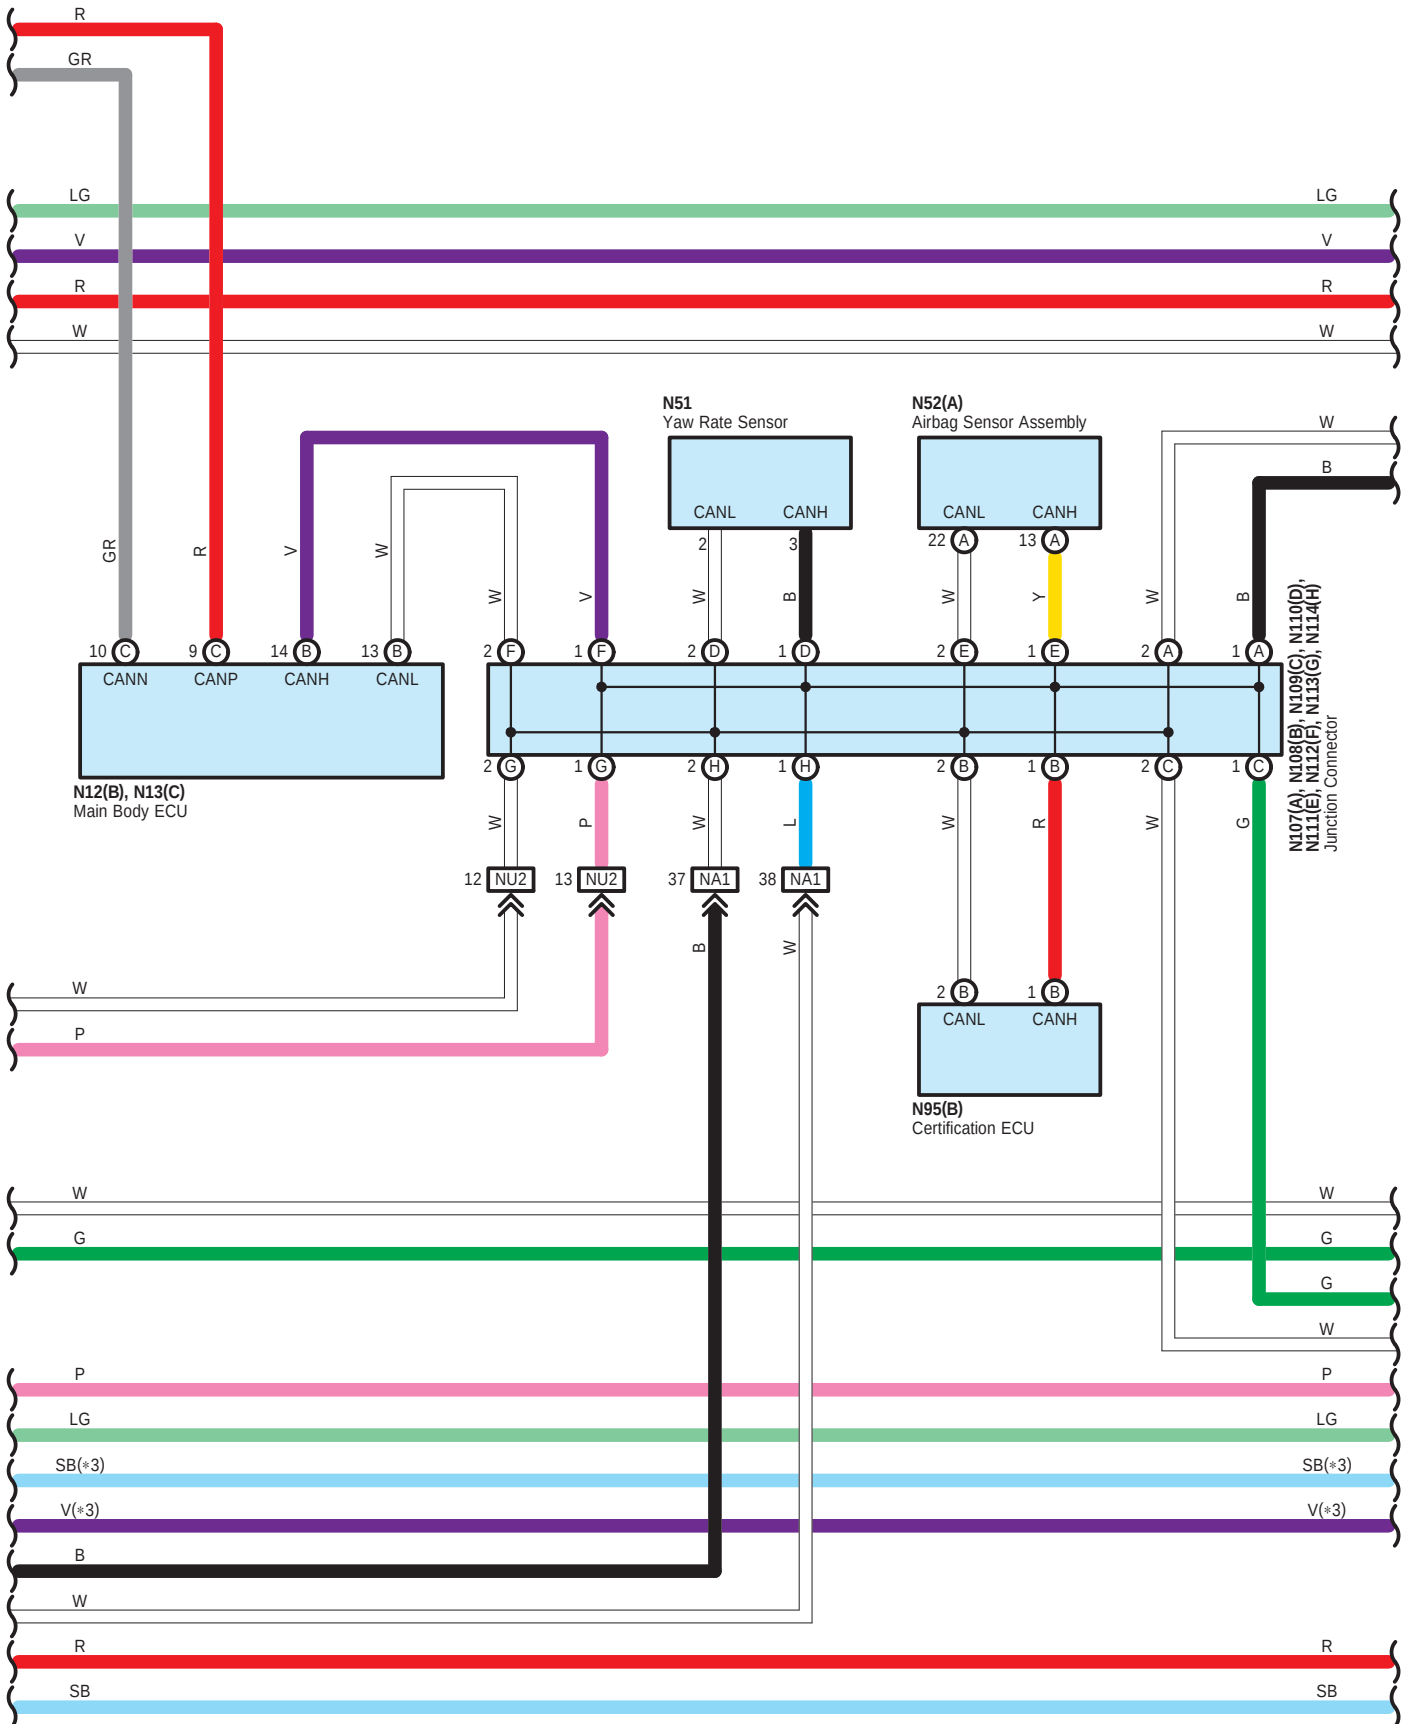

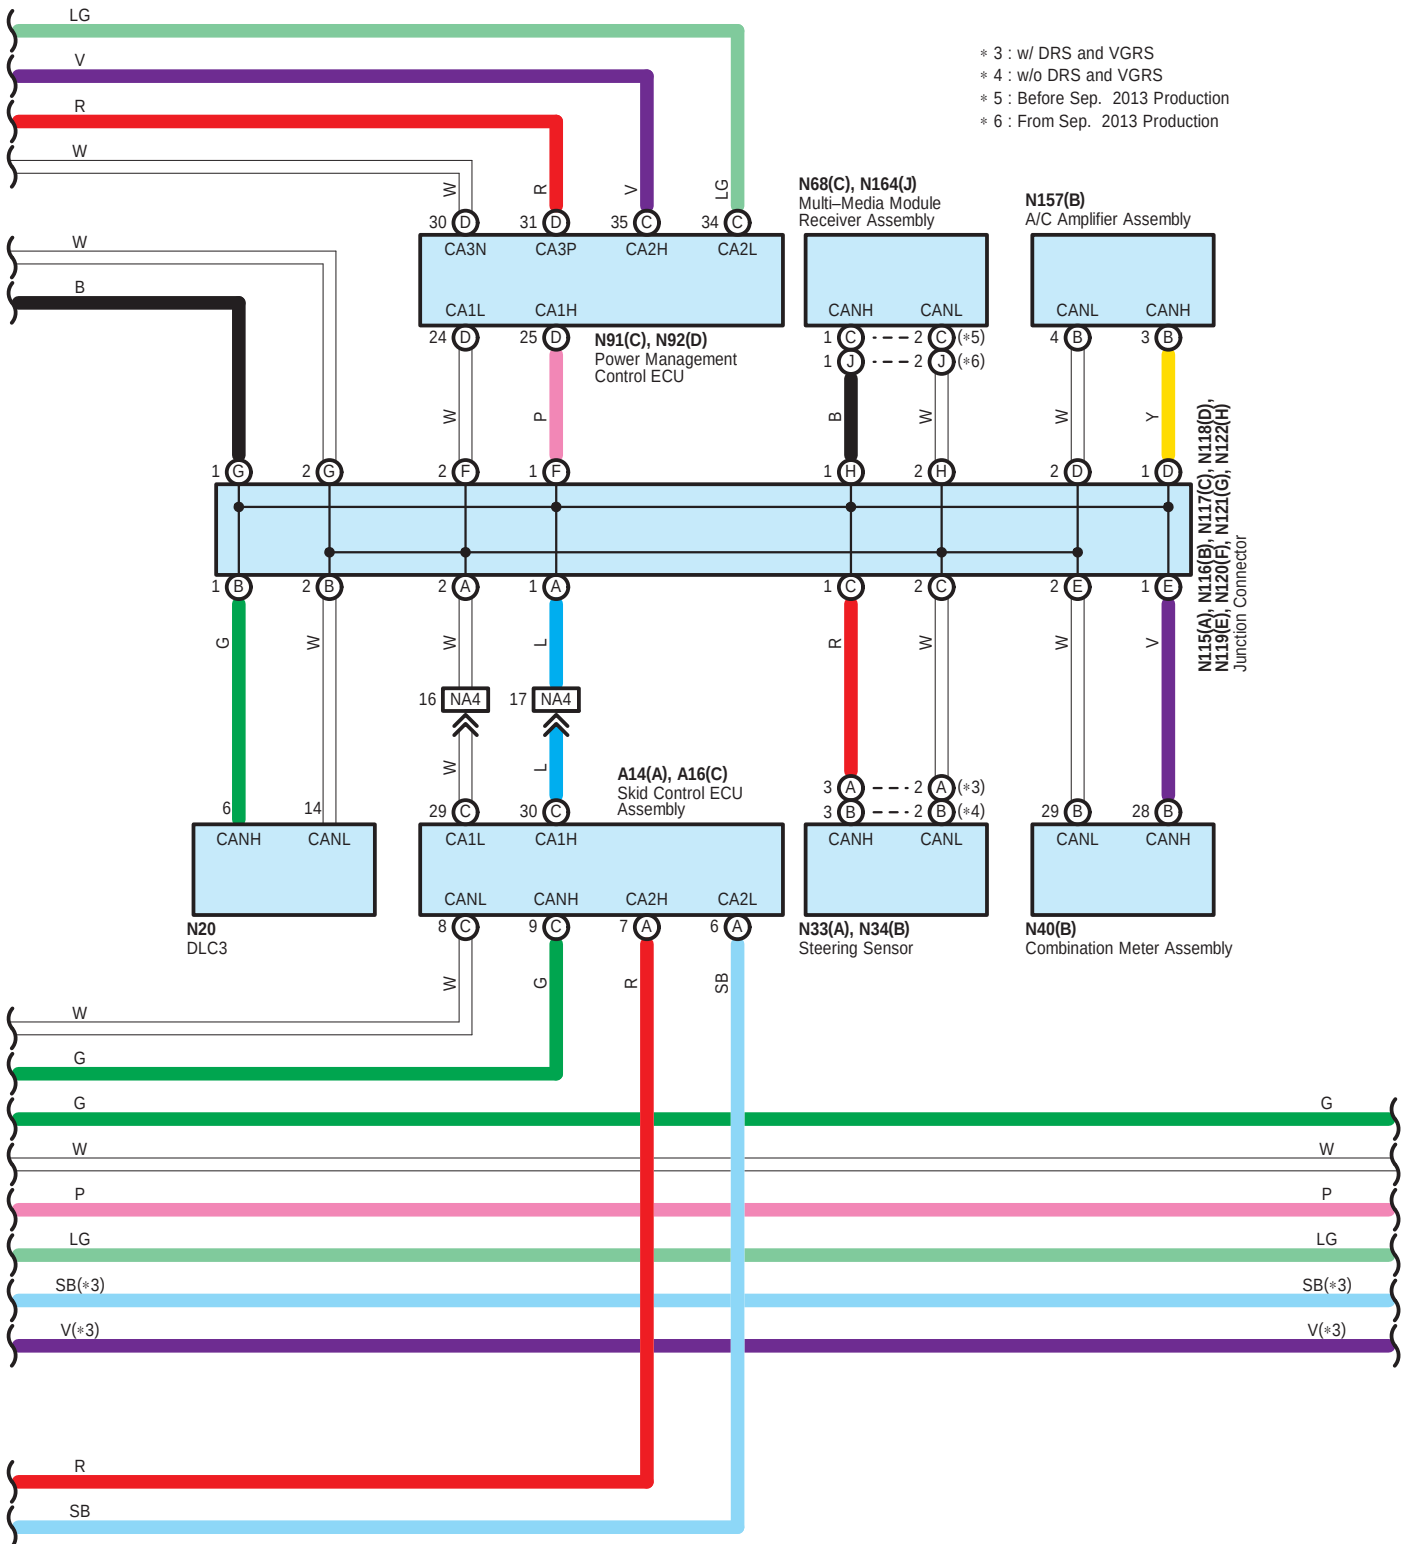


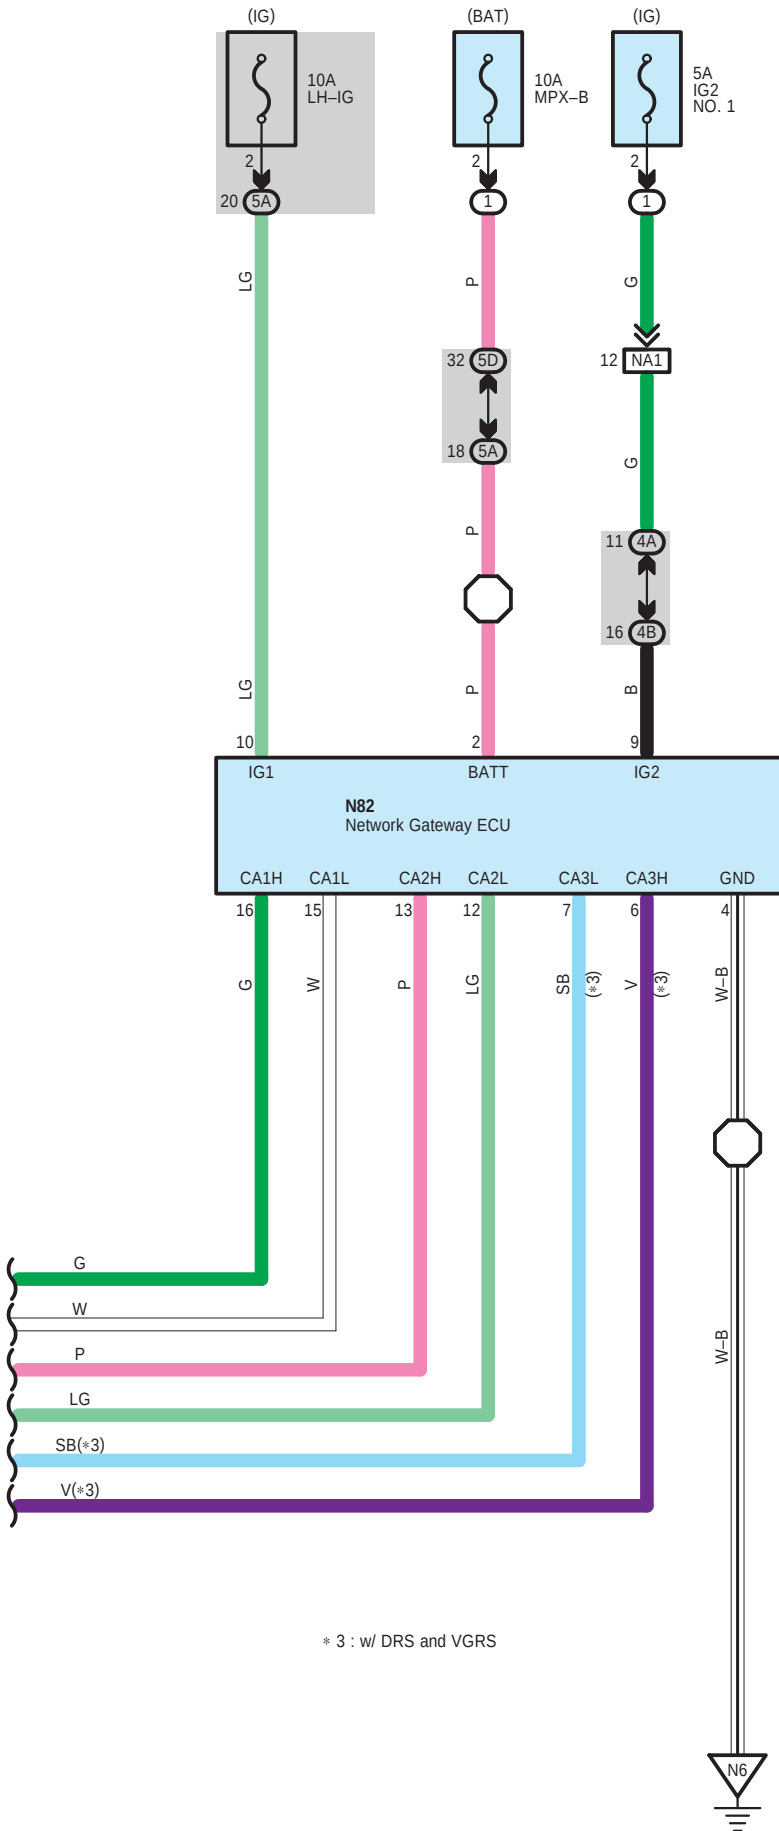


A 7
White

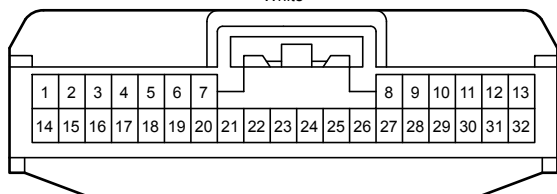


A 14
Black

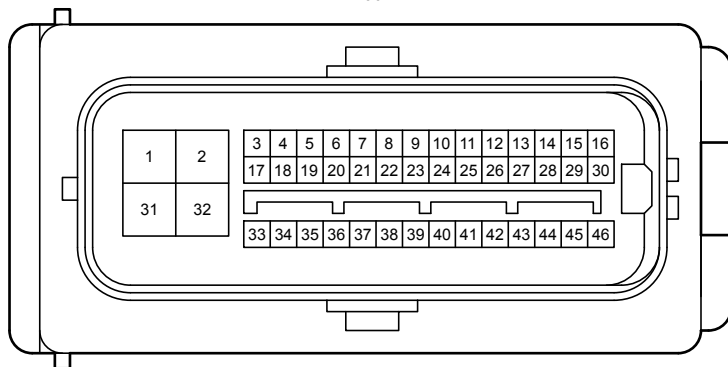


A 16
Gray

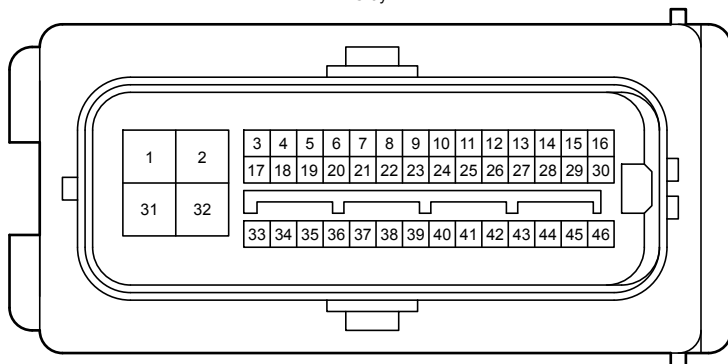



A 20
Black

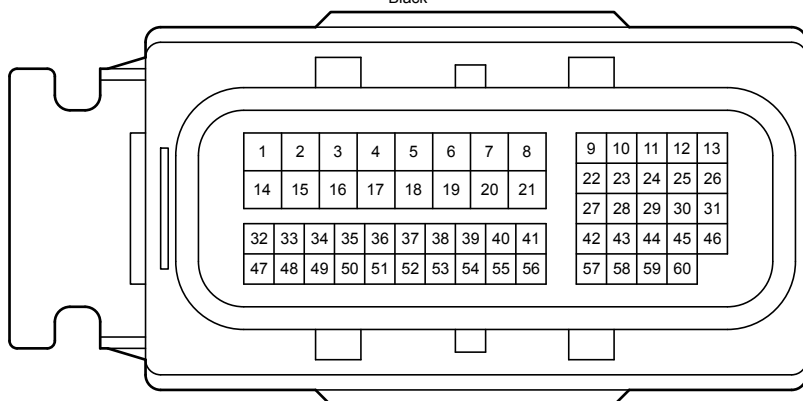

A 29
Black

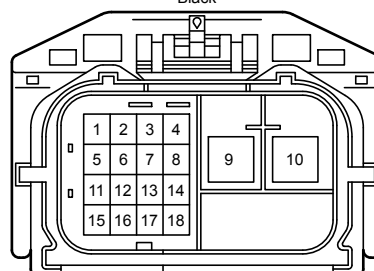


A 79
Black

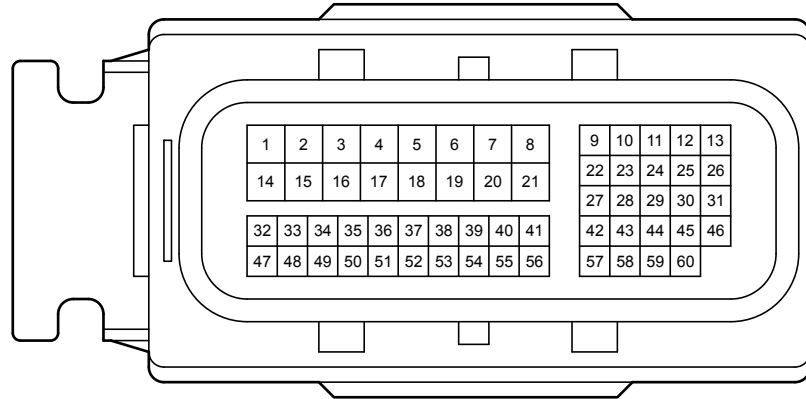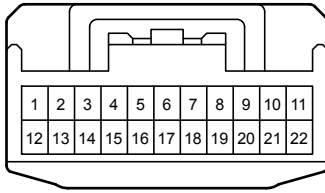


B 12
Black




F 70
Black

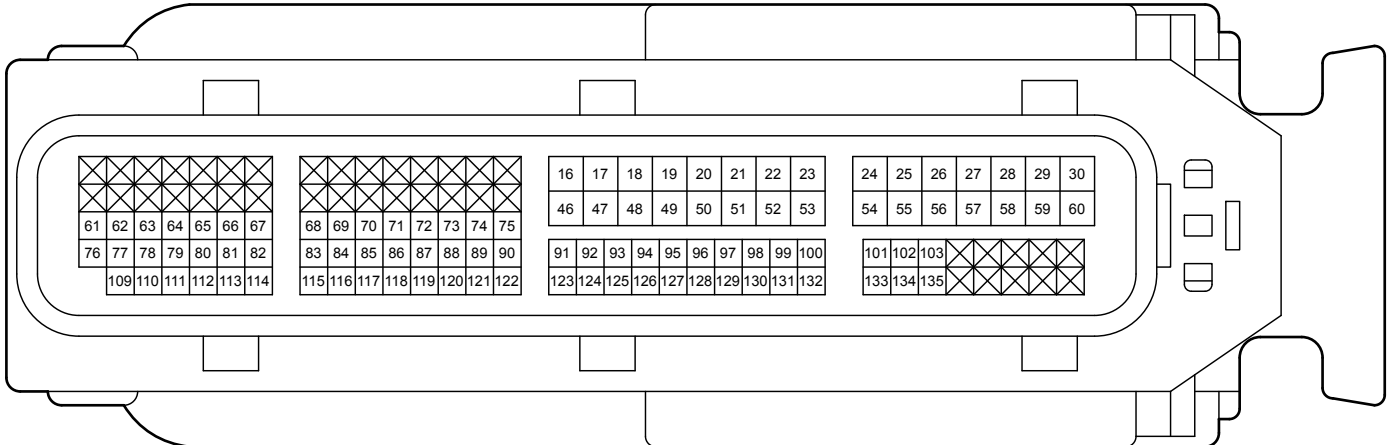


N 4
White

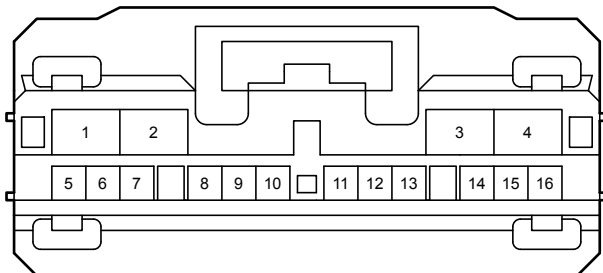


N 5
White

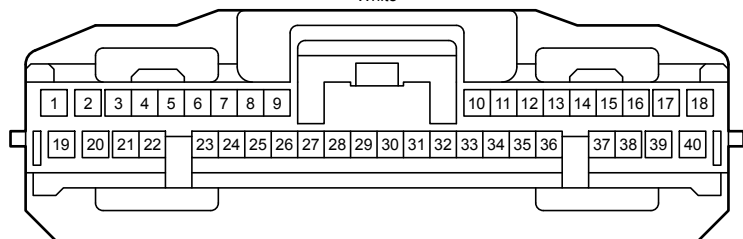


N 10
Black

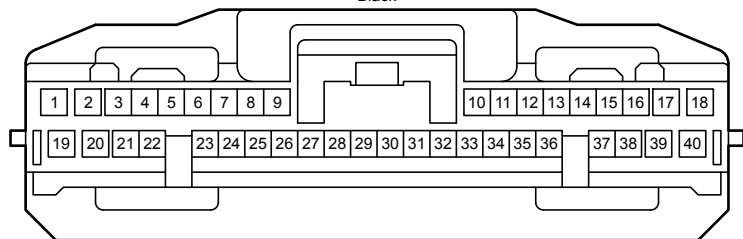


N 12
White

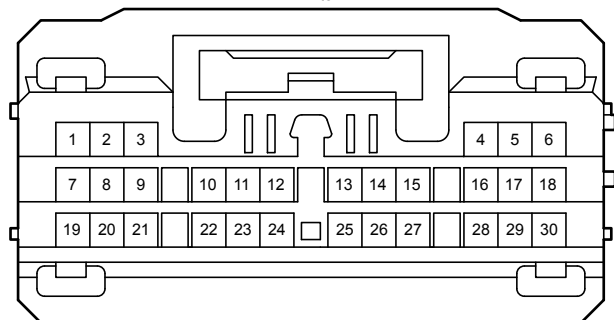


N 13
White

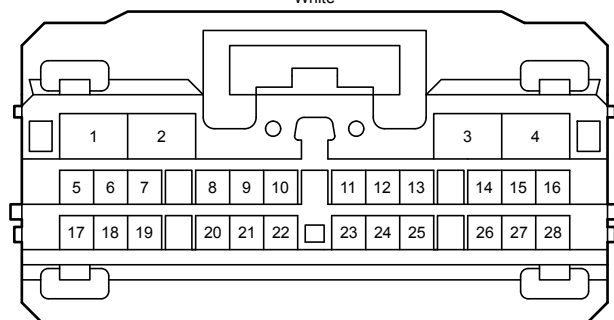


N 20
Black

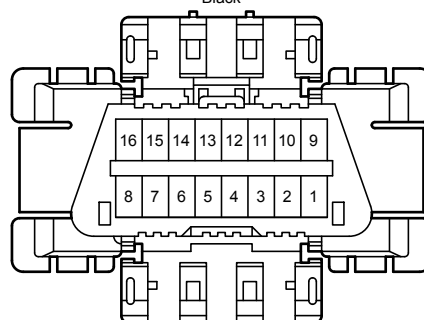


N 22
Black

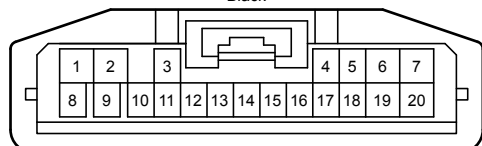


N 33
White

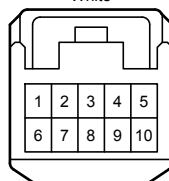


N 34
Black

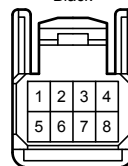


N 40
Black

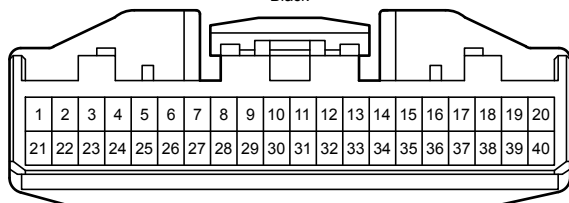


N 51
Black

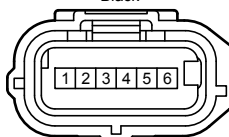


N 52
Yellow

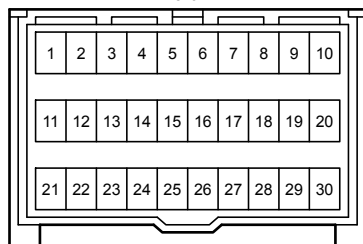


N 68
White

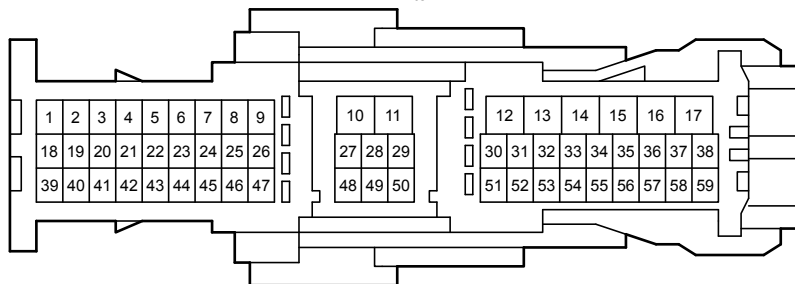


N 82
White

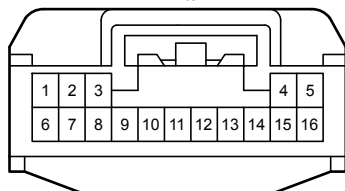


N 91
Gray

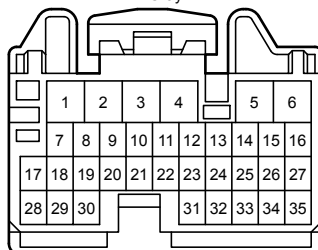


N 92
Gray

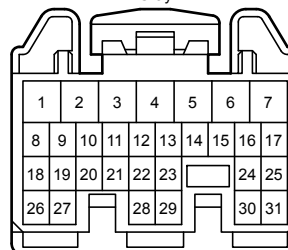


N 95
White

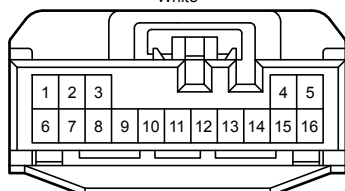


N104
White

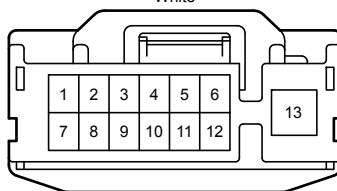


N105
Black

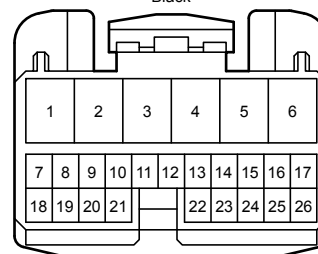


N107
White




N108
White




N109
White




N110
White



N111
White




N112
White




N113
White




N114
White




N115
White




N116
White




N117
White




N118
White




N119
White




N120
White




N121
White




N122
White




N130
Black

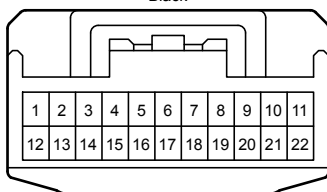


N131
Gray

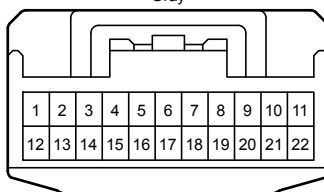


N132
Black

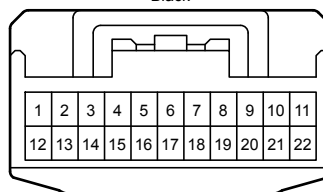


N133
Black

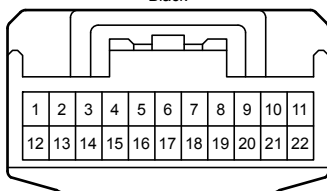


N134
Black

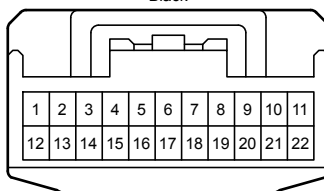


N135
White




N157
White

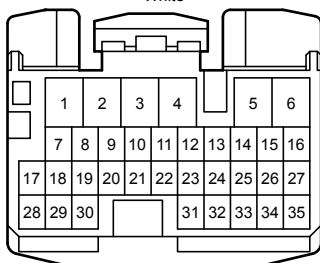


N164
White

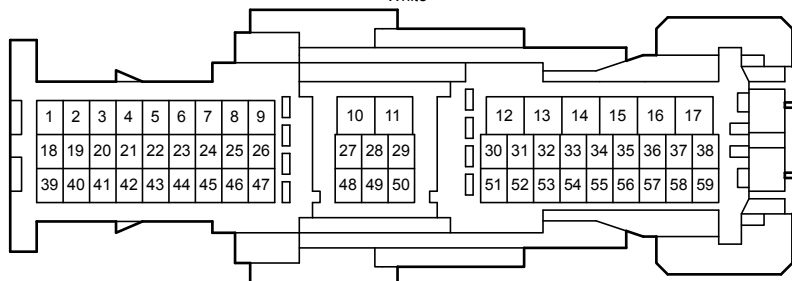


N165
Black

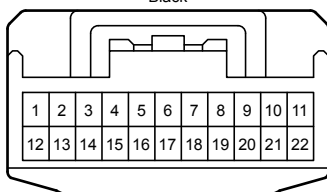


Q 4
White

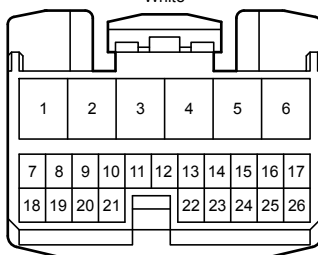


Q 19
White

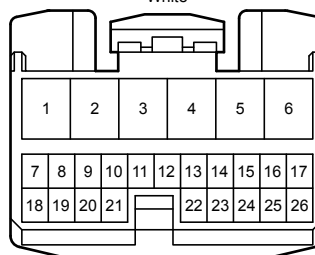


T 34
White

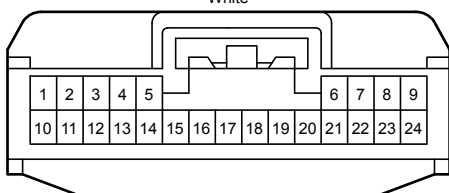


T 39
Black

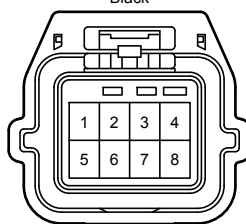


T 44
Blue

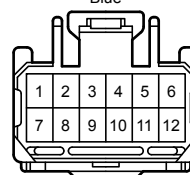


T 46
Black

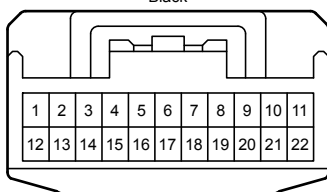


T 47
White




T 53
Black

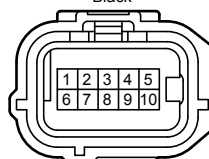


U 33
White

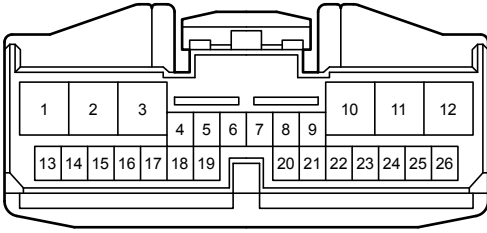


U 35
White

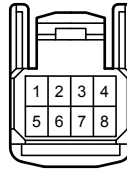


U 37
White

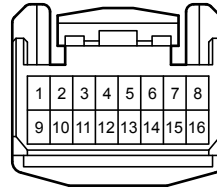


U 42
Black

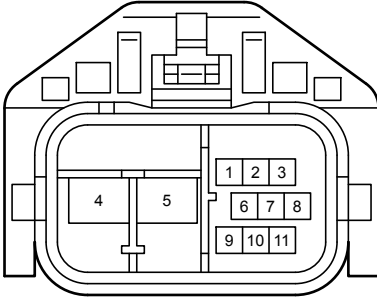


U 46
Black

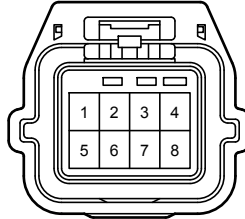


U 48
White




U 49
White




U 50
White




U 51
White




U 52
Blue

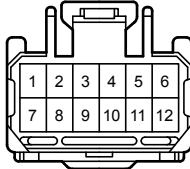


U 54
Blue

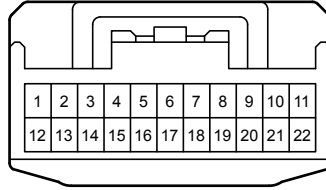


U 55
White




U 56
White




U 59
Black

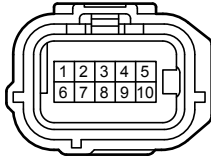


Y 7
White

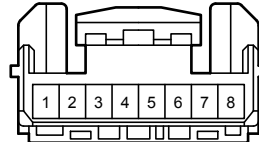


c 2
White

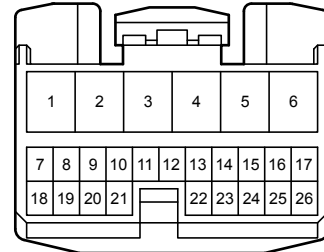

c 15
Black

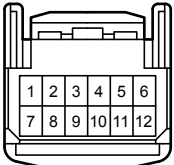


d 5
White

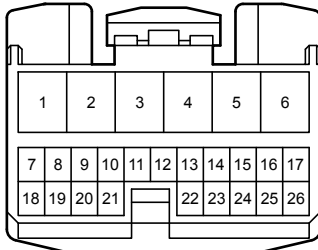


4A

White

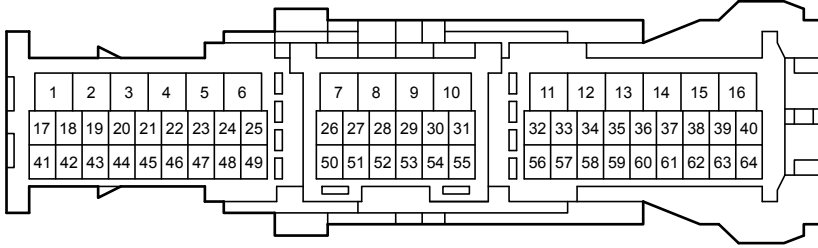


4B

White

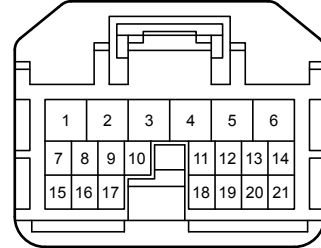


5A

White

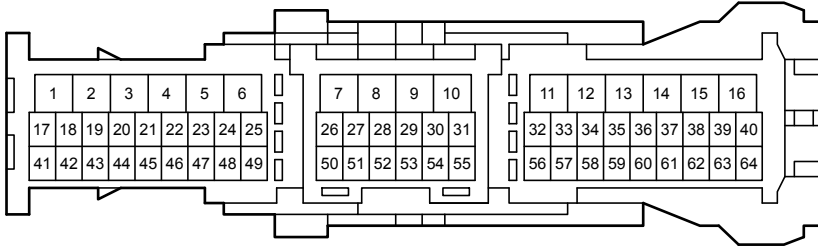


5D

White


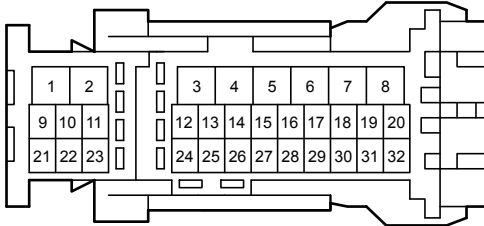


AF1



White

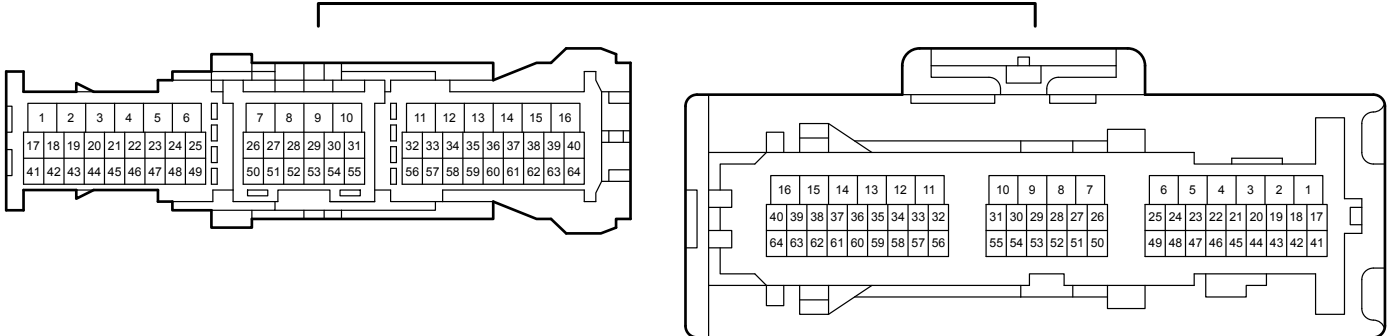



AU1
White

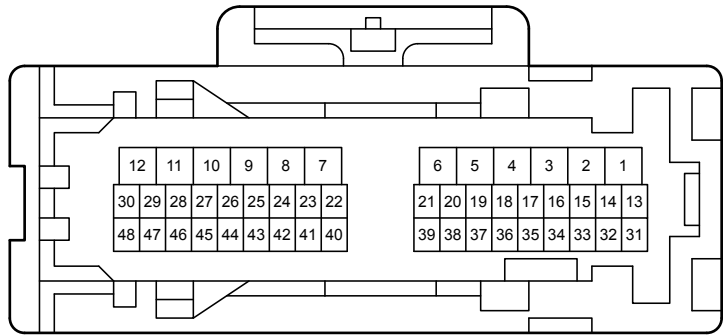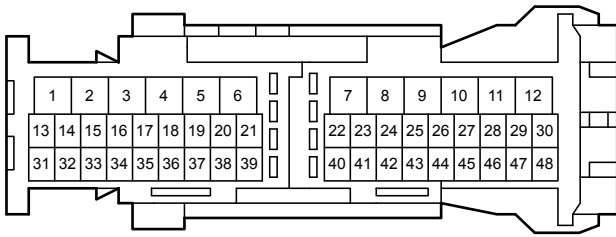



BA2
White

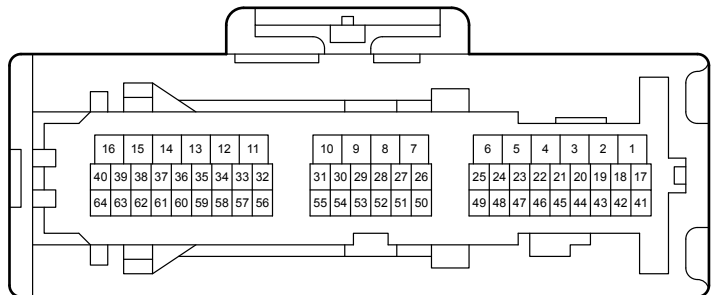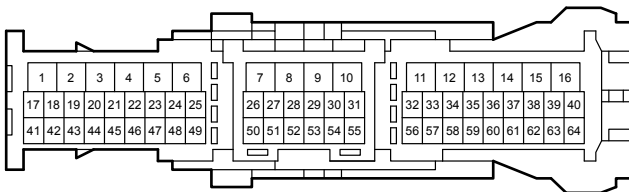


NA1
White

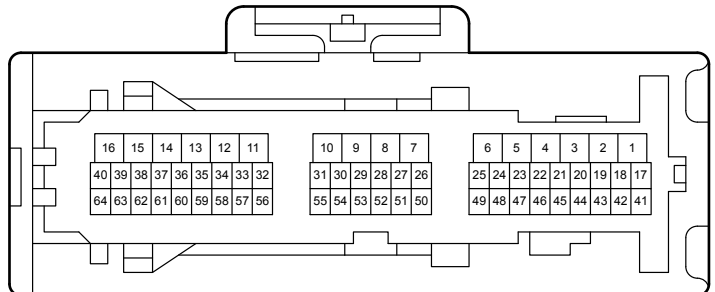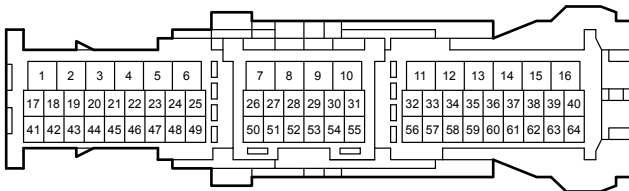


NA2
White

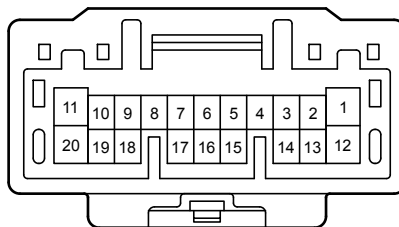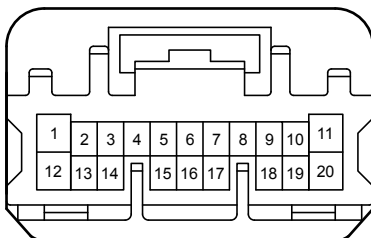


NA3
White

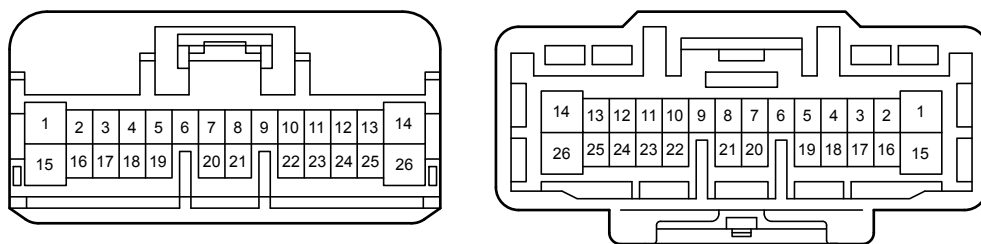


NA4
Gray

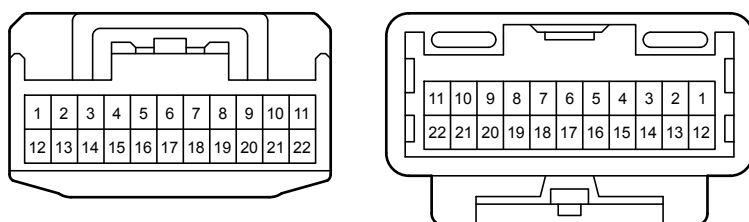


NO1
White

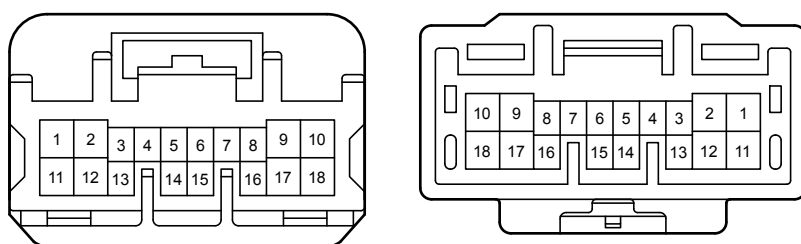


NT1
White

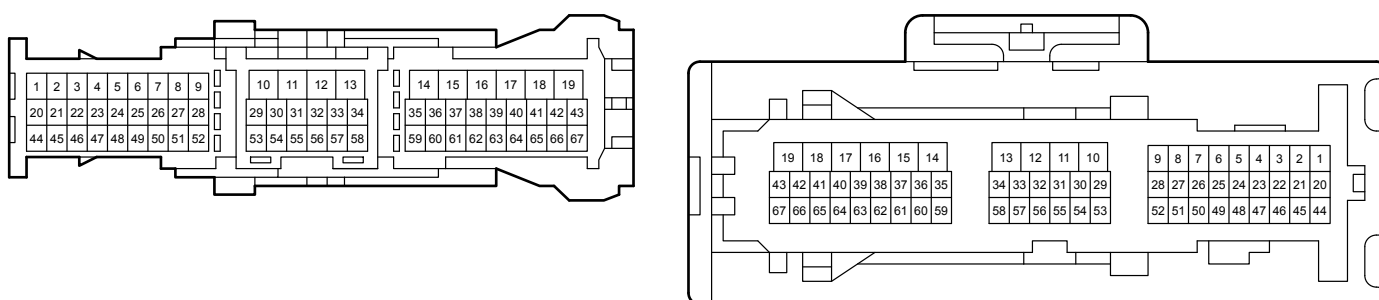


NT2
White

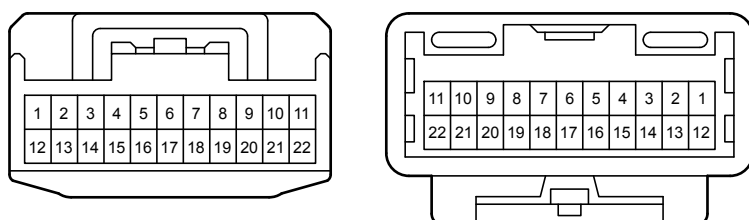


NU1
White

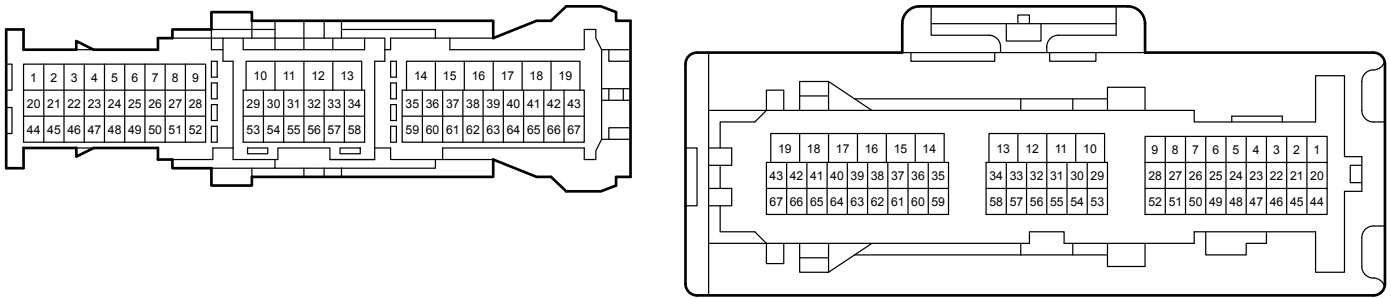


NU2
White

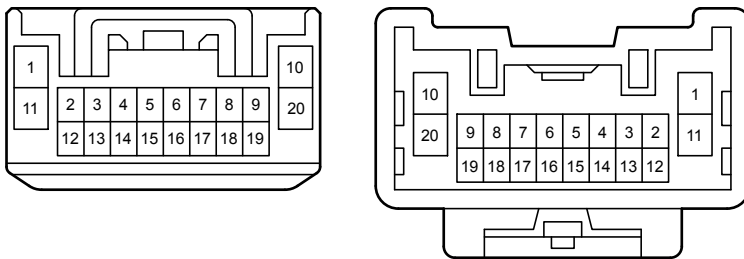


NY1
White

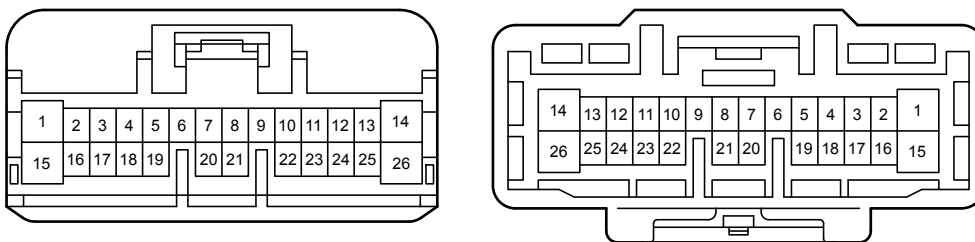


QT1
White

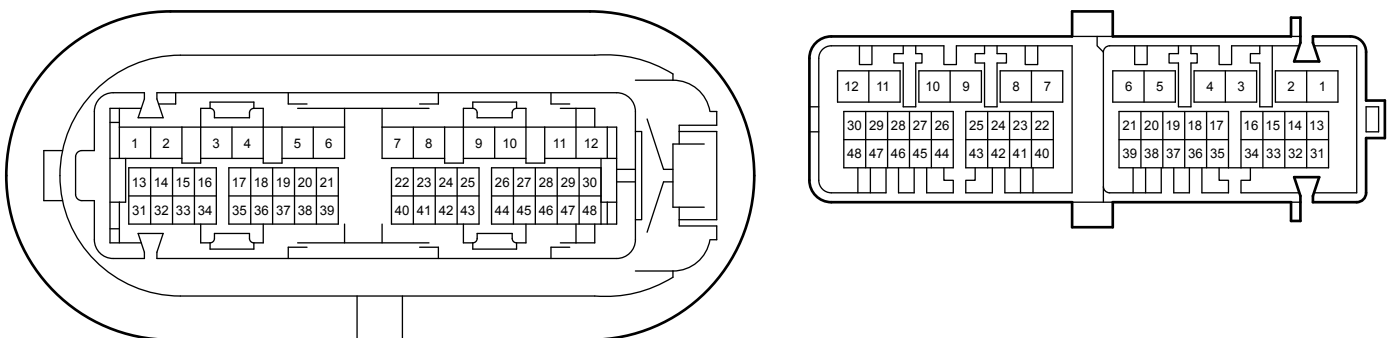


QU1
White

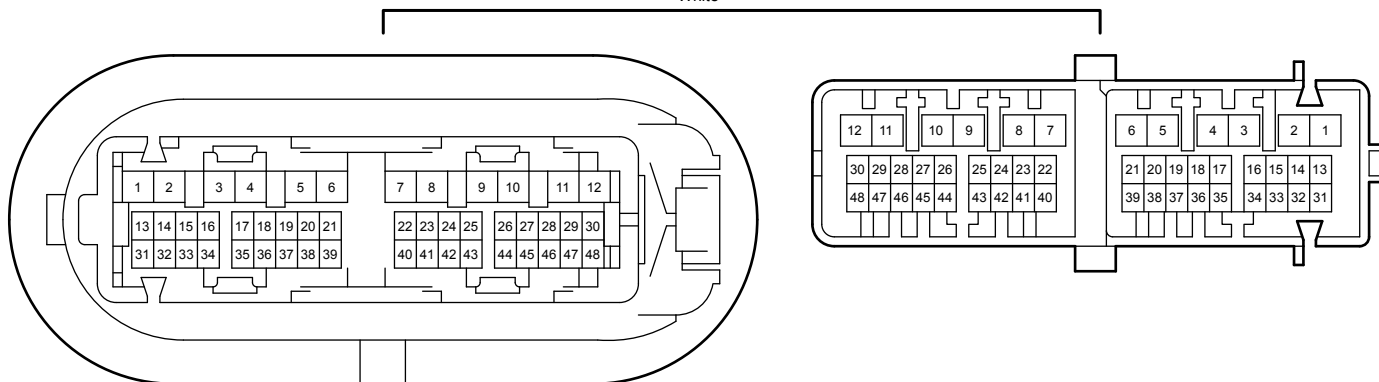


Tc2
White

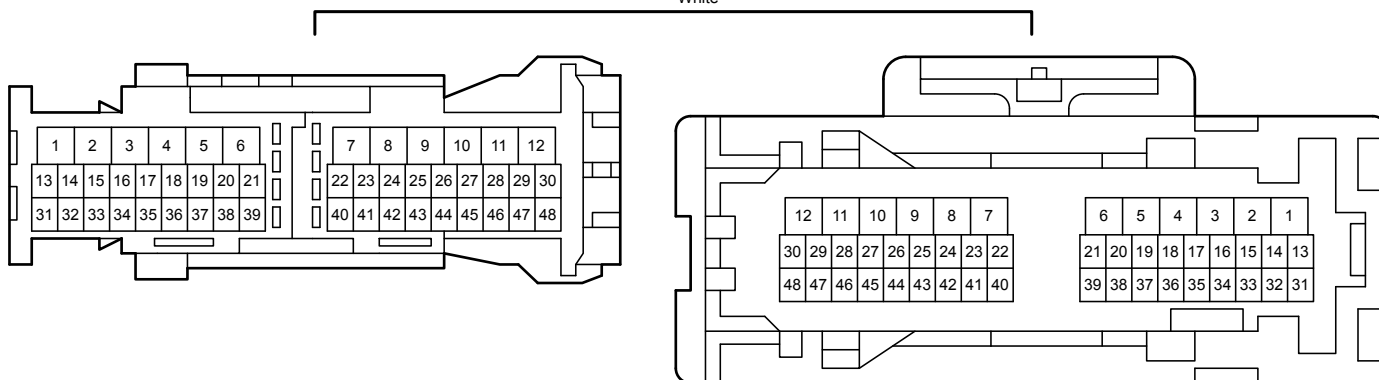

UN1
White

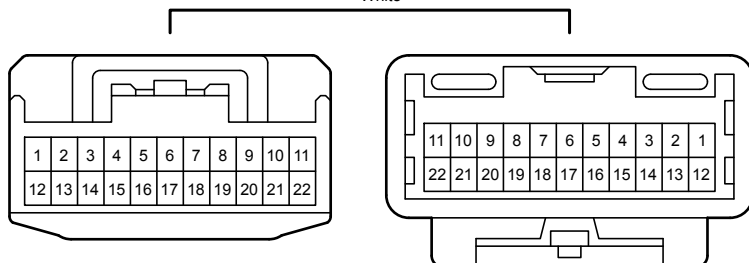

UT1
White

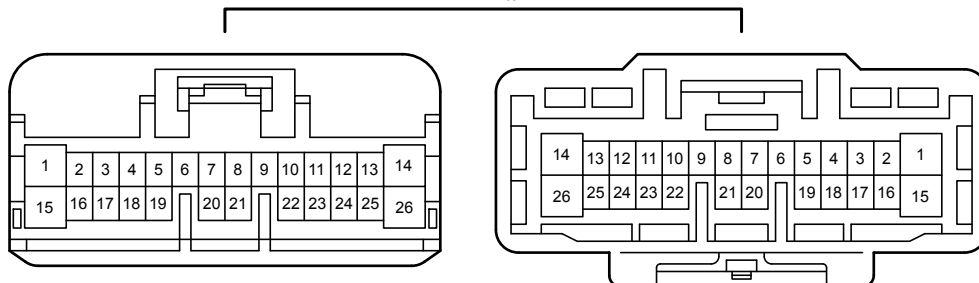

Ud1
White

