






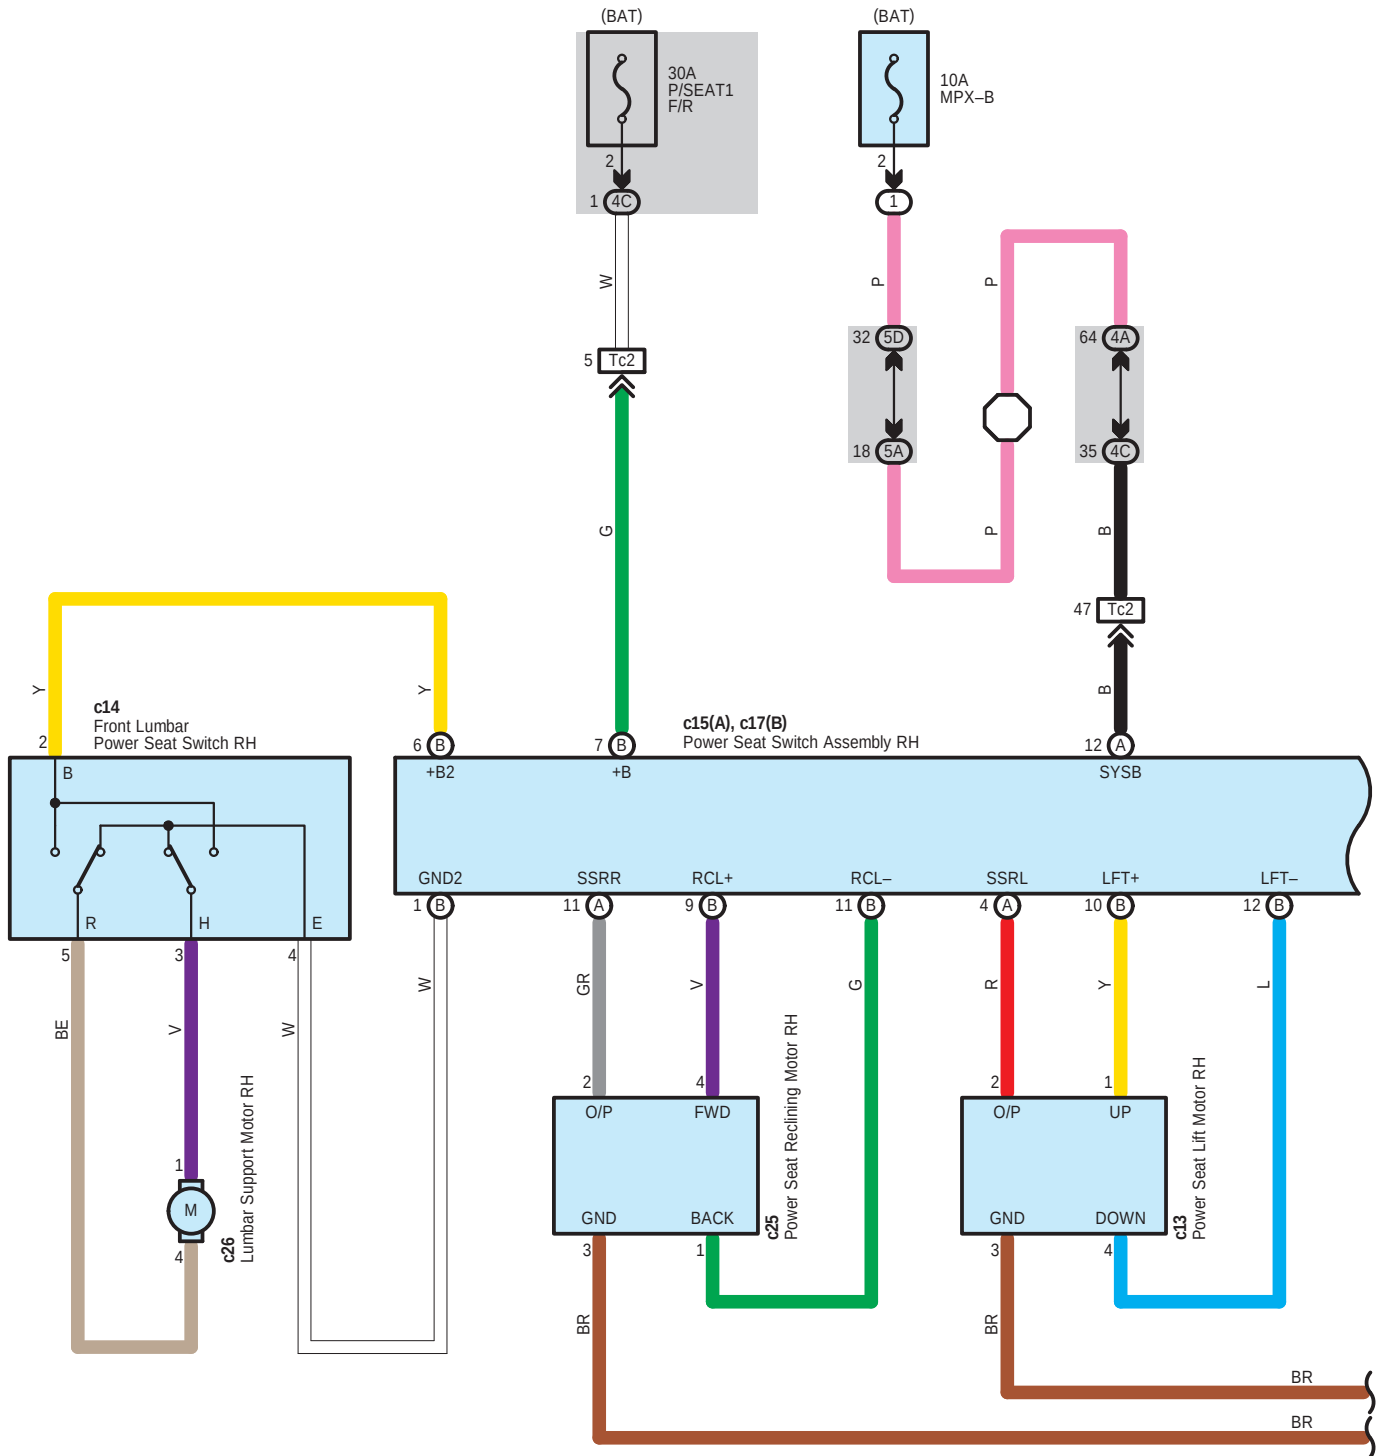


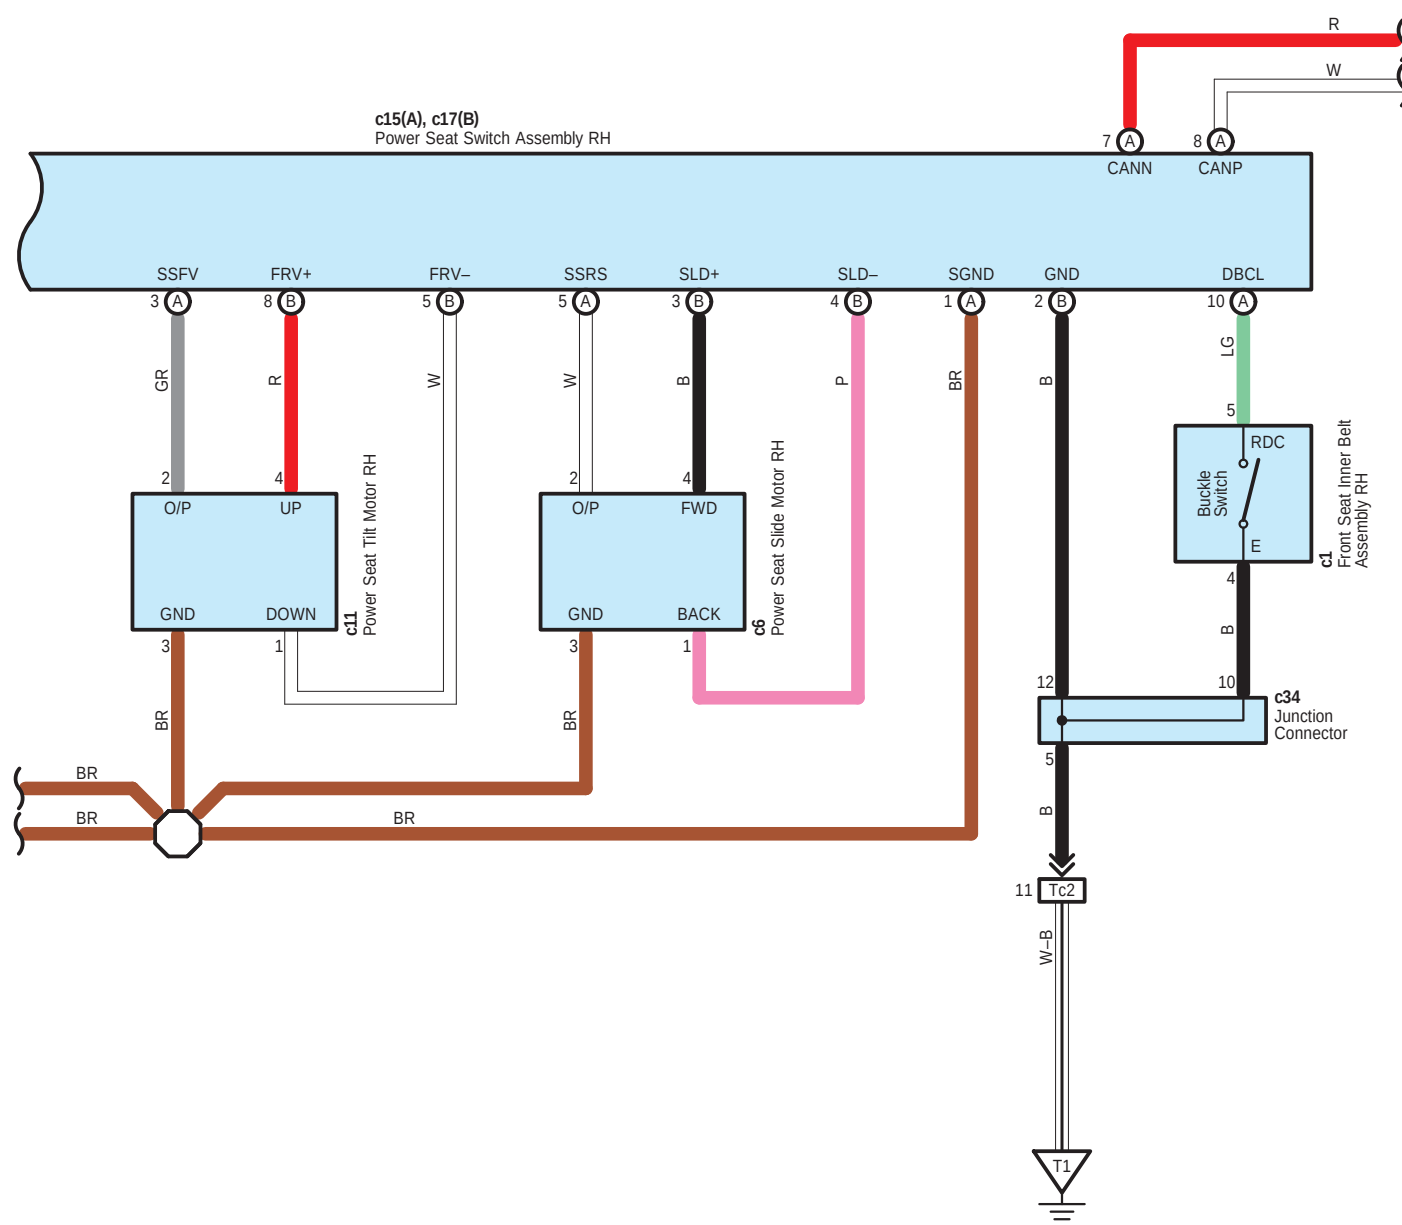


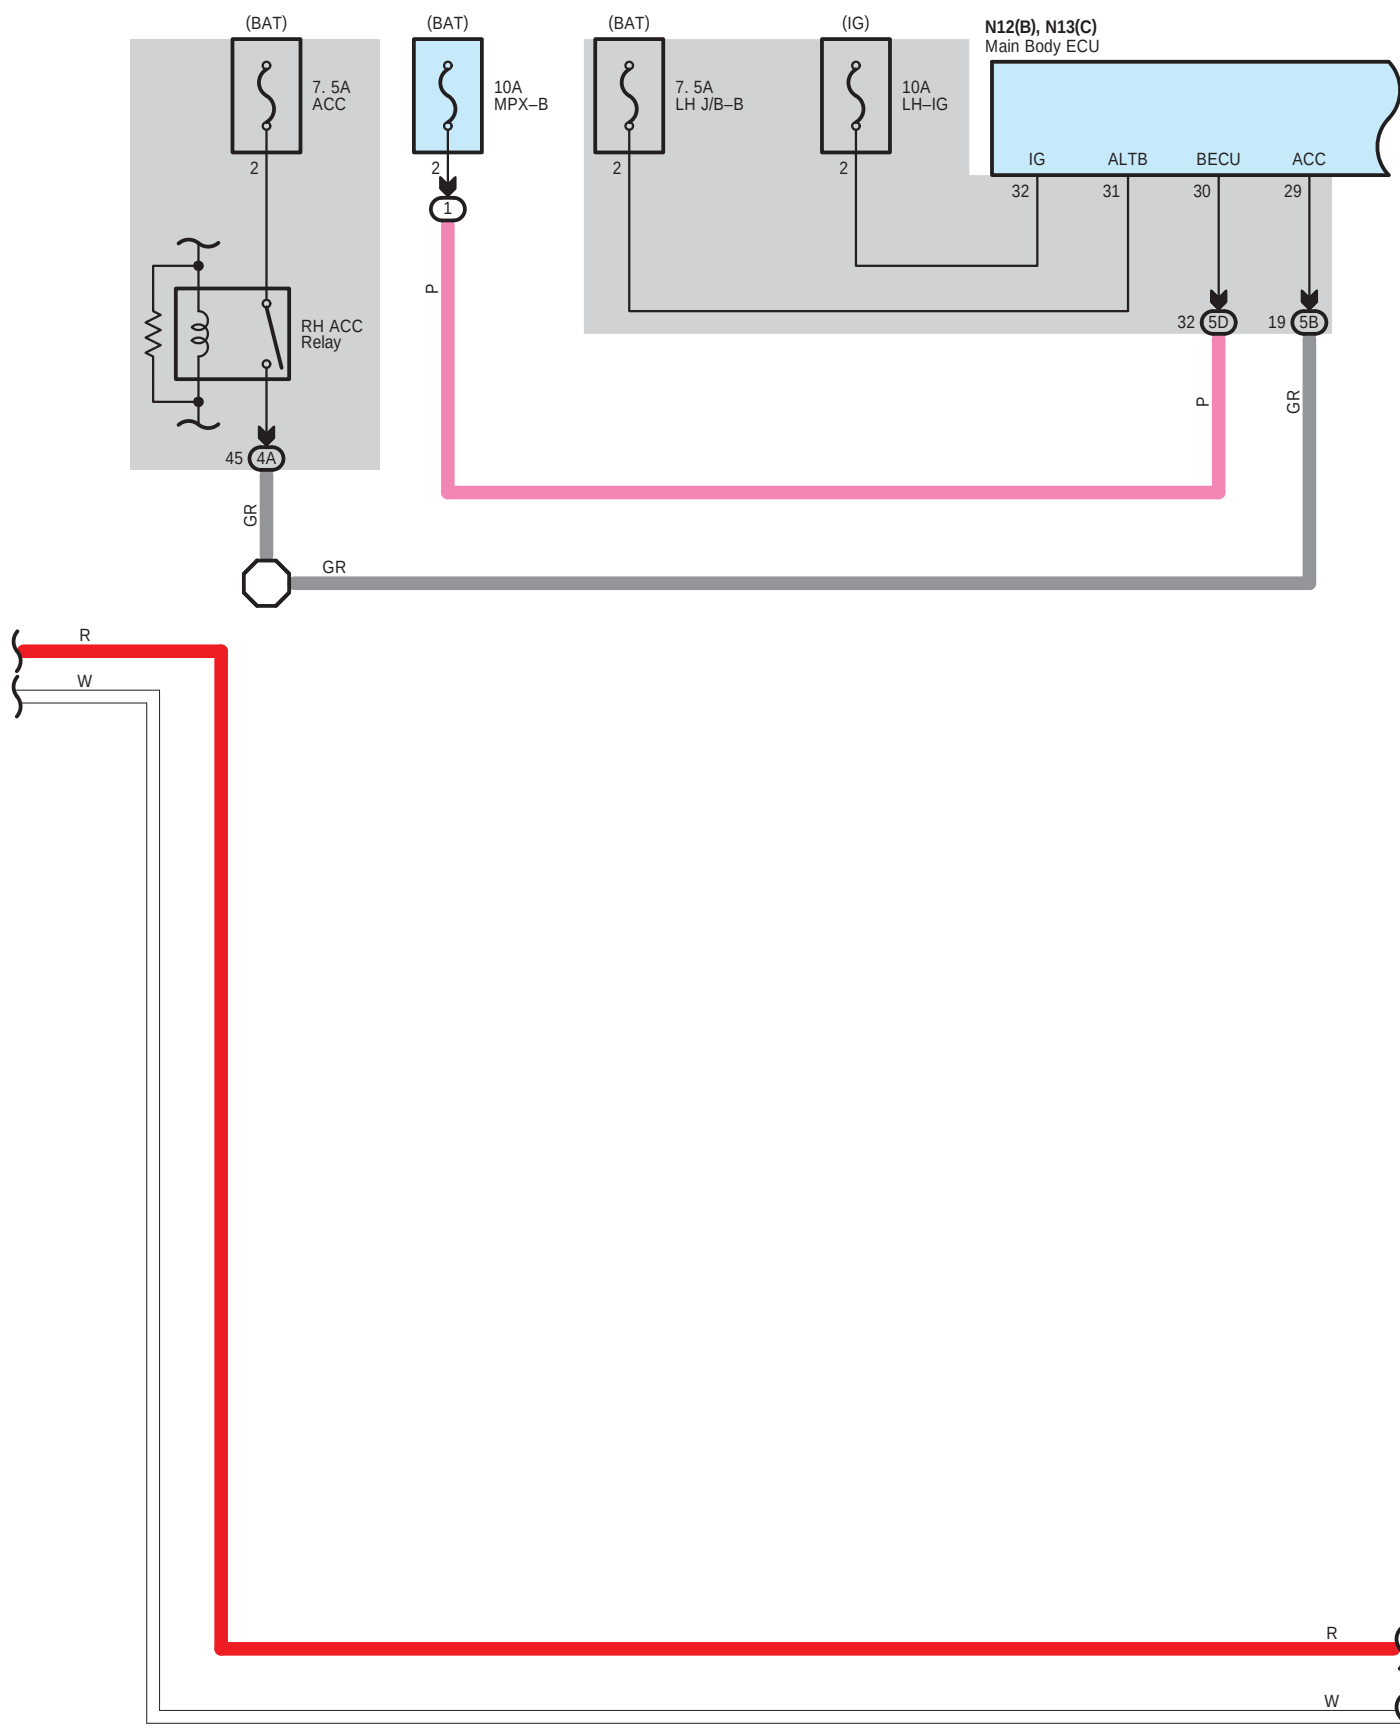

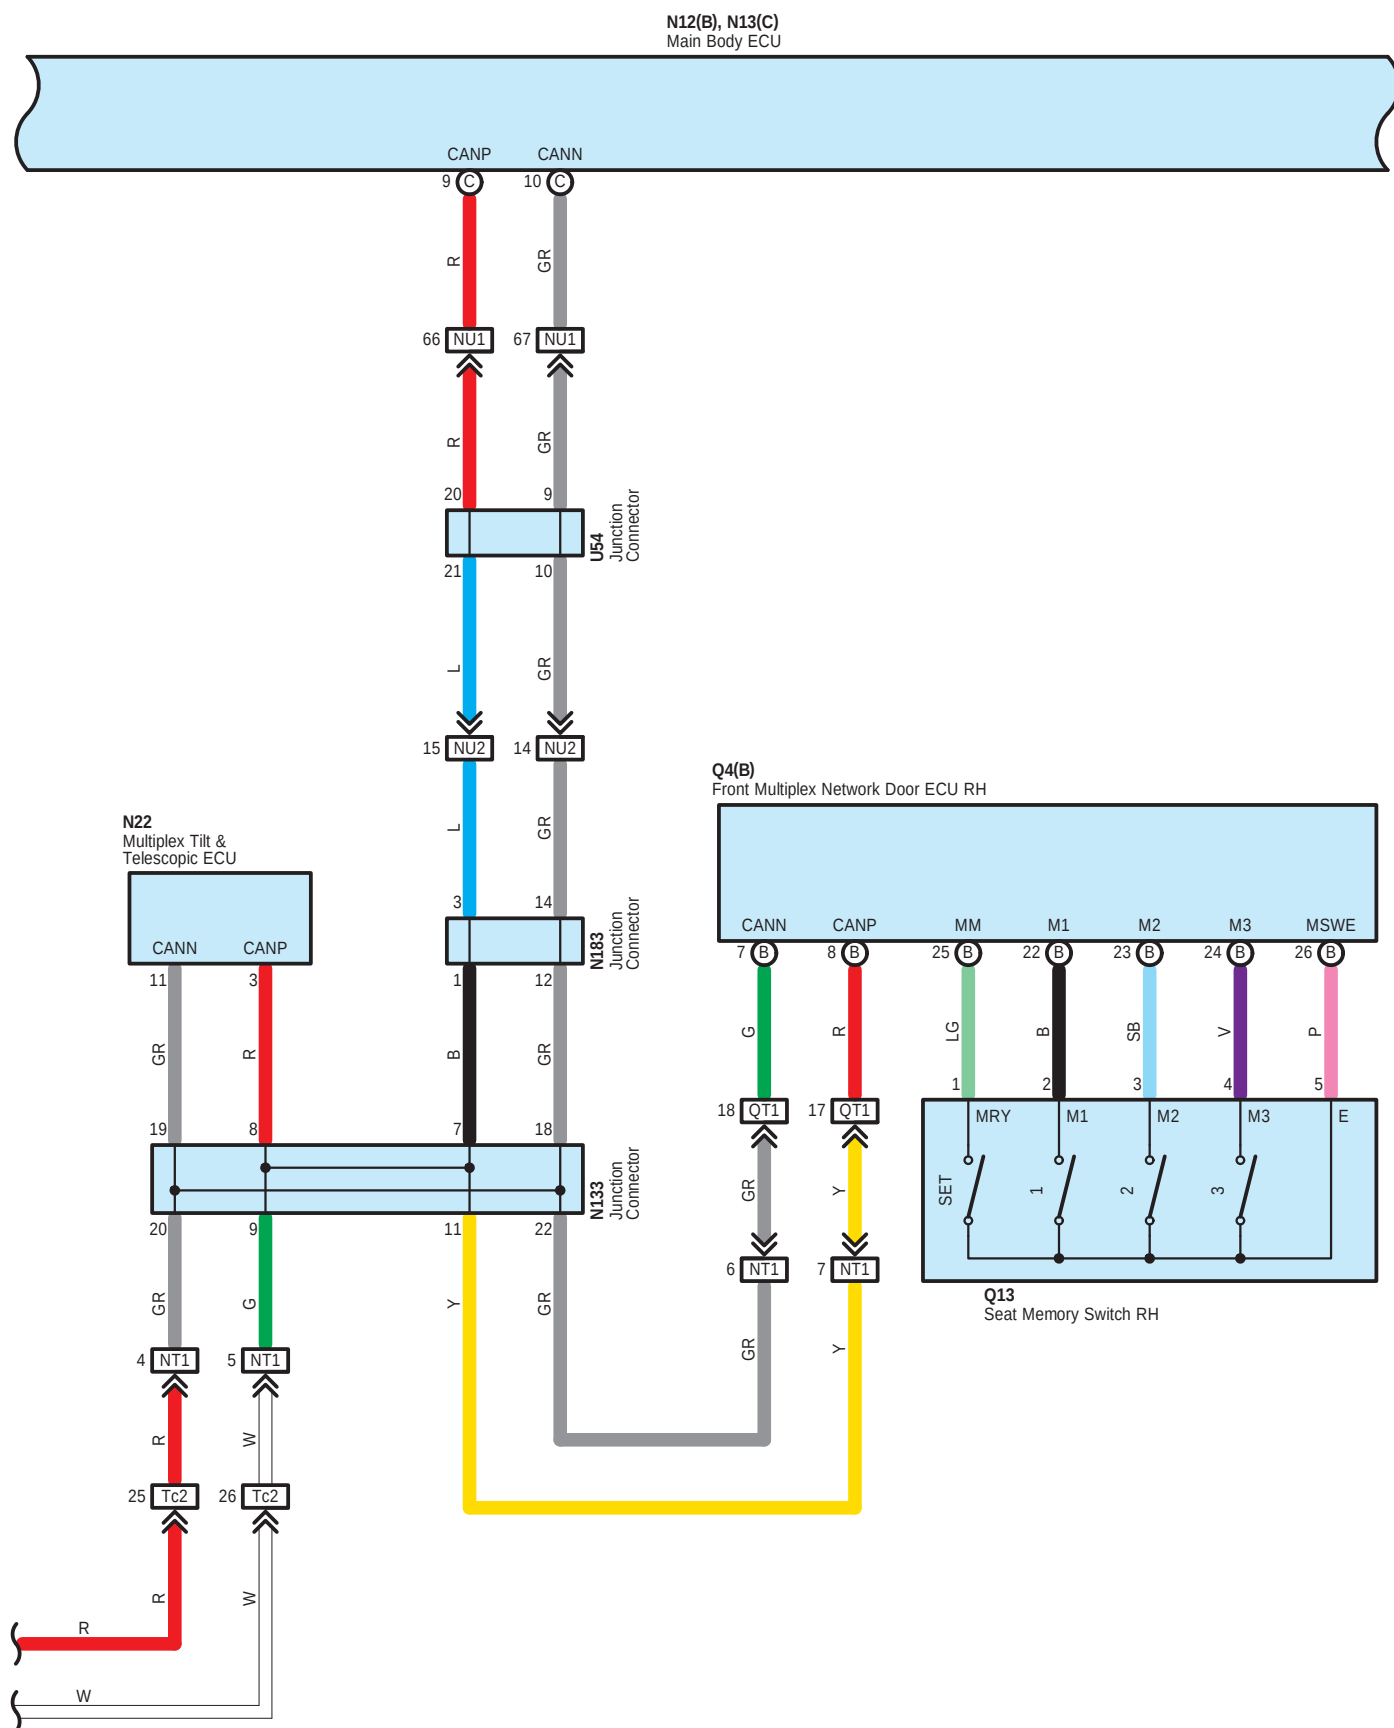


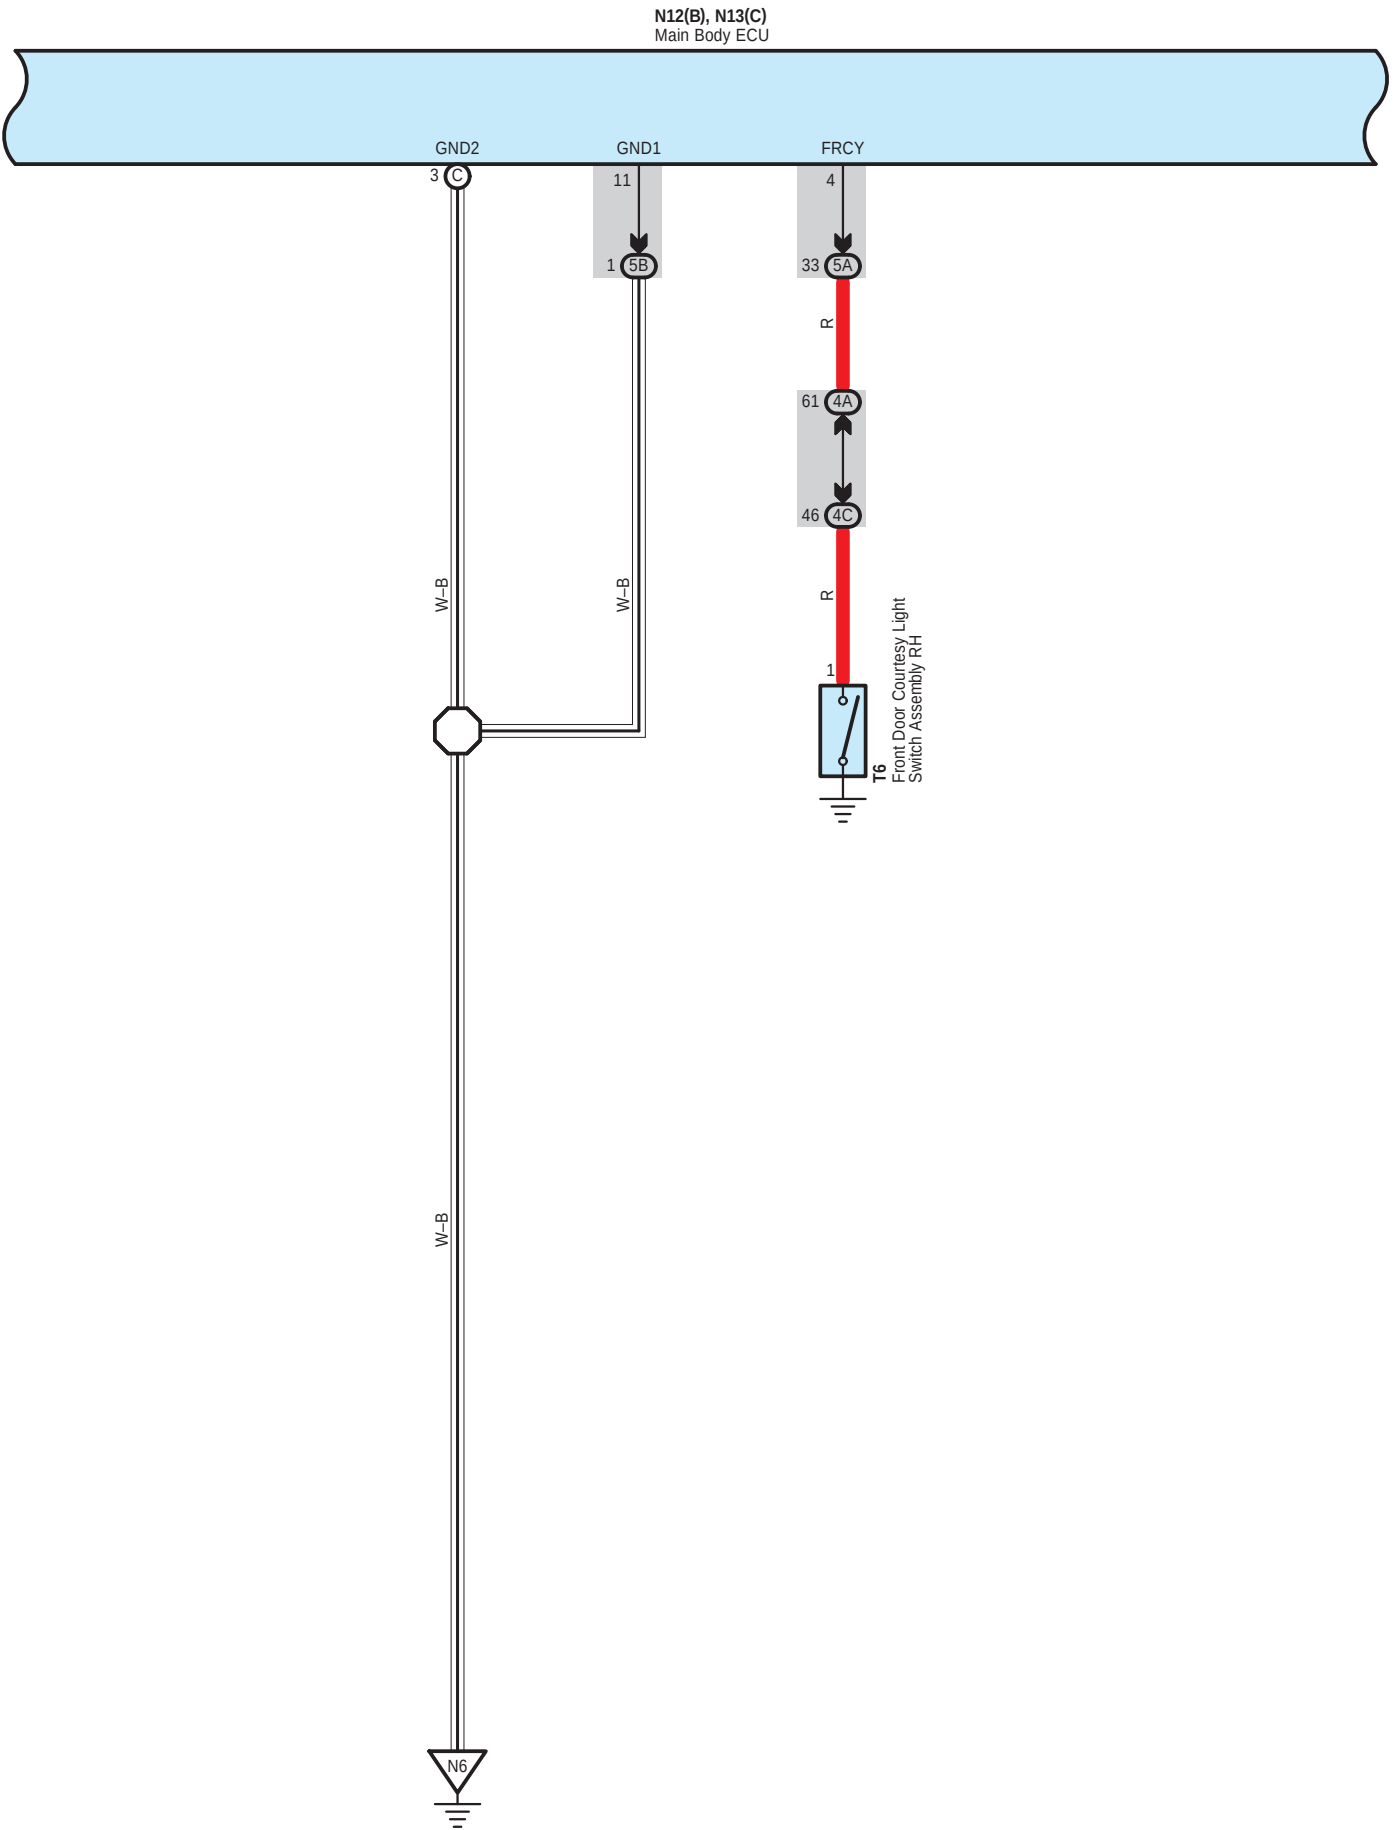

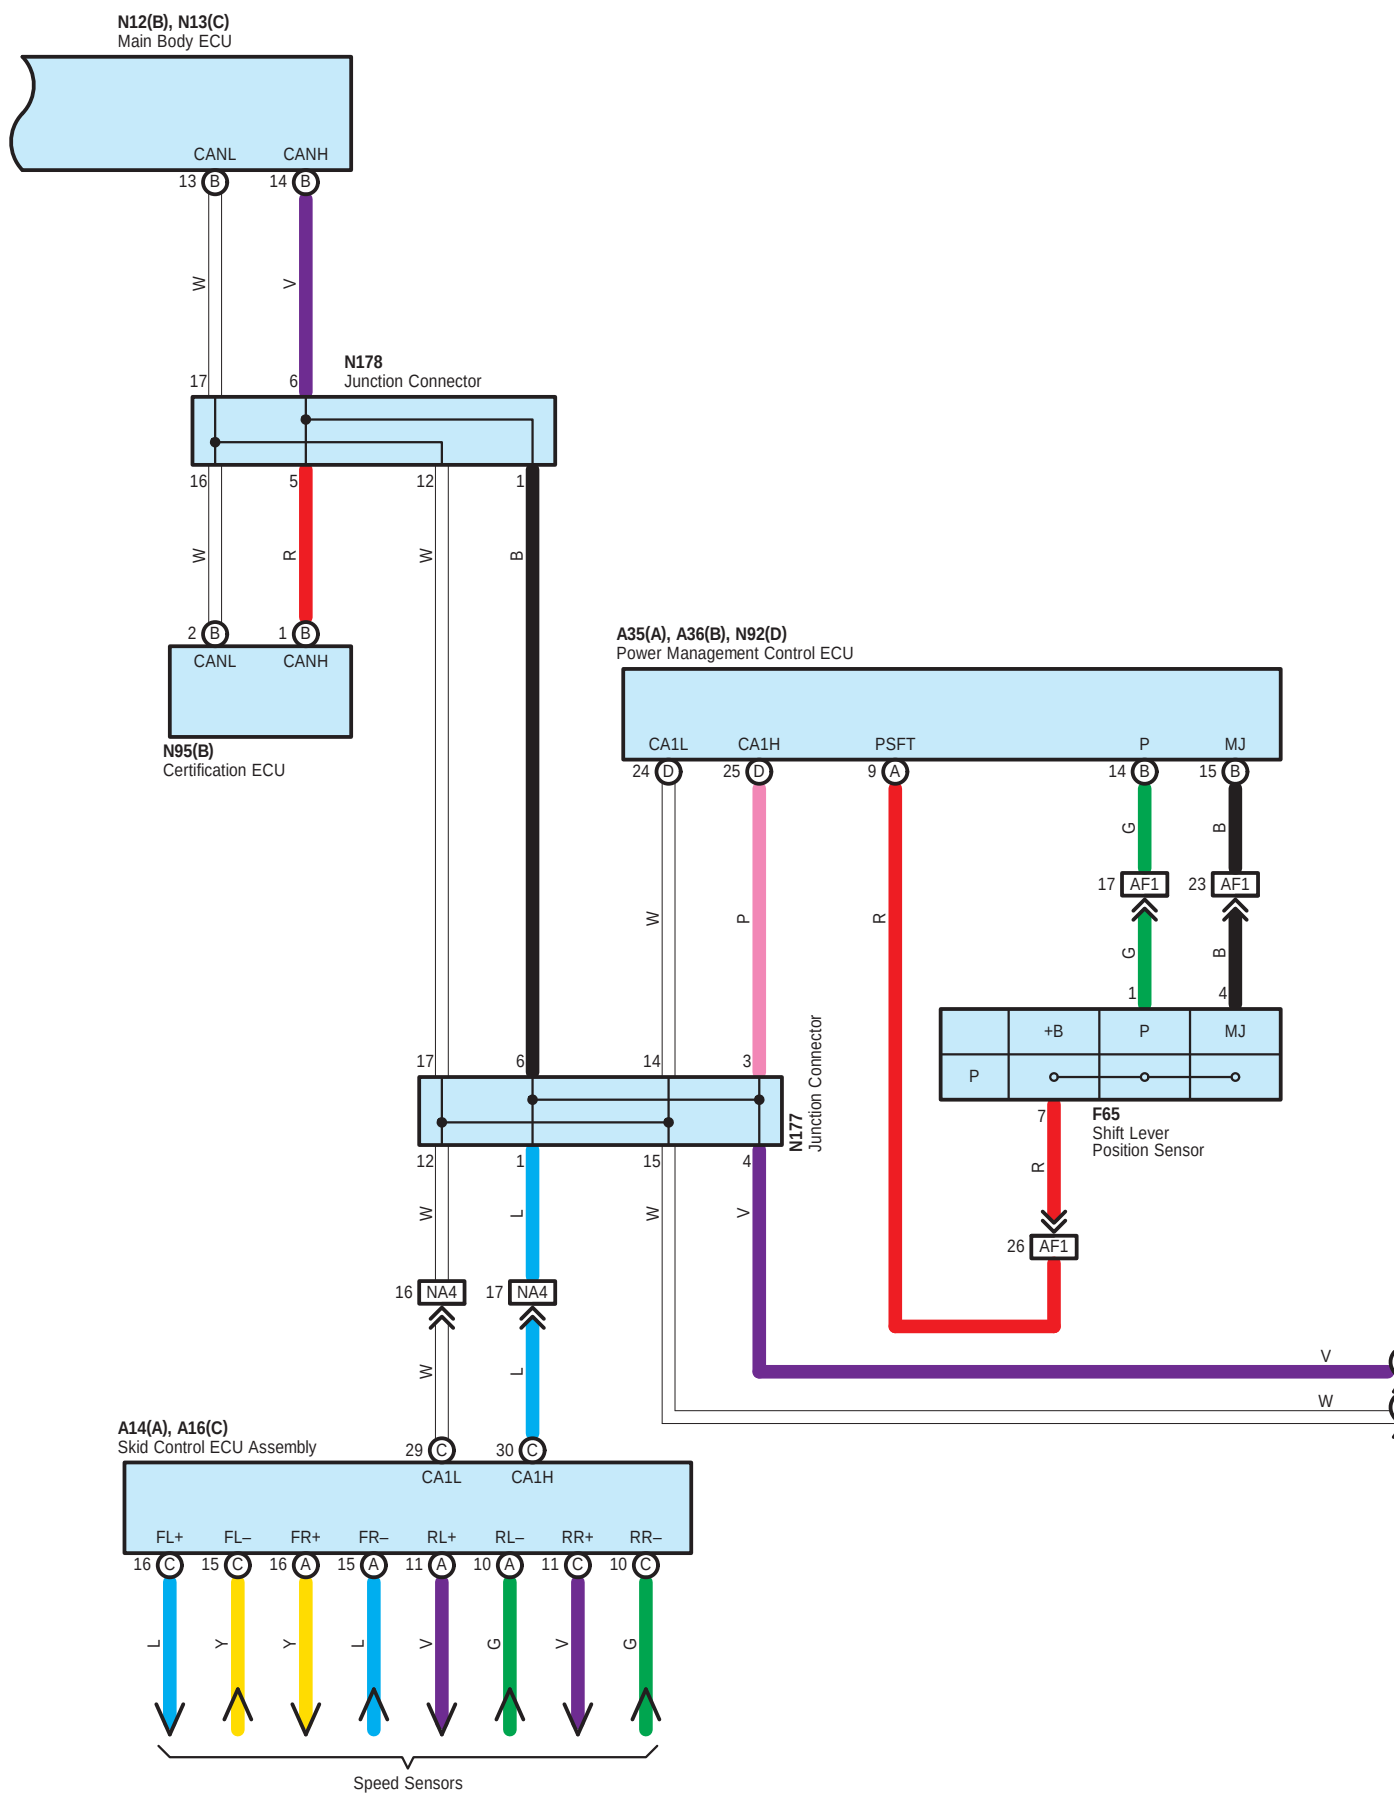


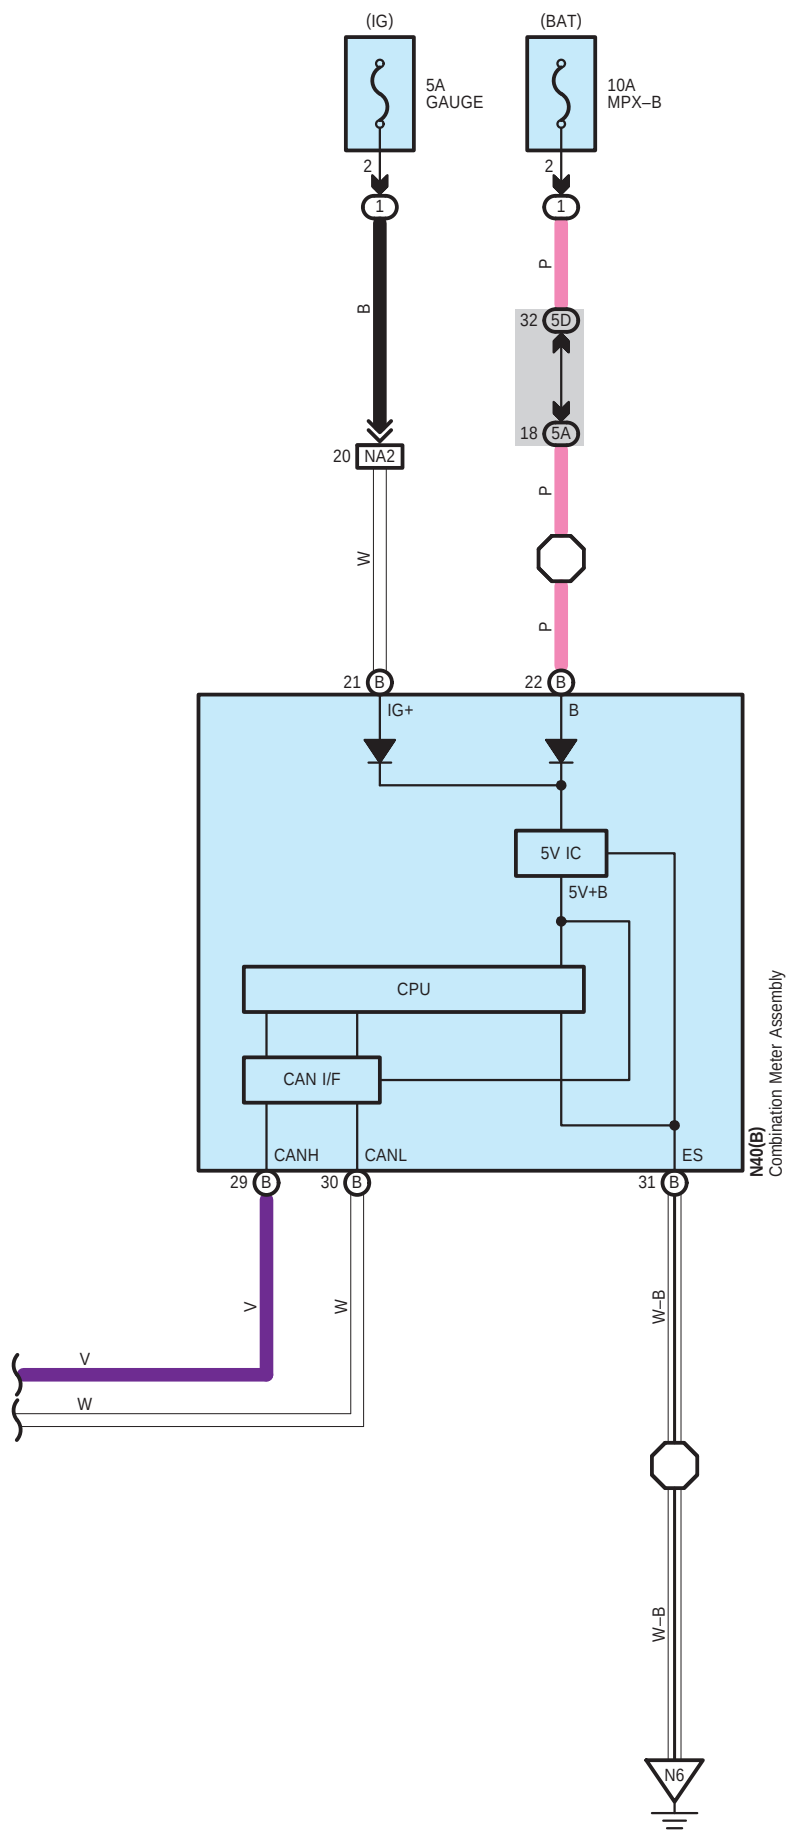


A 14
Black

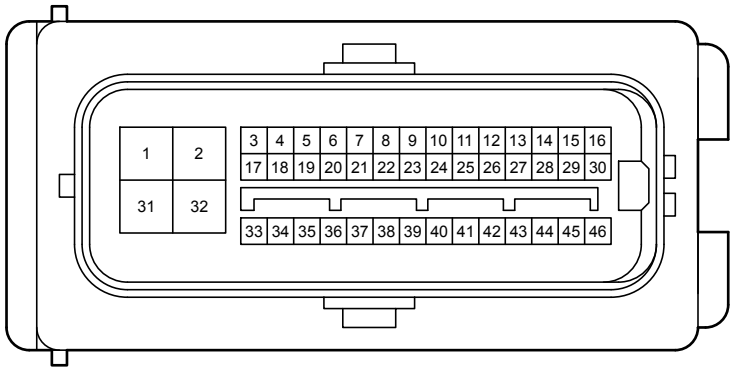


A 16
Gray

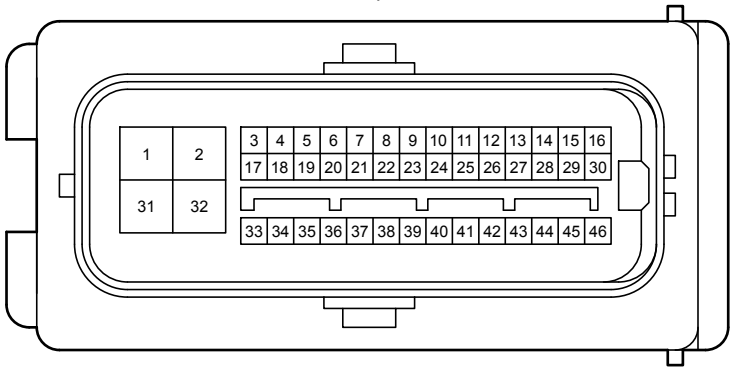


A 35
Gray

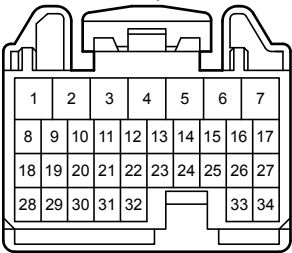


A 36
Gray

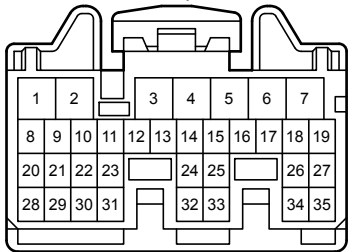


F 65
Gray

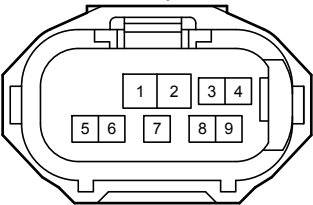


N 12
White

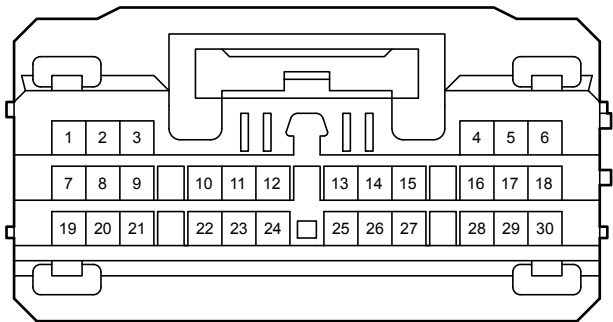


N 13
White

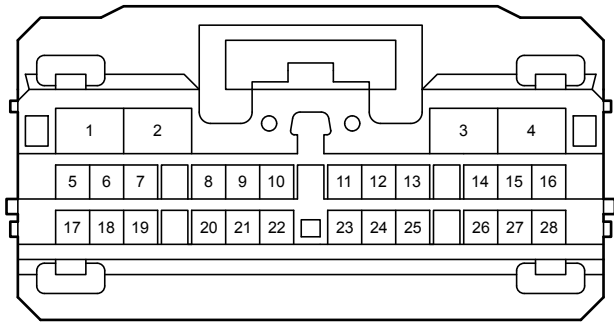


N 22
Black

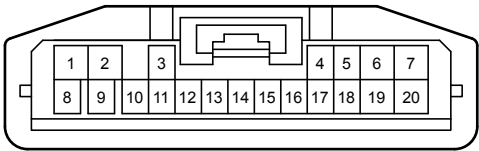


N 40
Black

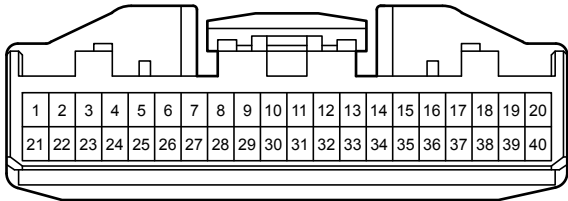


N 92
Gray

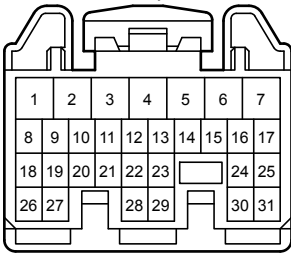


N 95
White

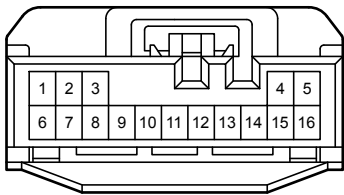


N133
Black

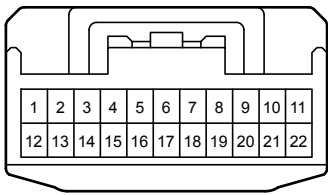


N177
Gray

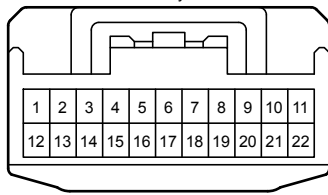


N178
Gray

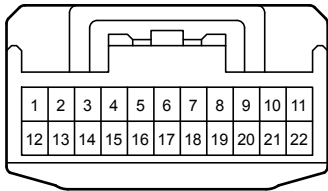


N183
Blue

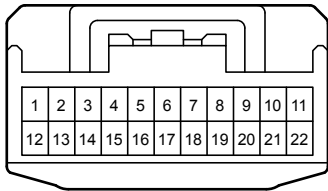

Q 4
White

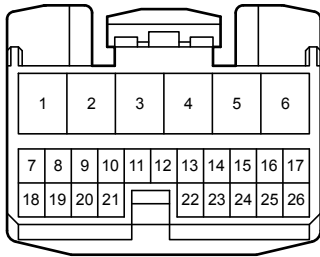


Q 13
White

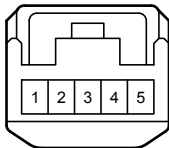


T 6
Black

















U 54
Blue

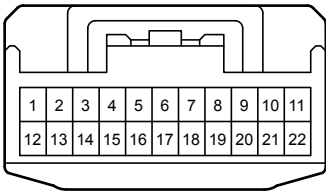


c 1
White

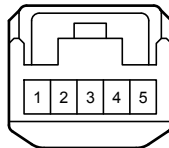


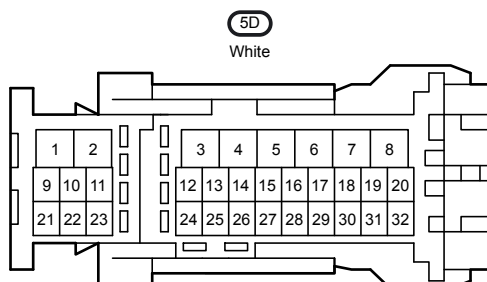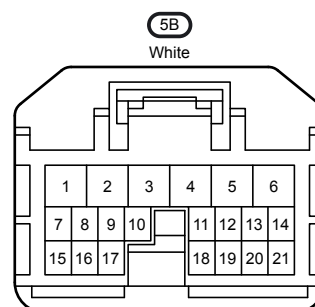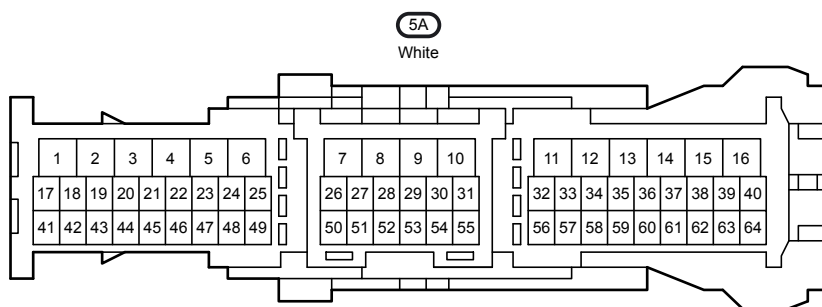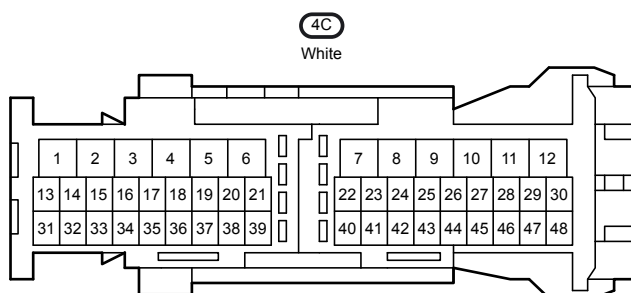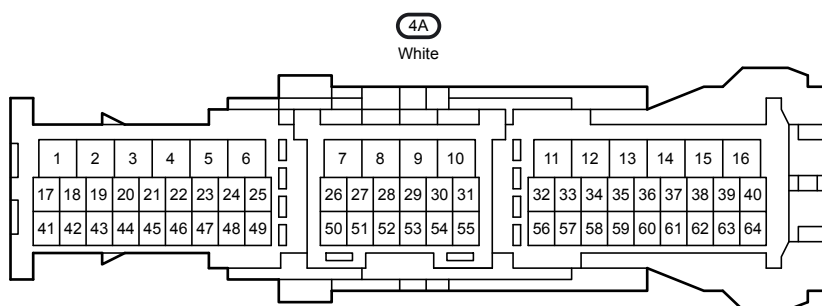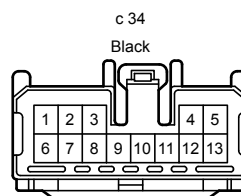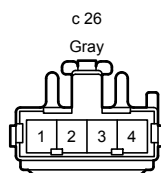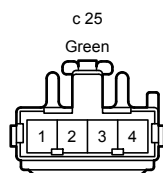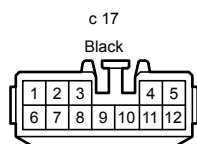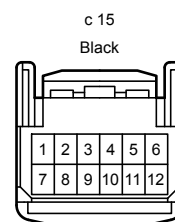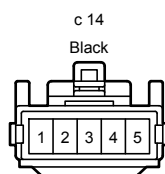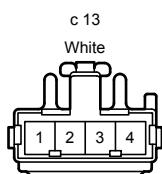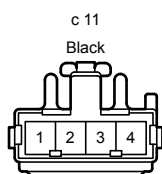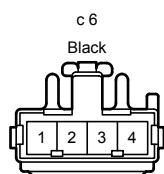


AF1
White

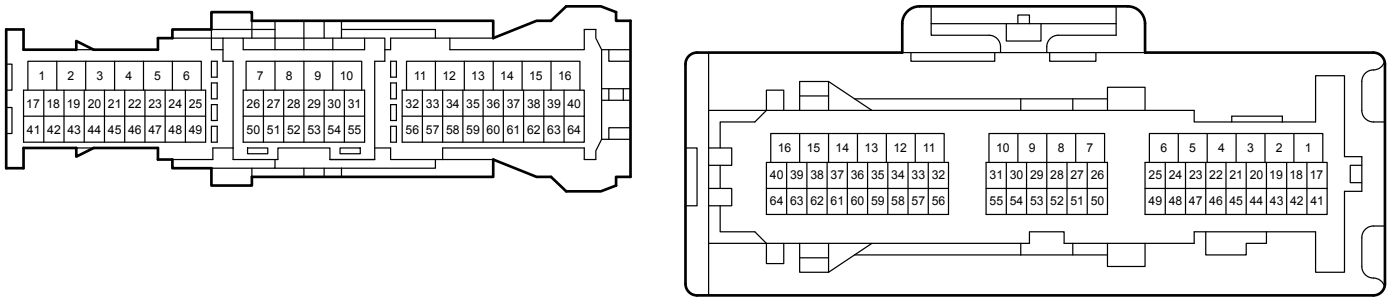


NA2
White

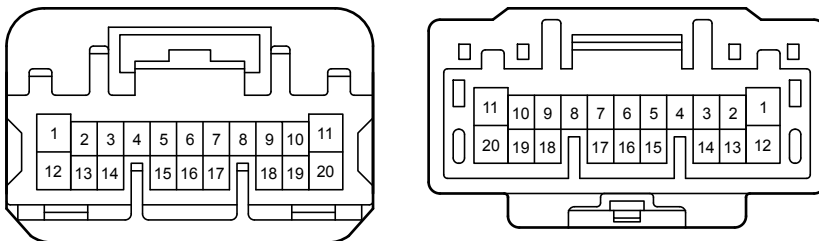



NA4
Gray

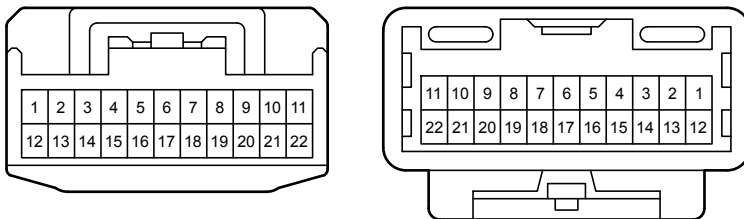



NT1
White

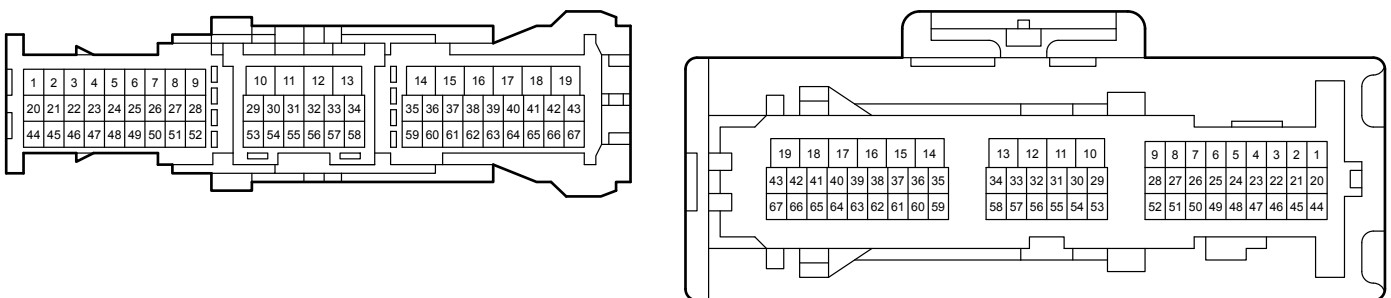



NU1
White

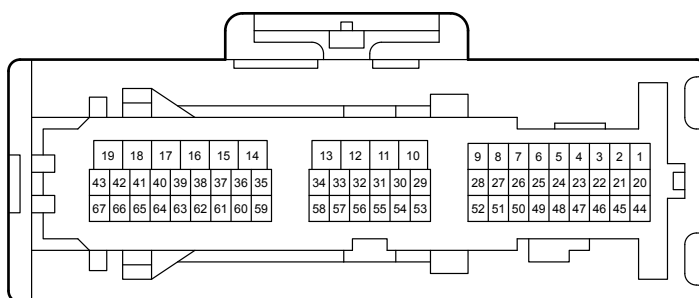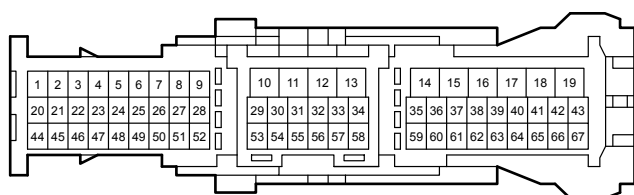

NU2
White

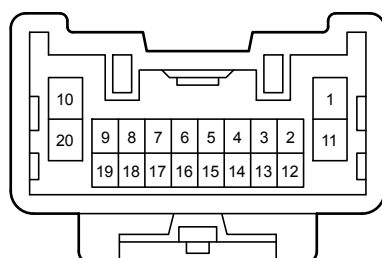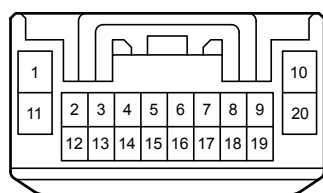

QT1
White

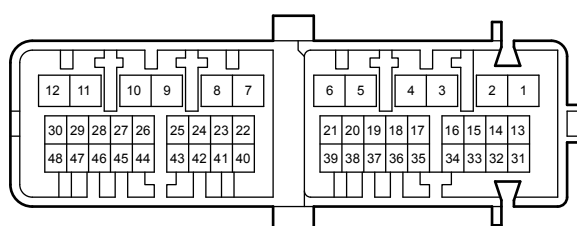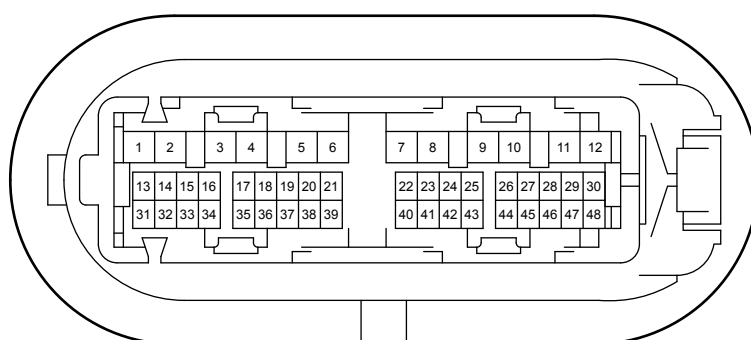

Tc2
White

