






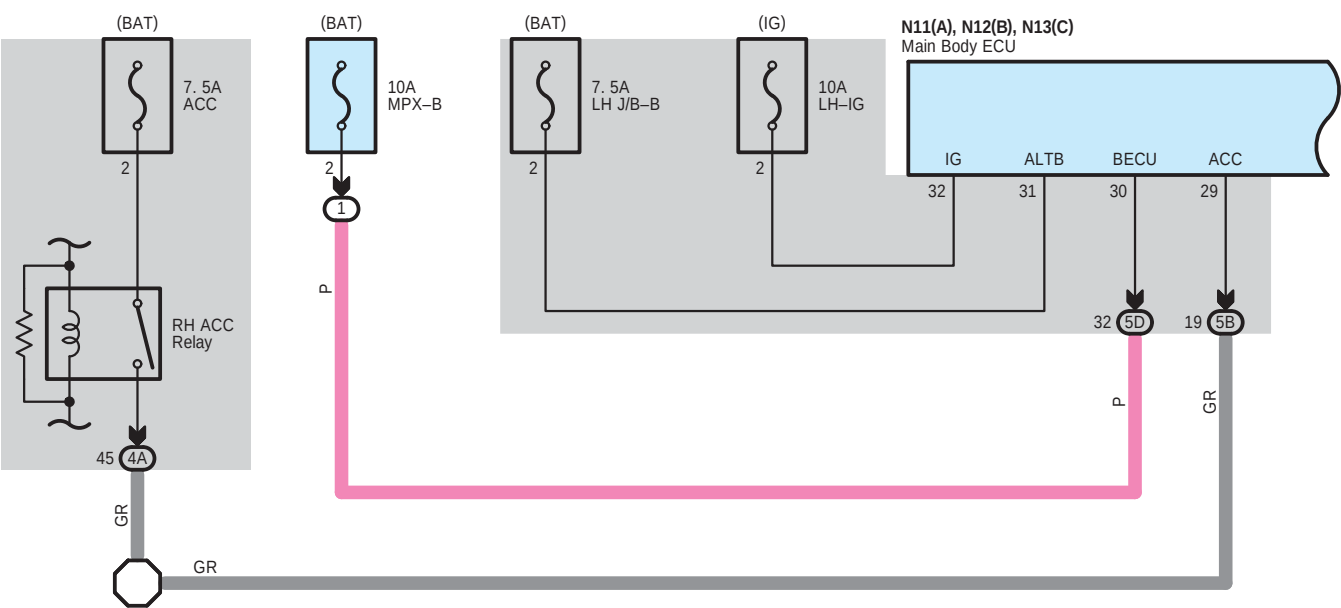


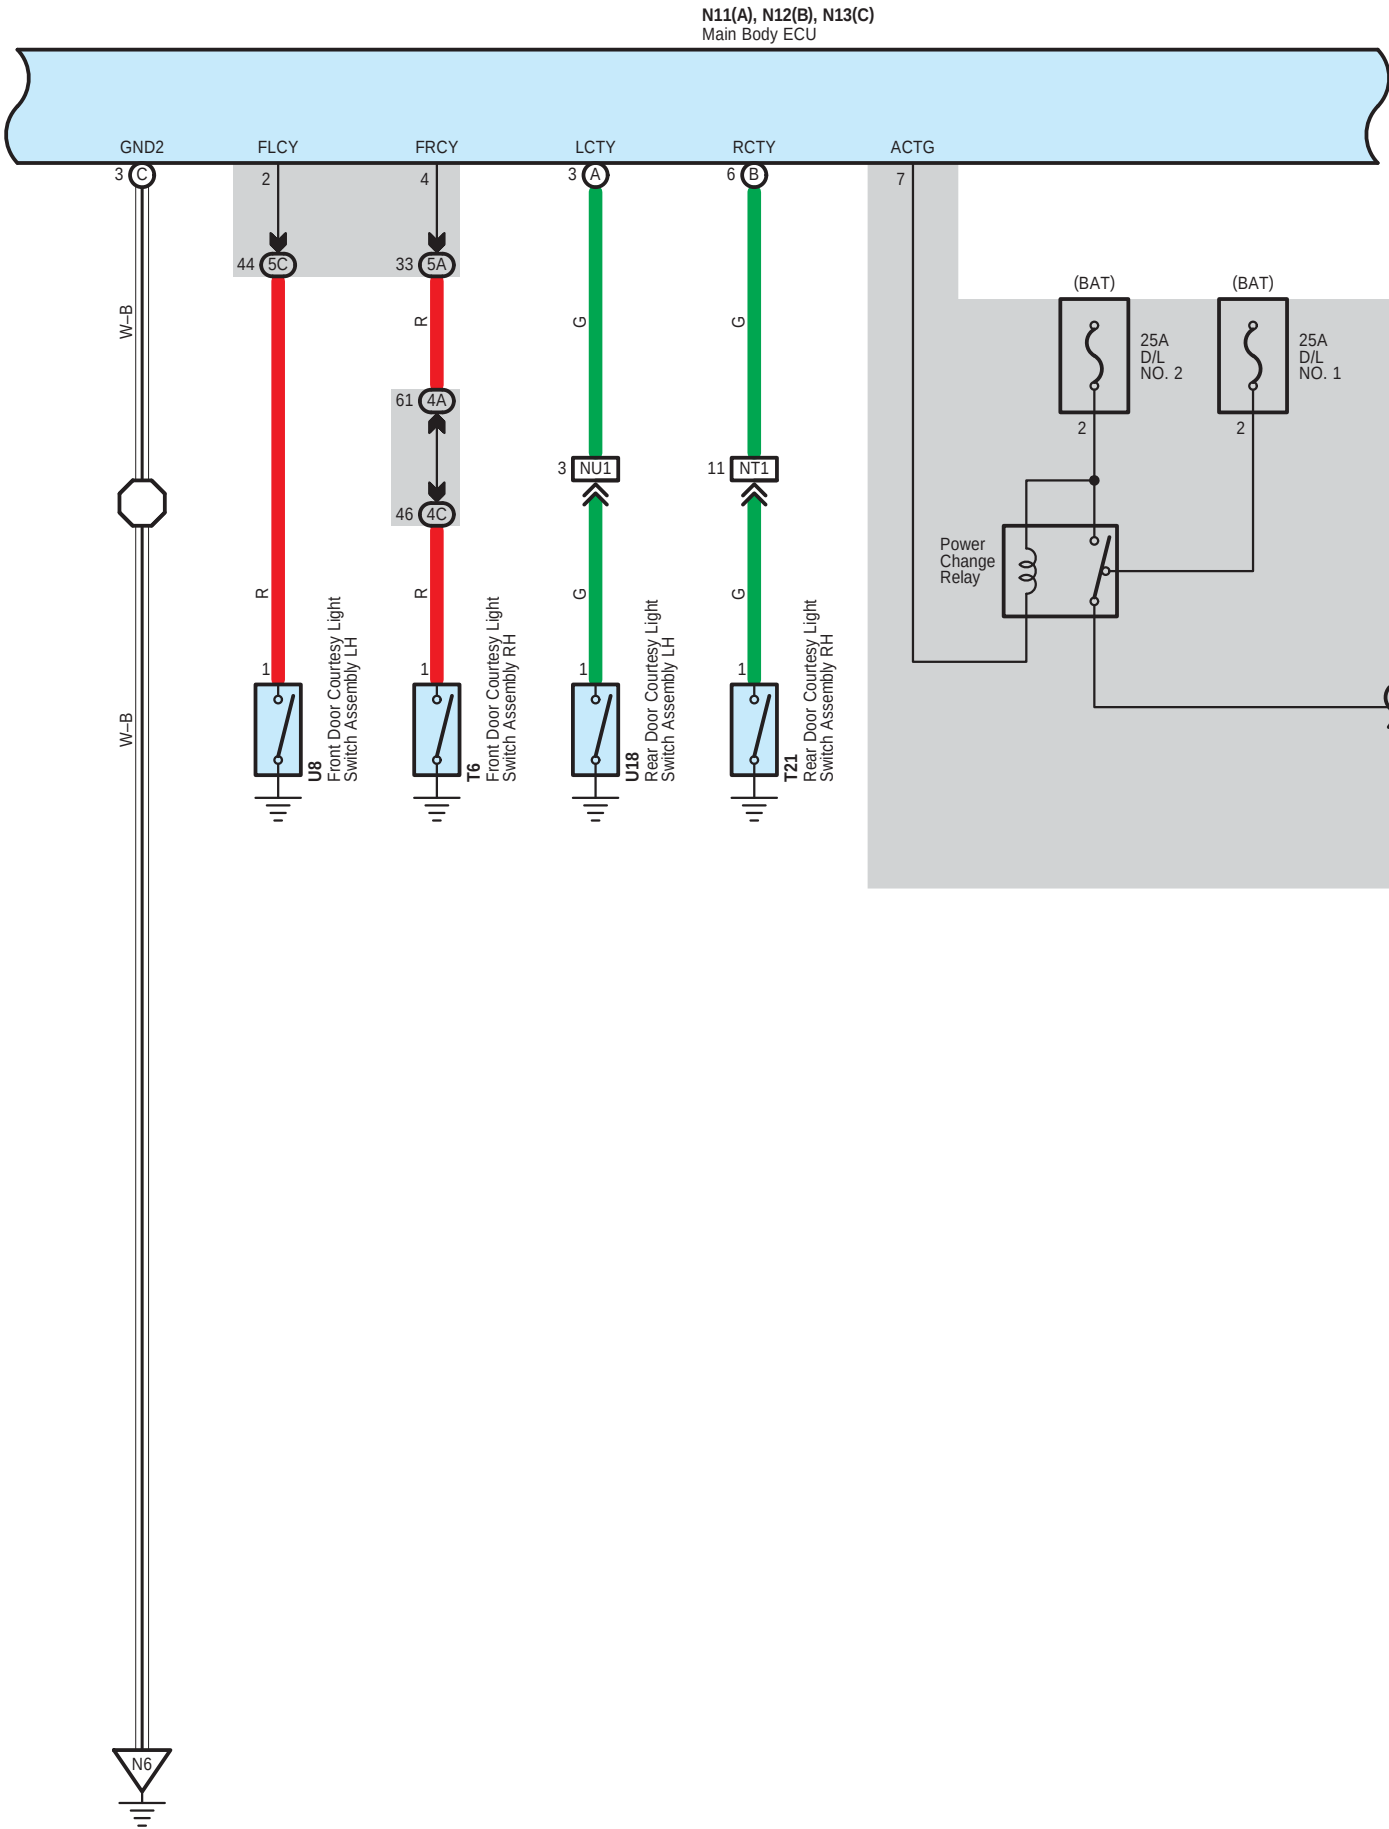


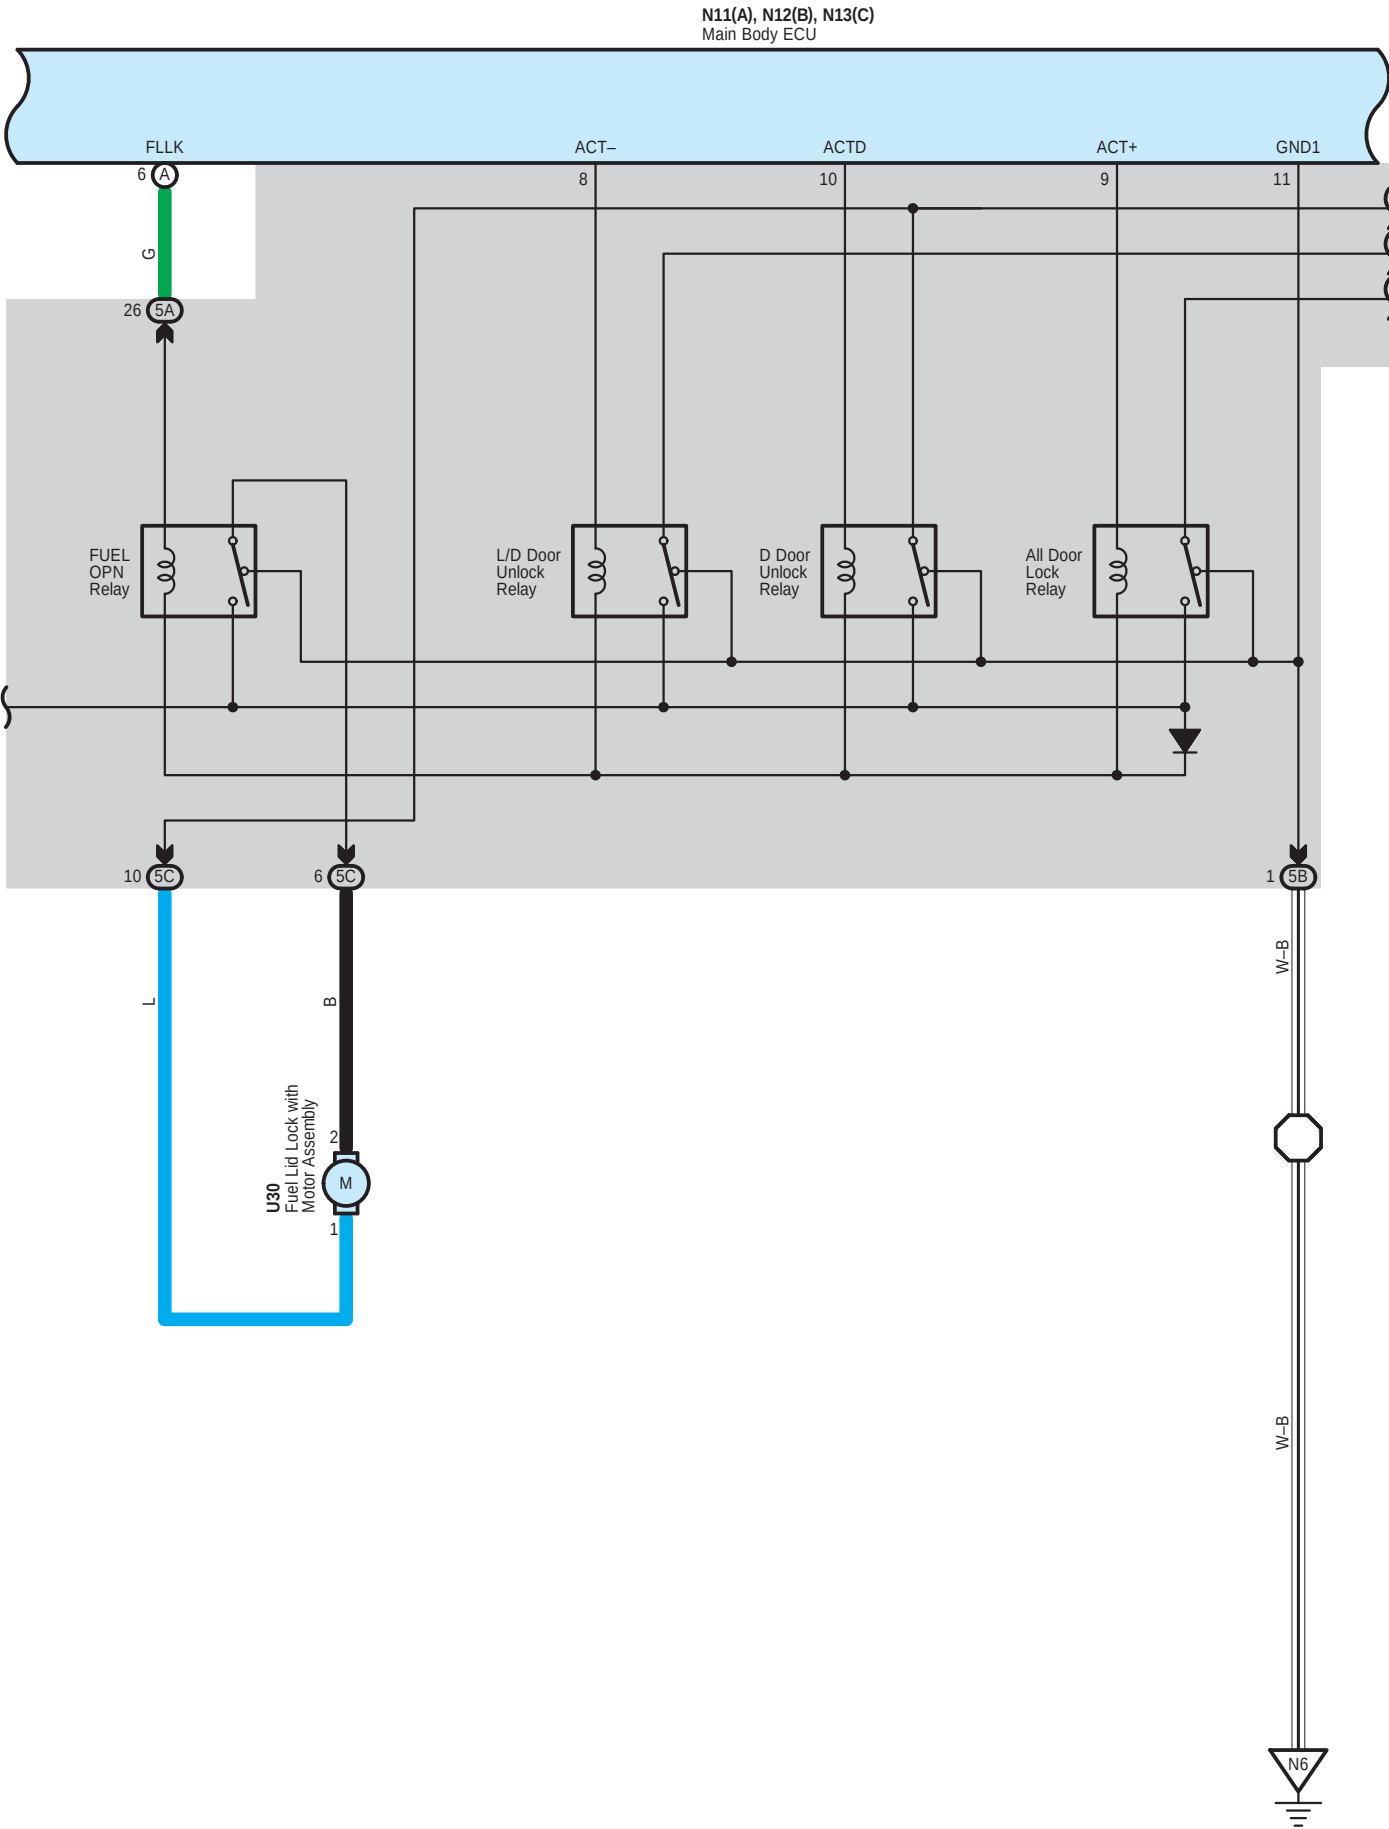


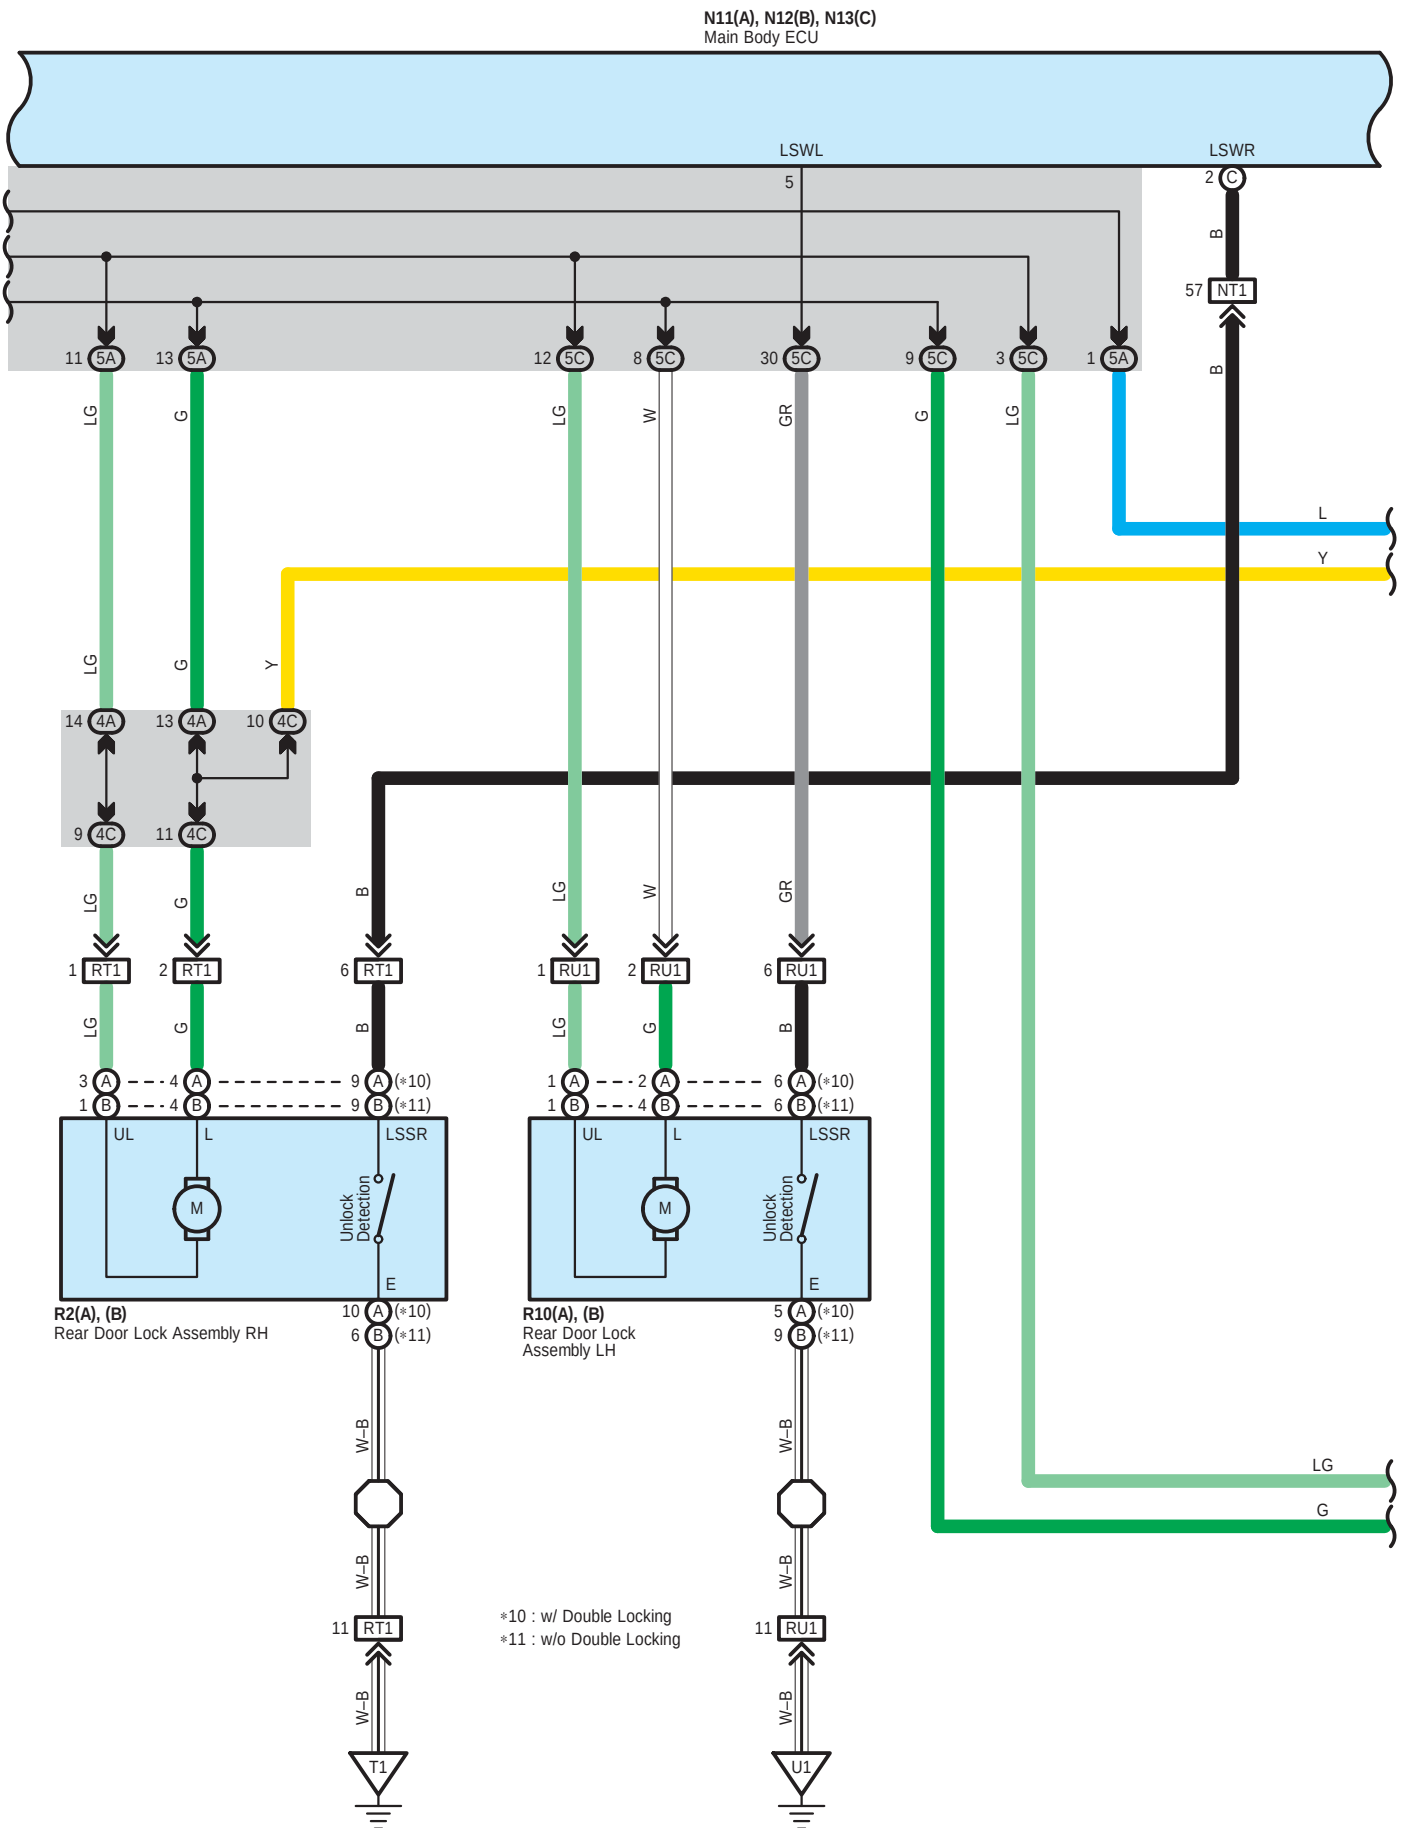


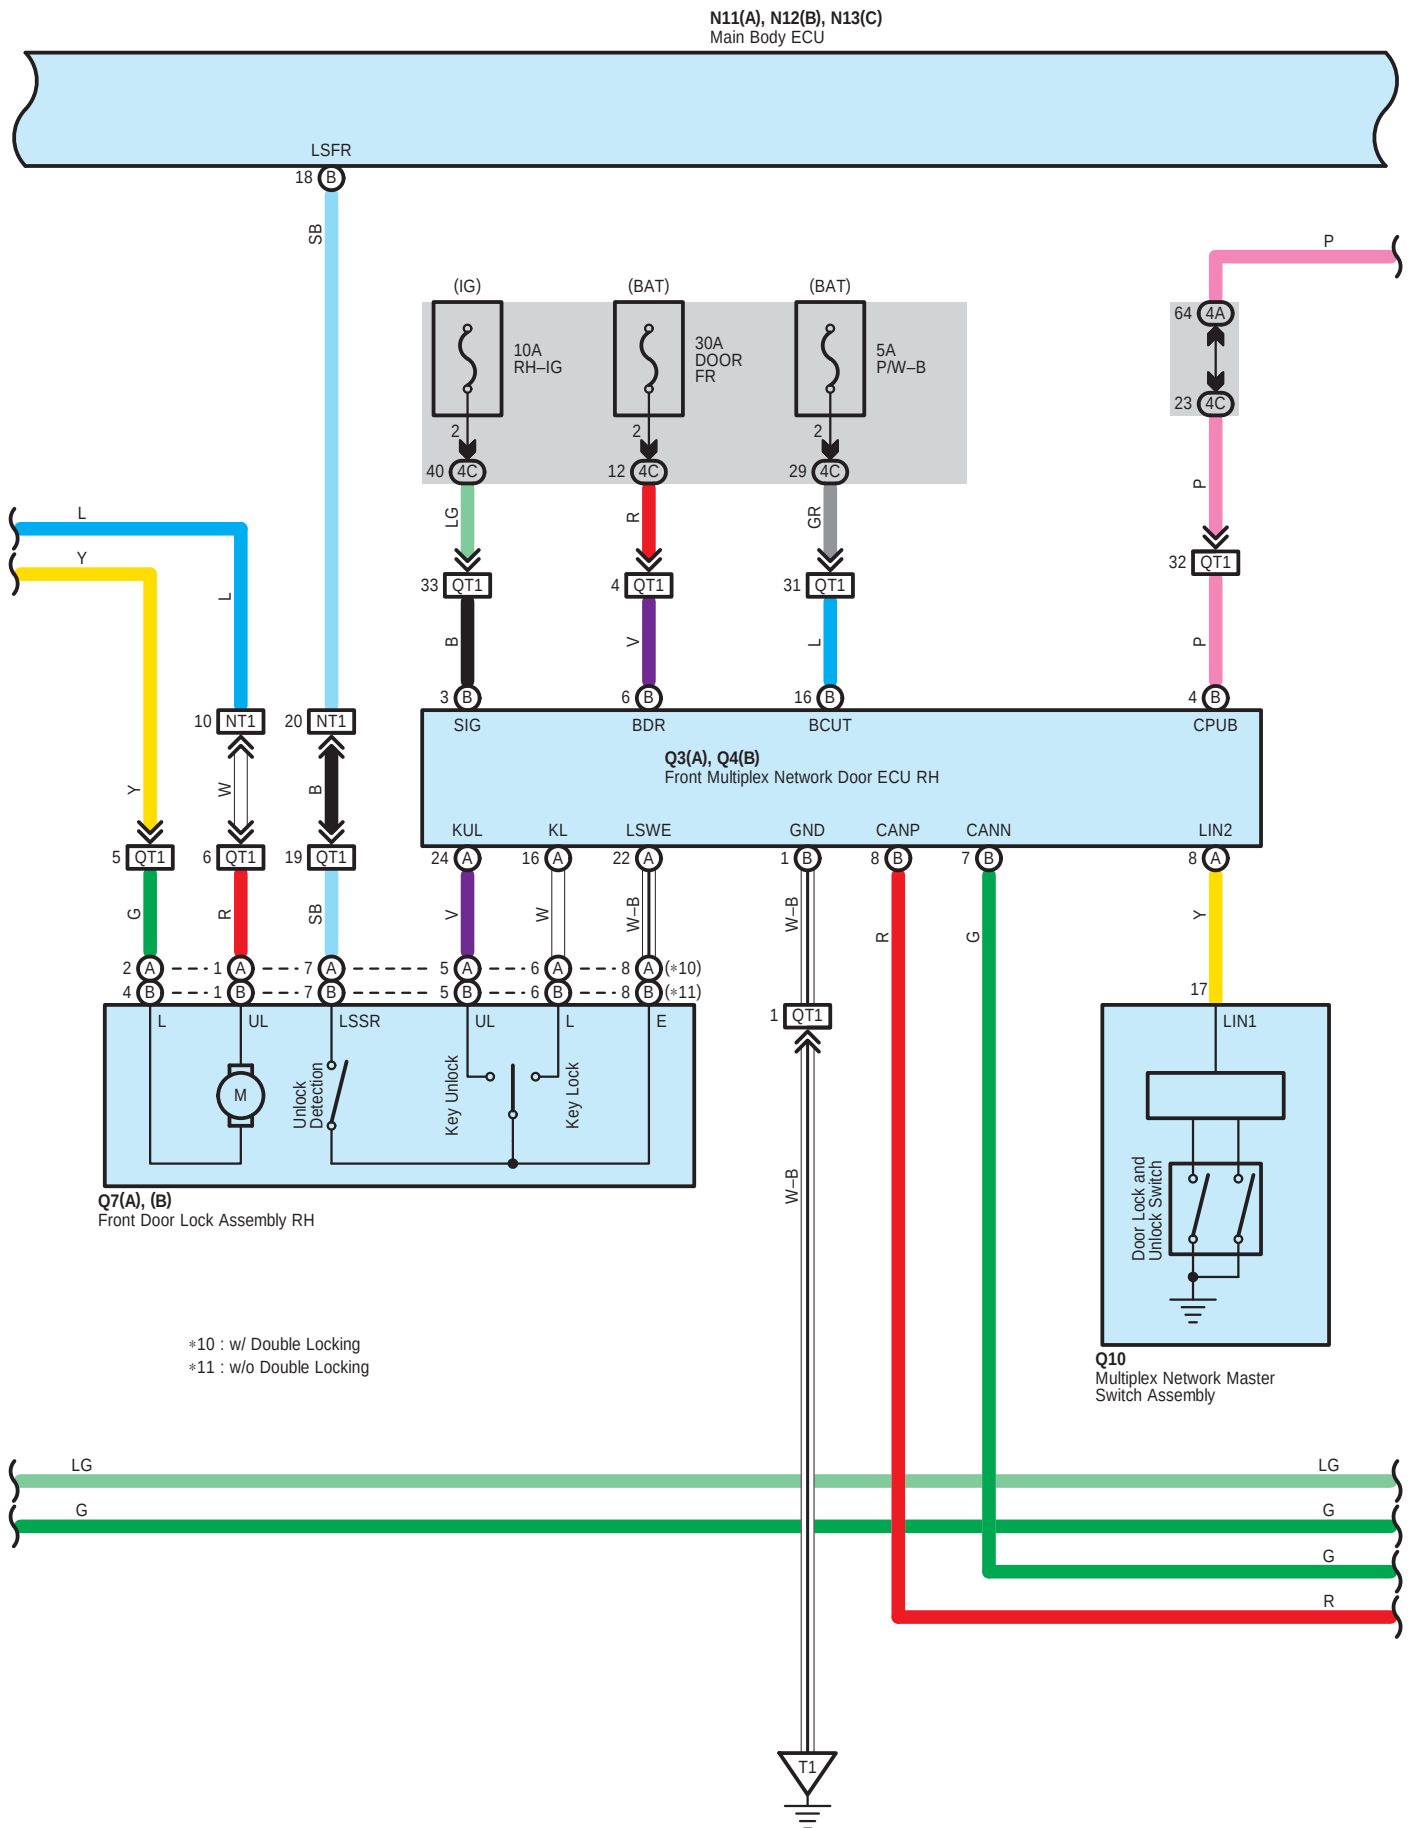

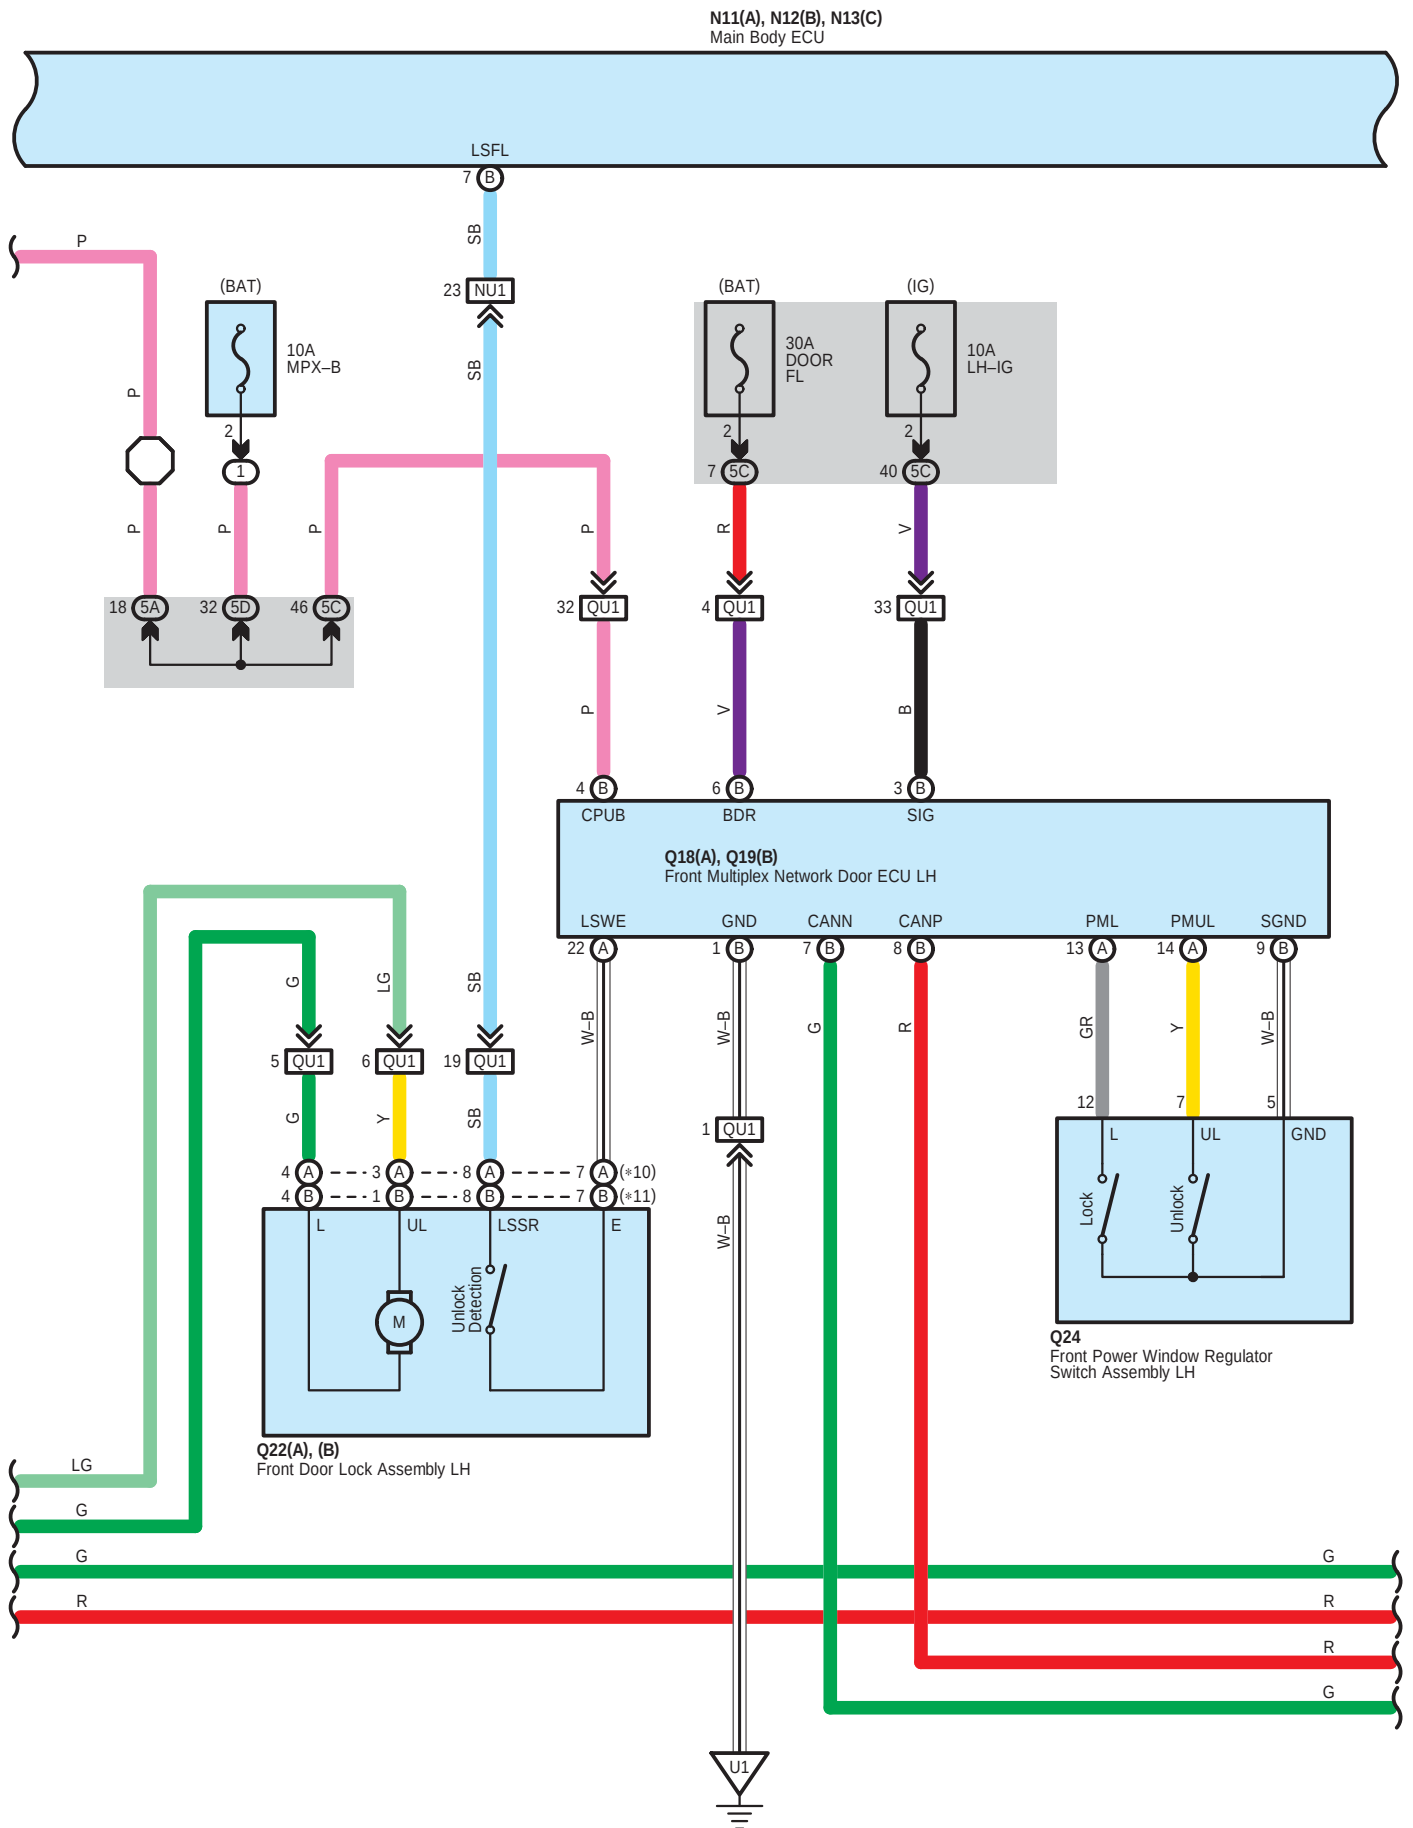


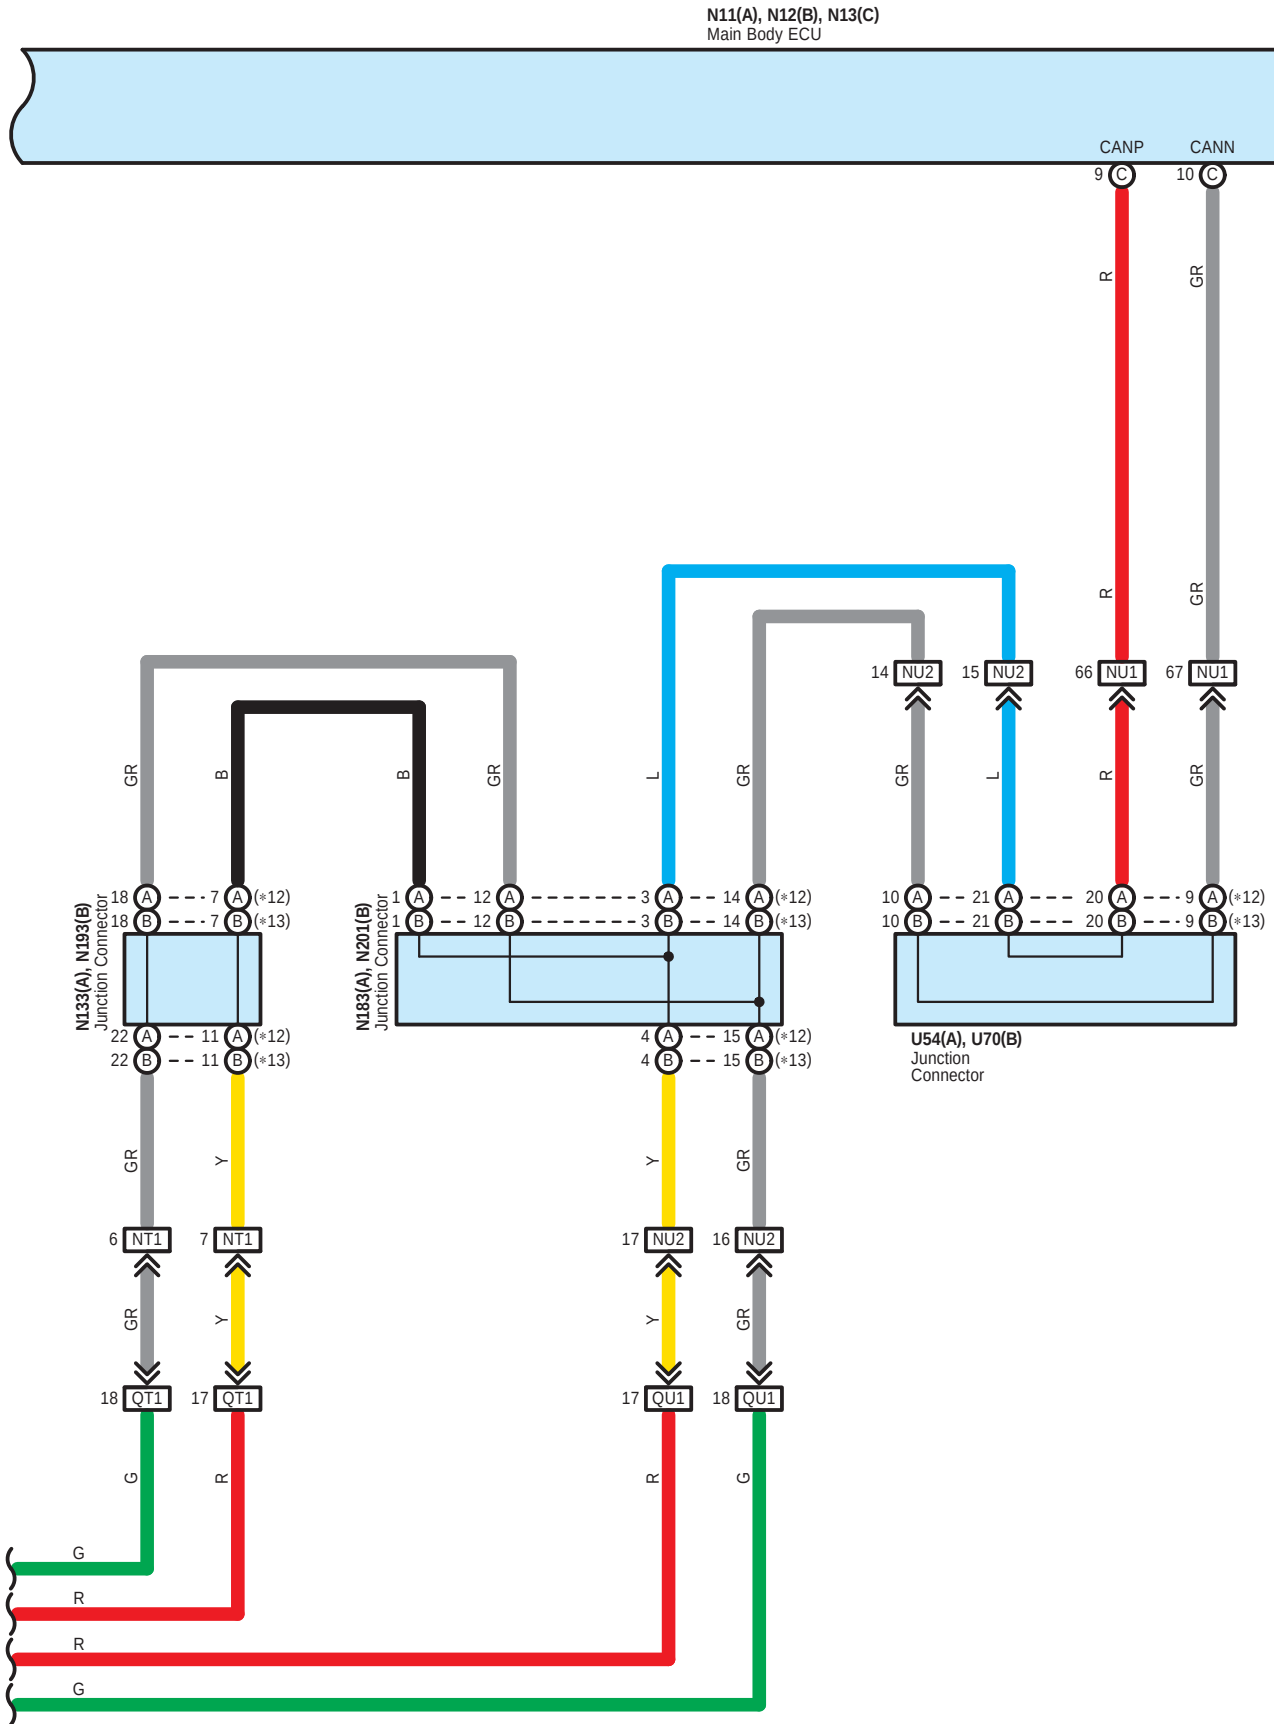

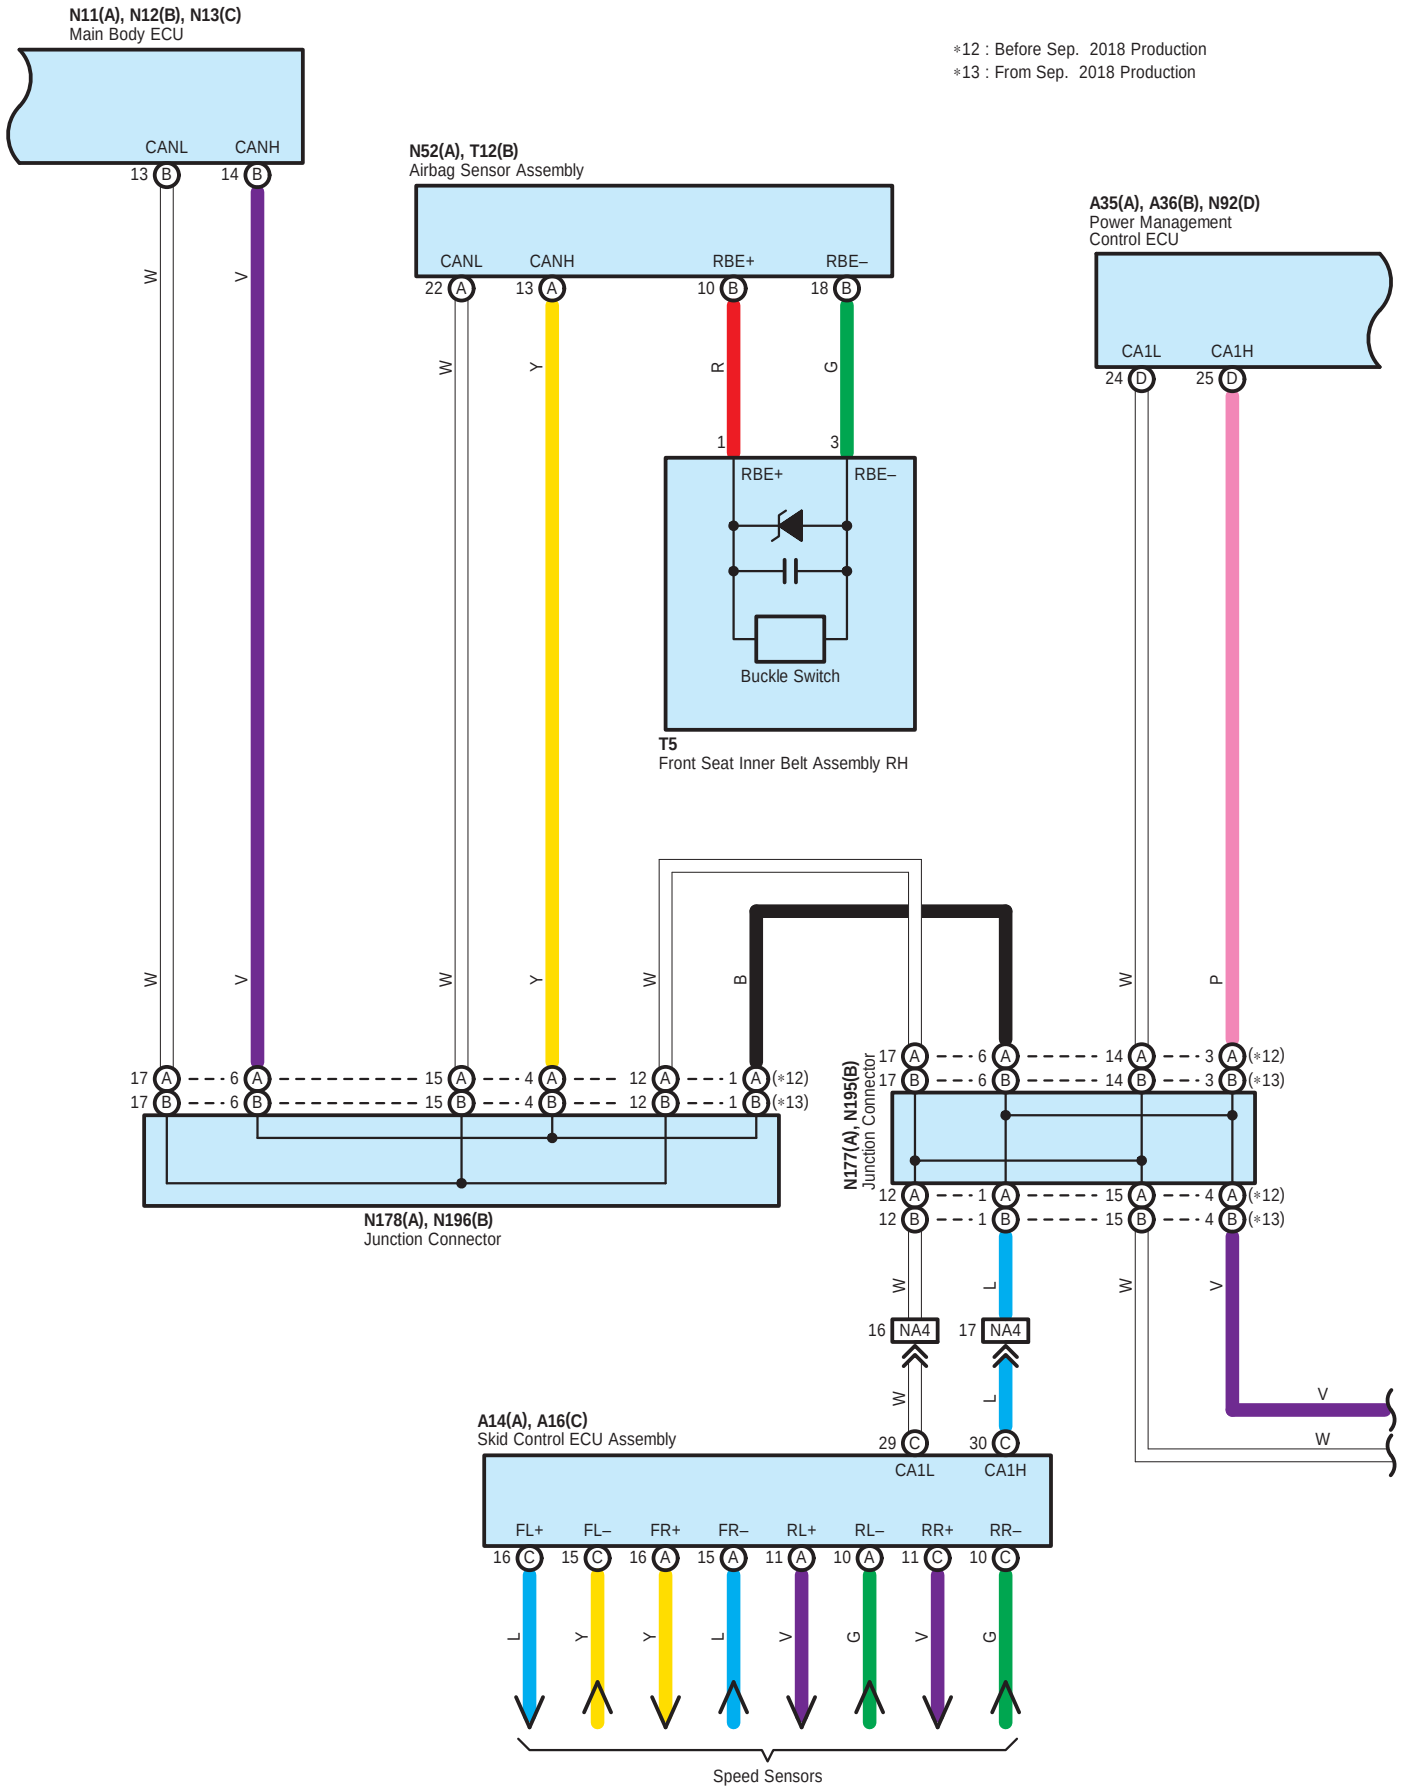


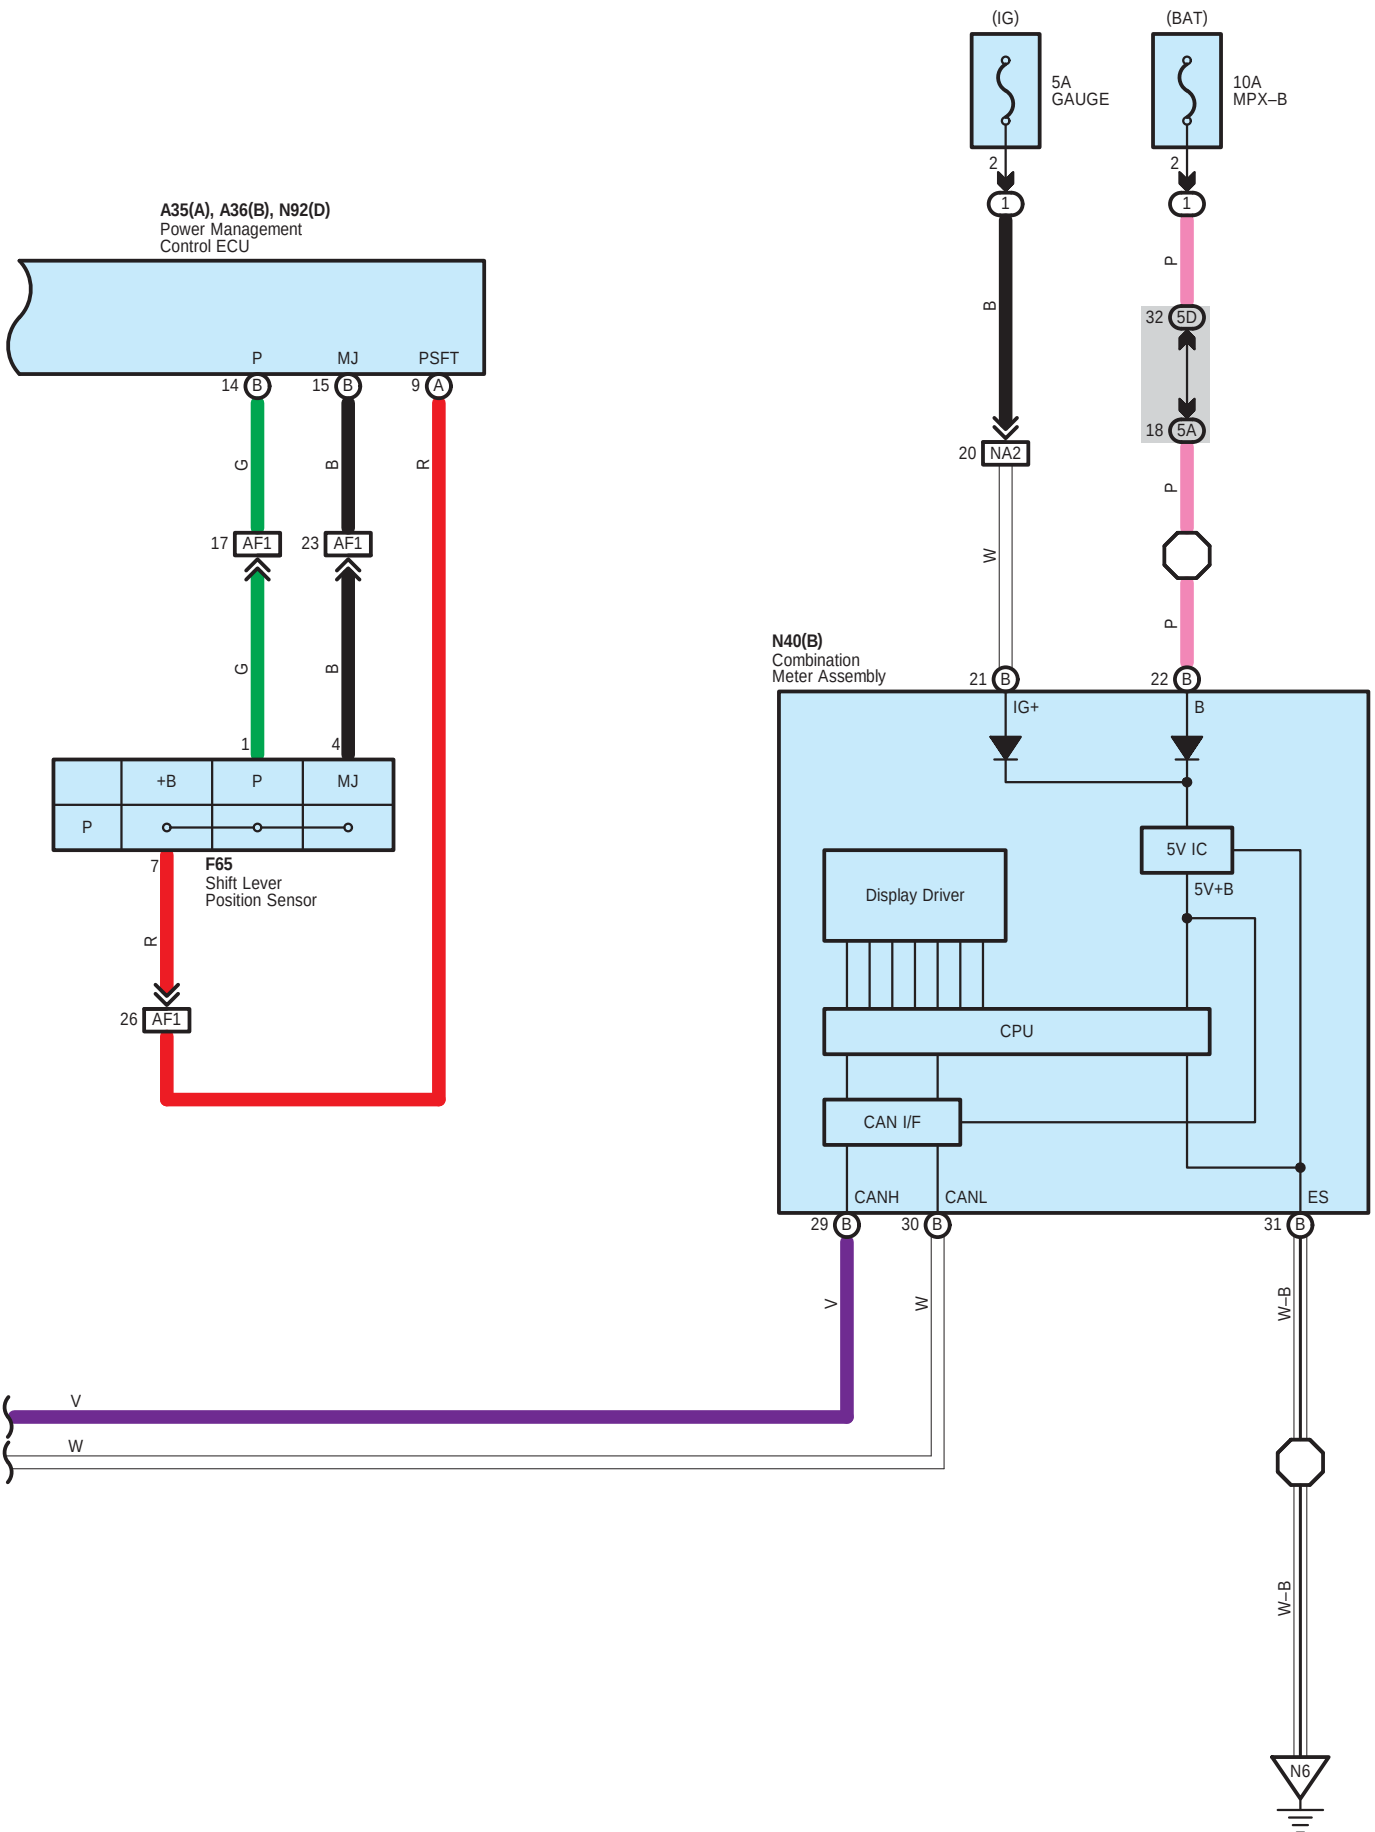


A 14
Black

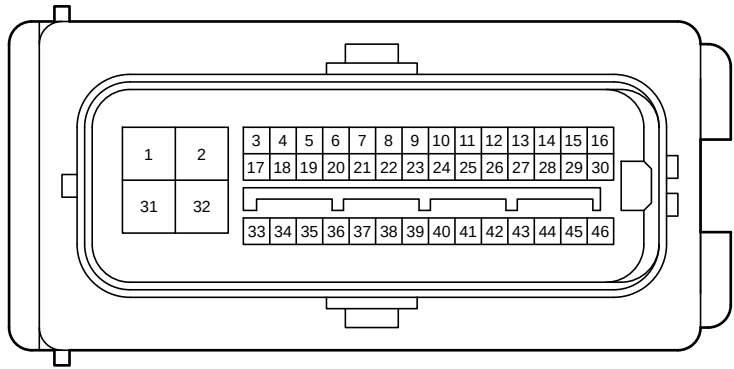


A 16
Gray

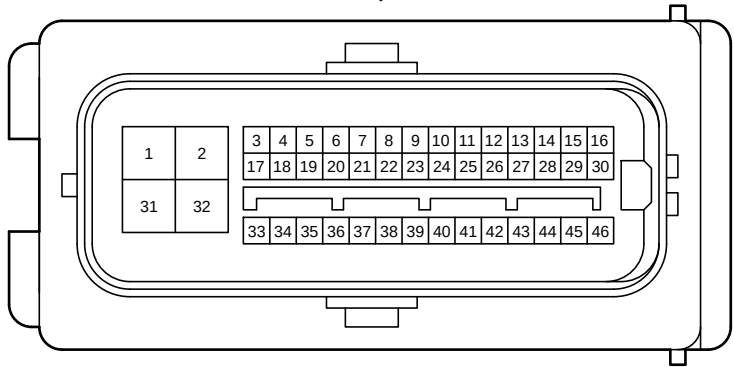


A 35
Gray

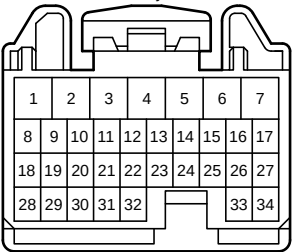


A 36
Gray

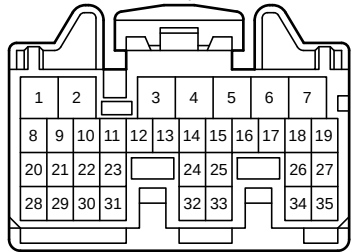


F 65
Gray

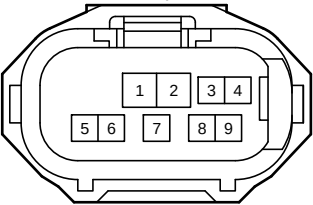


N 11
White

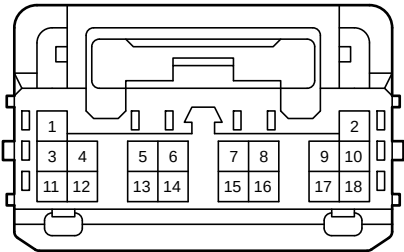


N 12
White

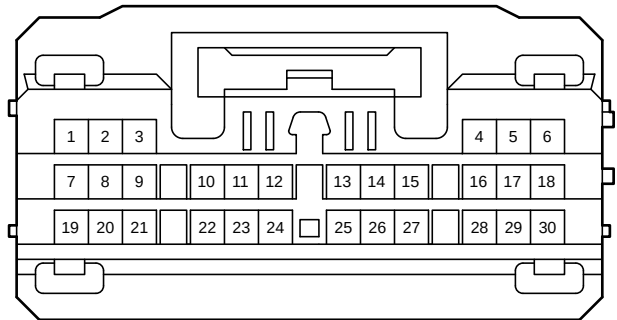


N 13
White

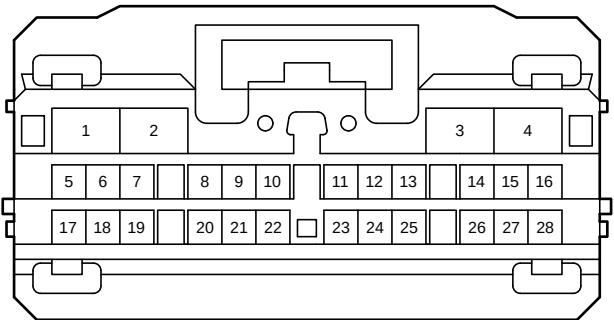


N 40
Black

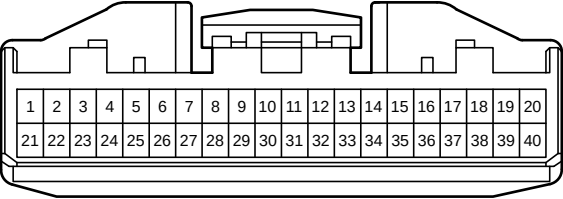


N 52
Yellow

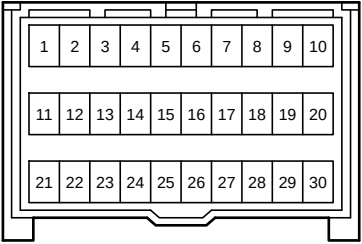


N 92
Gray

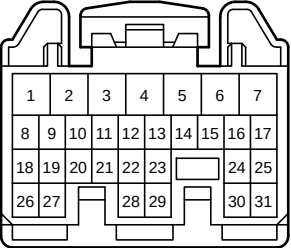


N133
Black

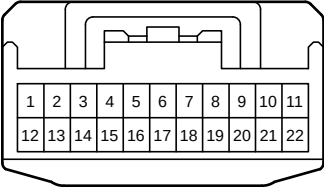


N177
Gray

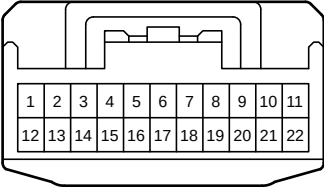


N178
Gray

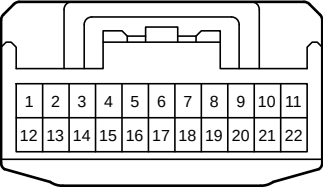


N183
Blue

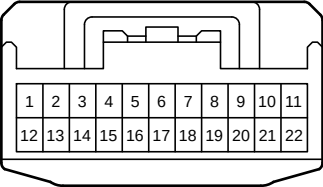


N193
Black

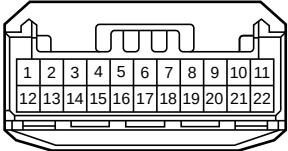


N195
Black

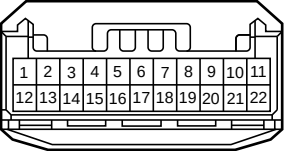


N196
Black

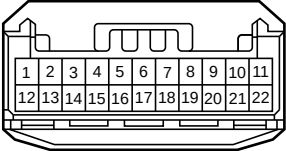


N201
Black

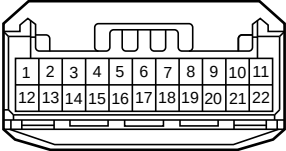


Q 3
White

















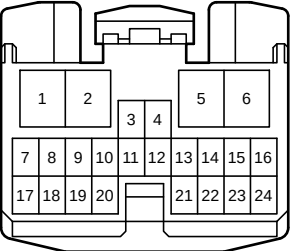


Q 4
White

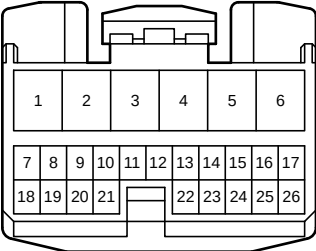


Q 7
White

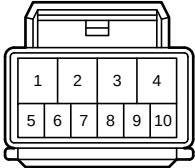


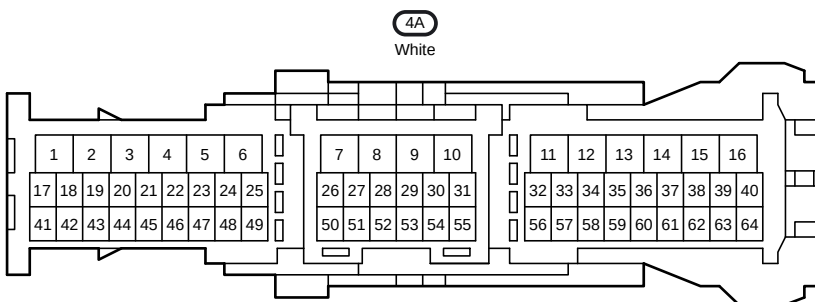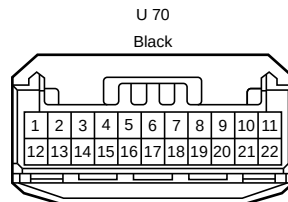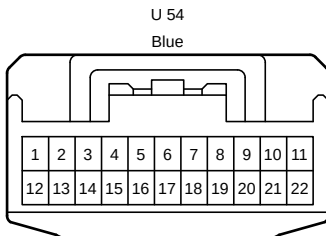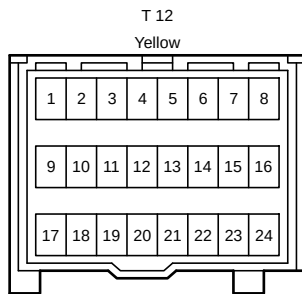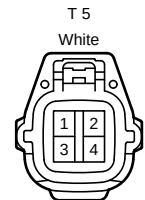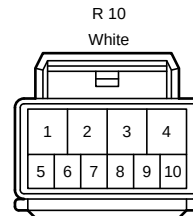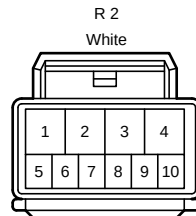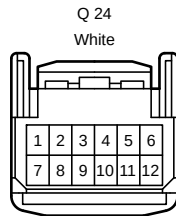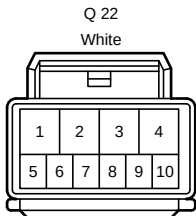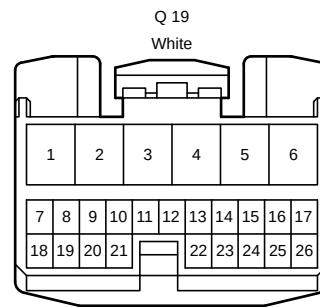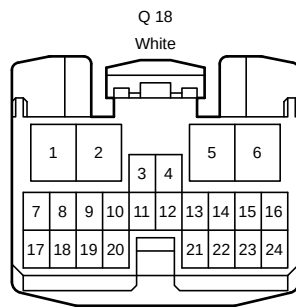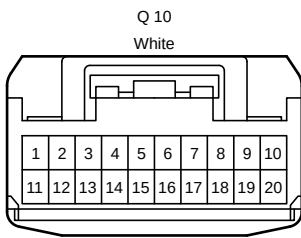


4C
White

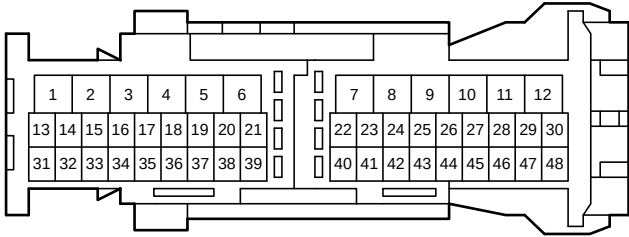


5A
White

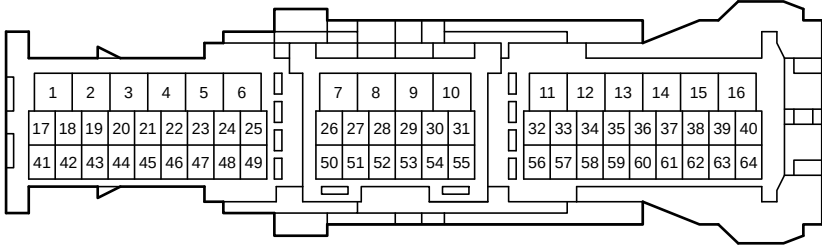


5B
White

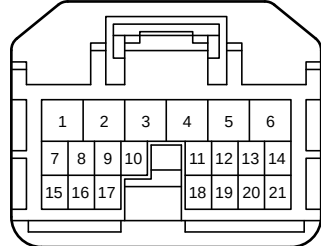



5C
White

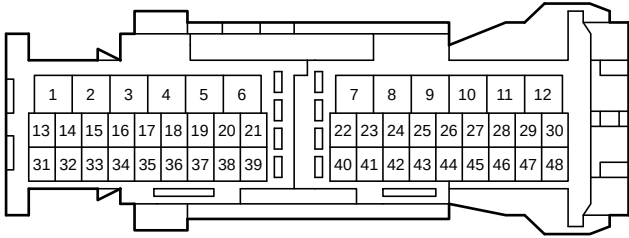


5D
White

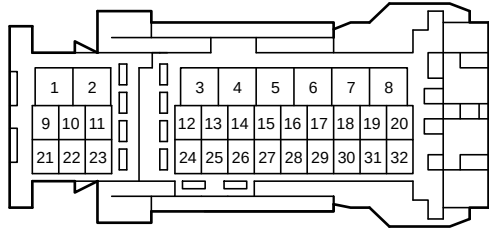


AF1
White

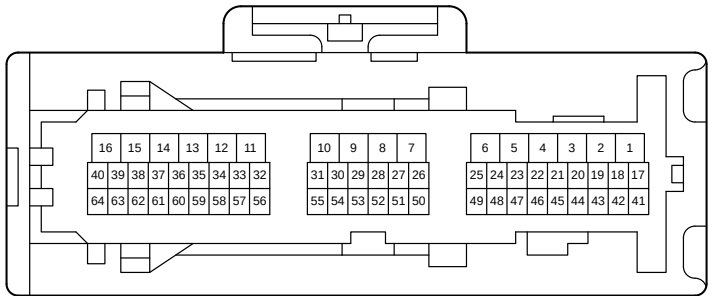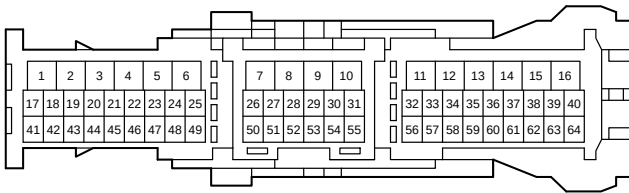


NA2
White

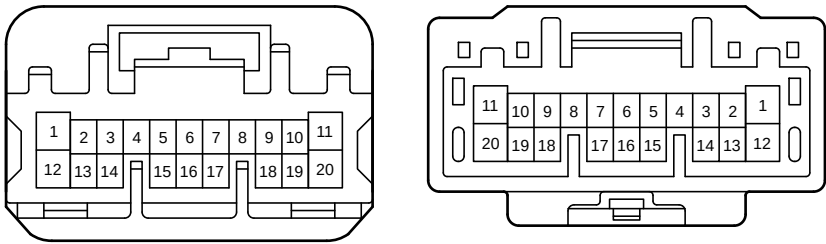


NA4
Gray

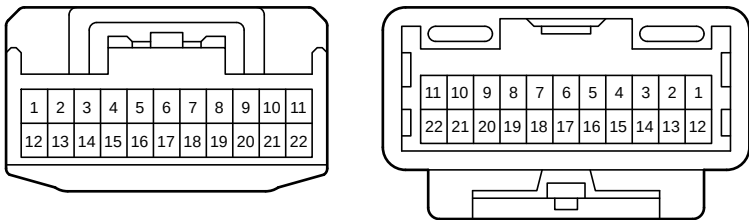


NT1
White

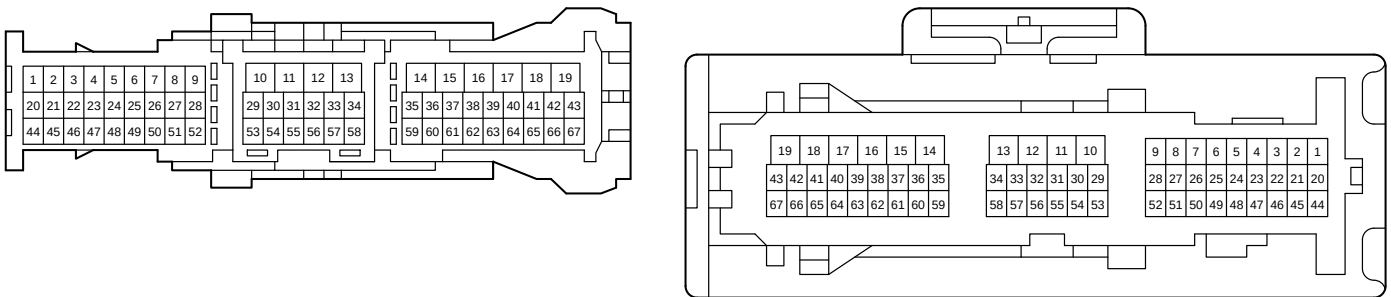


NU1
White

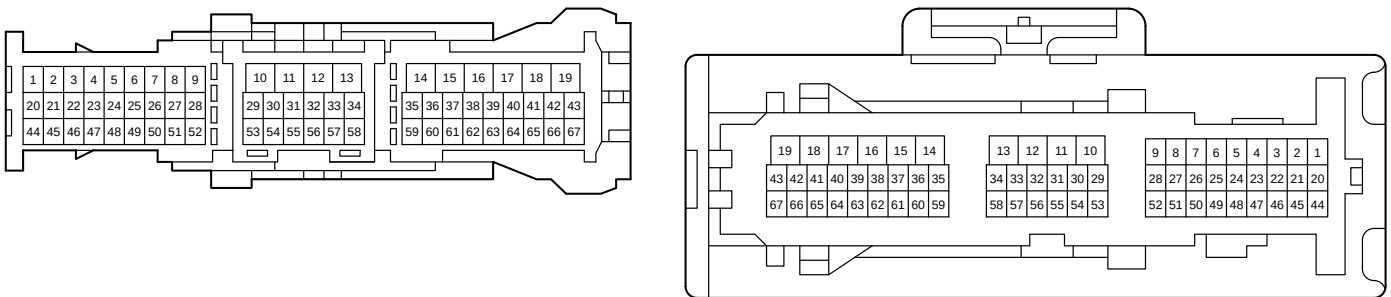


NU2
White

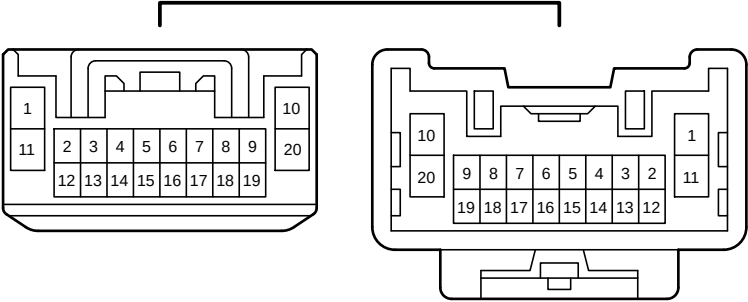


QT1
White

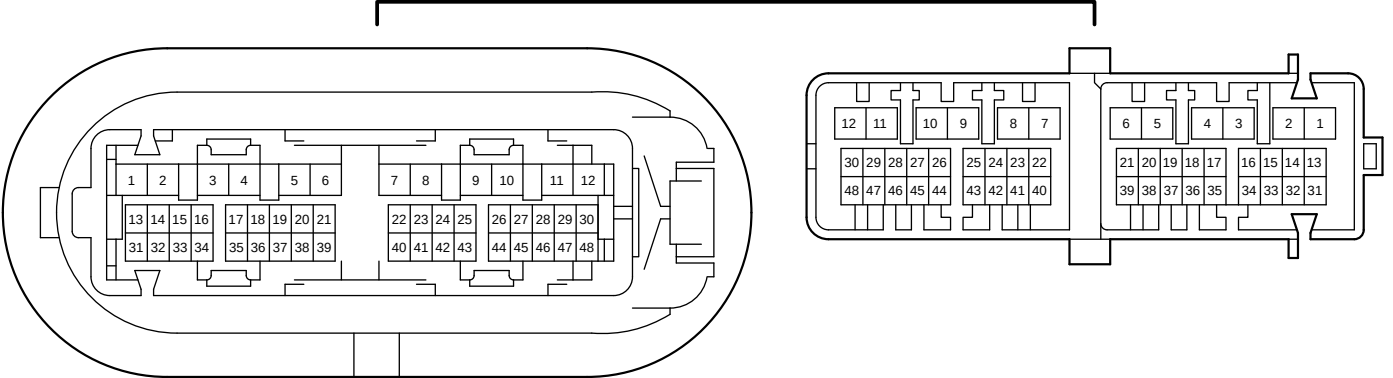

QU1
White

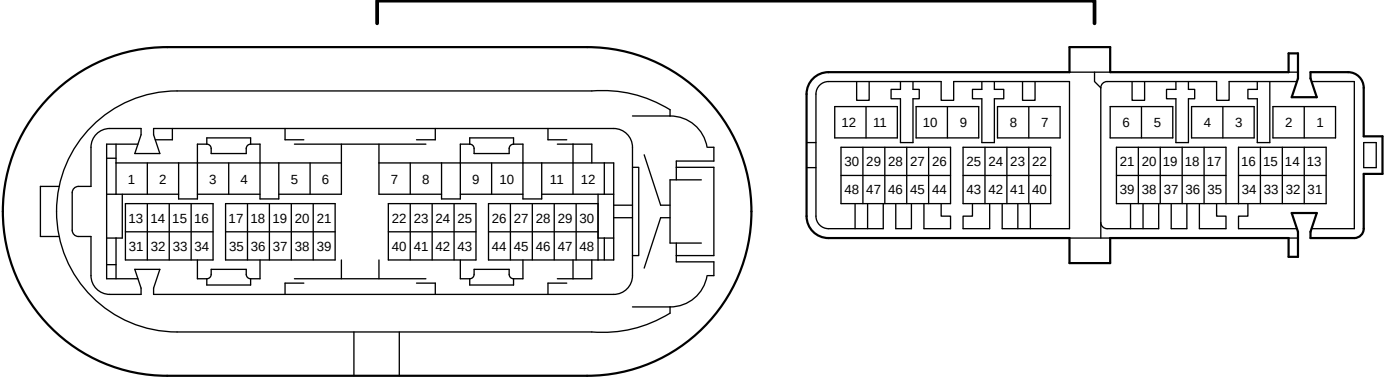

RT1
White

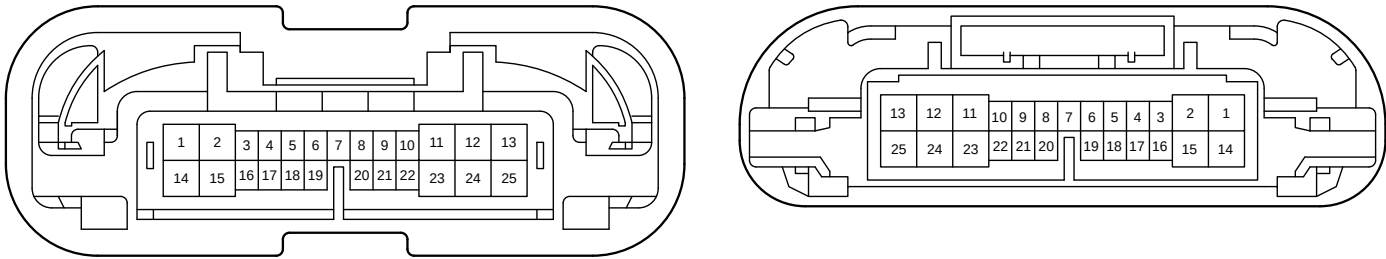

RU1
White

