





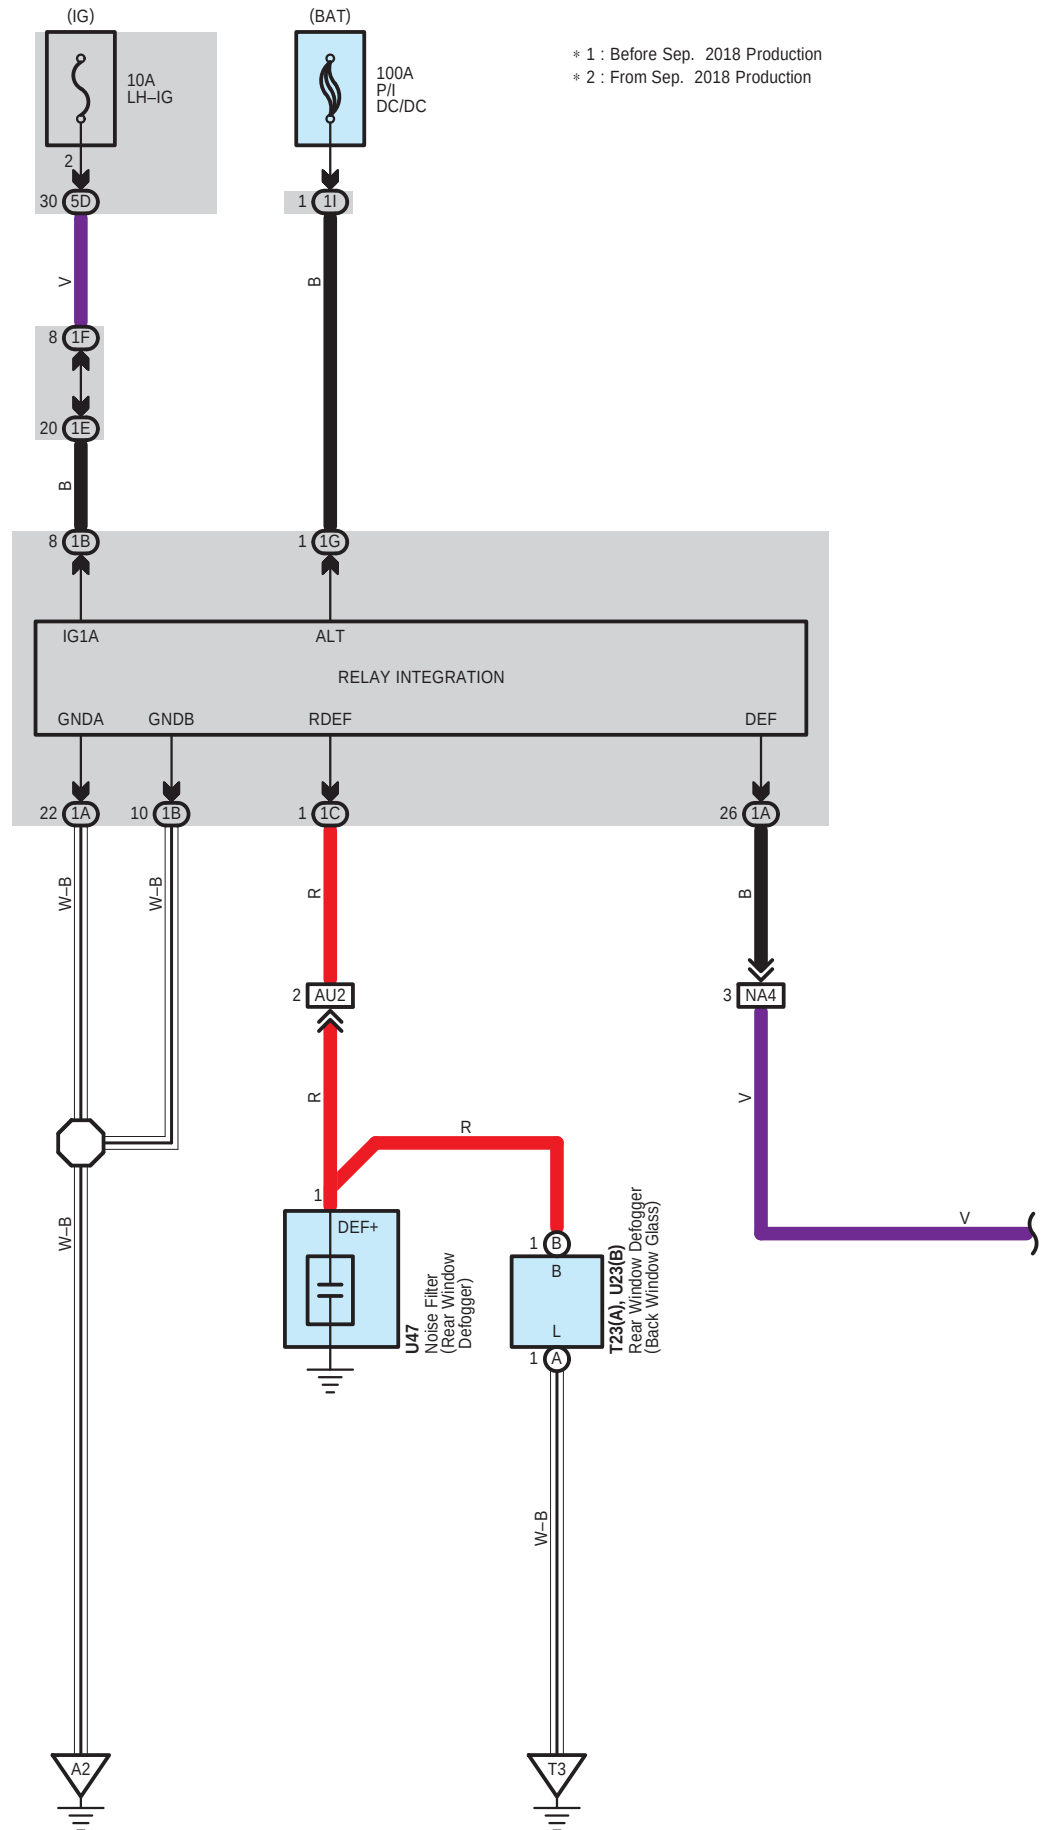


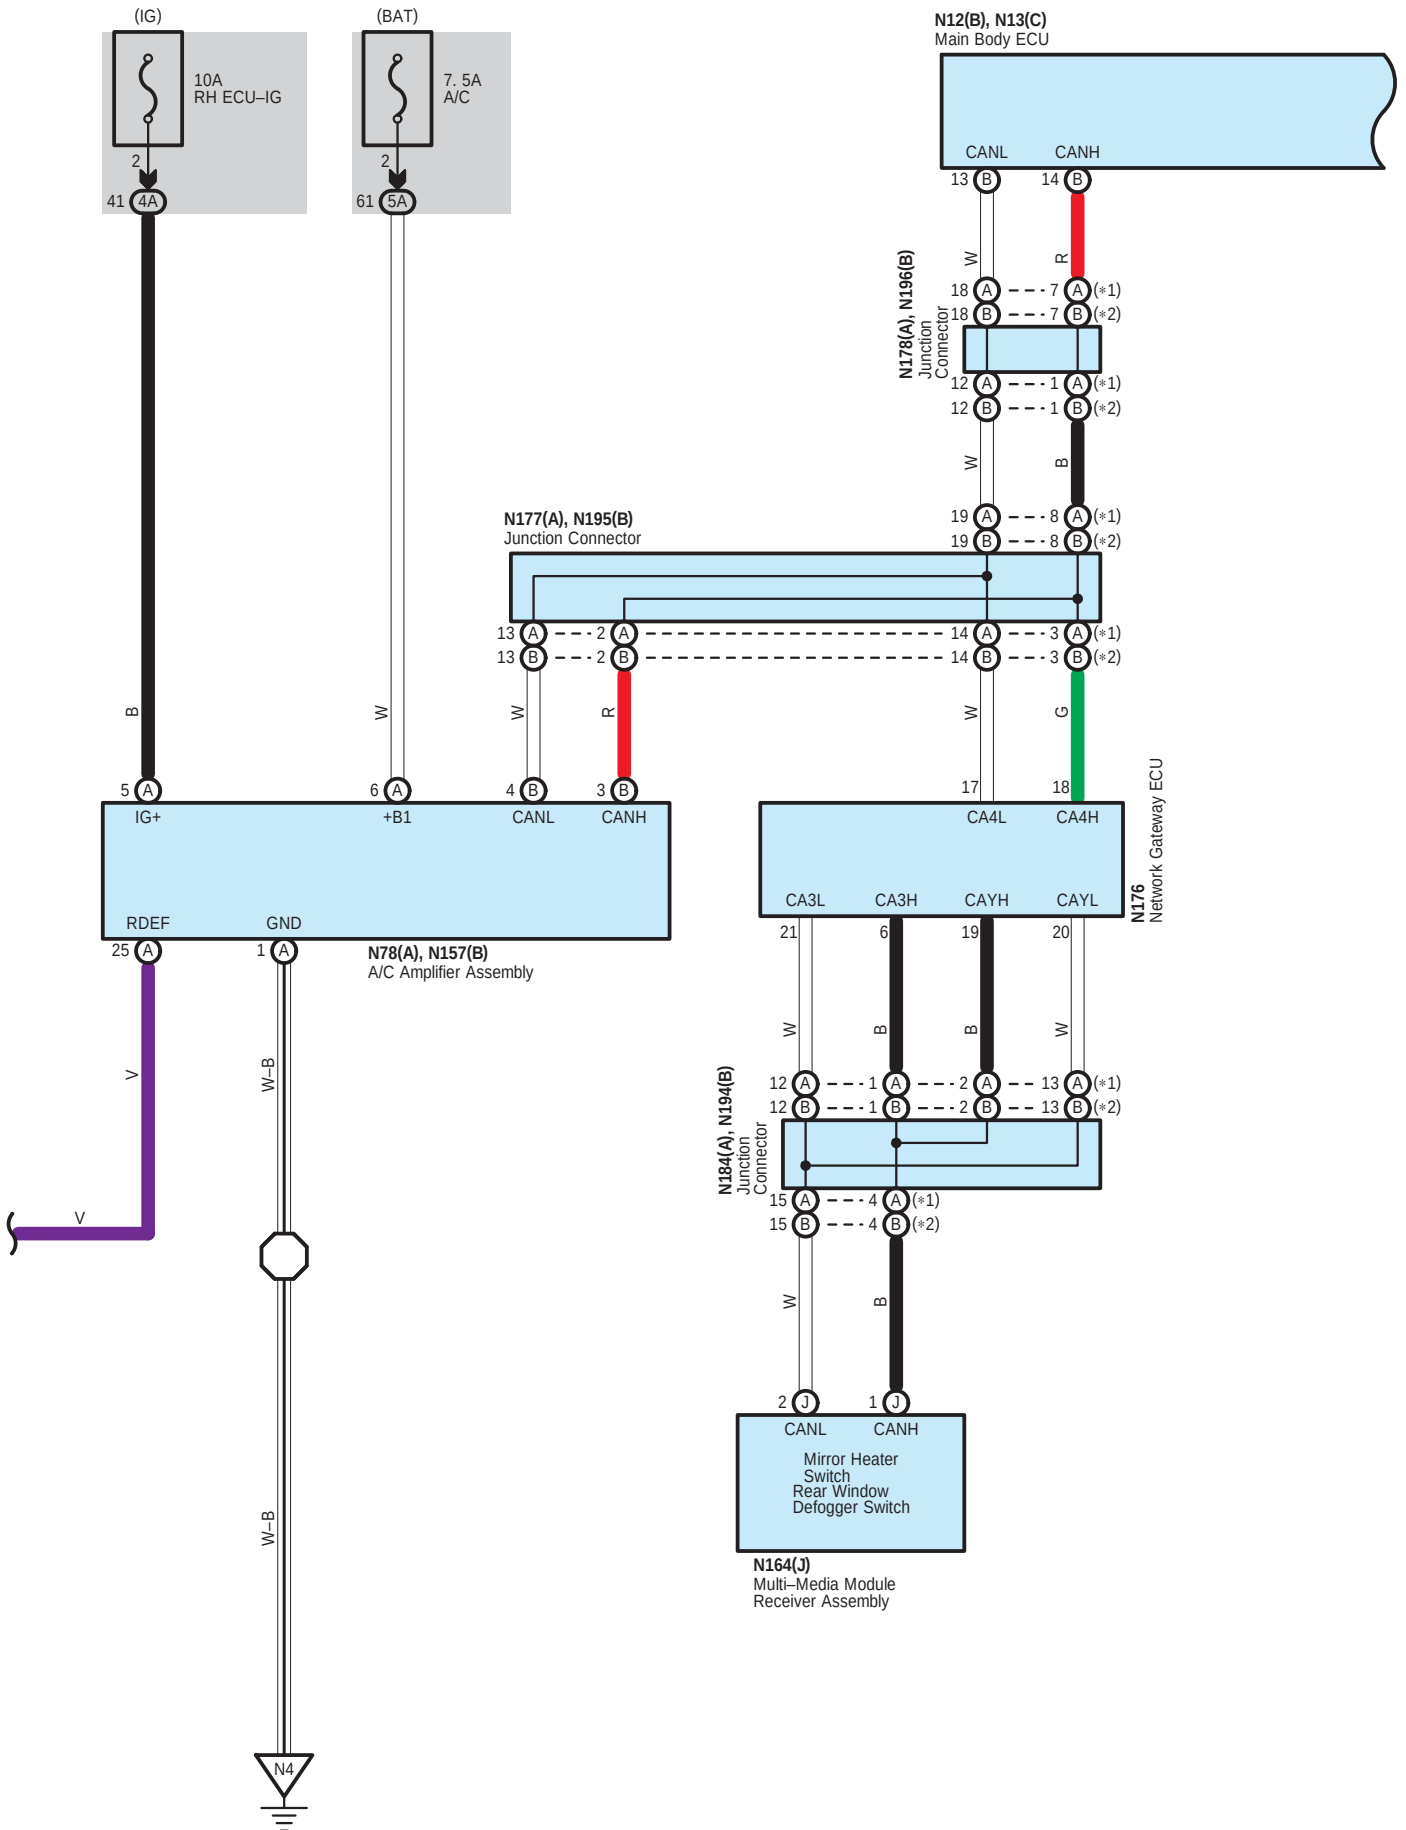

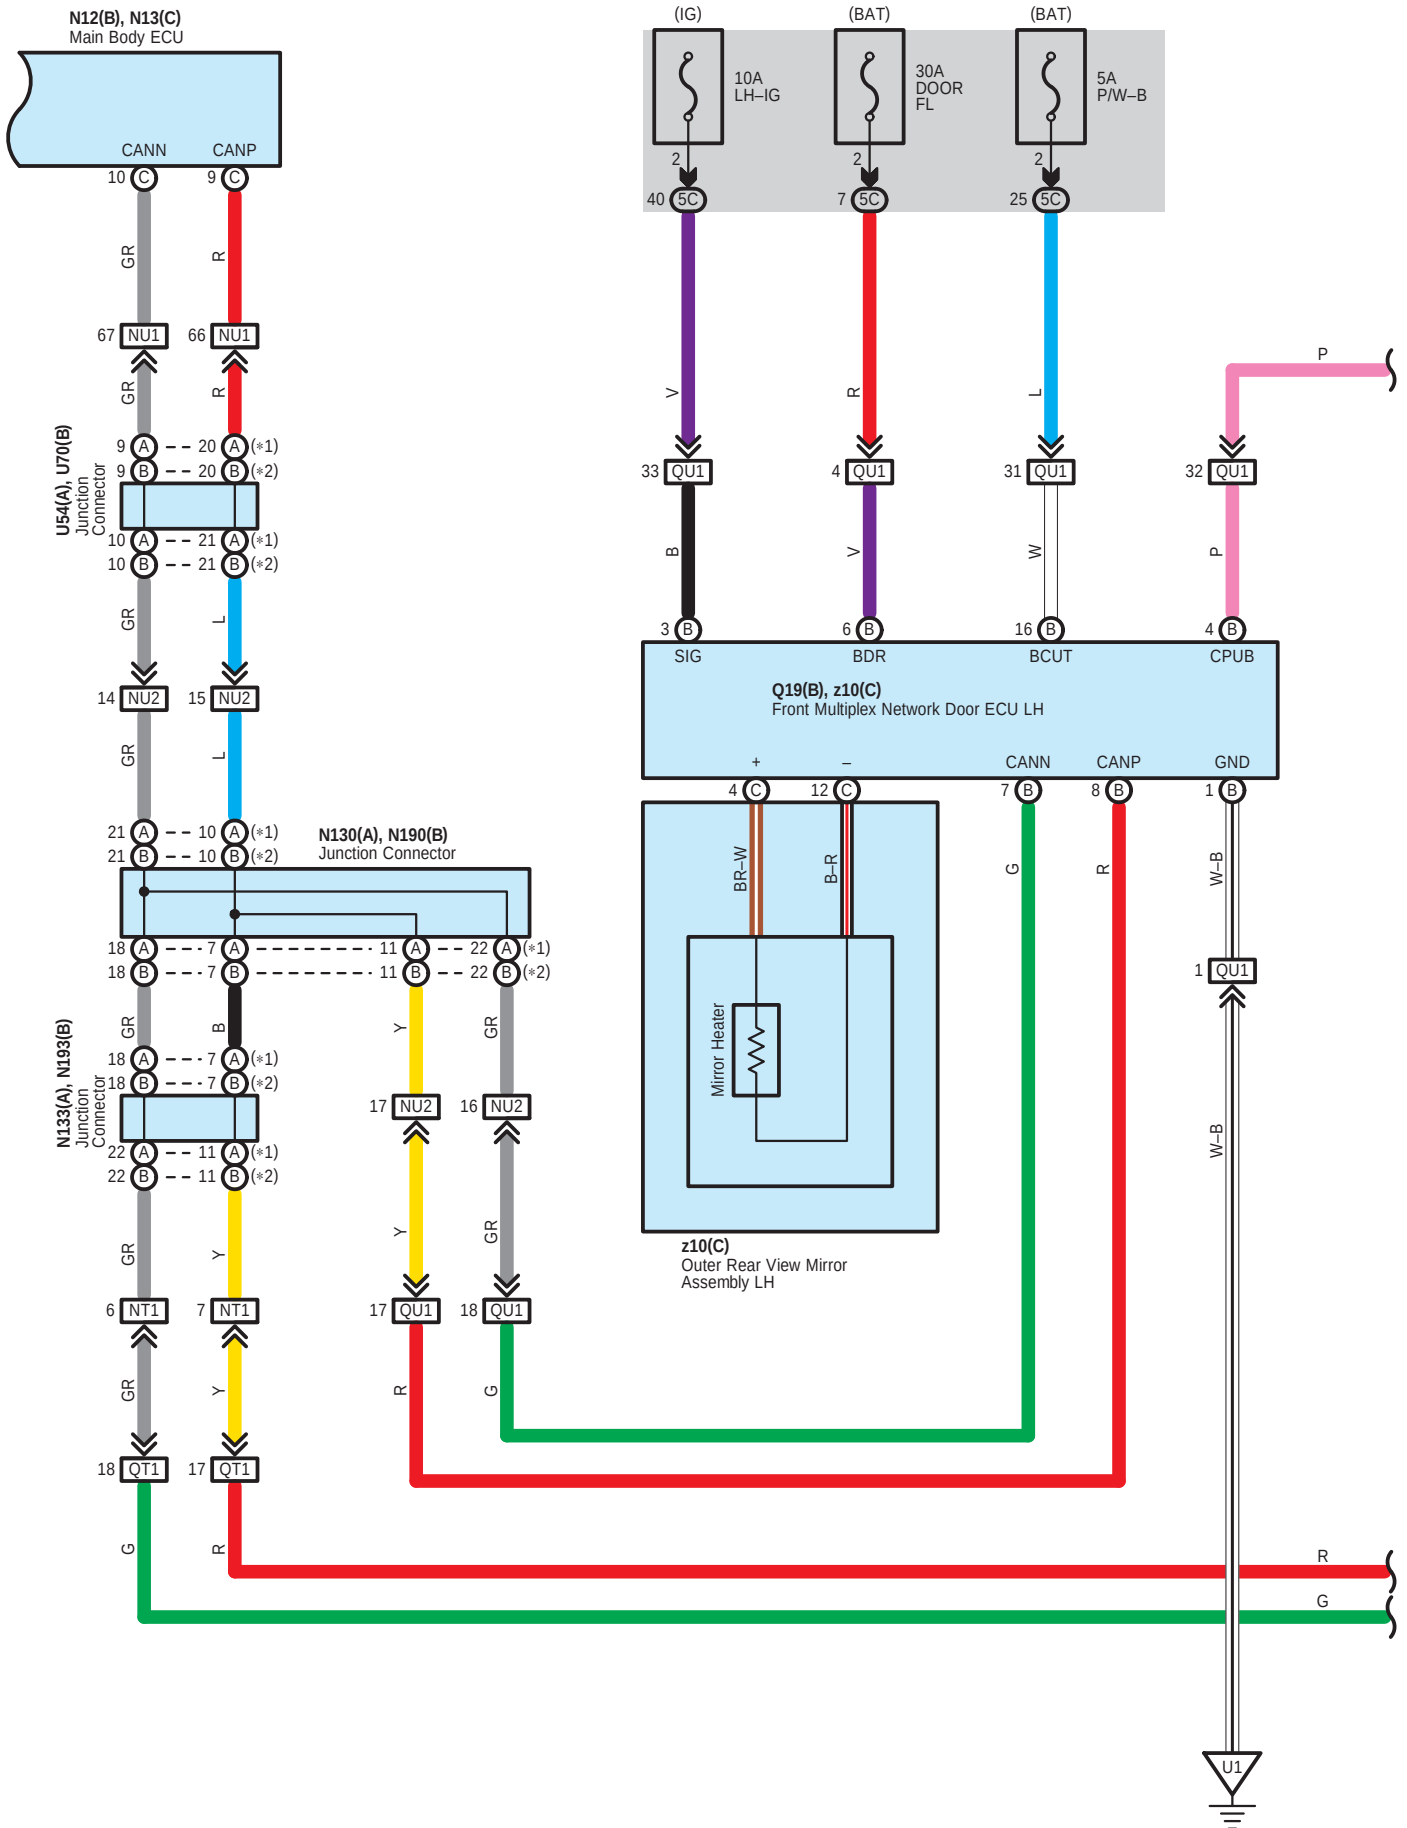


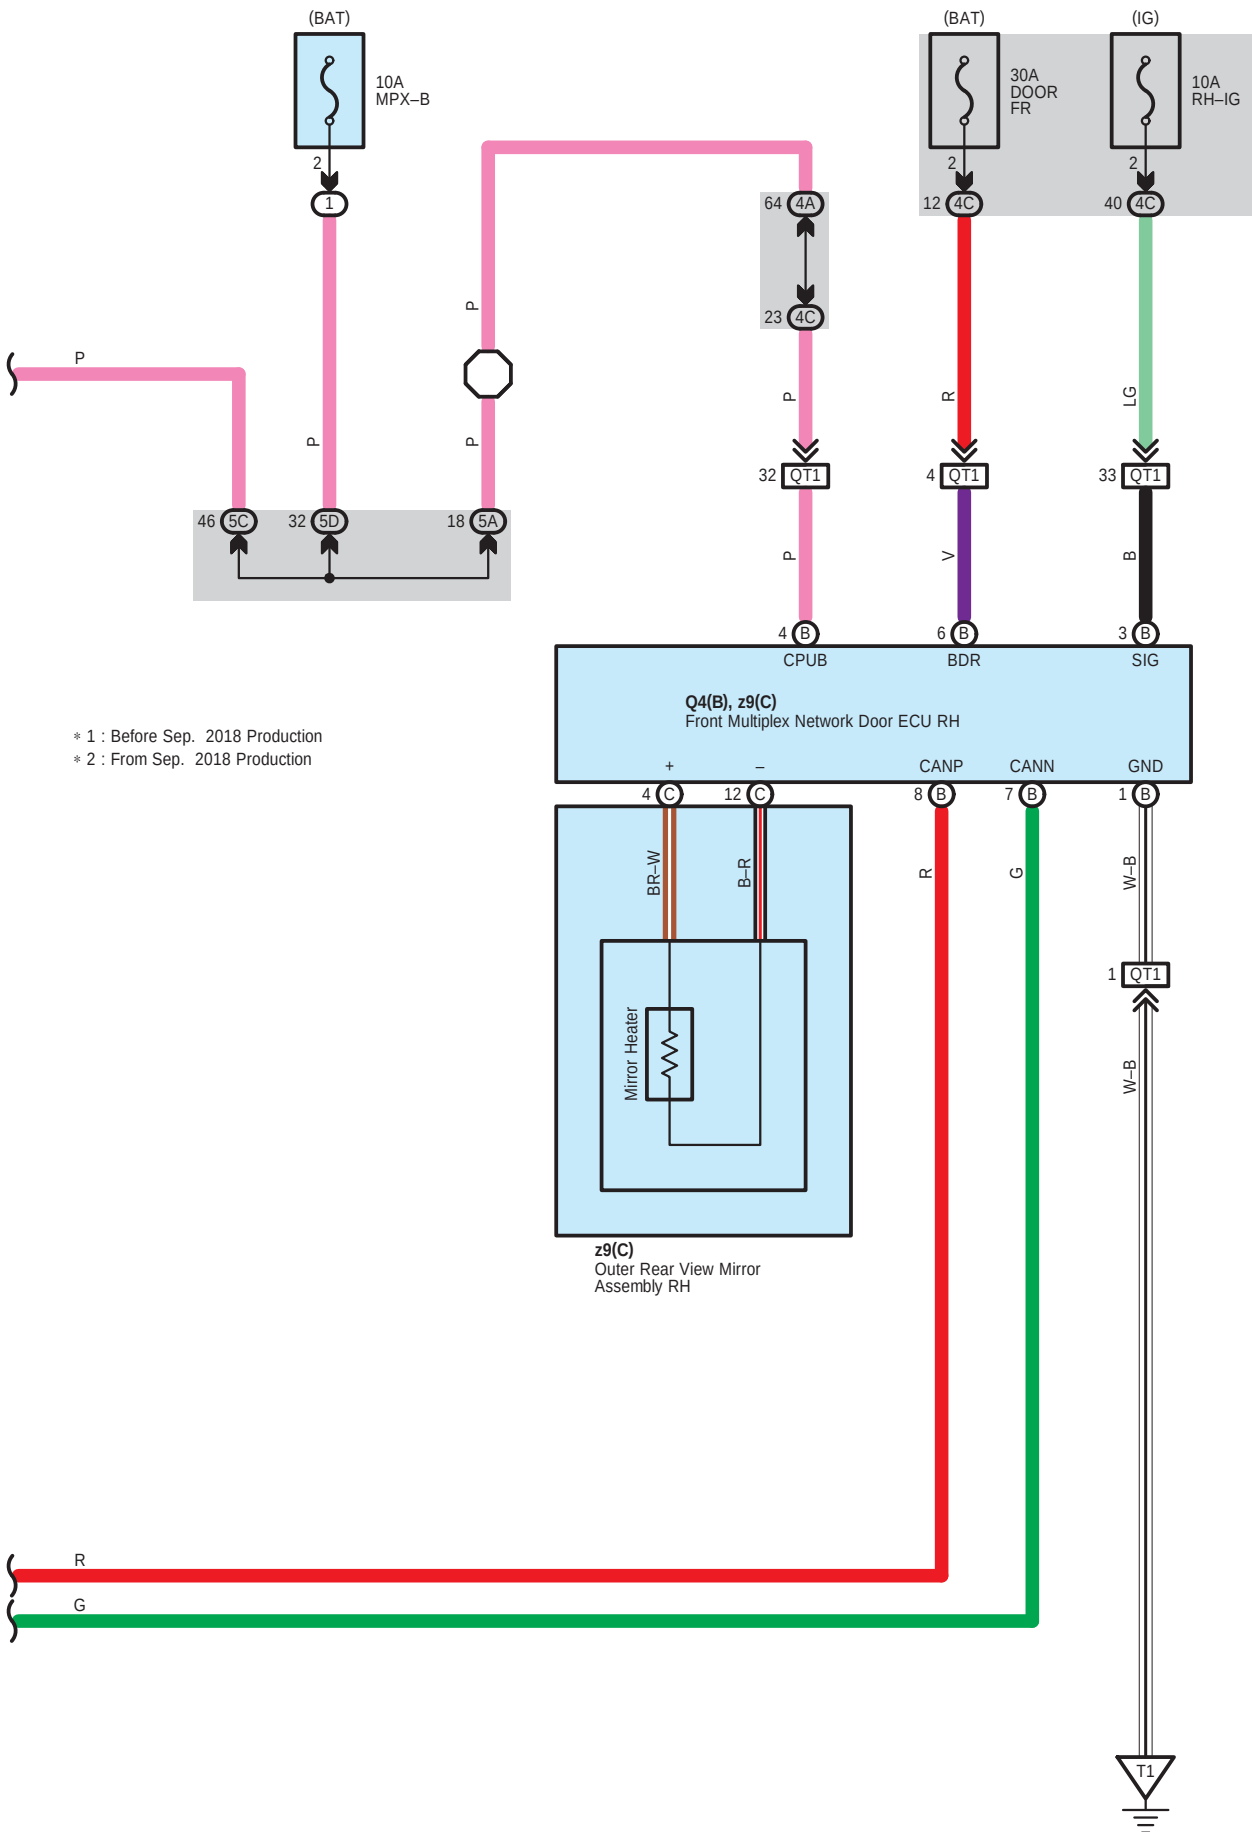


N 12
White

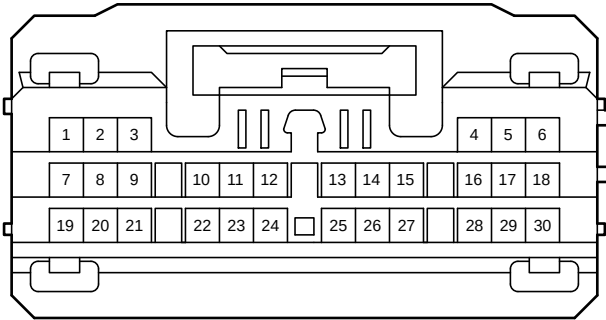


N 13
White

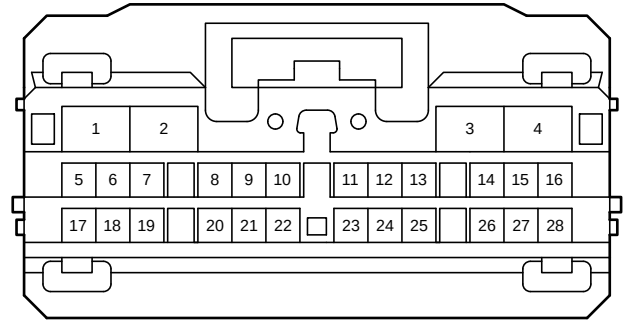


N 78
White

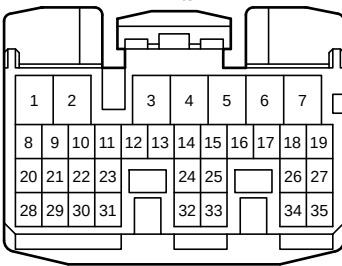


N130
Black

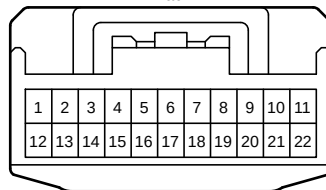


N133
Black

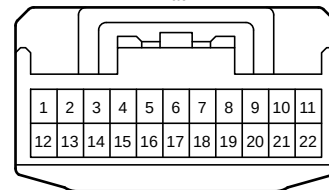


N157
White

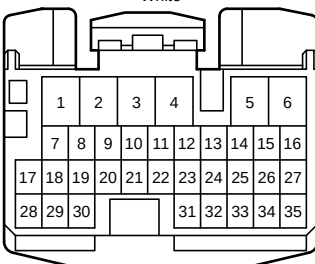


N164
White

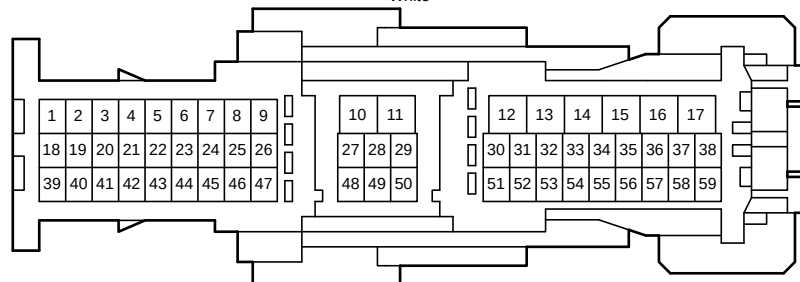


N176
Black

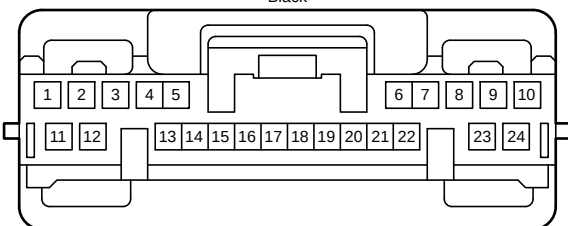


N177
Gray

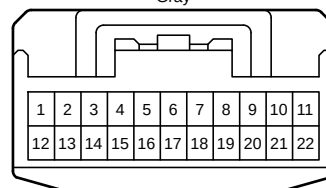


N178
Gray

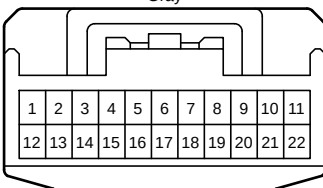


N184
Blue

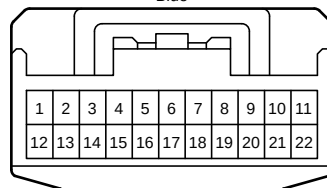


N190
Black

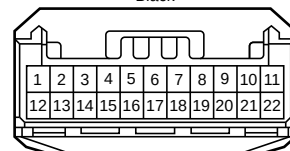


N193
Black

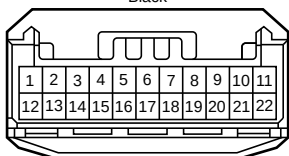


N194
Black

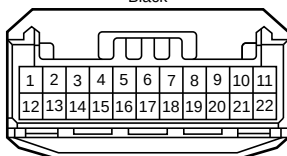


N195
Black

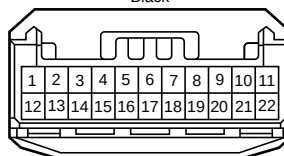


N196
Black

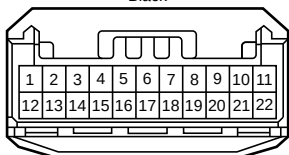

Q 4
White

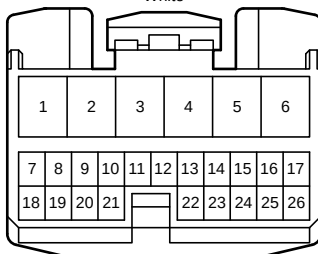

Q 19
White

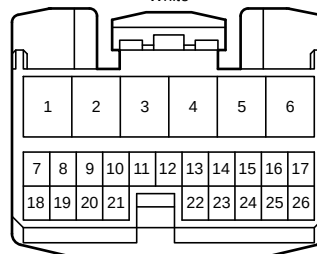


T 23
White




U 23
White




U 47
Black




U 54
Blue

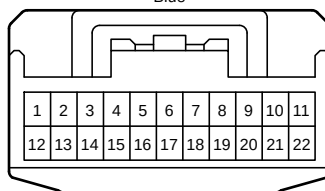


U 70
Black

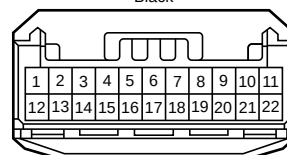


z 9
White

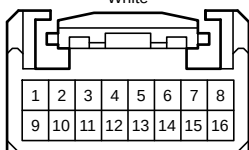


z 10
White

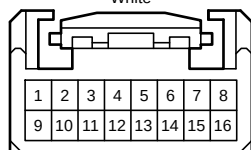


1A
Black

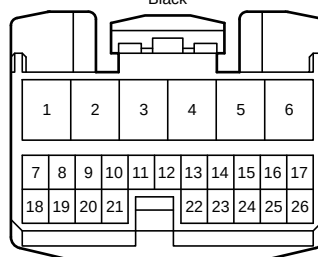


1B
Black

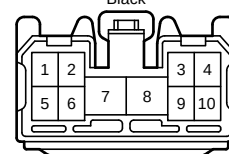


1C
Black




1E
White

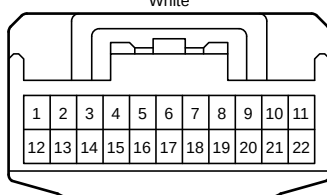

1F
White










1G
Black





1I
White



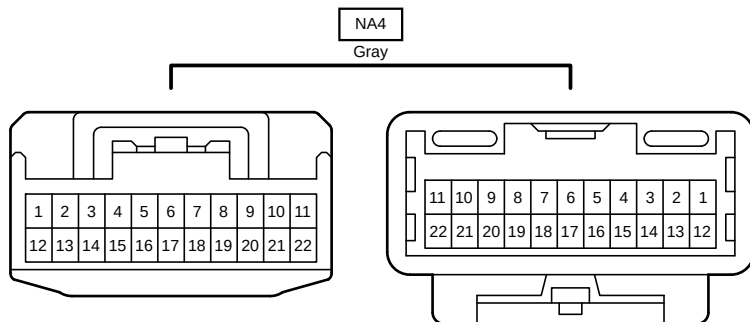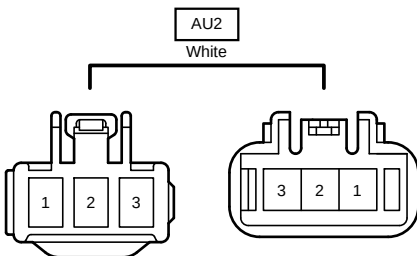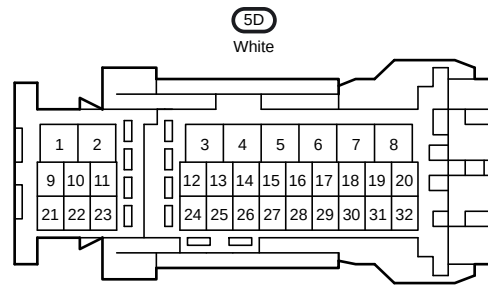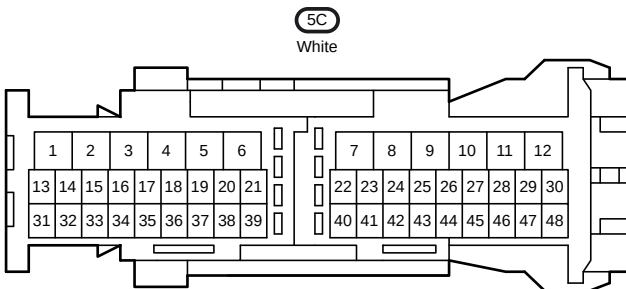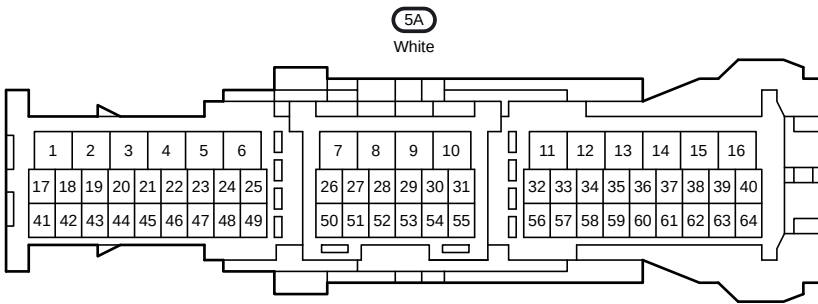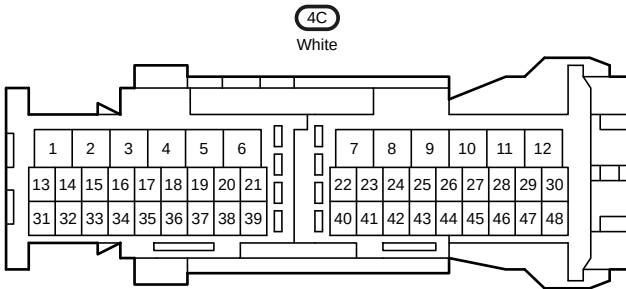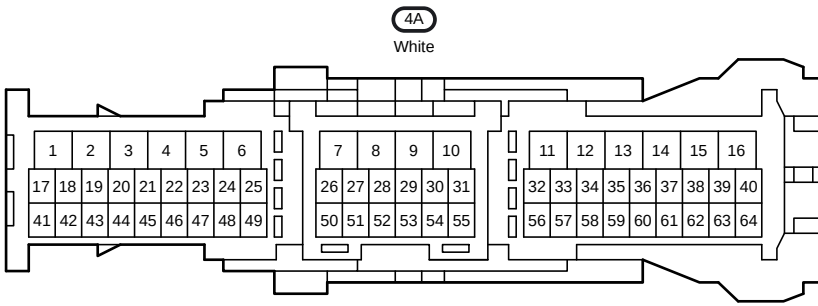



NT1

White

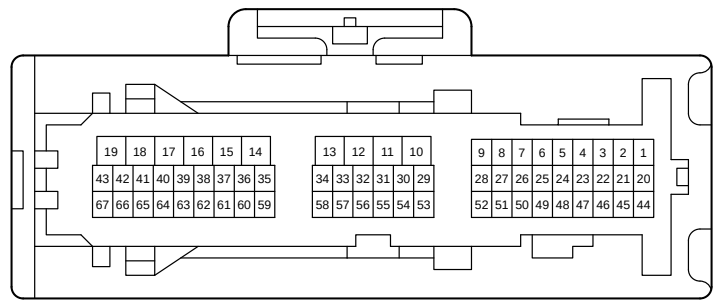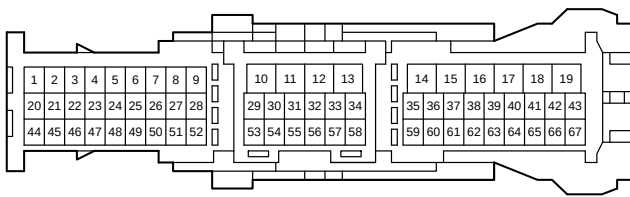



NU1

White

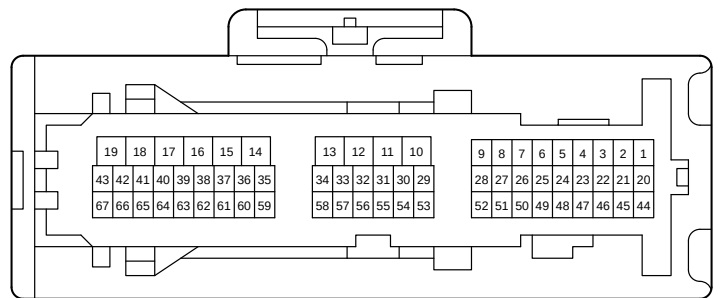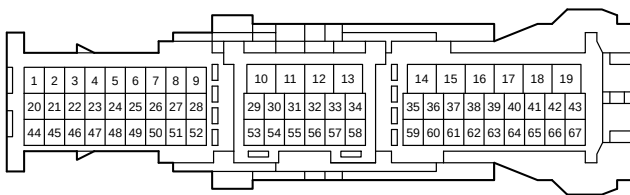



NU2

White

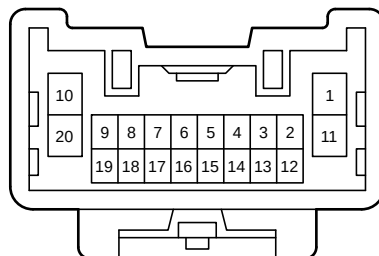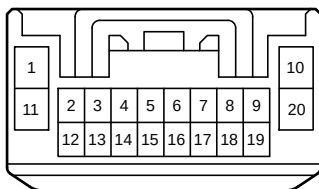

QT1

White

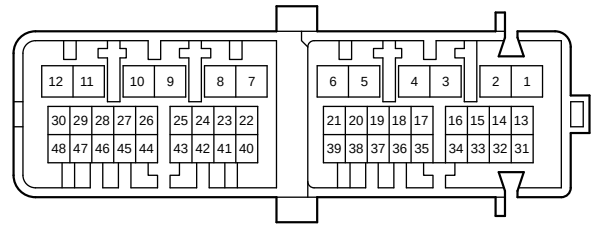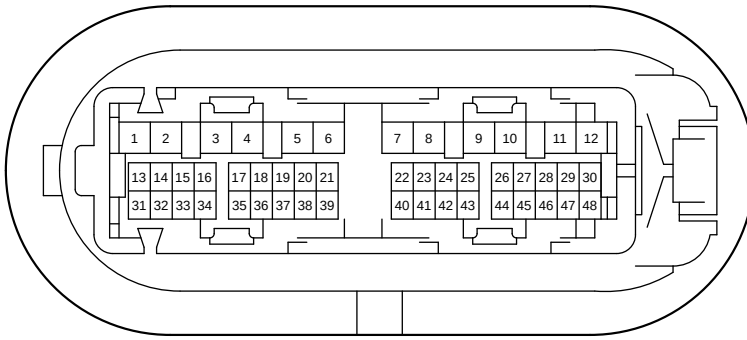

QU1

White

