






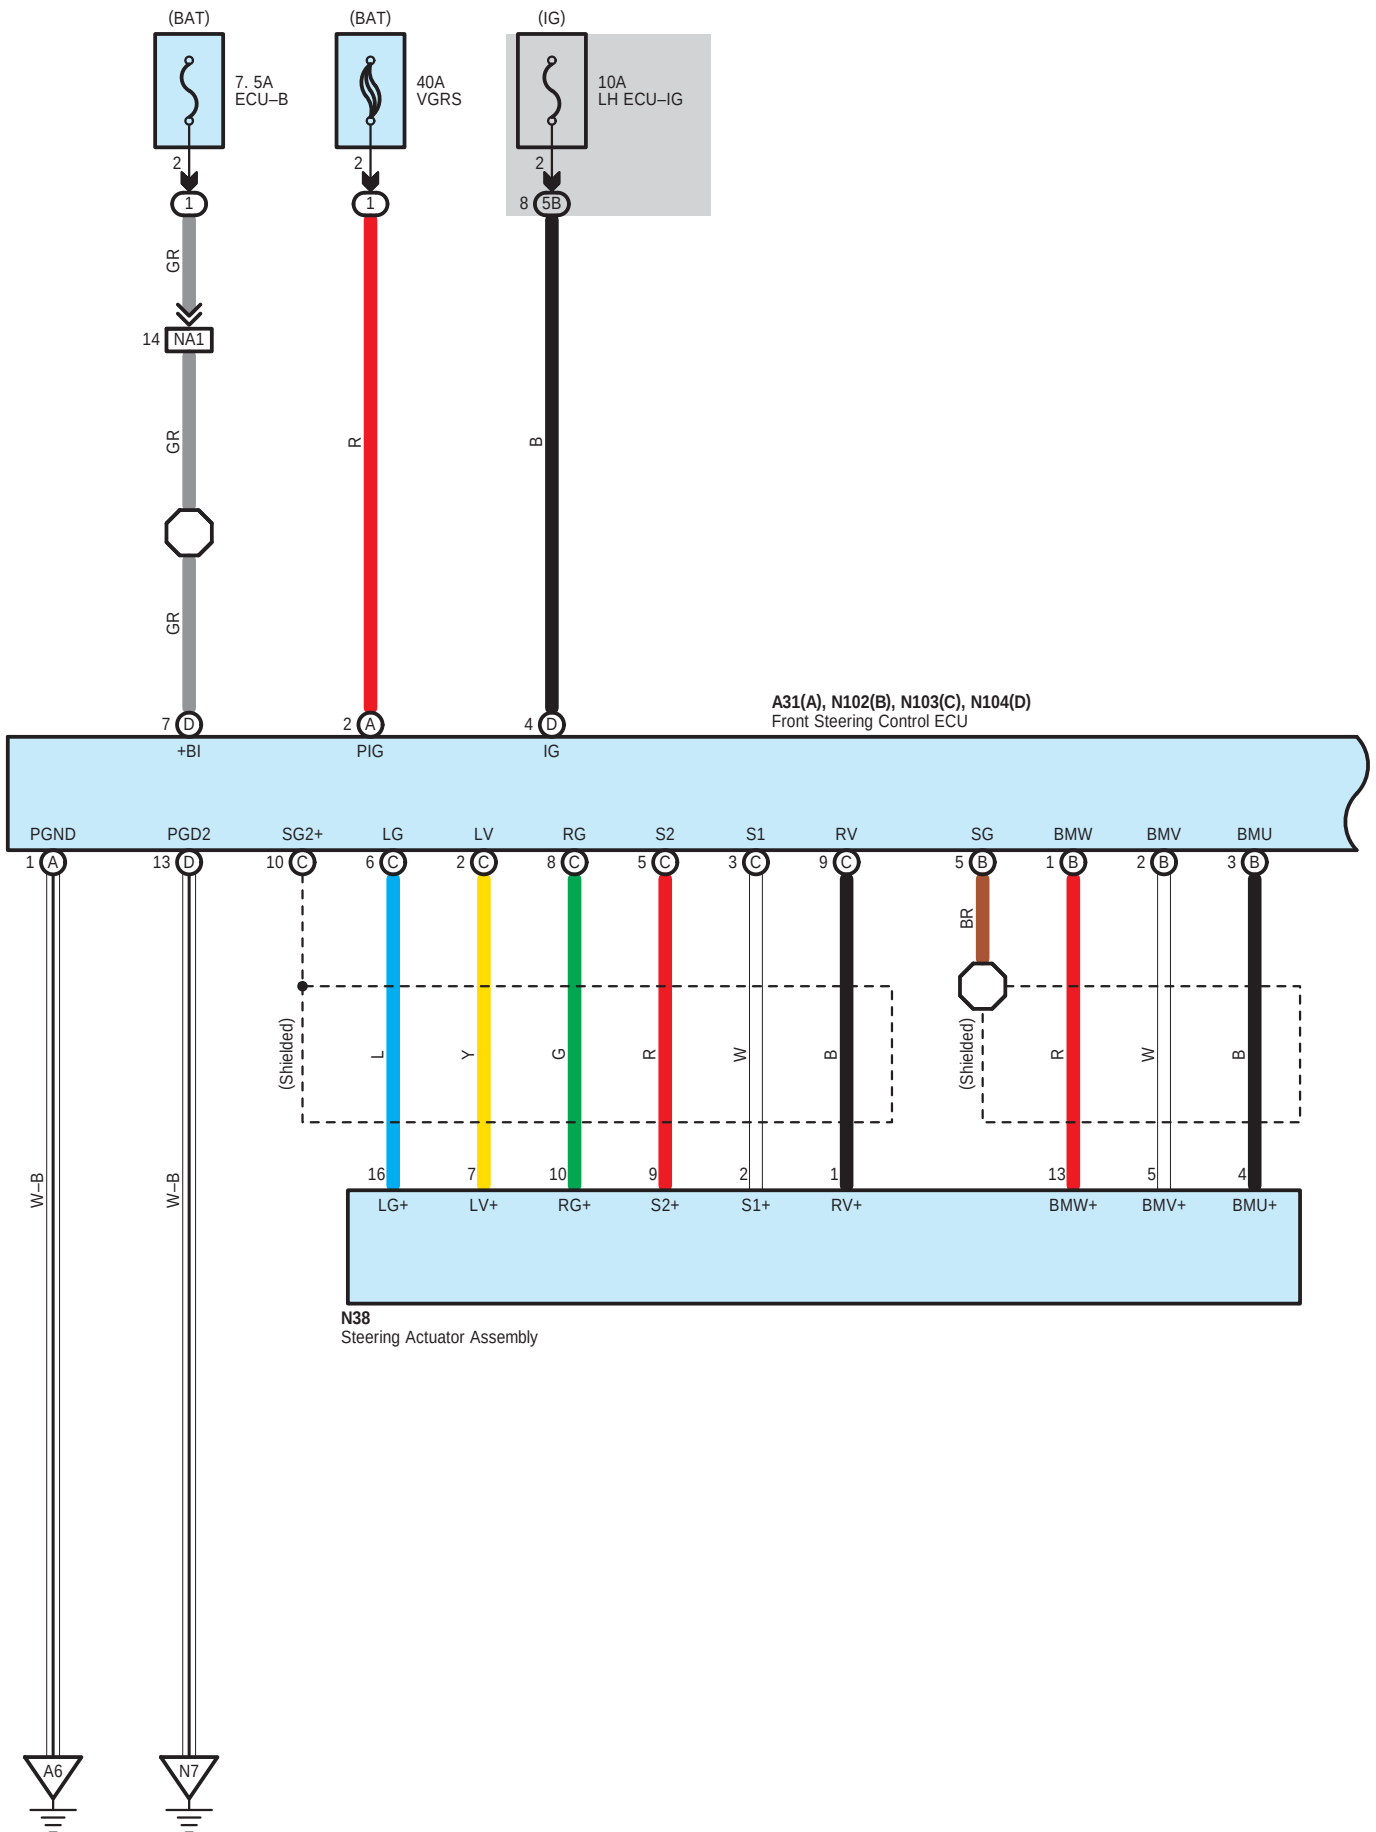


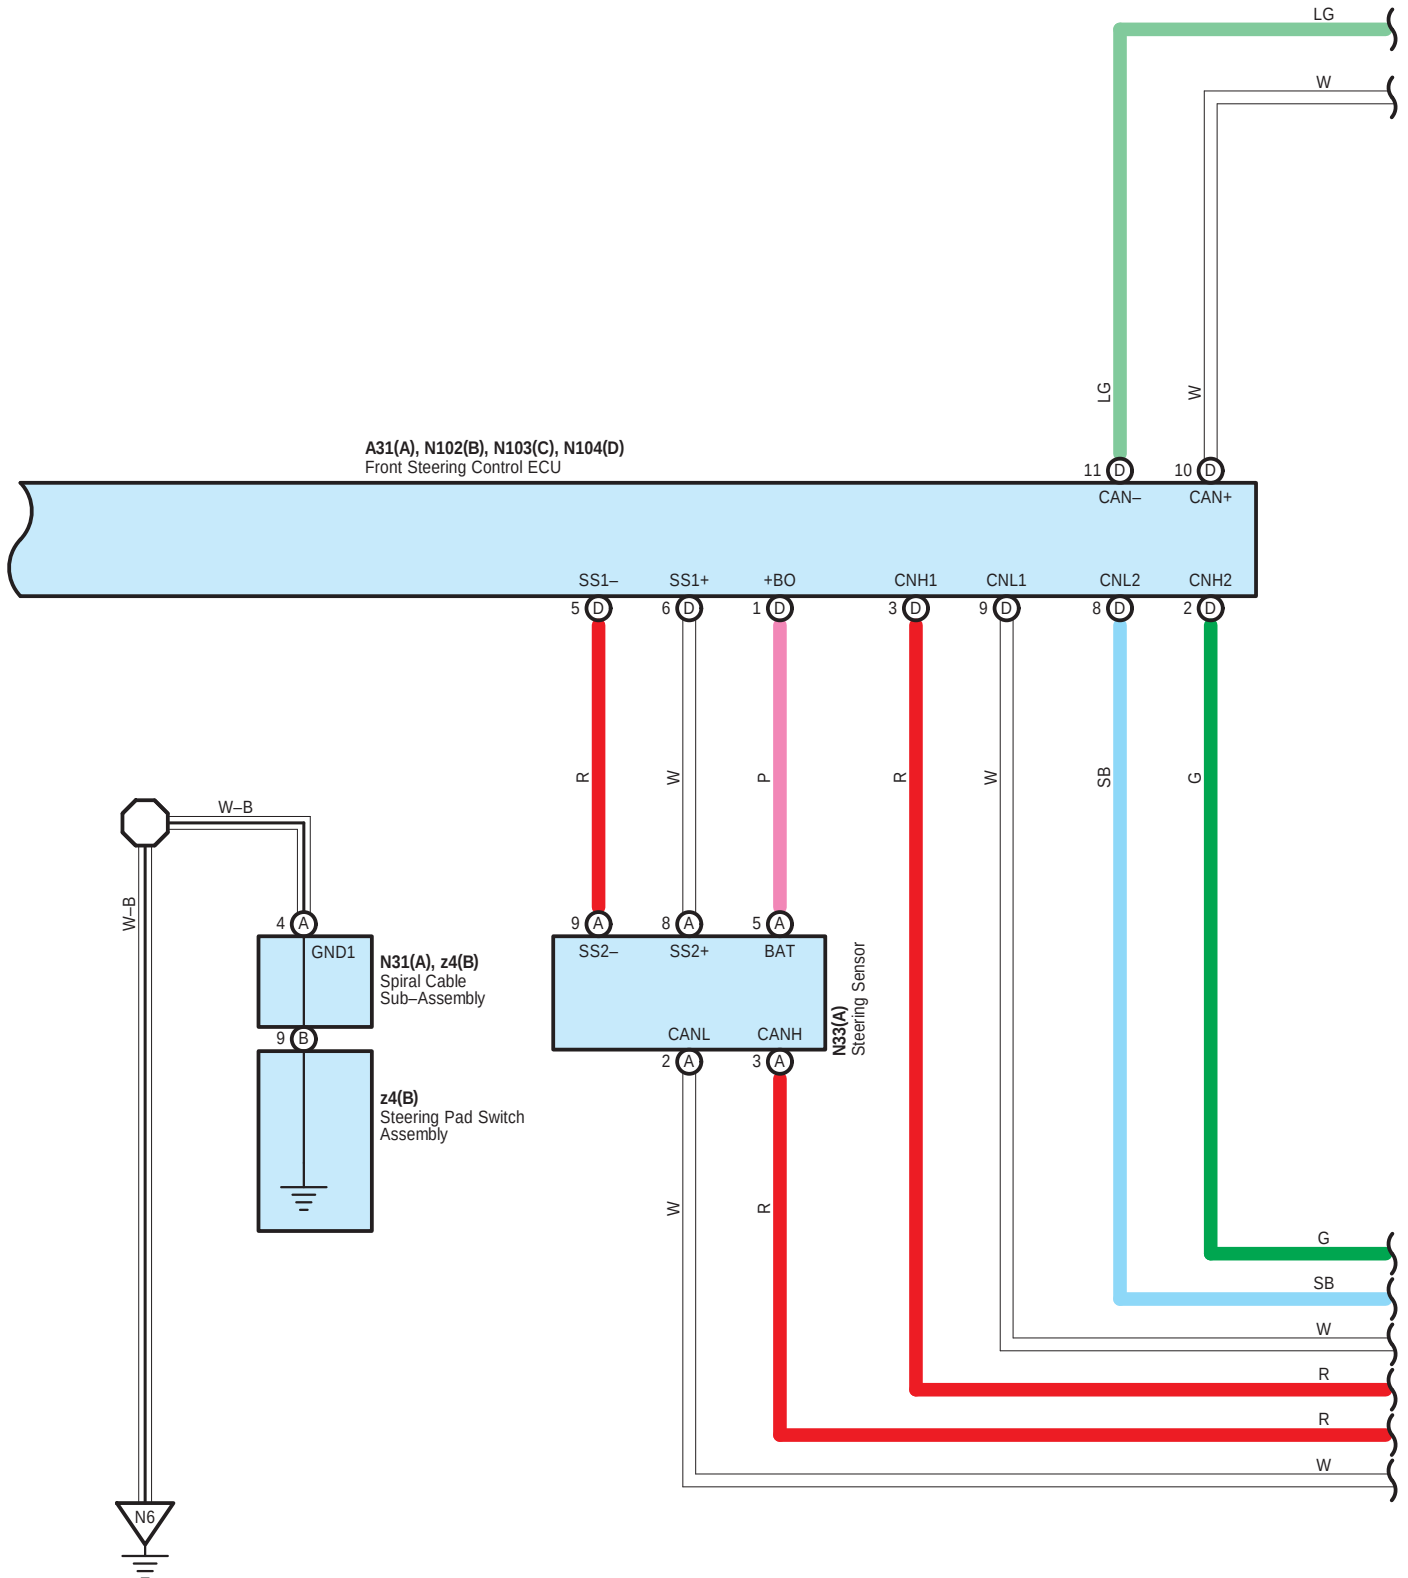


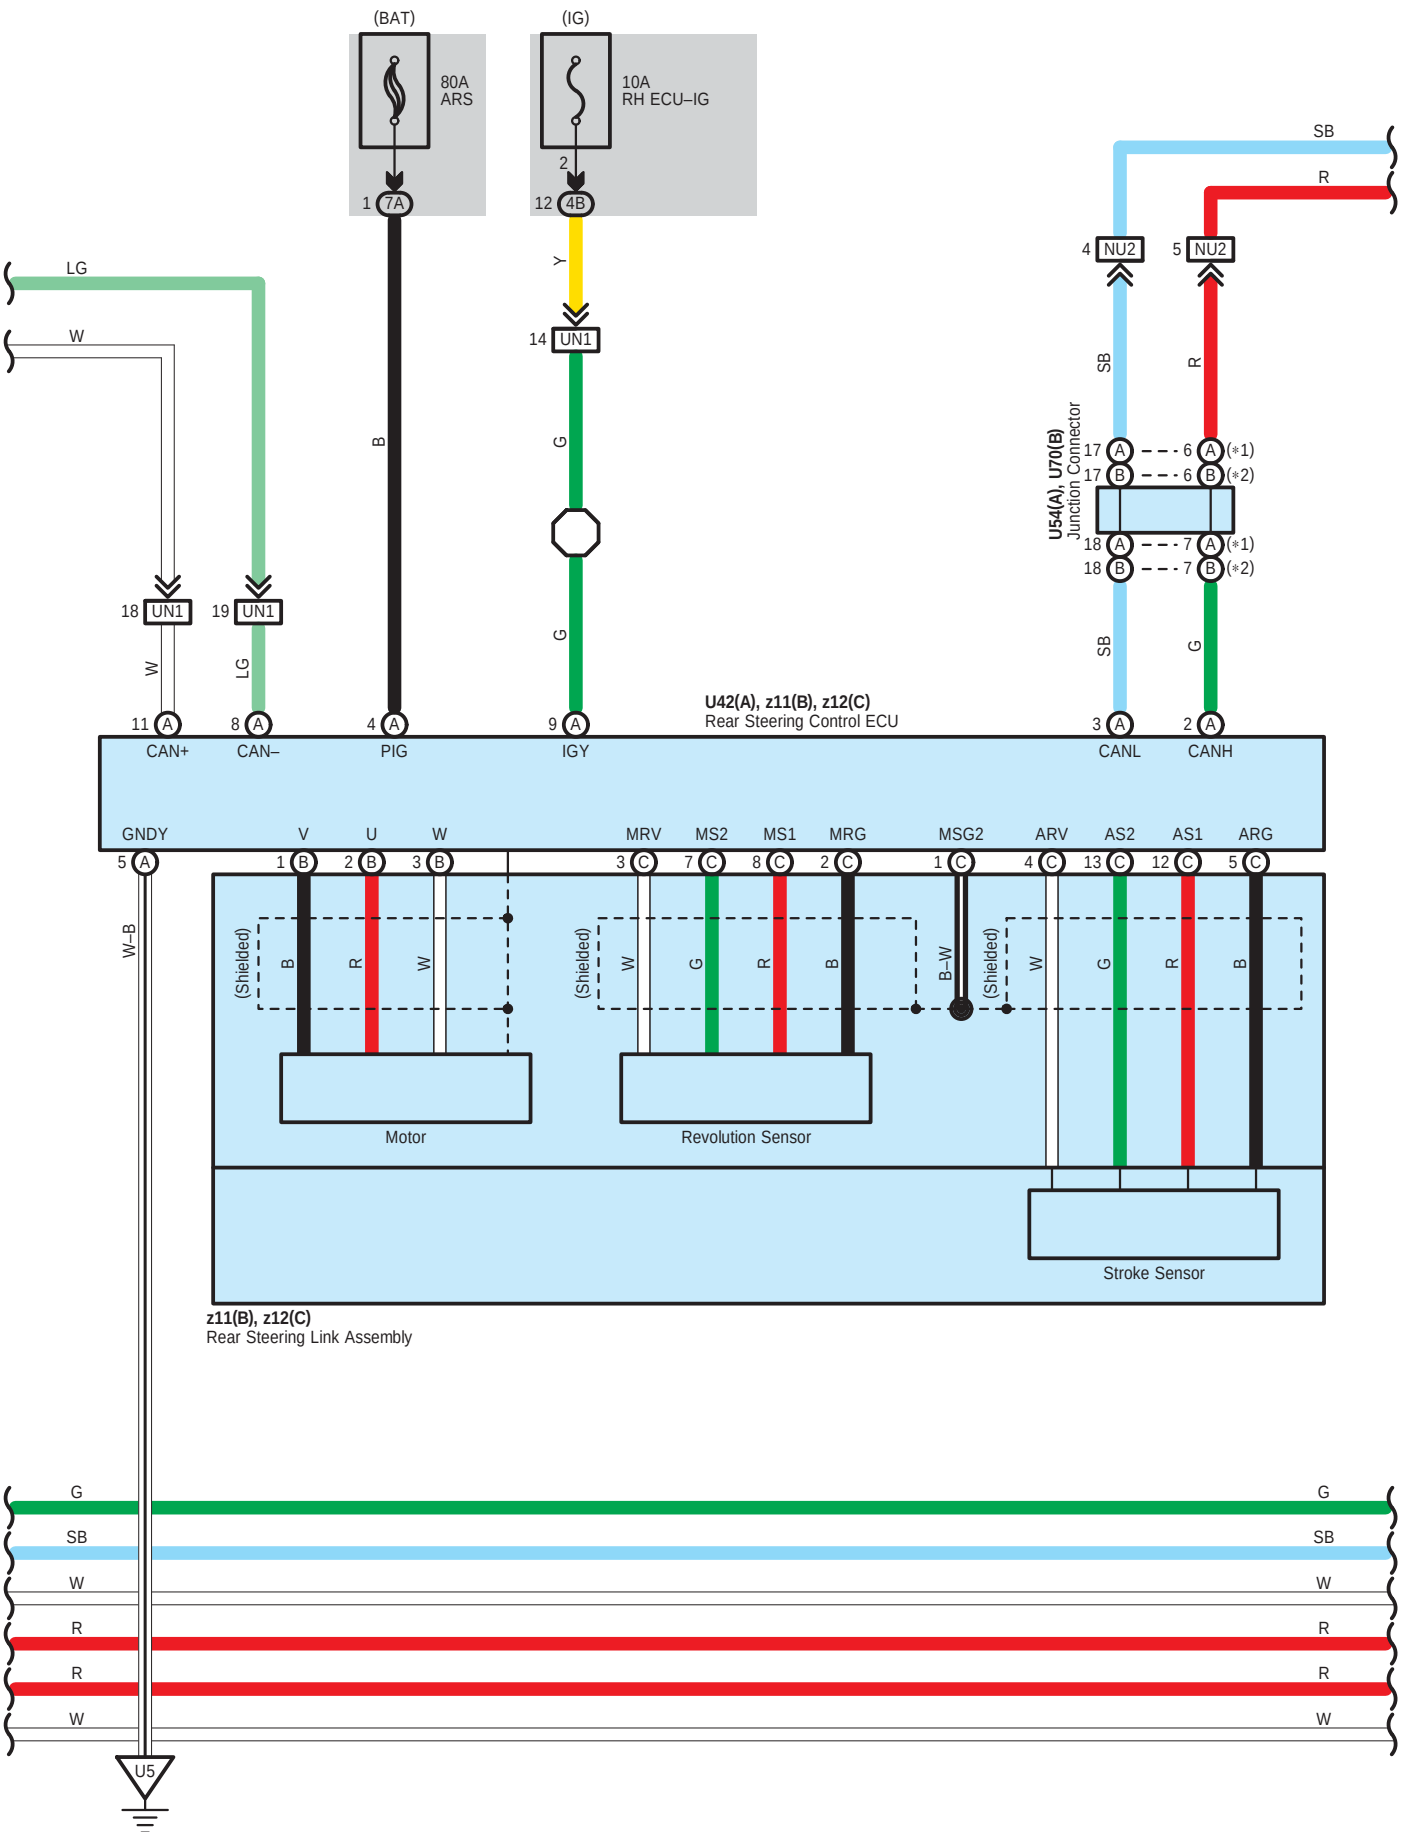


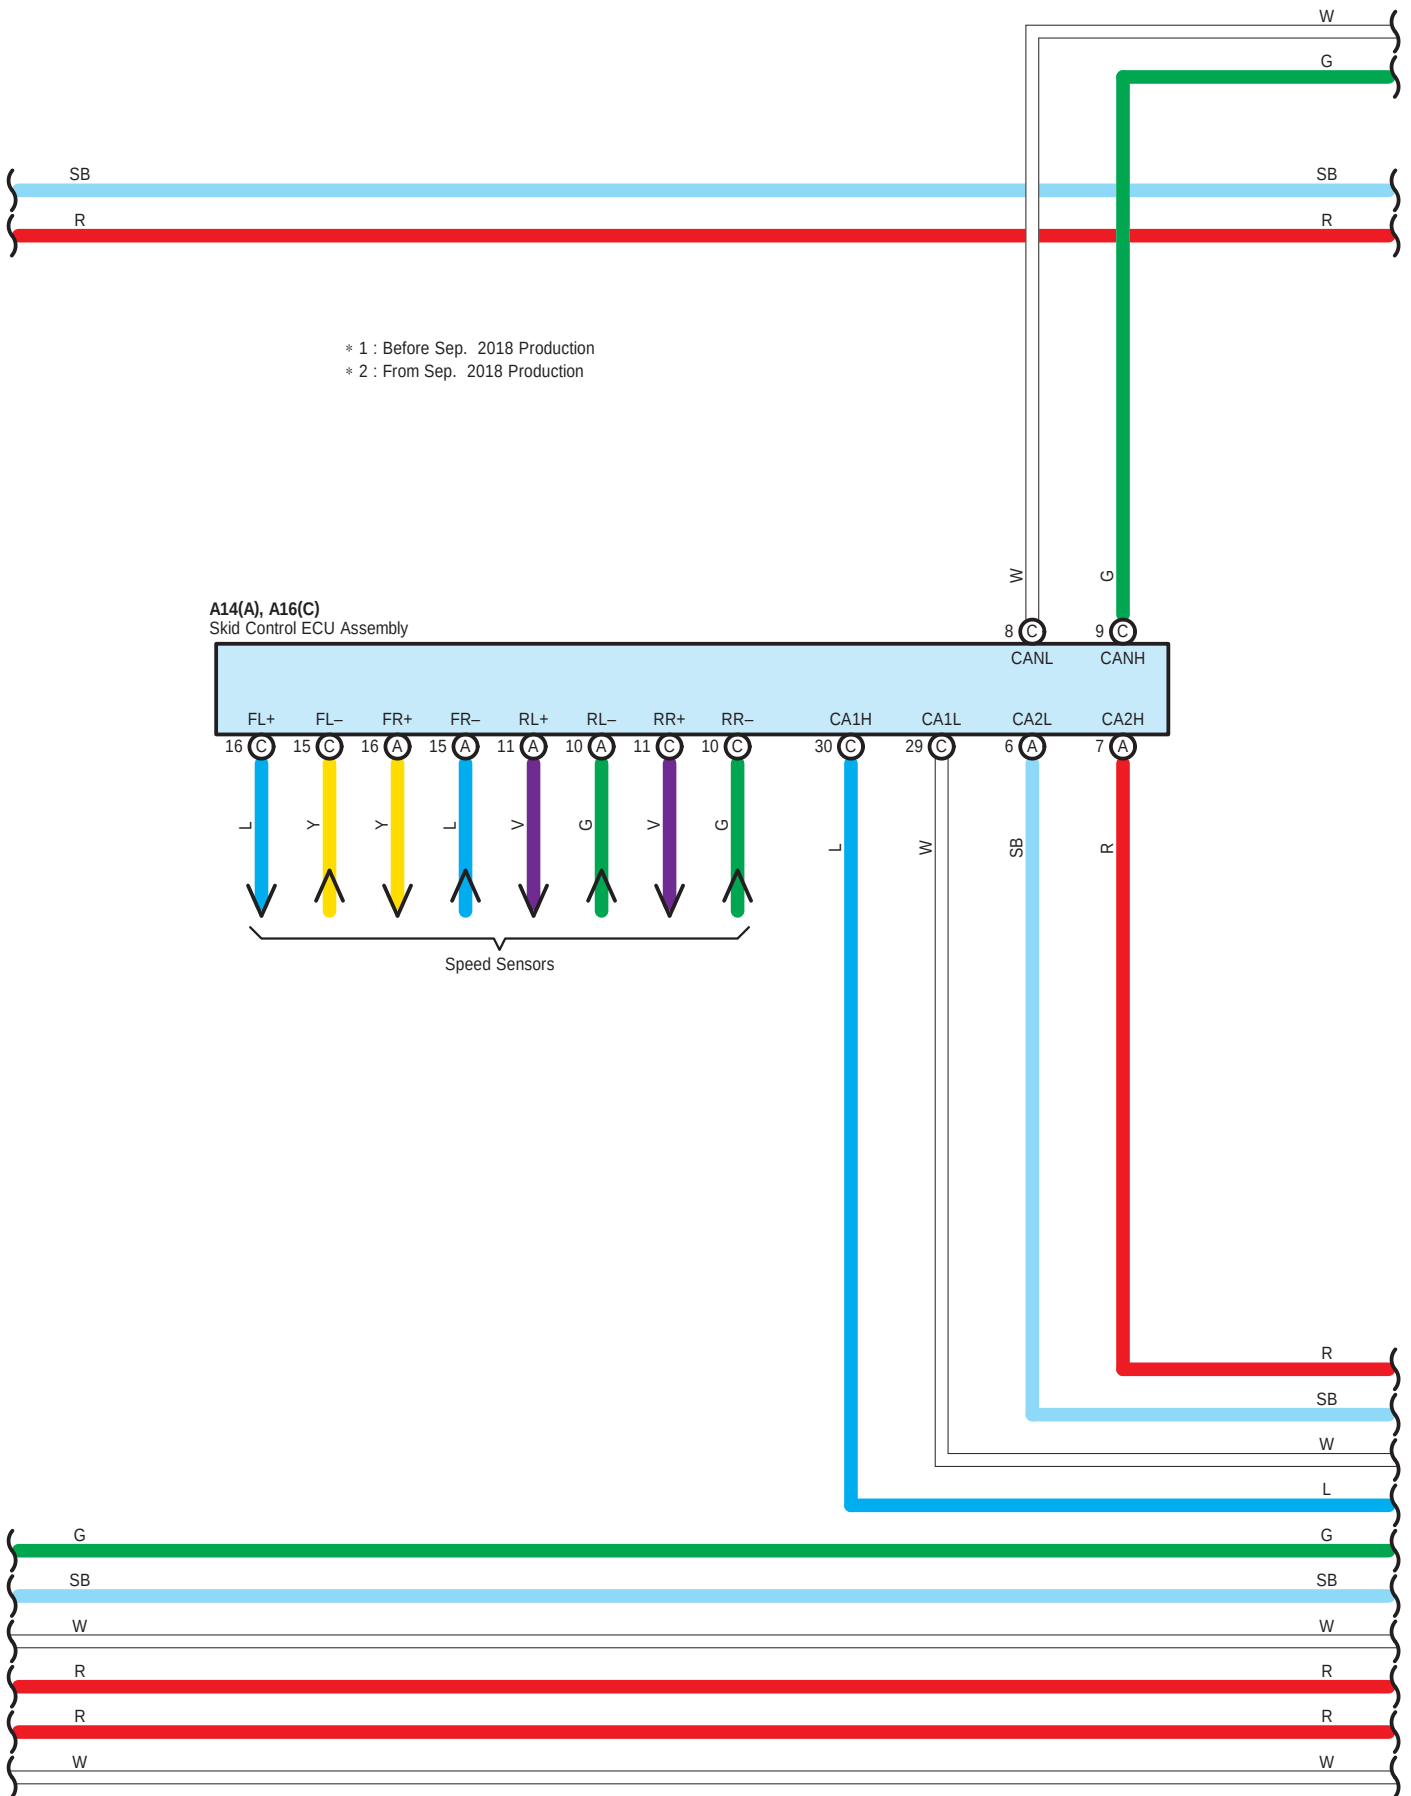

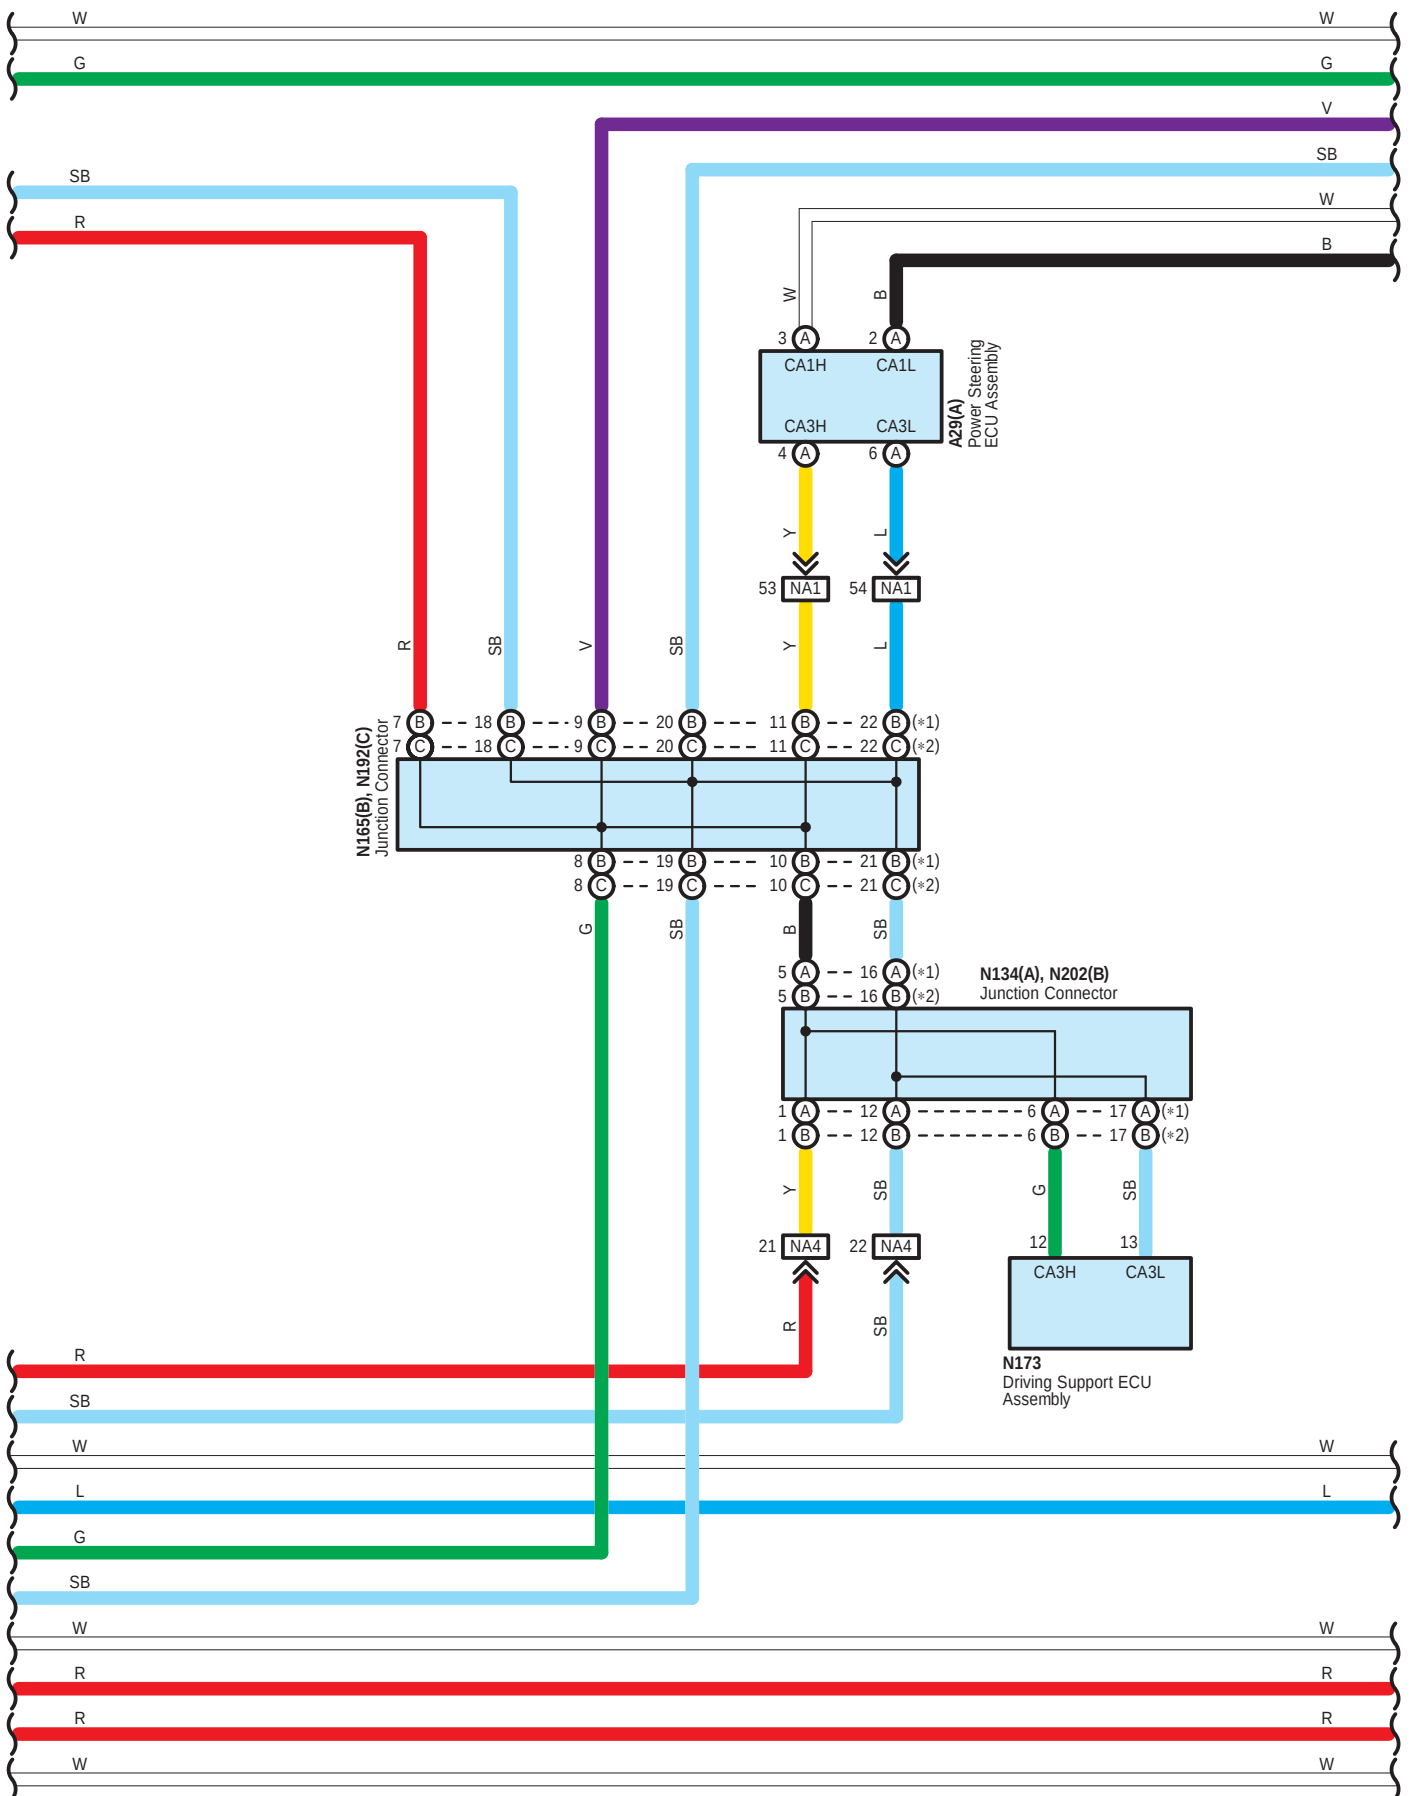


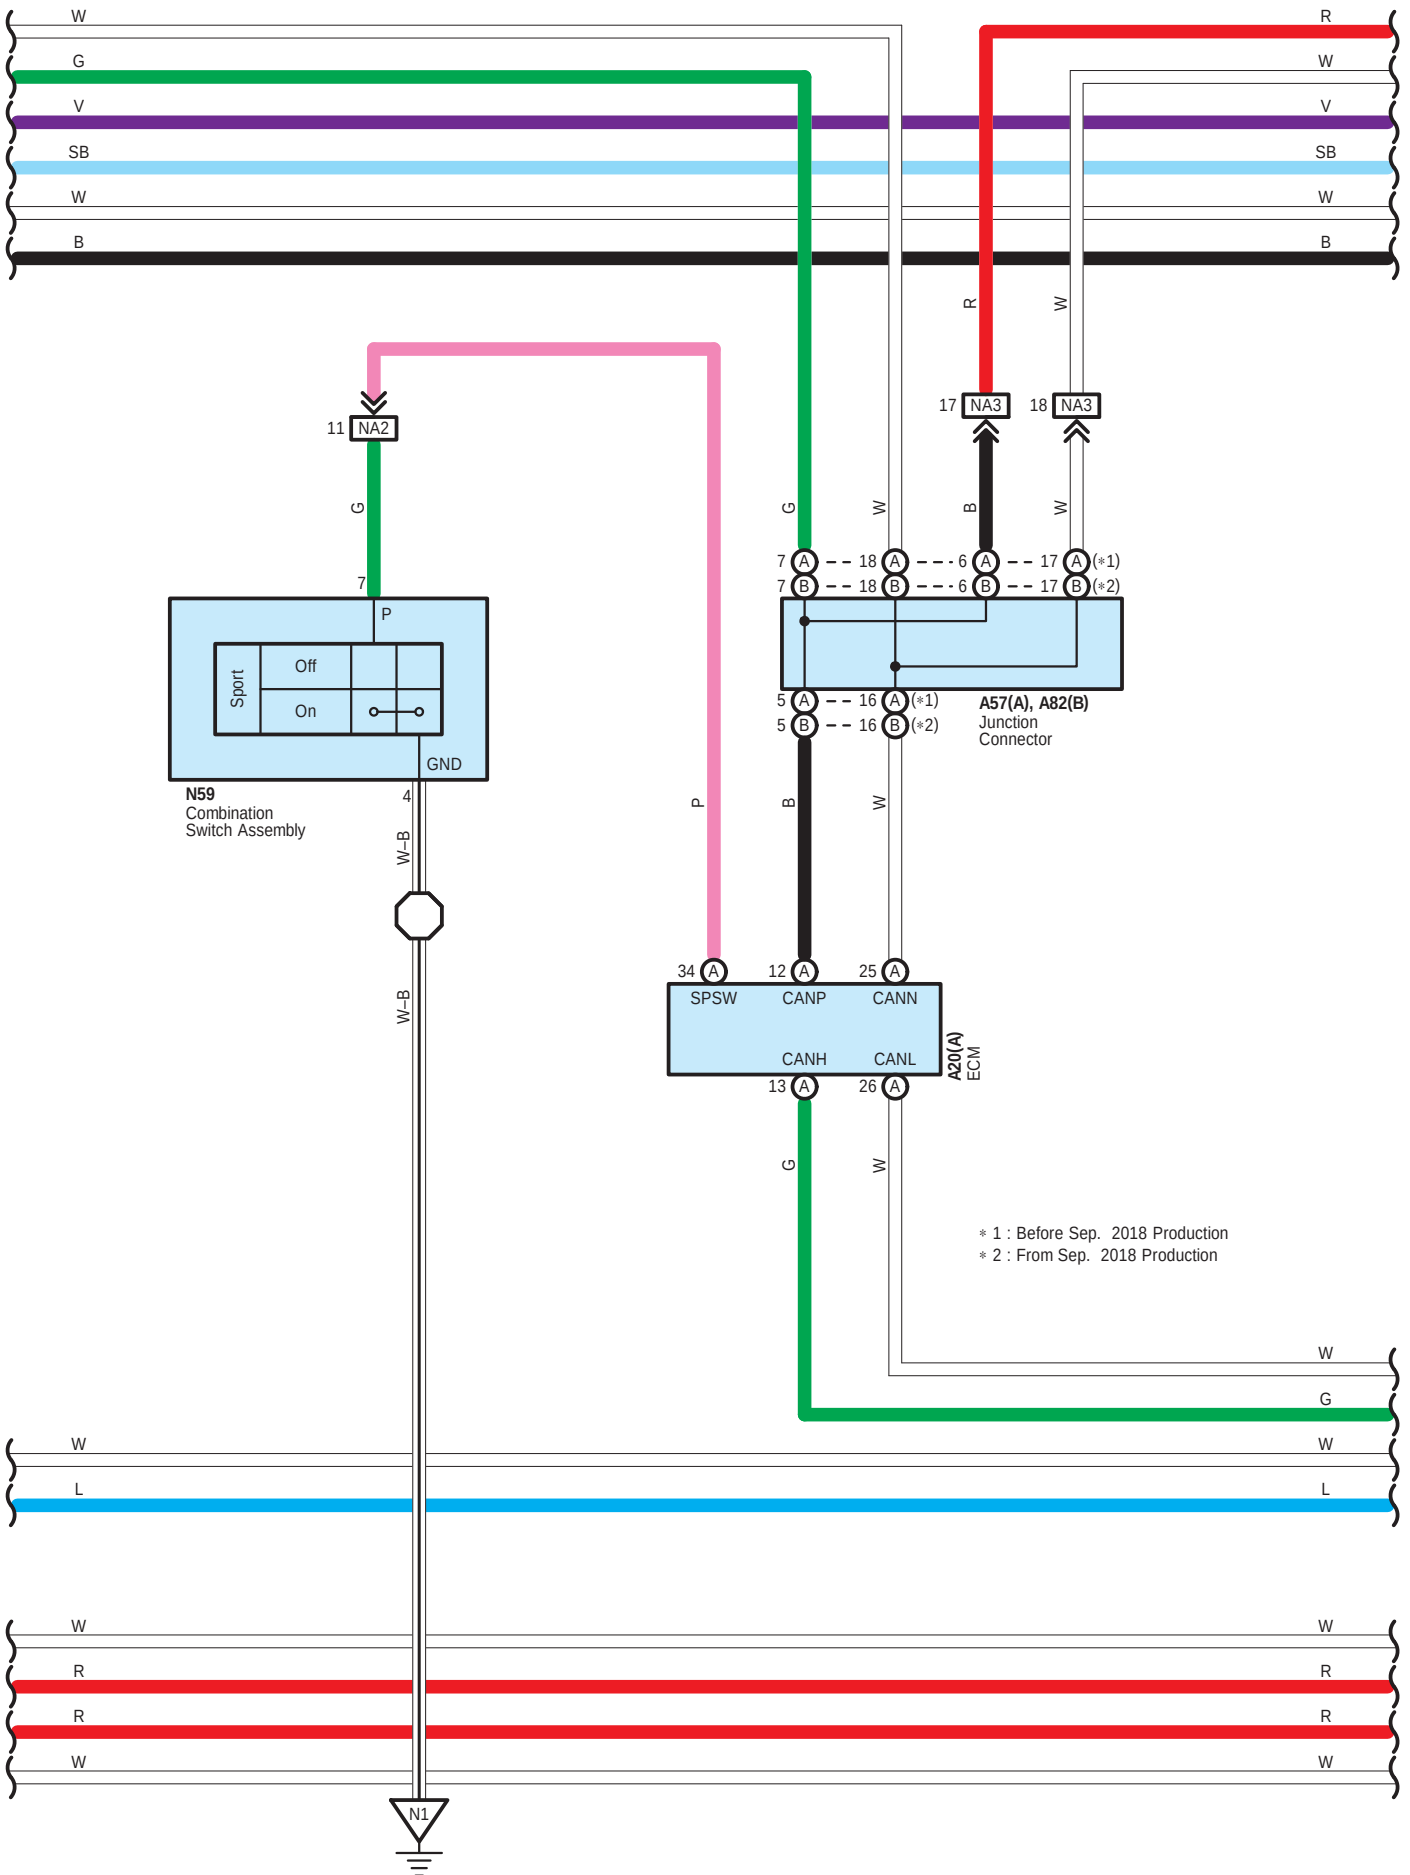

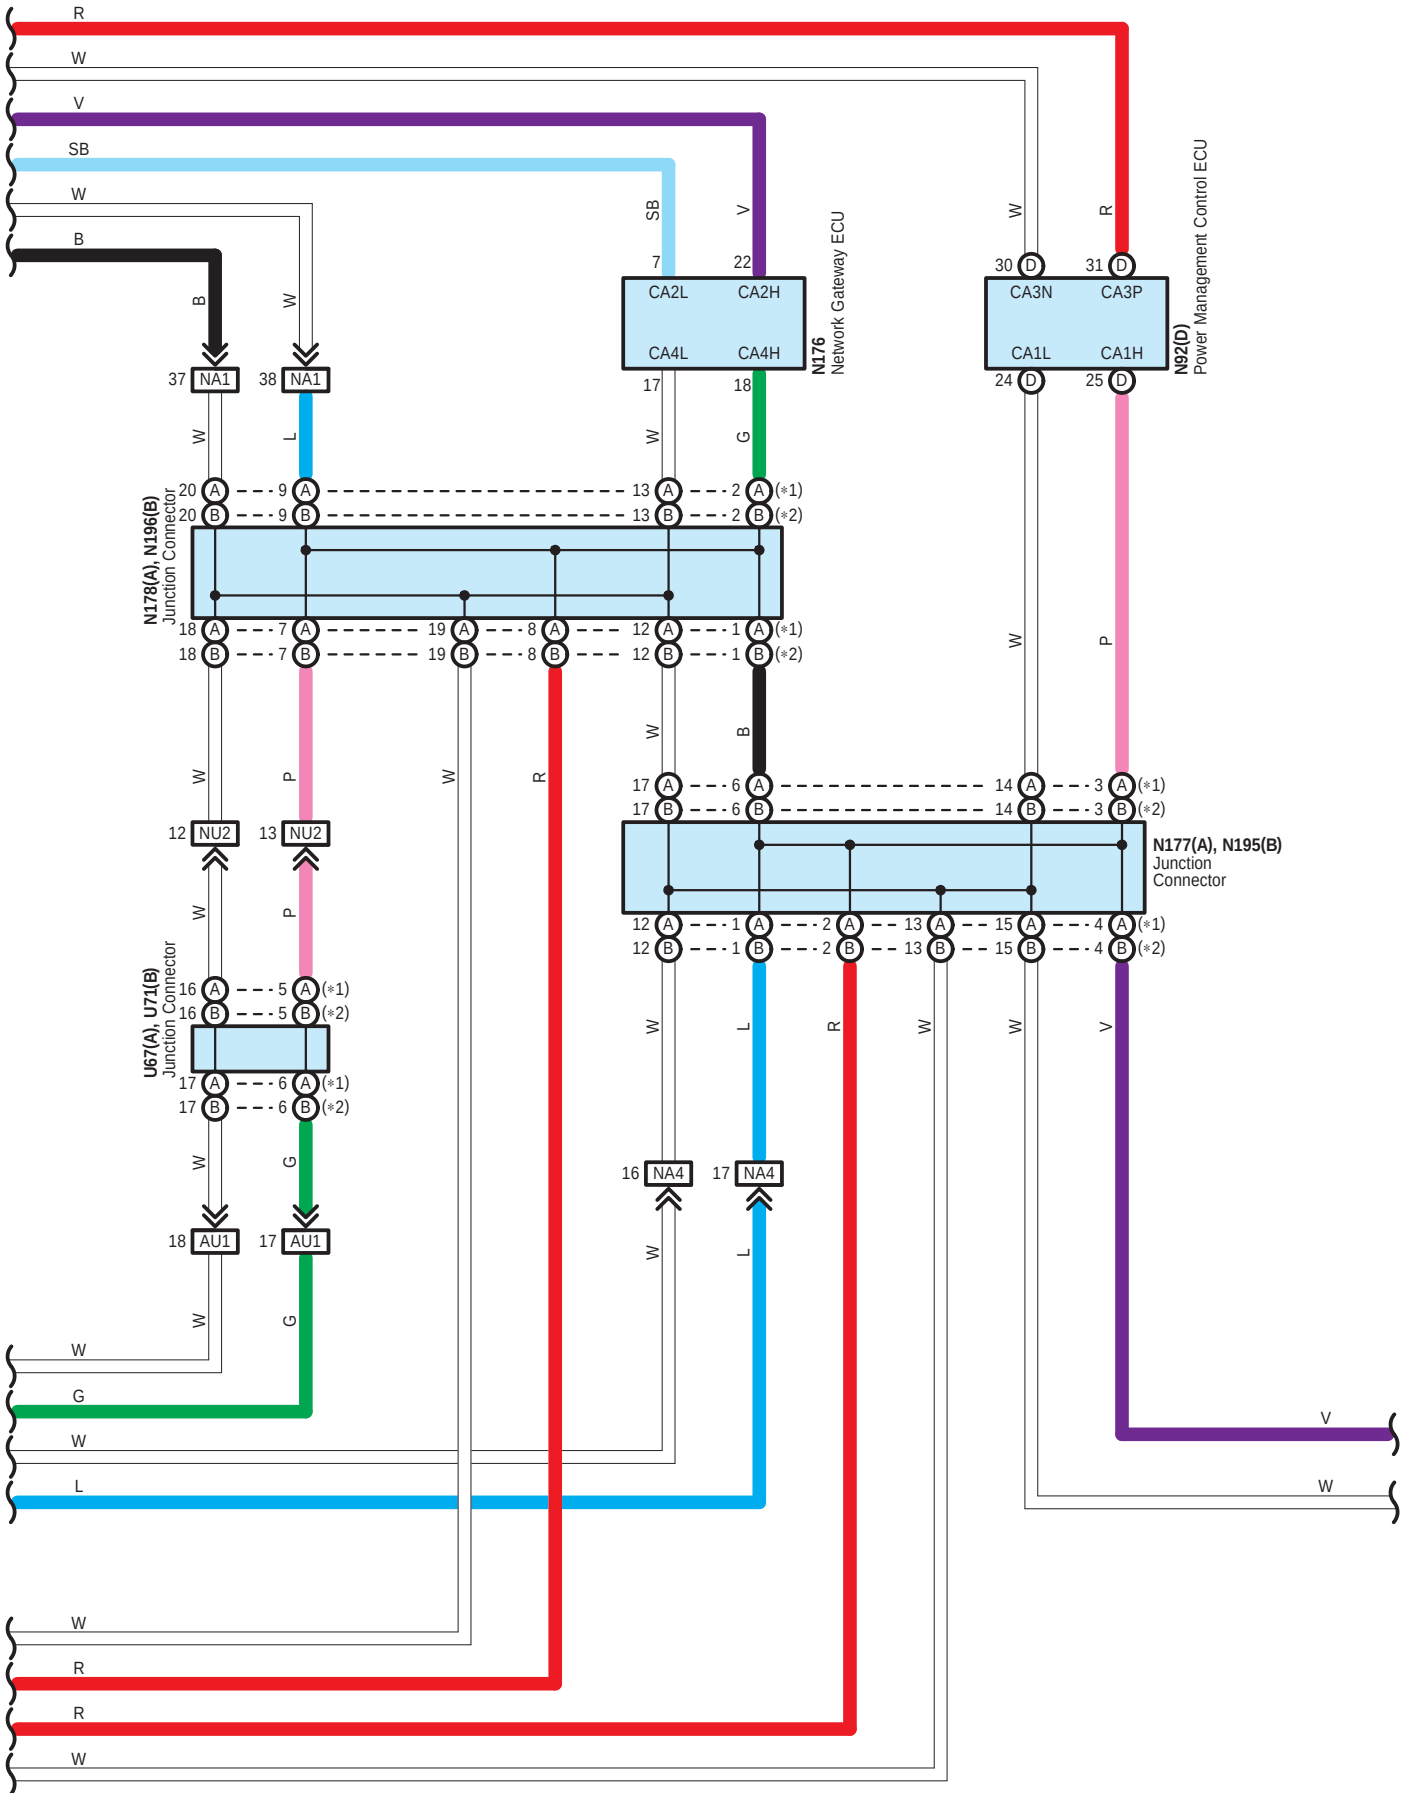


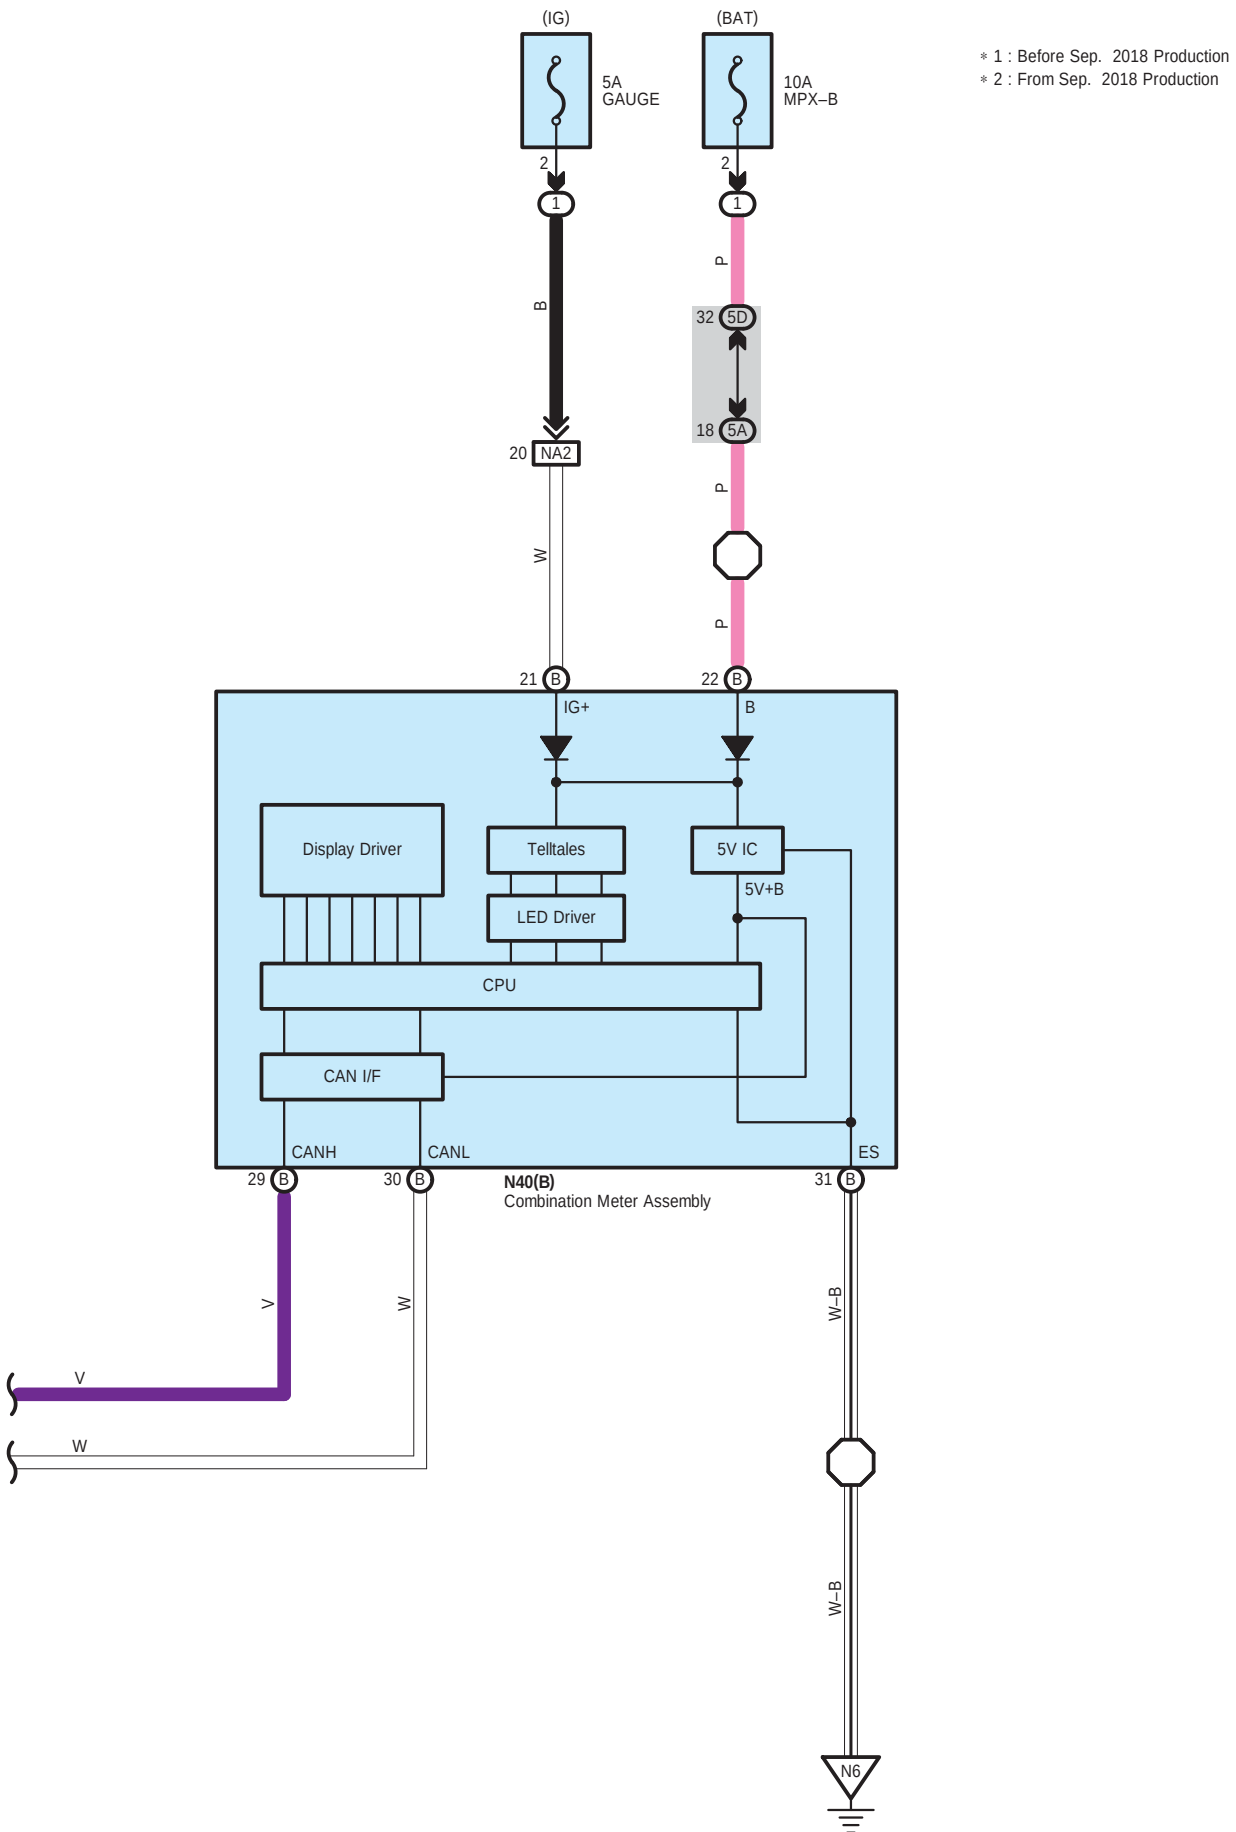


A 14
Black

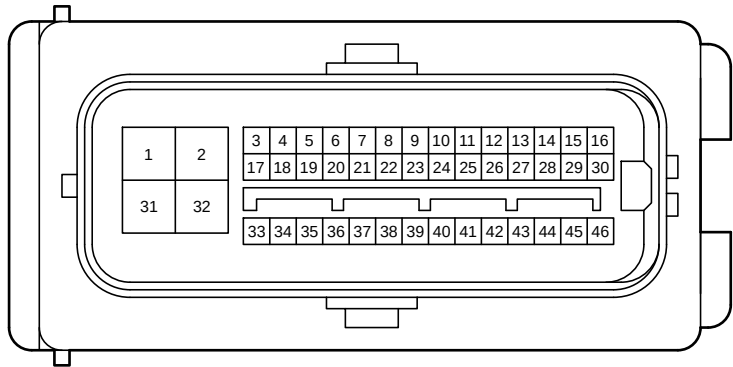


A 16
Gray

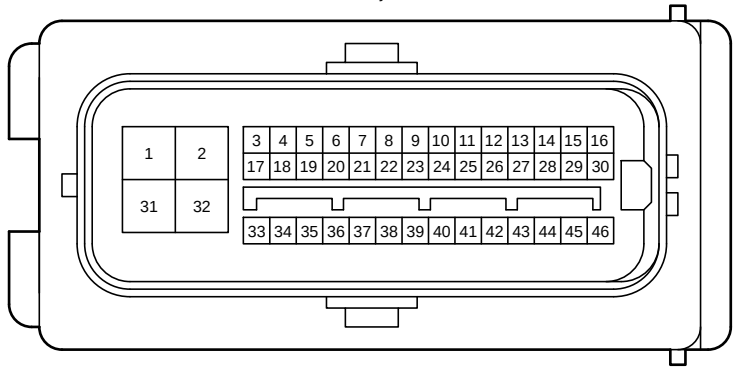


A 20
Black

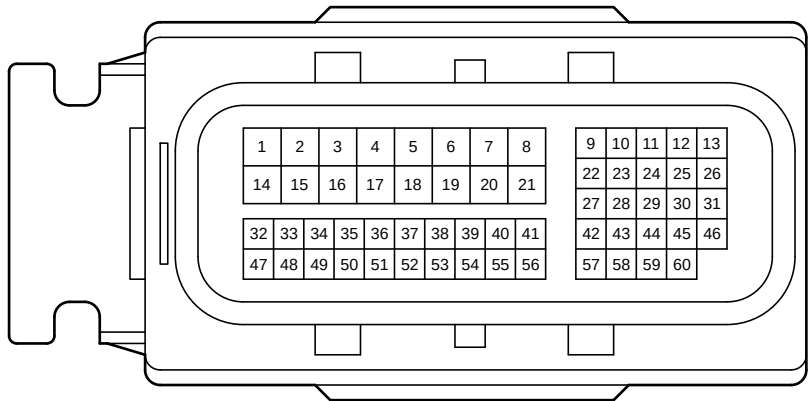


A 29
Black

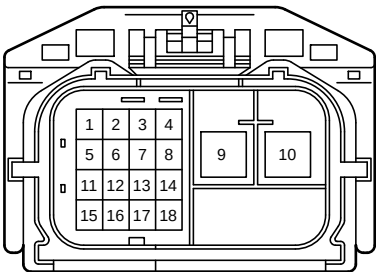


A 31
White

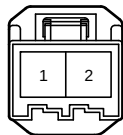


A 57
Blue

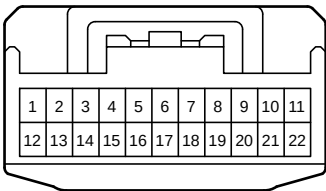


A 82
Black

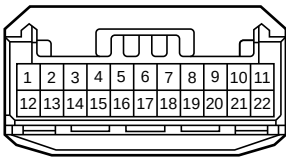


N 31
Black

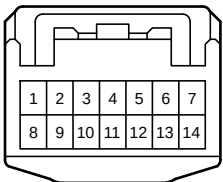


N 33
White

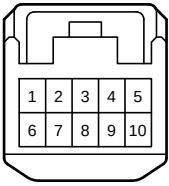


N 38
White

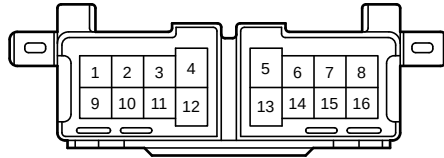


N 40
Black

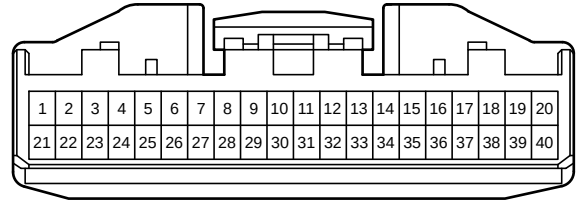


N 59
Black

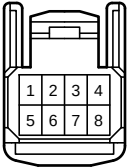


N 92
Gray

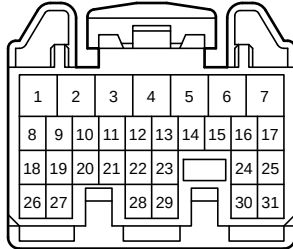


N102
White

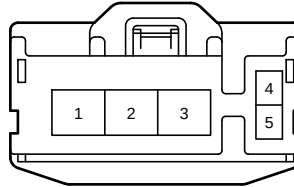


N103
White

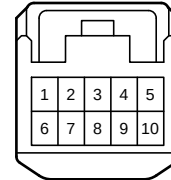


N104
White

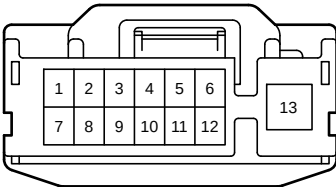


N134
Black

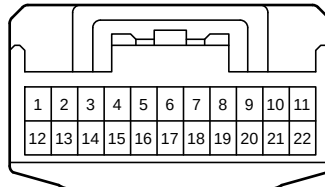


N165
Black

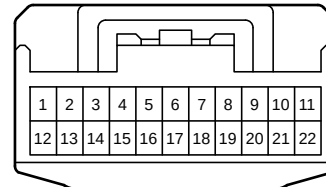


N173
White

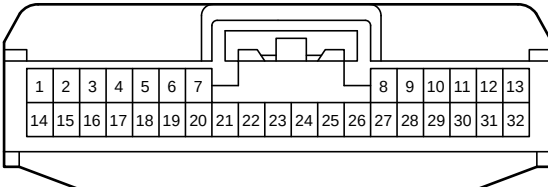


N176
Black

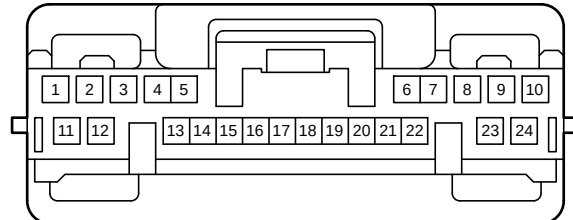


N177
Gray

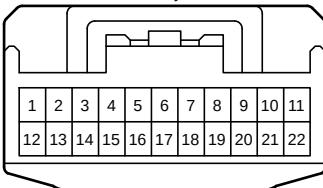


N178
Gray

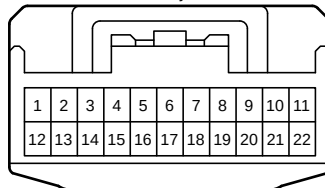


N192
Black

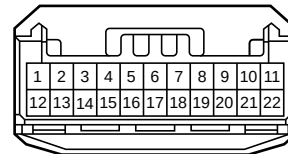


N195
Black

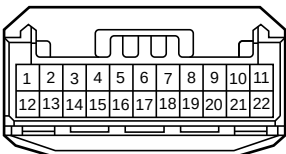


N196
Black

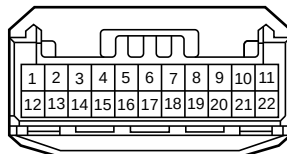


N202
Black

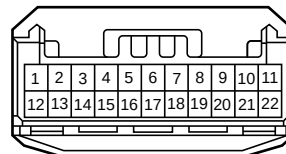


U 42
Black

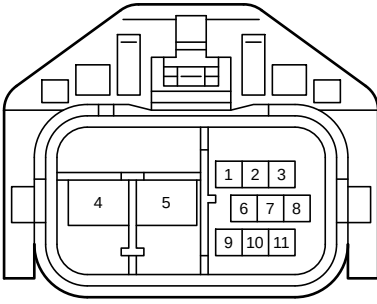


U 54
Blue

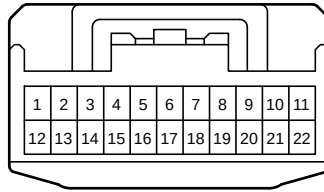


U 67
Gray

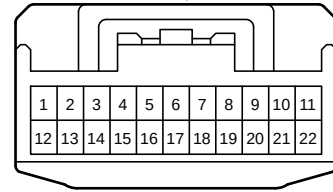


U 70
Black

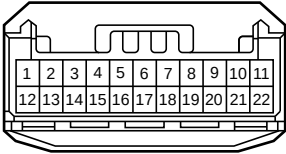


U 71
Black

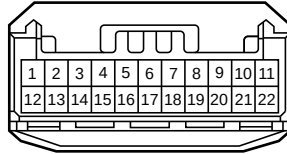


z 4
Black

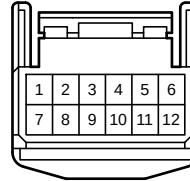


z 11
Black

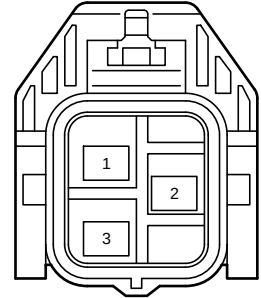


z 12
Black

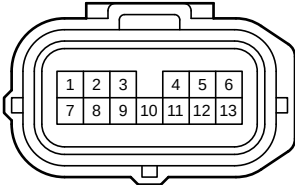


4B
White

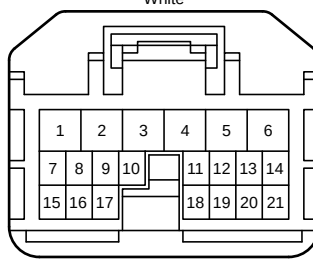


5A
White

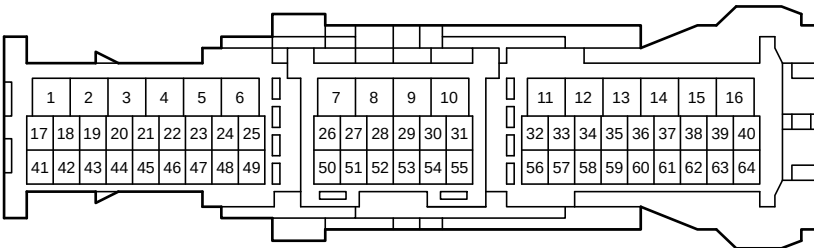


5B
White

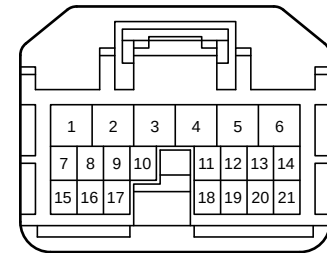



5D
White

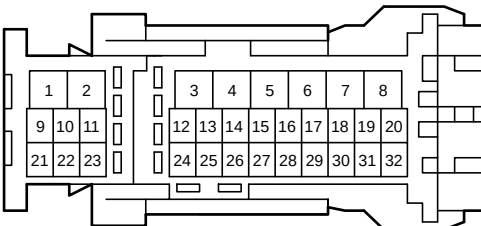



7A
Black

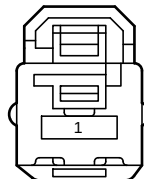



AU1
White

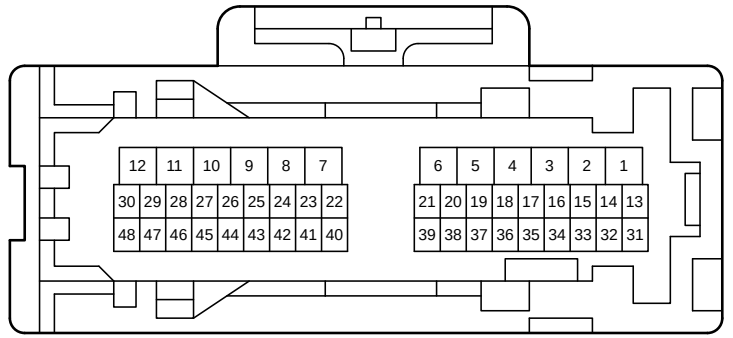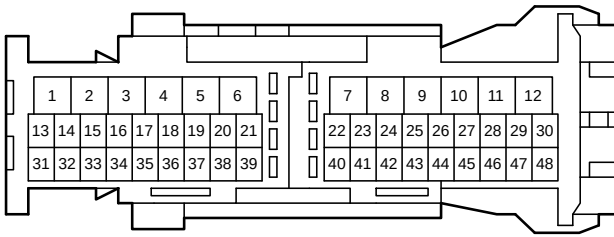



NA1
White

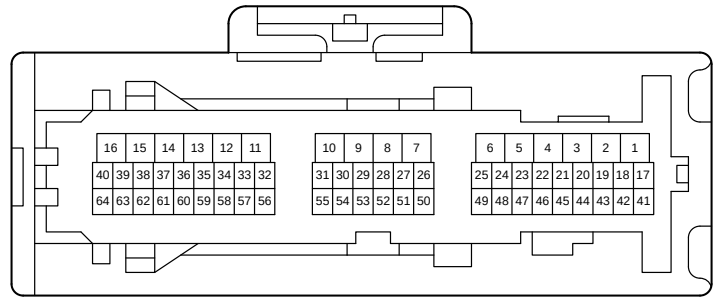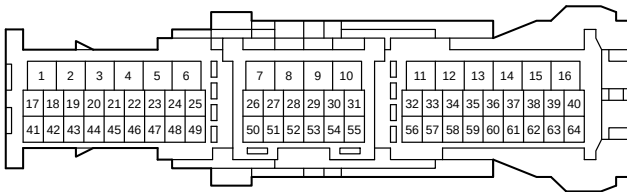


NA2
White

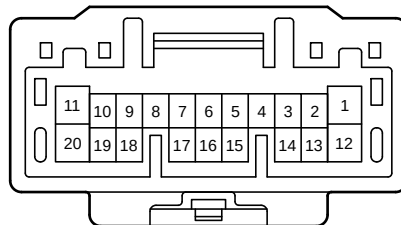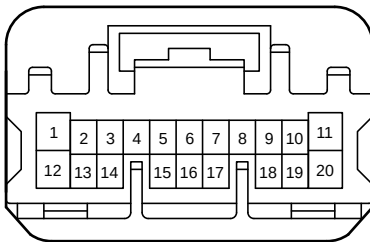


NA3
White

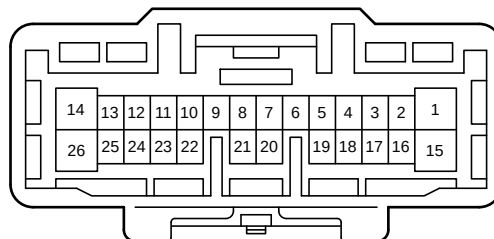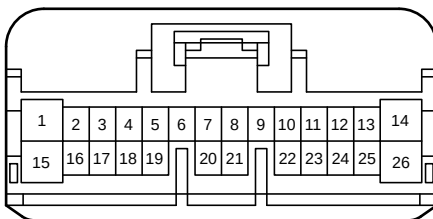

NA4
Gray

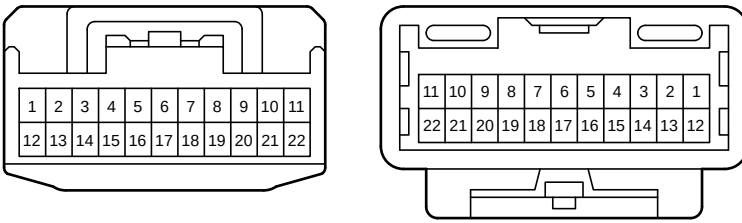

NU2
White

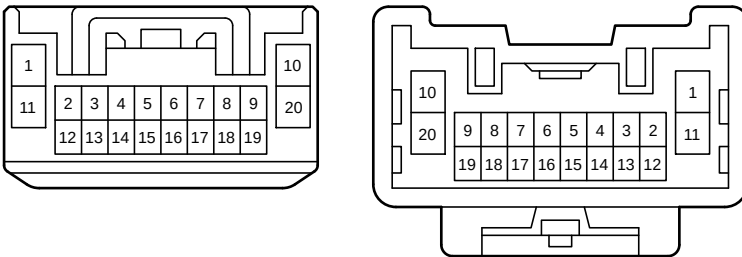

UN1
White

