






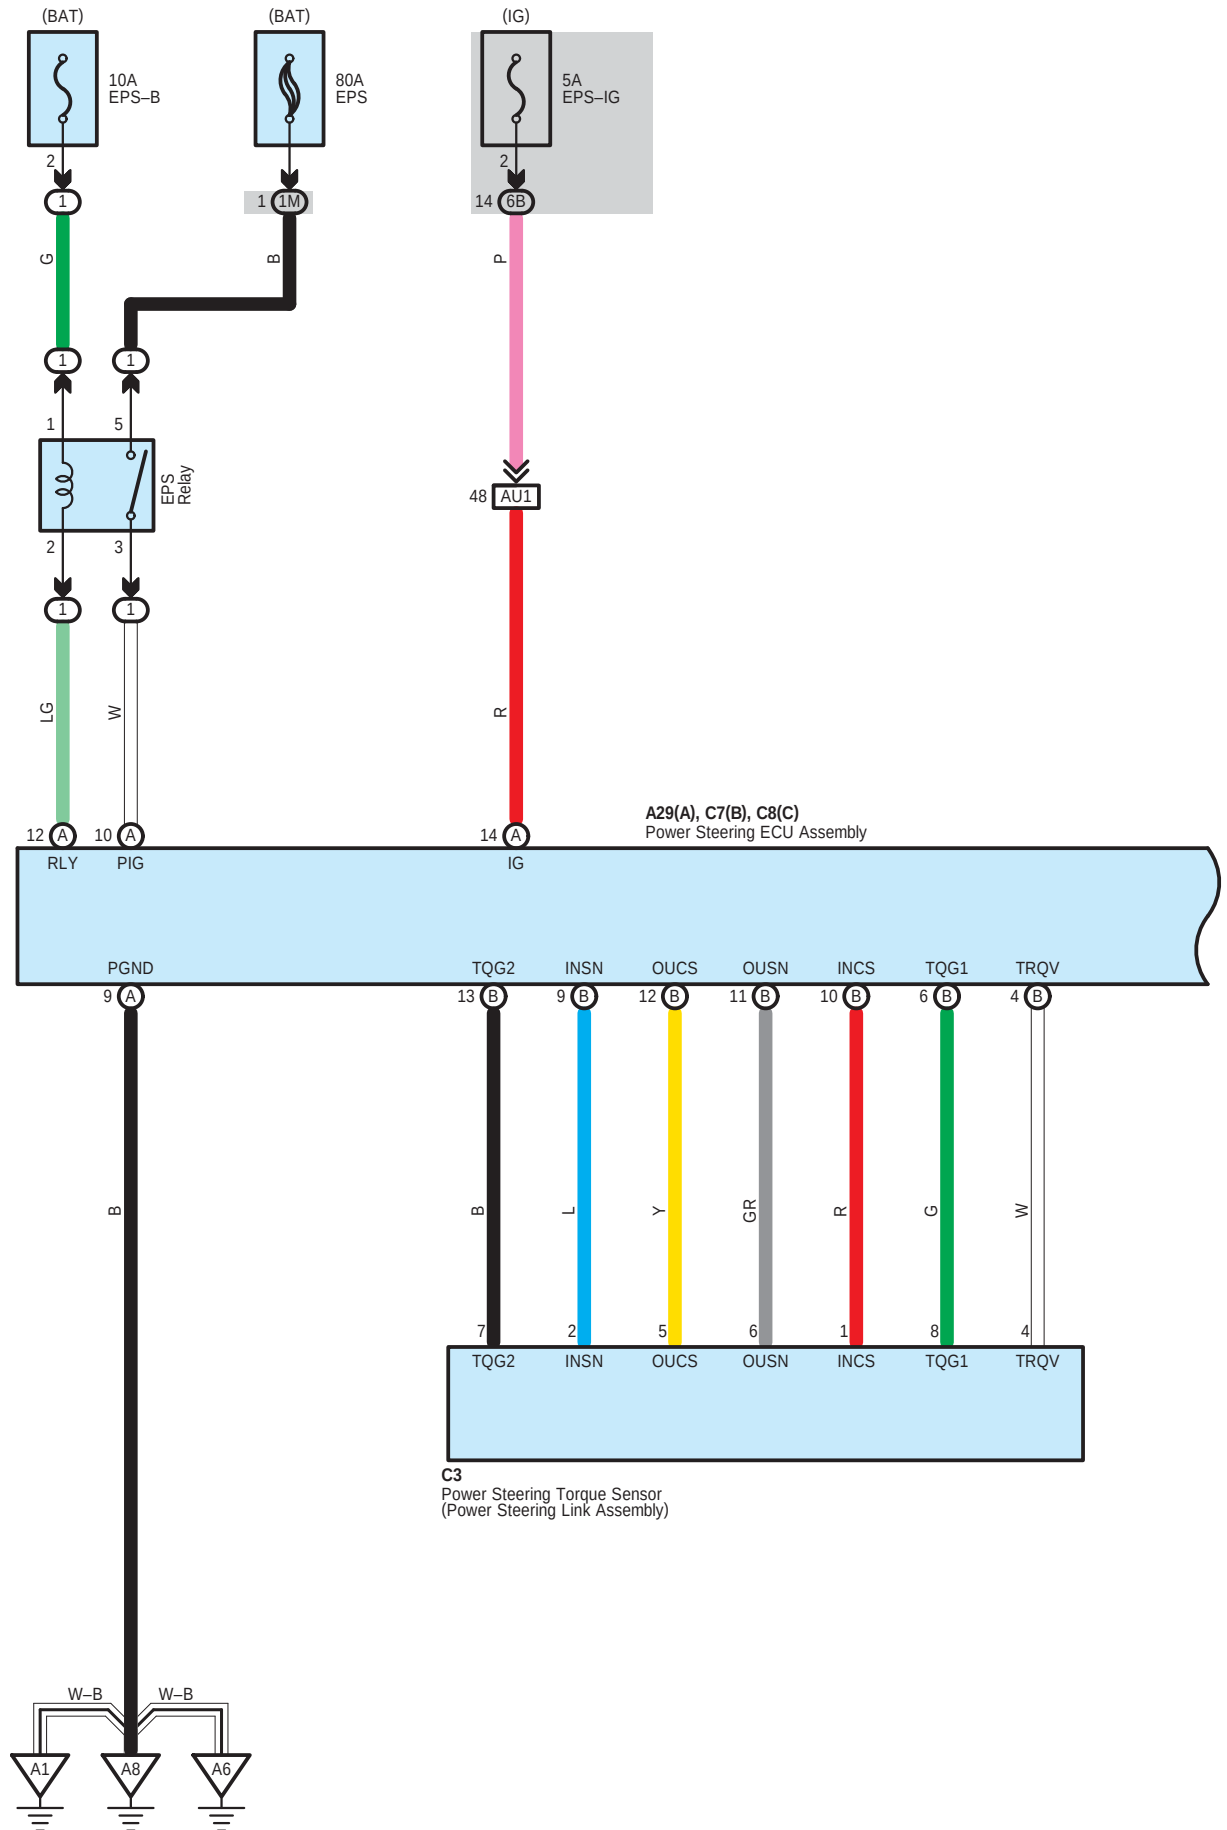


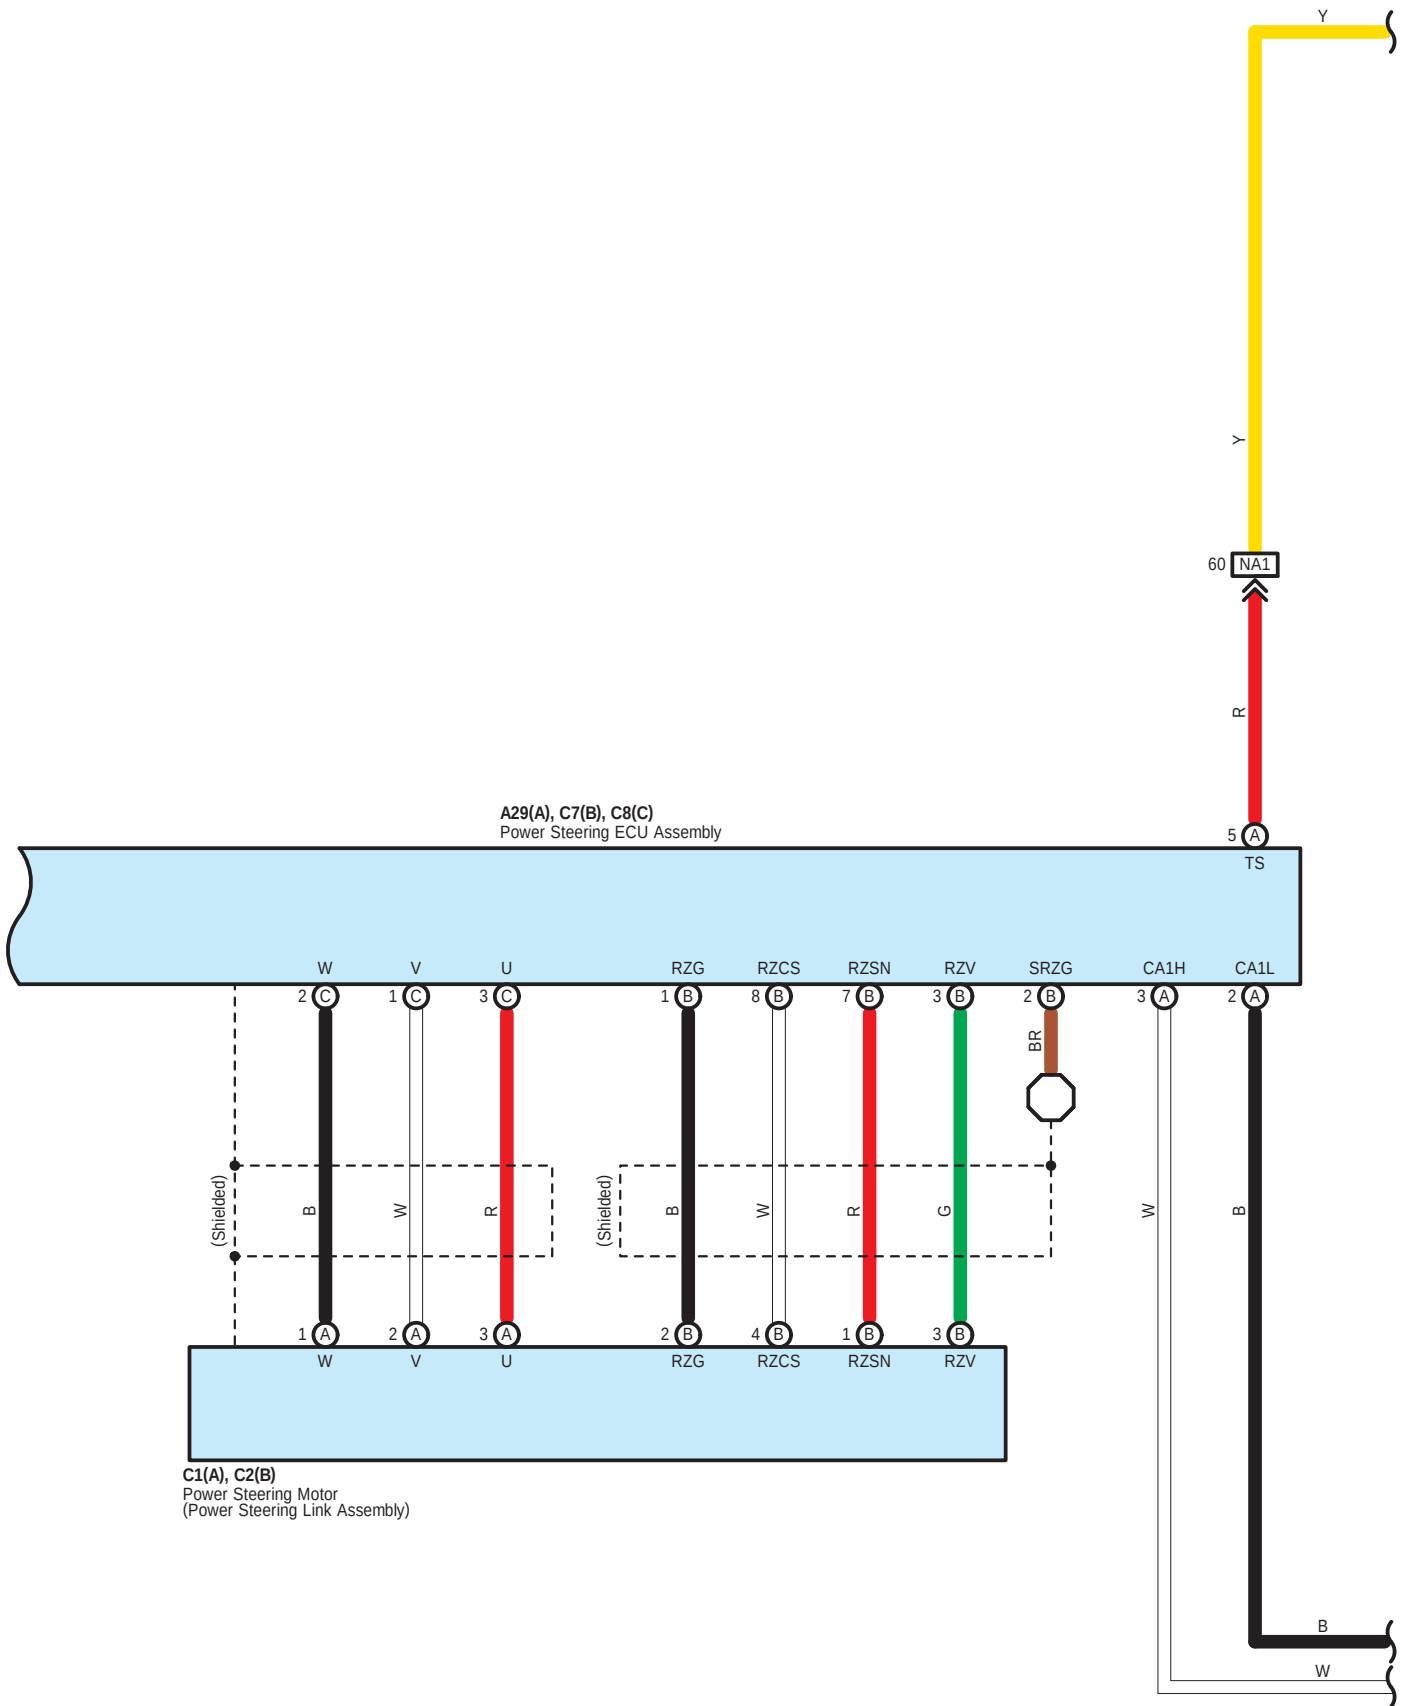

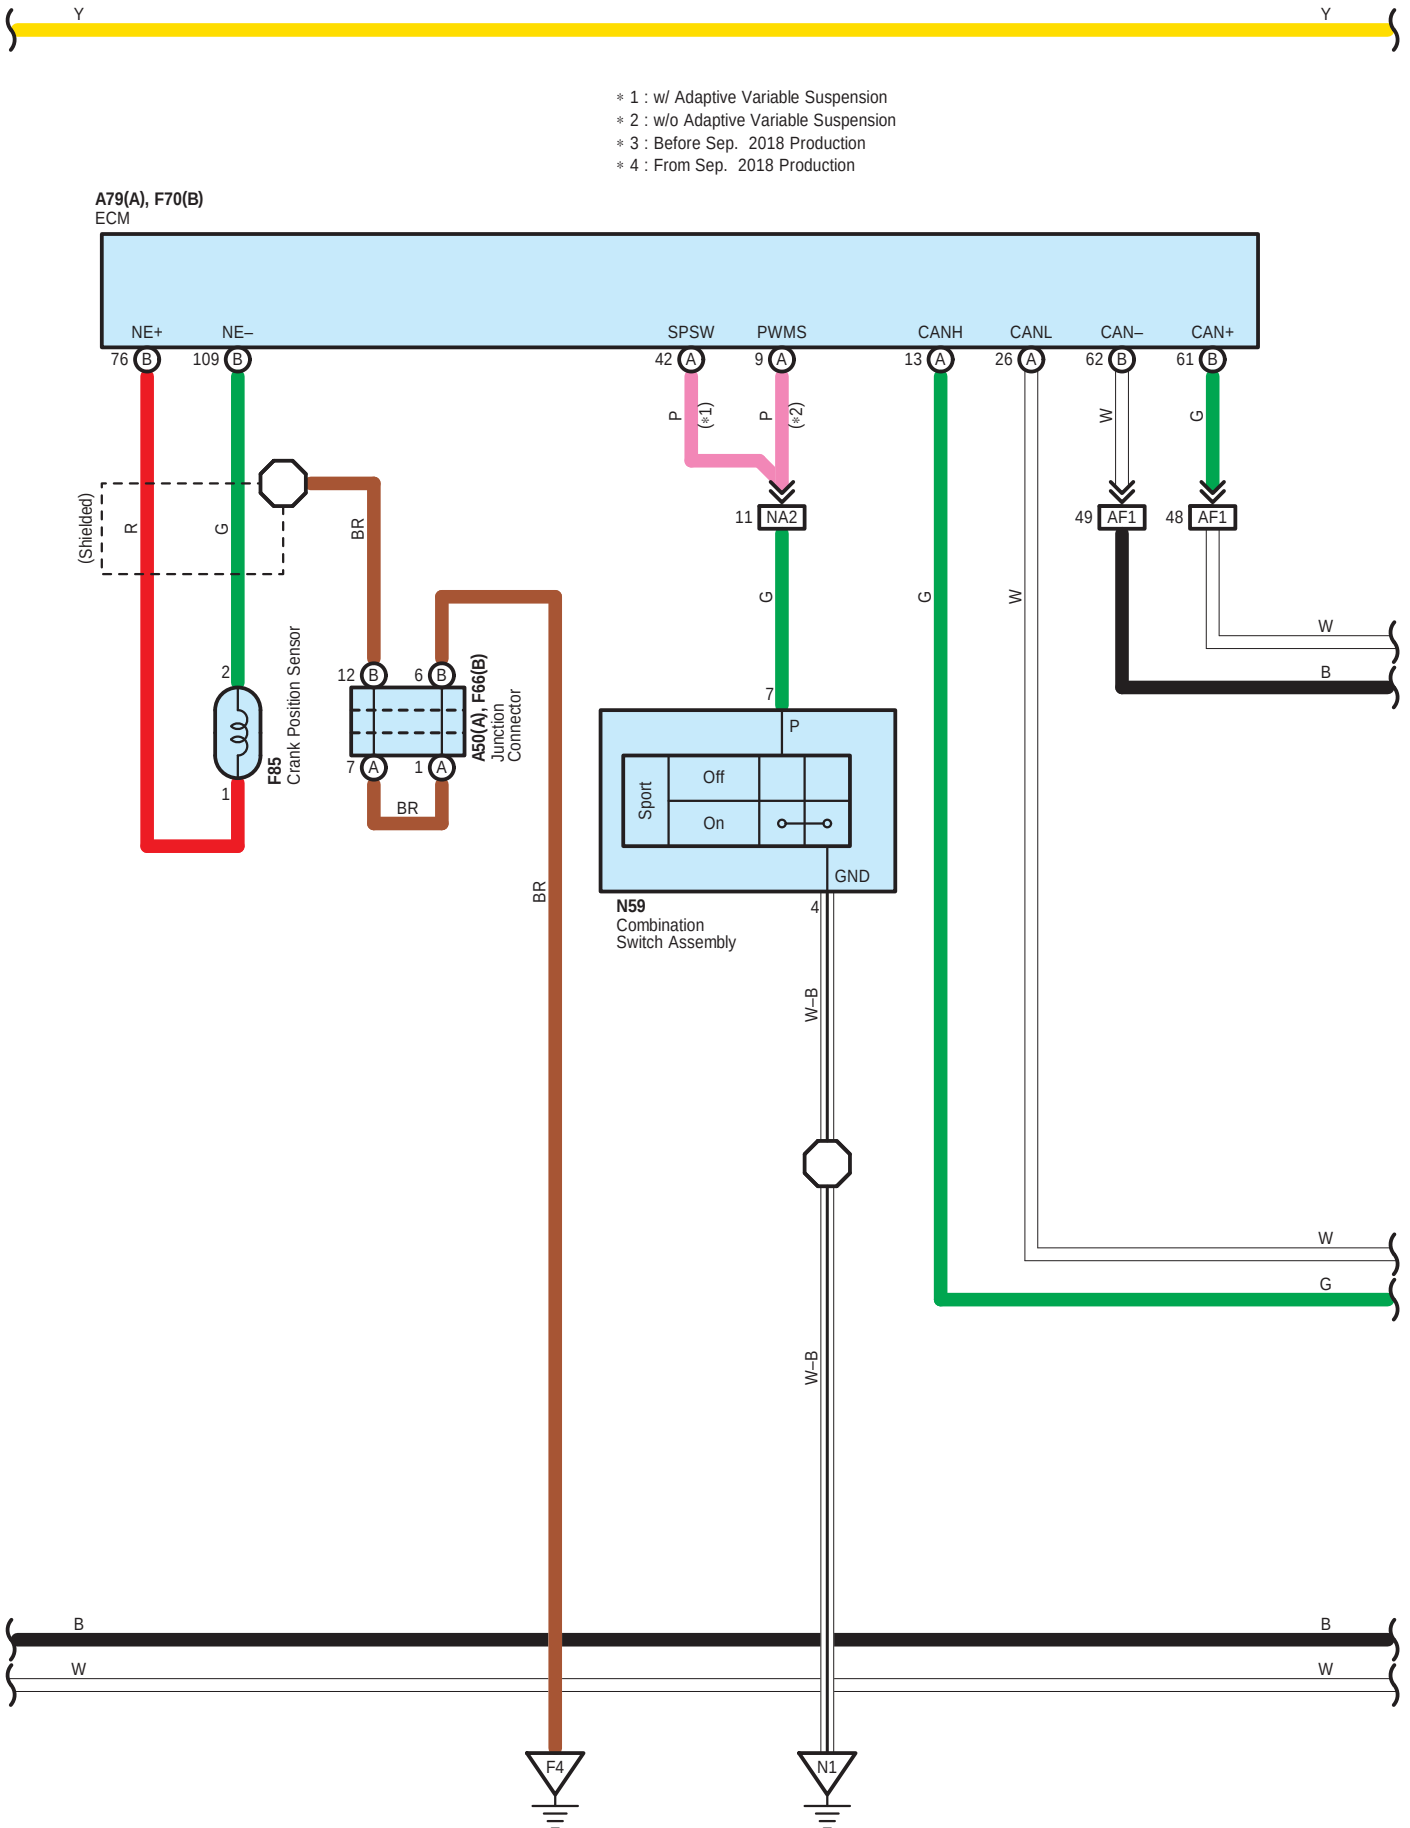


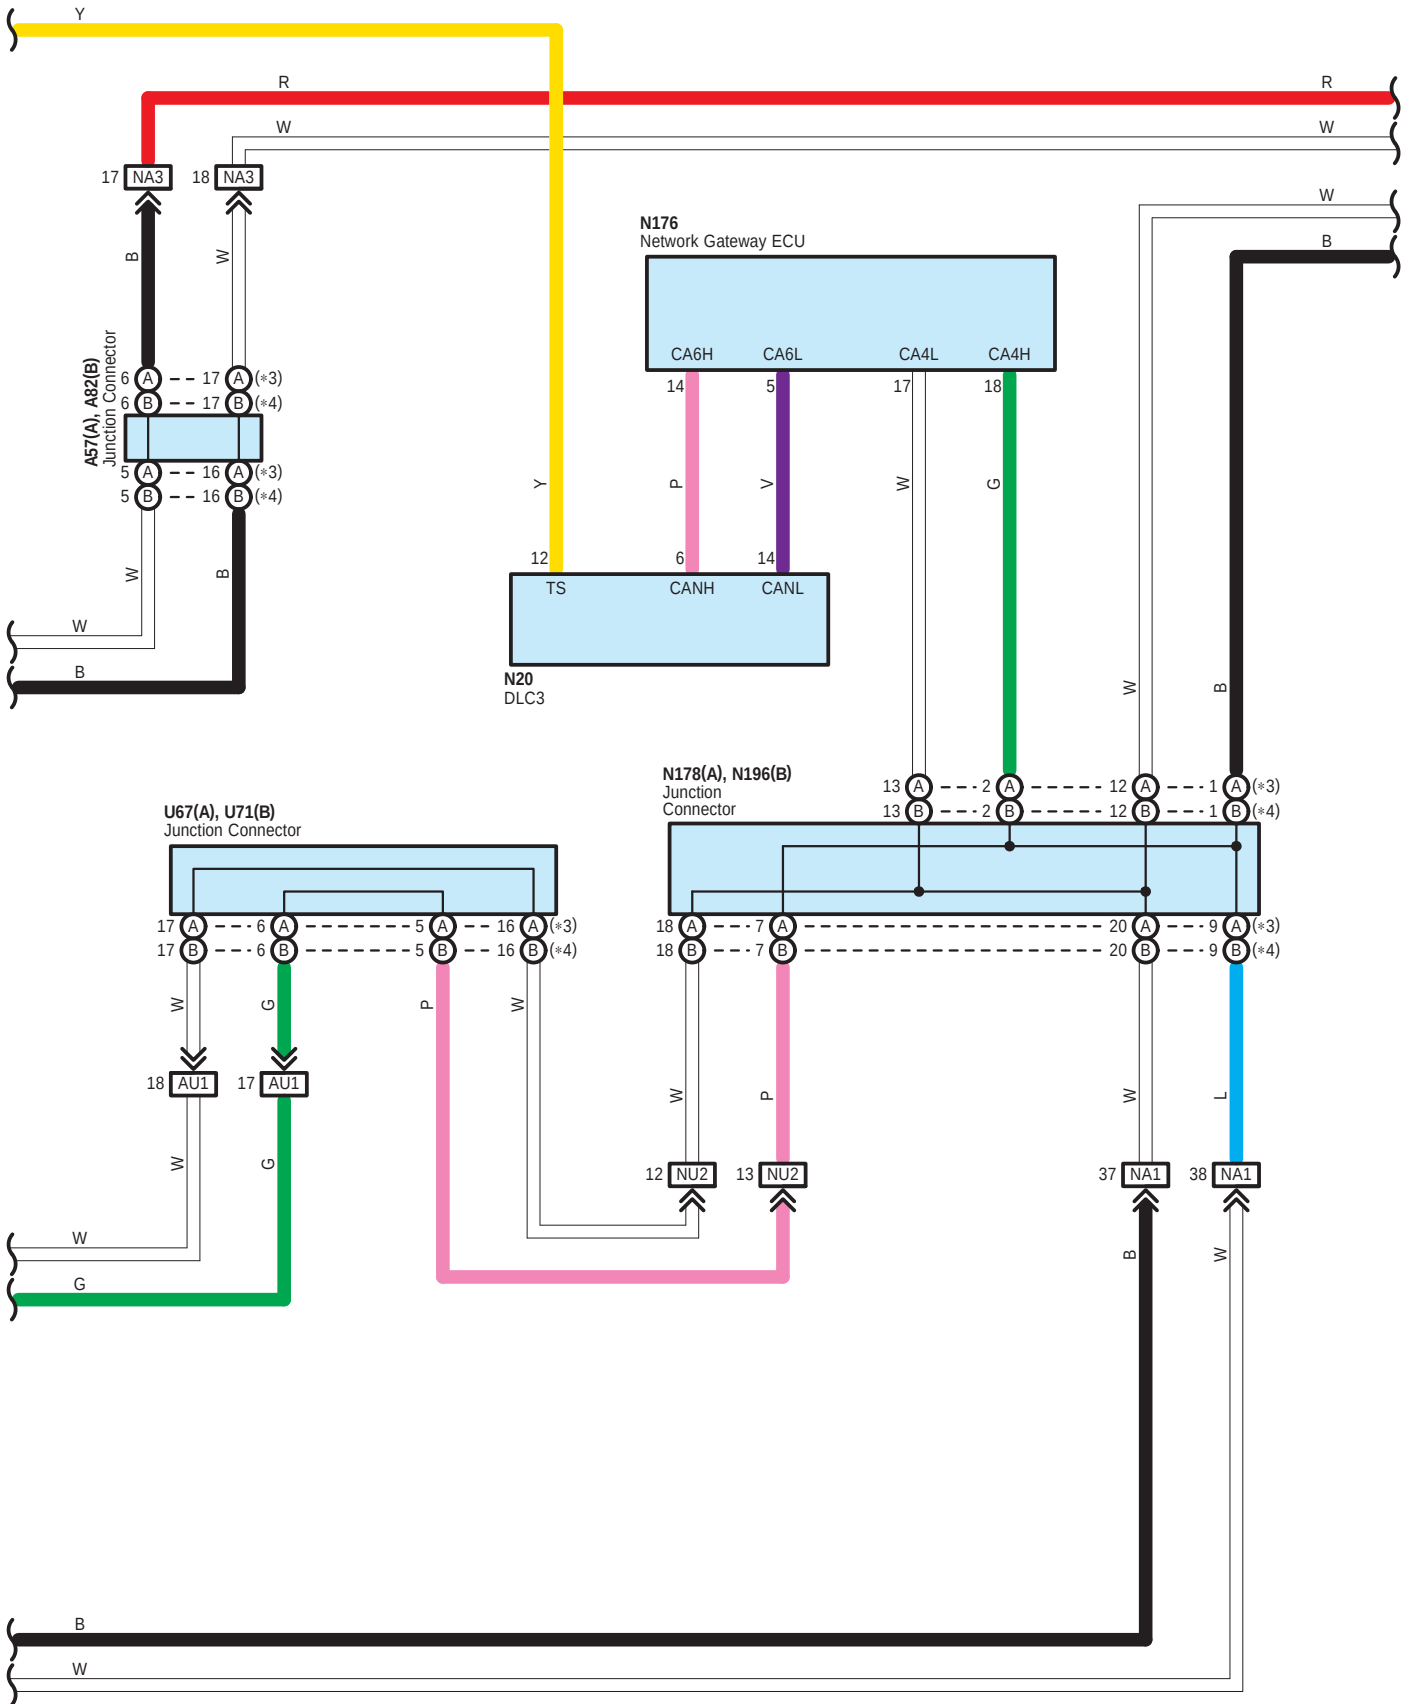

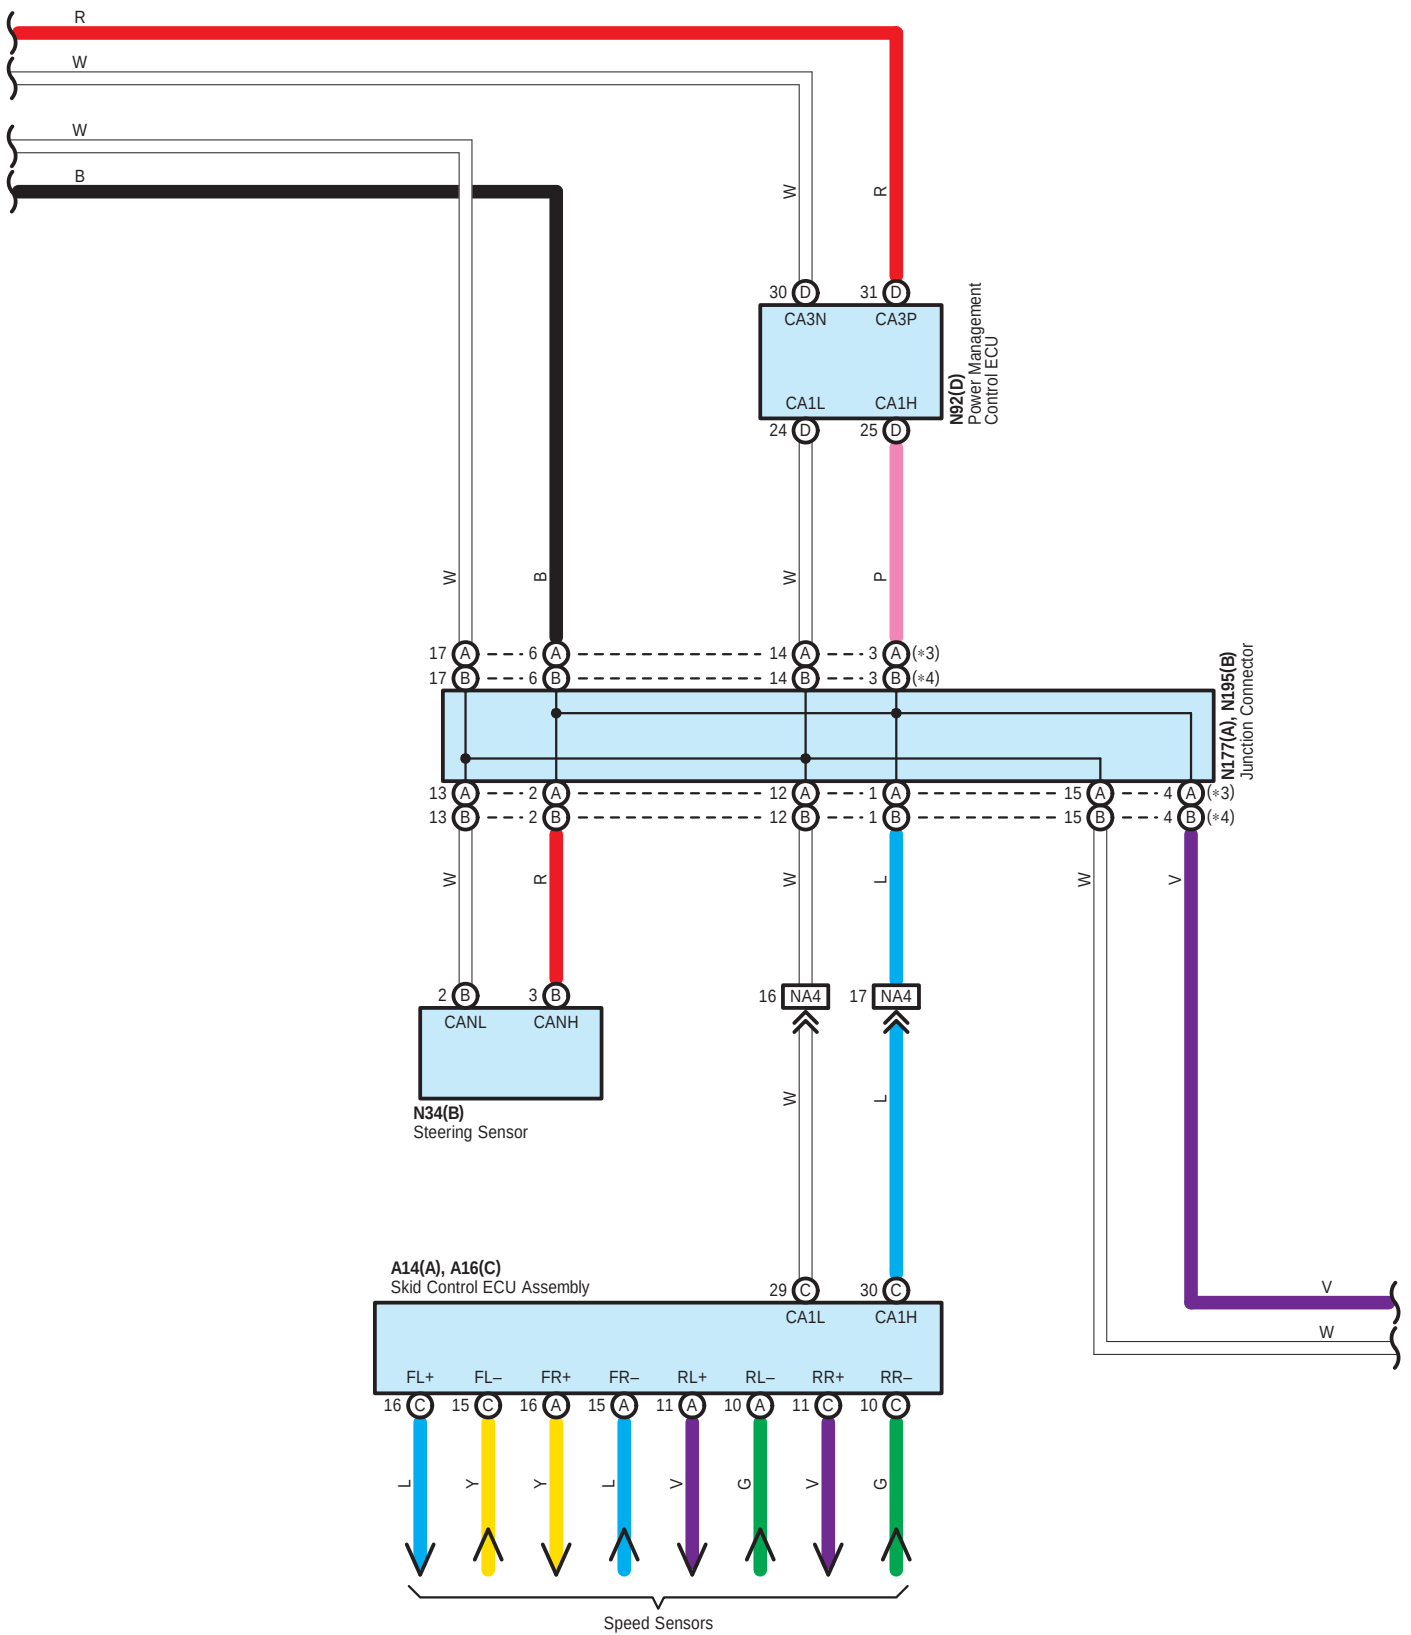


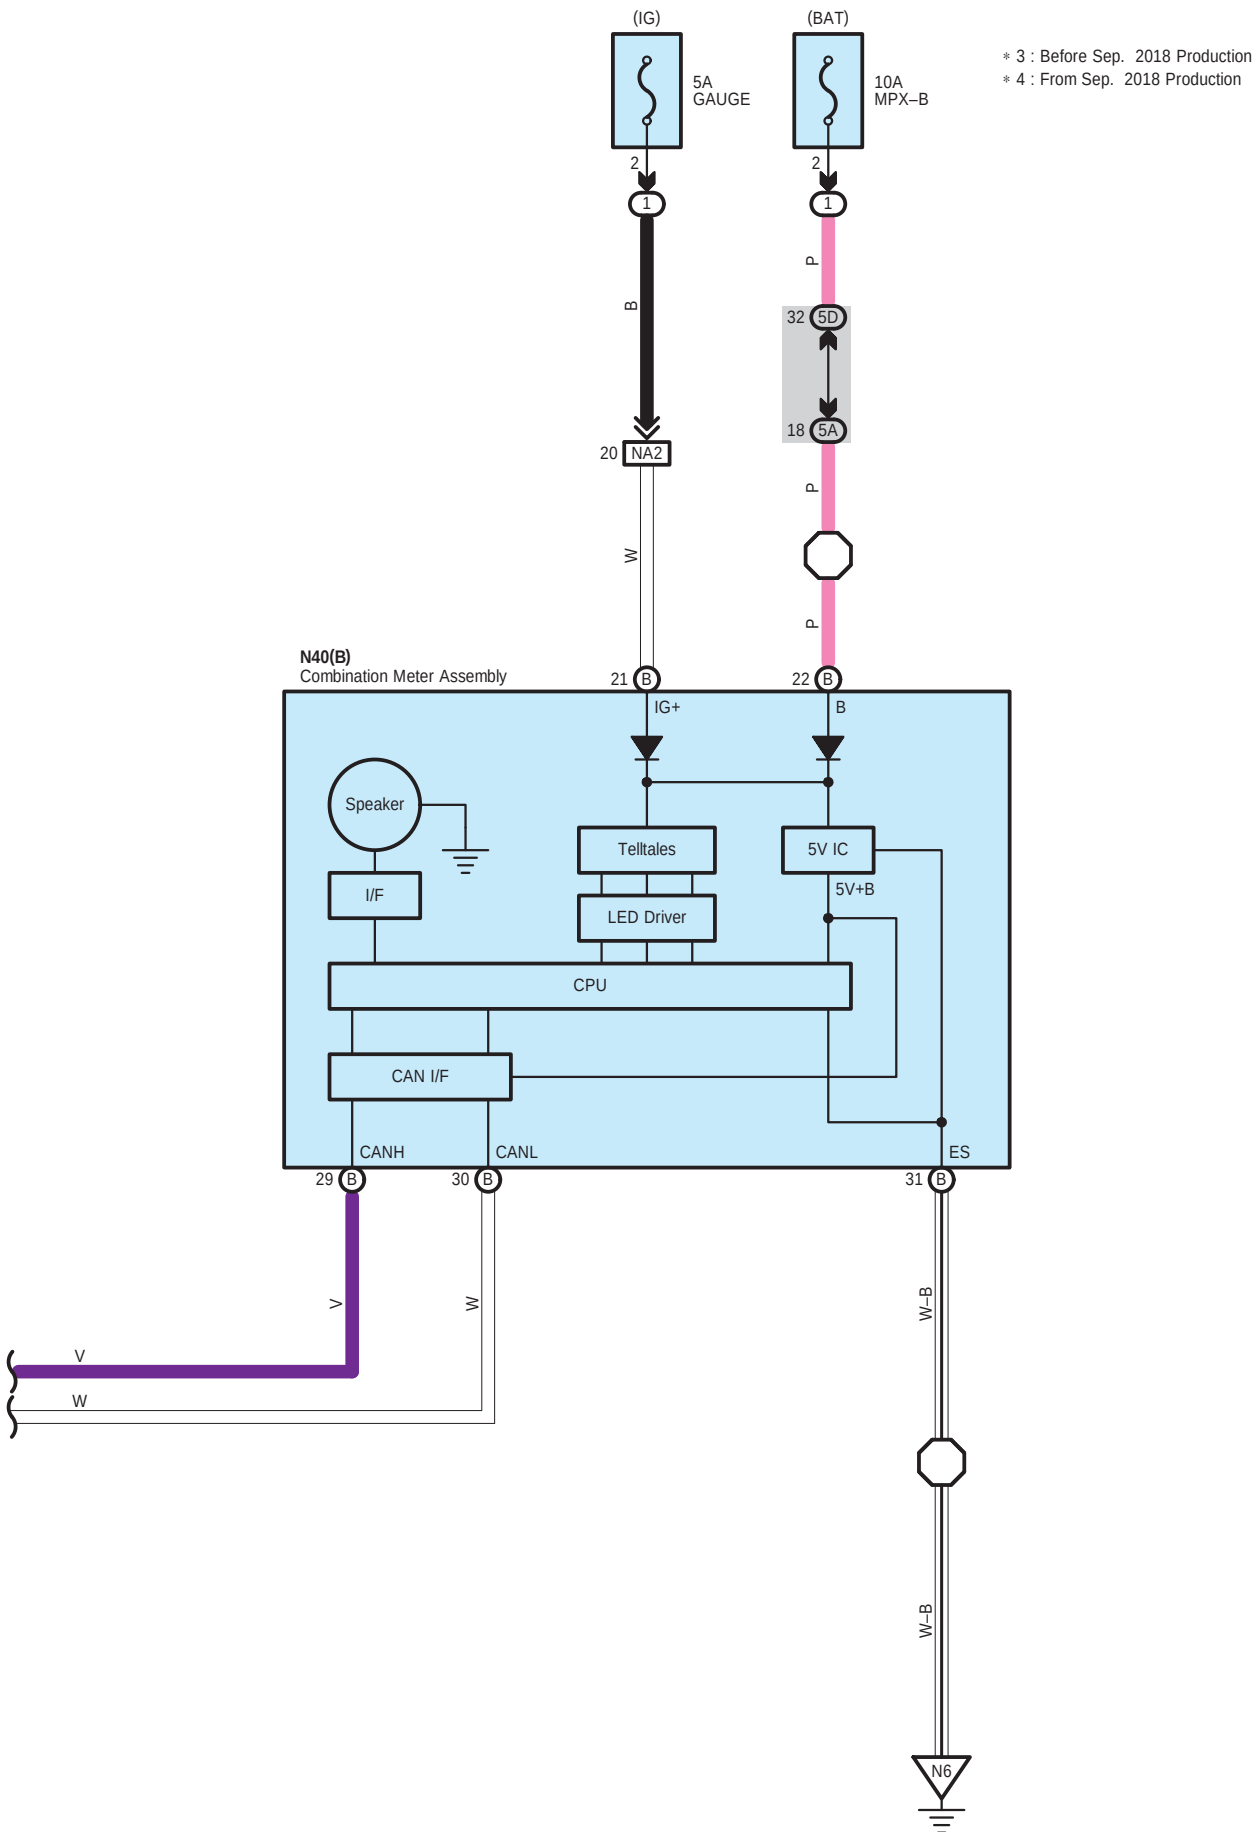


A 14
Black

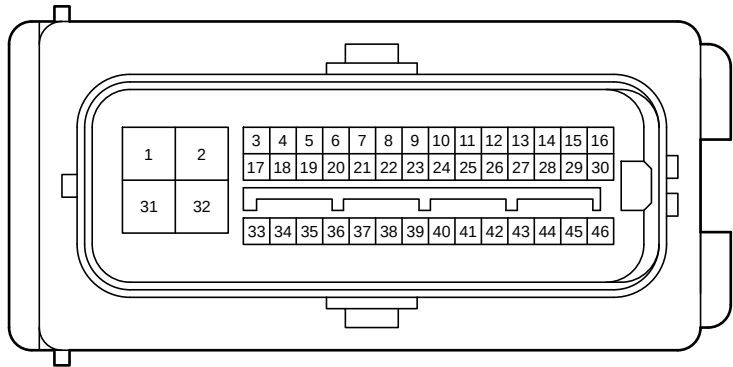


A 16
Gray

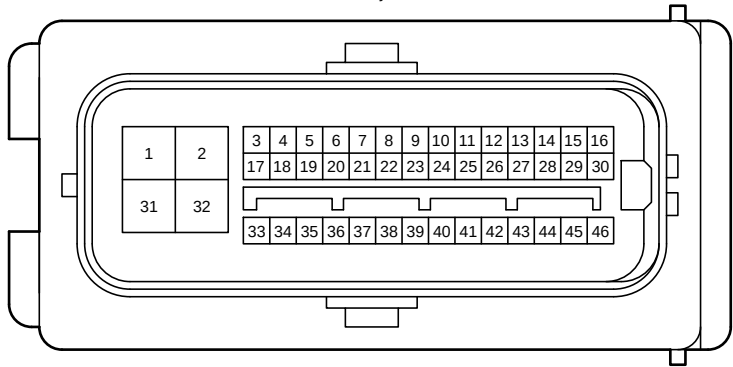


A 29
Black

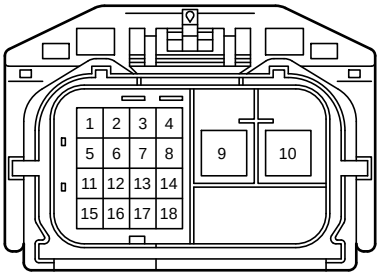


A 50
Gray

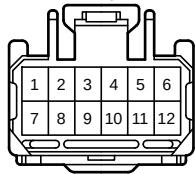


A 57
Blue

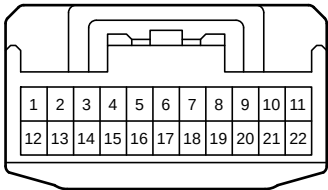


A 79
Black

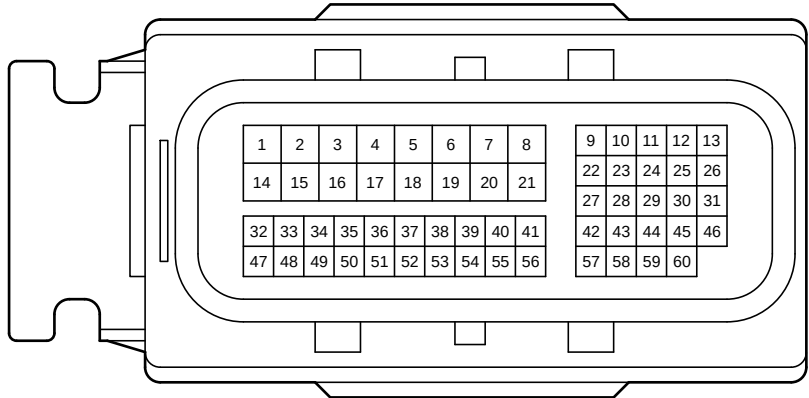


A 82
Black

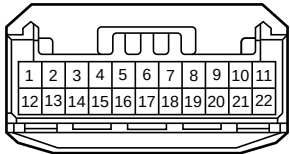


C 1
Gray

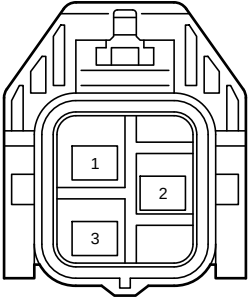


C 2
Gray

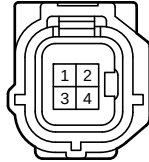


C 3
Gray

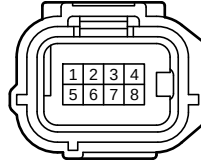


C 7
Black

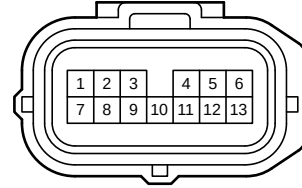


C 8
Black

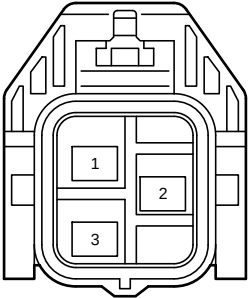


F 66
Gray

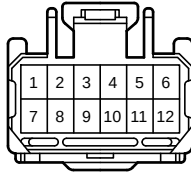


F 70
Black

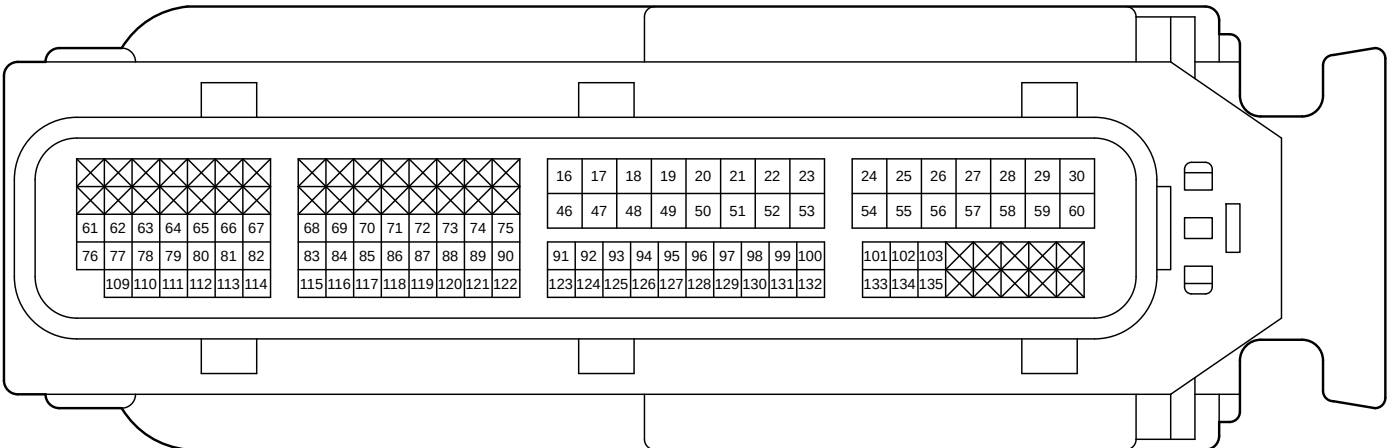


F 85
Black

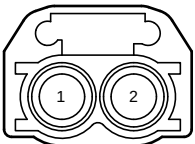


N 20
Black

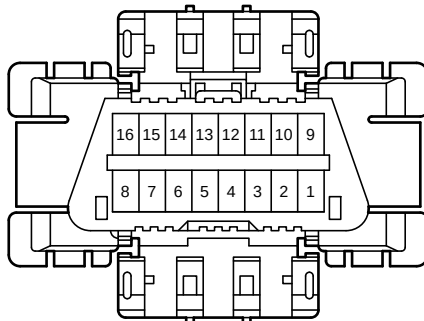


N 34
Black

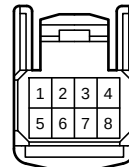


N 40
Black

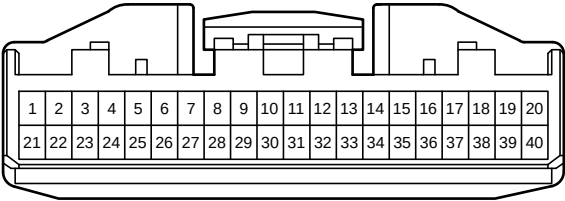


N 59
Black

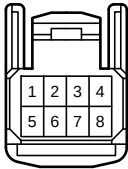


N 92
Gray

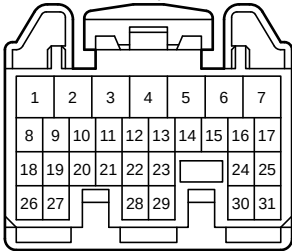


N176
Black

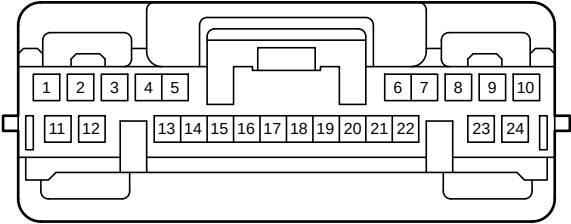


N177
Gray

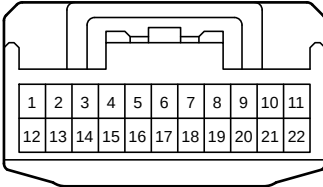


N178
Gray

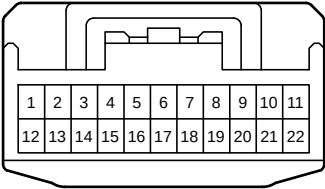


N195
Black

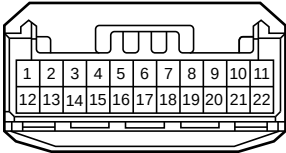


N196
Black

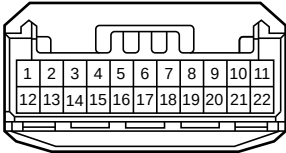


U 67
Gray

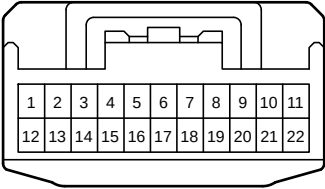


U 71
Black

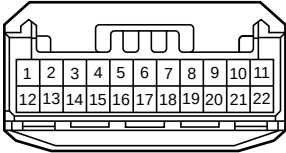


1M
White




5A
White

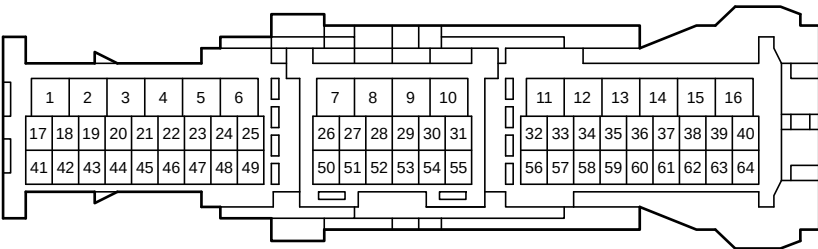



5D
White

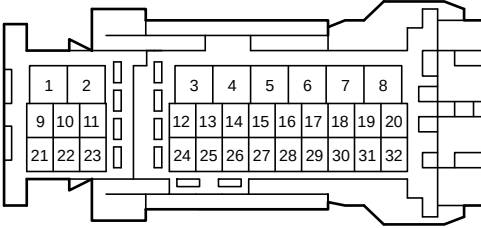



6B
White

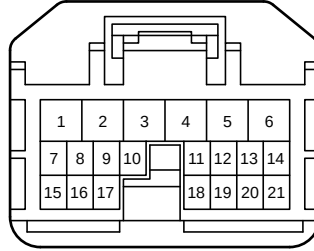



AF1
White

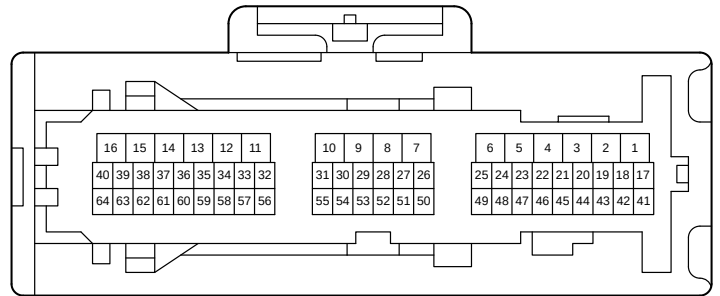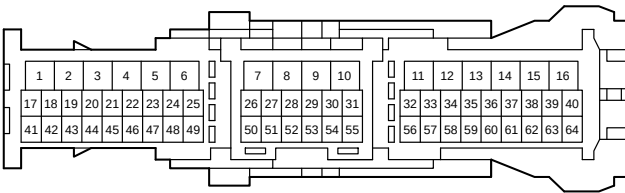


AU1
White

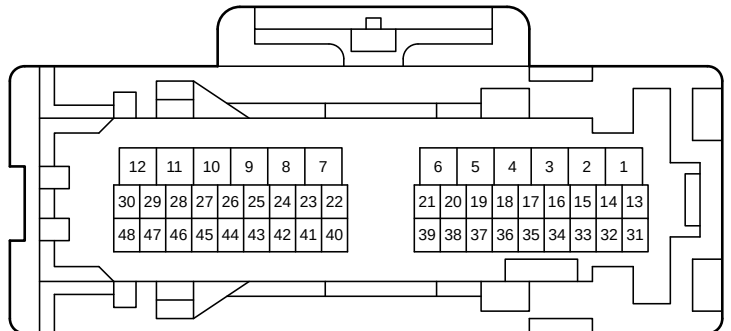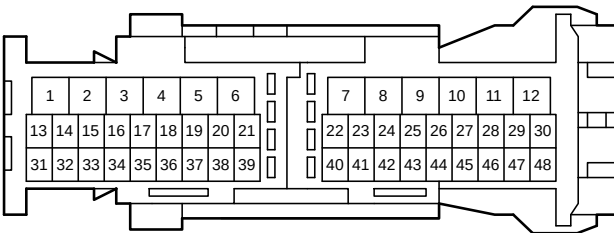


NA1
White

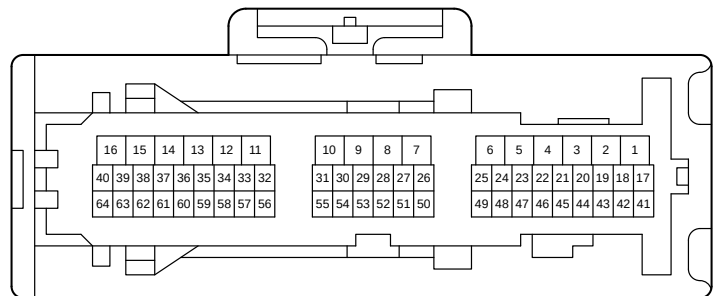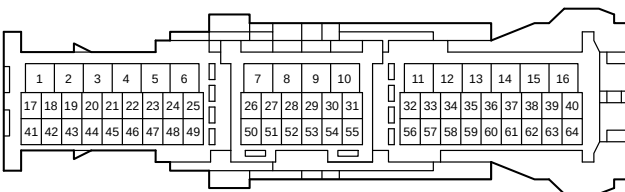


NA2
White

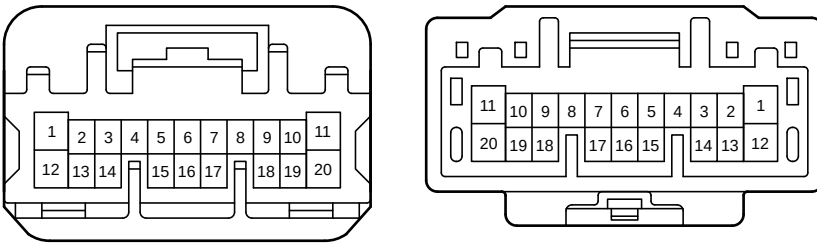

NA3
White

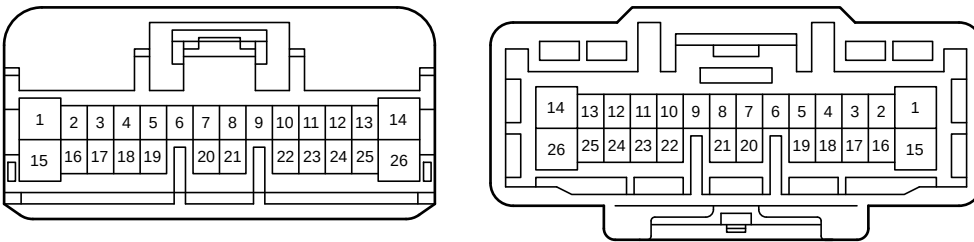

NA4
Gray

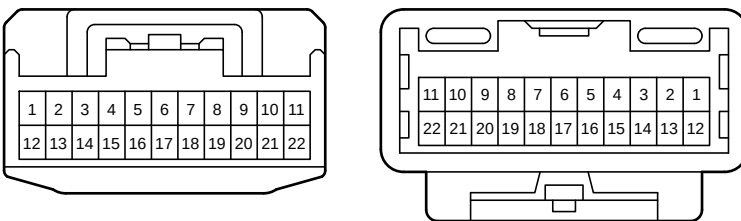

NU2
White

