


FRONT FENDER APRON (ASSY)




REPLACEMENT

With the radiator support and front body pillar lower gusset removed.

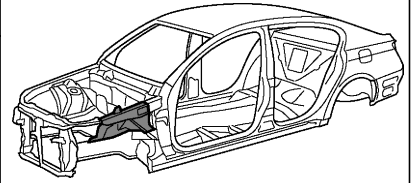

F22219A


REMOVAL

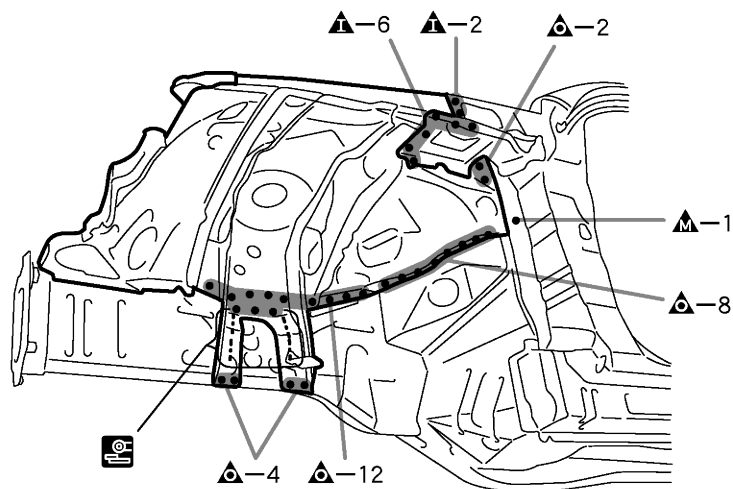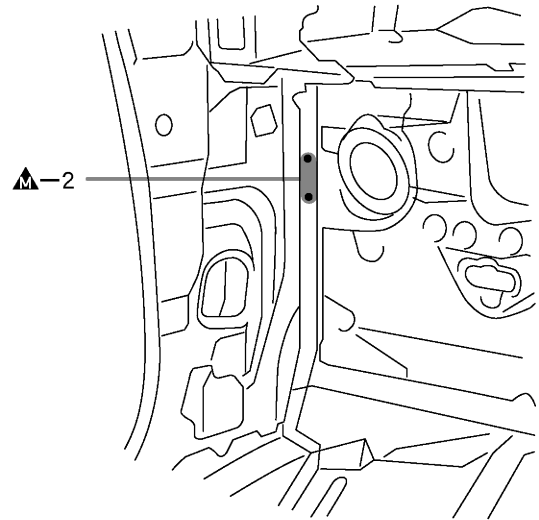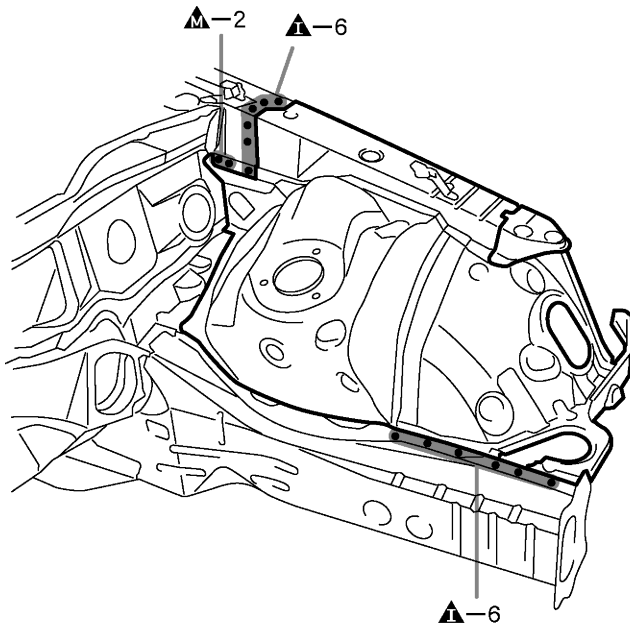

F22219

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

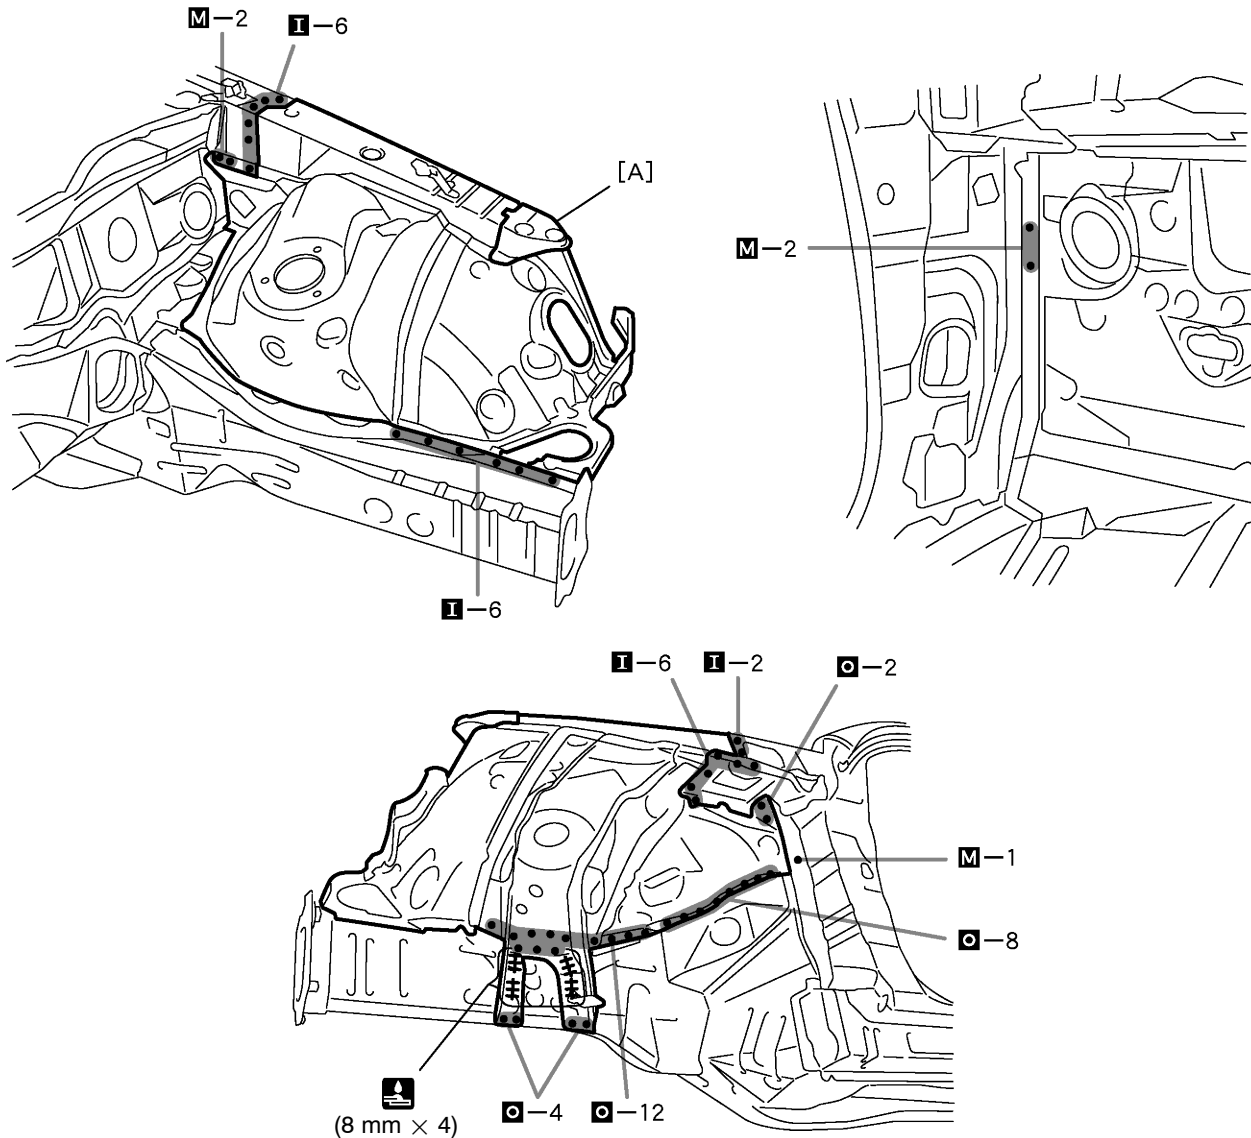

F22220

POINT

- 1 Inspect the fitting of the headlight, front fender and hood, etc., before welding, since this affects the appearance of the finish.
- 2 Make sure each measurement is correct, as this parts affects the front wheel alignment.

PART NAME

[A] Radiator Support Extension

8 mm (0.32 in.)