


ROCKER OUTER PANEL (CUT-P) REPLACEMENT	F22246A
--	--

REMOVAL
--

POINT 1 *1: Reuse 50 mm (1.97 in.) 150 mm (5.91 in.)	F22246
--	---------------

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

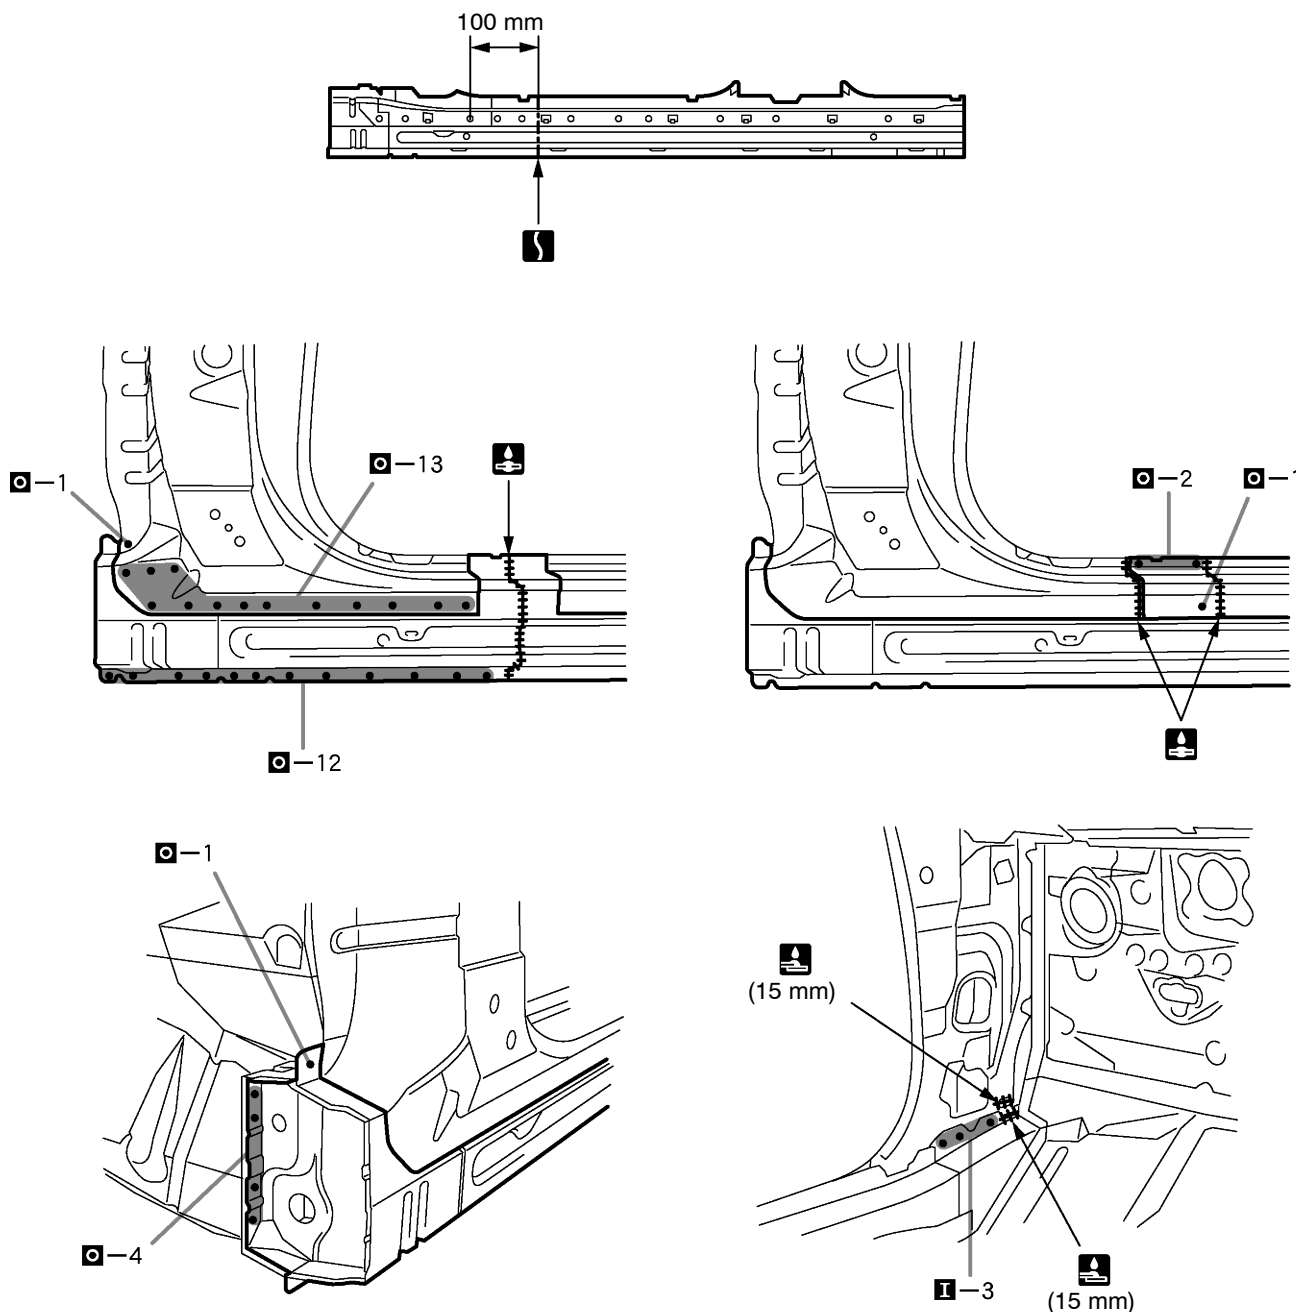

F22247

POINT

- 1 After welding the rocker outer panel to the vehicle side, install the outer panel.
- 2 Inspect the fitting of the front door, etc., before welding, since this affects the appearance of the finish.

15 mm (0.59 in.)

100 mm (3.94 in.)