


REAR FLOOR PAN (ASSY)



REPLACEMENT
With the body lower back panel removed.

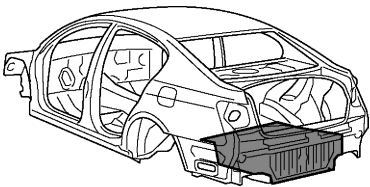



F22268A

REMOVAL

[Ex. U.S.A., CANADA]

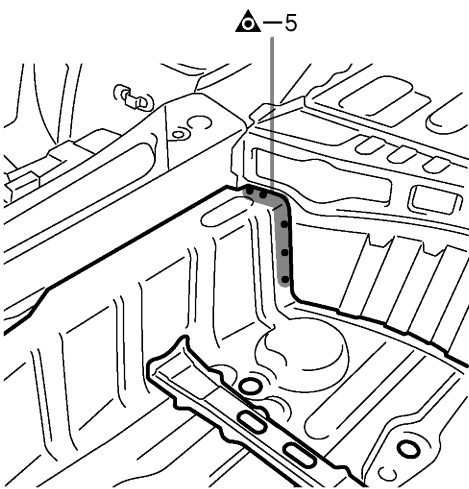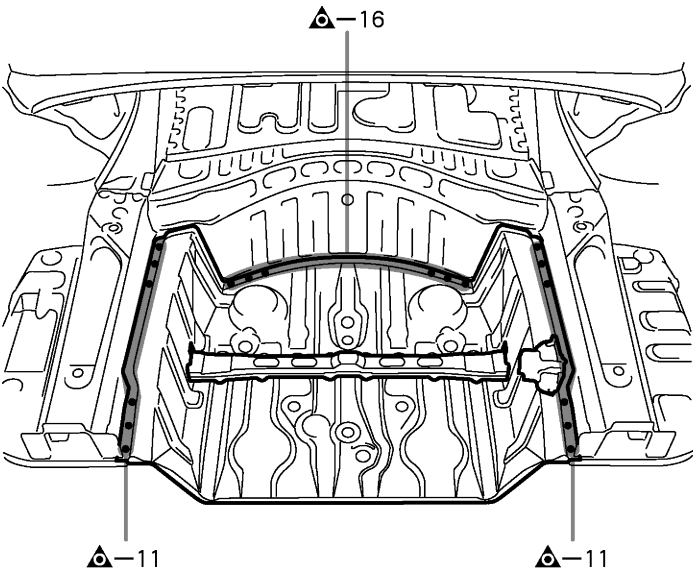

[U.S.A., CANADA]

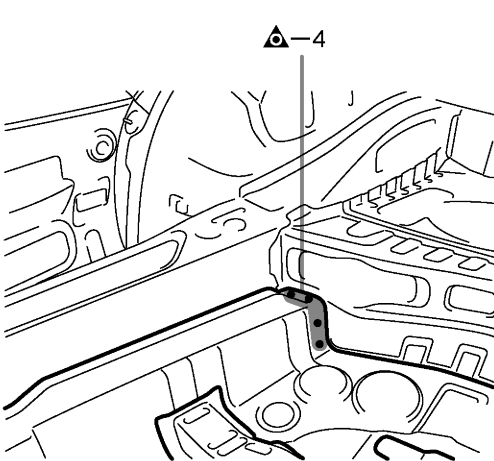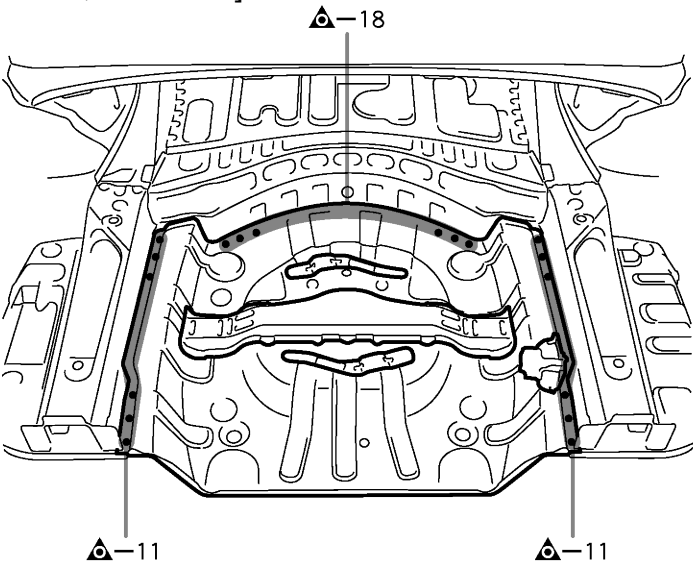


F22268

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

[Ex. U.S.A., CANADA]

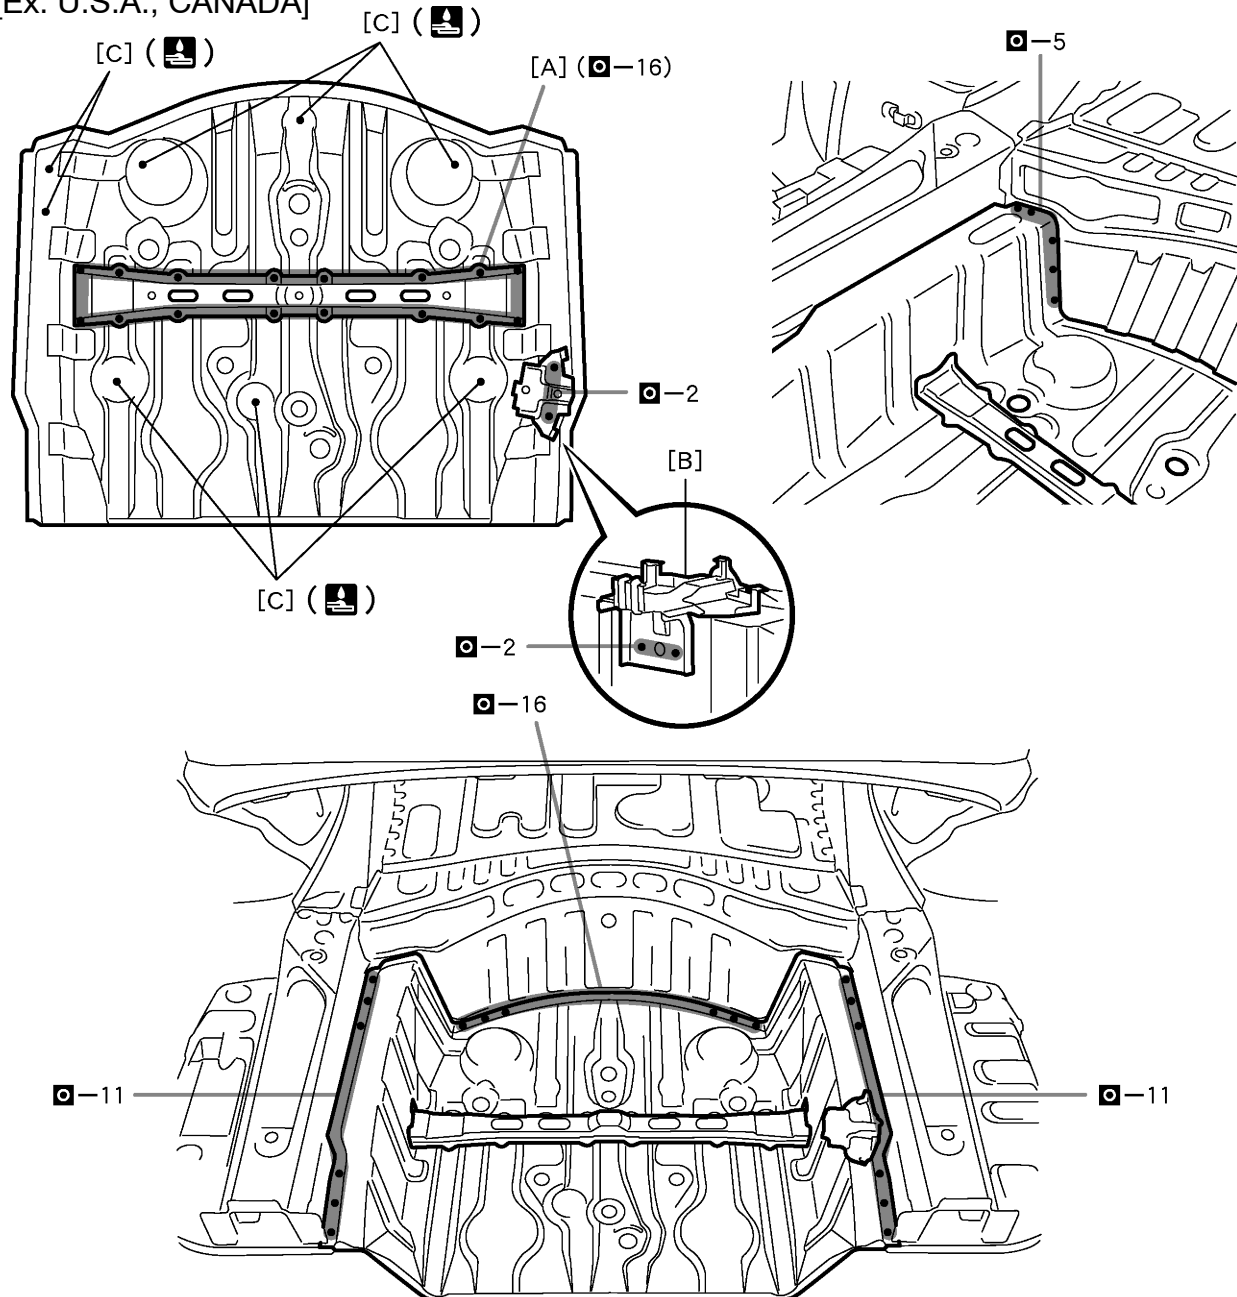


F22269

PART NAME

[A] Spare Wheel Clamp Bracket [B] Jack Carrier [C] Weld Bolt

[U.S.A., CANADA]

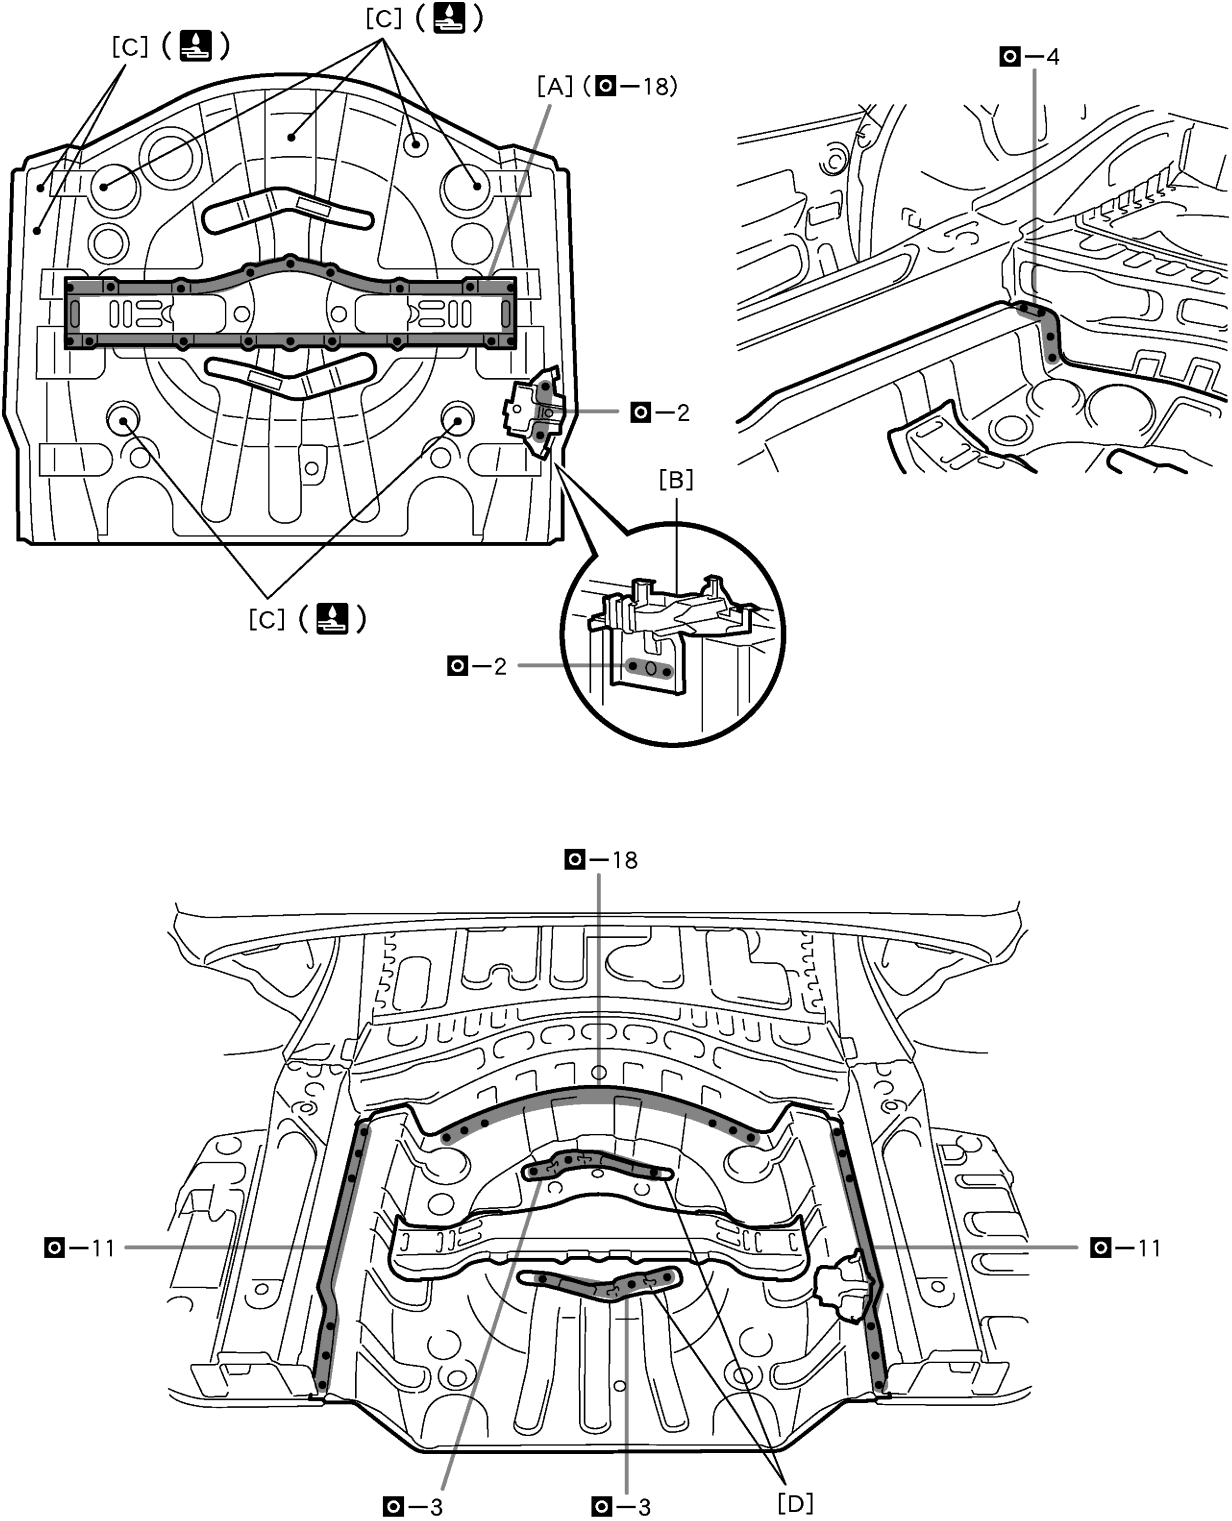

F22270

PART NAME

[A] Spare Wheel Clamp Bracket [B] Jack Carrier [C] Weld Bolt [D] Fuel Tube Bracket