






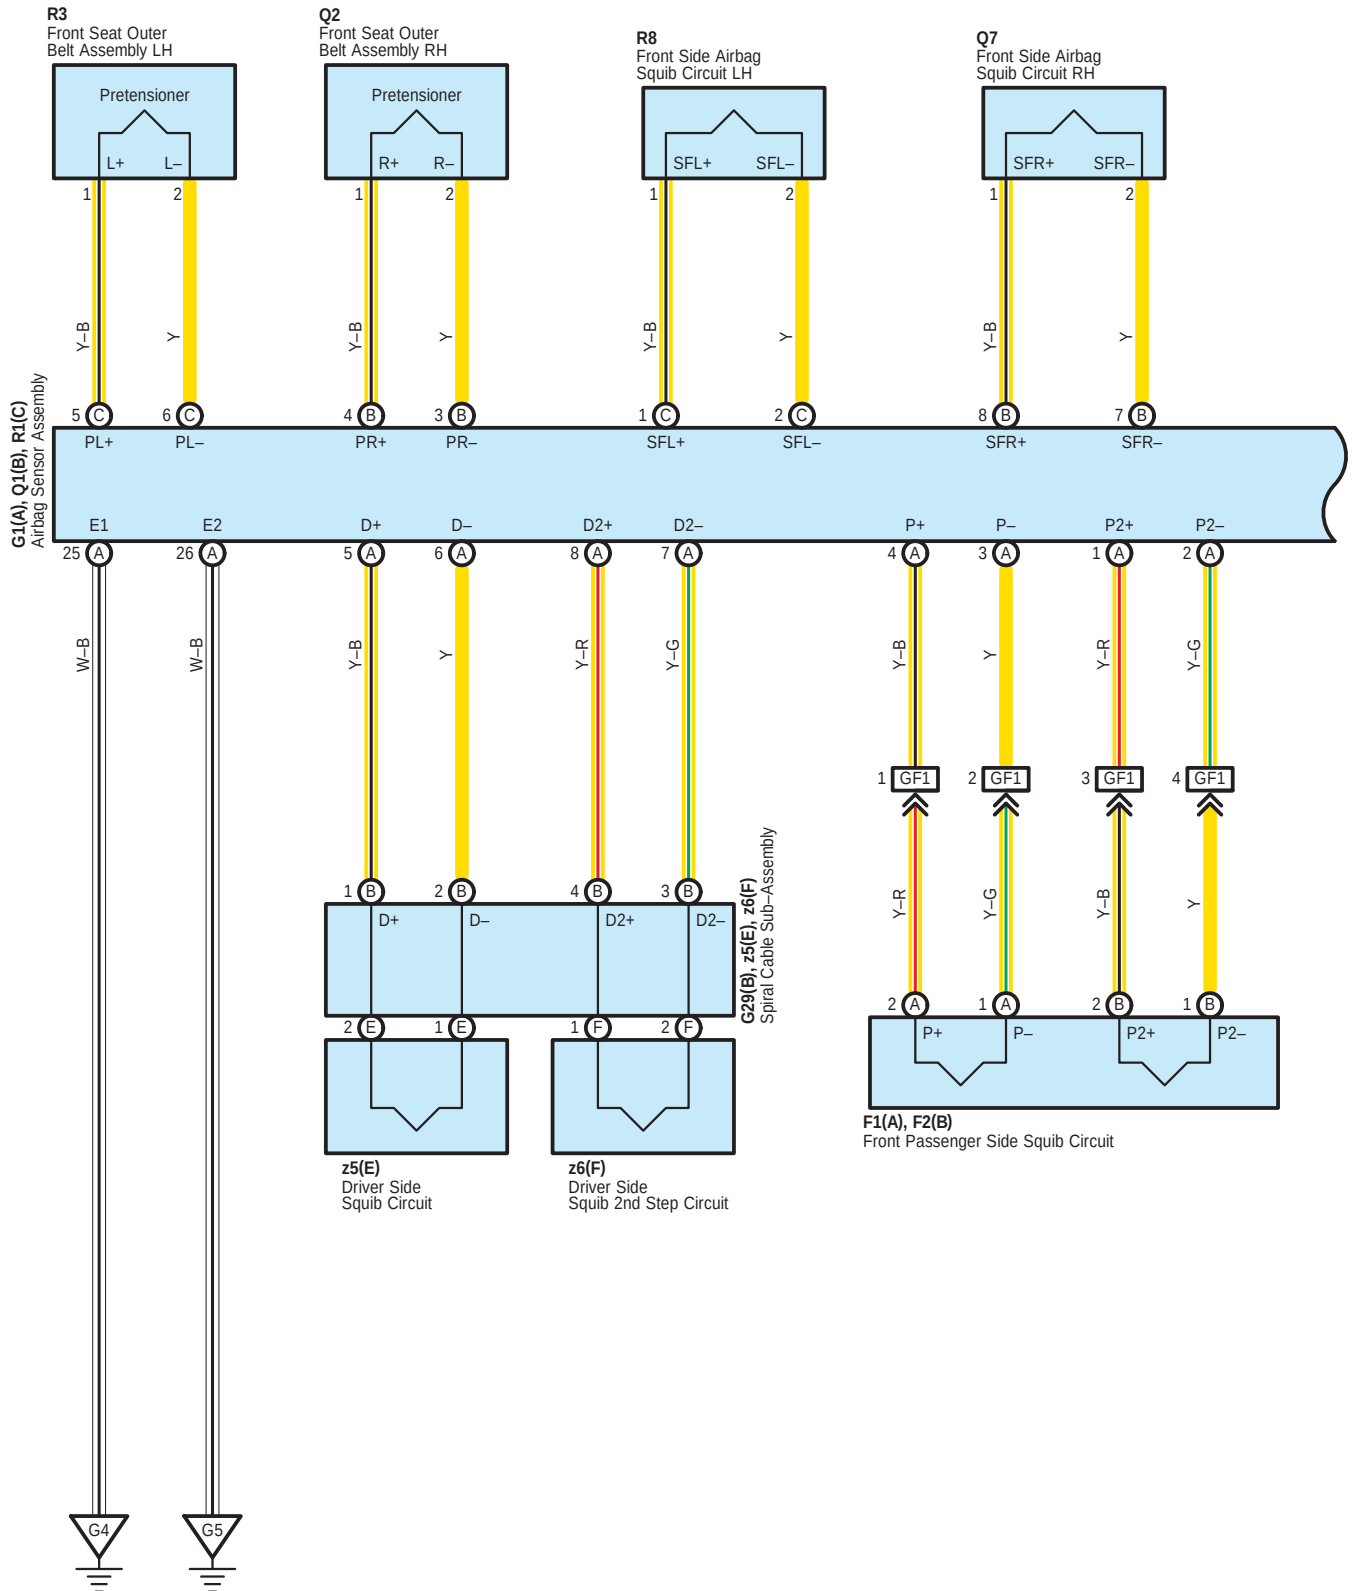


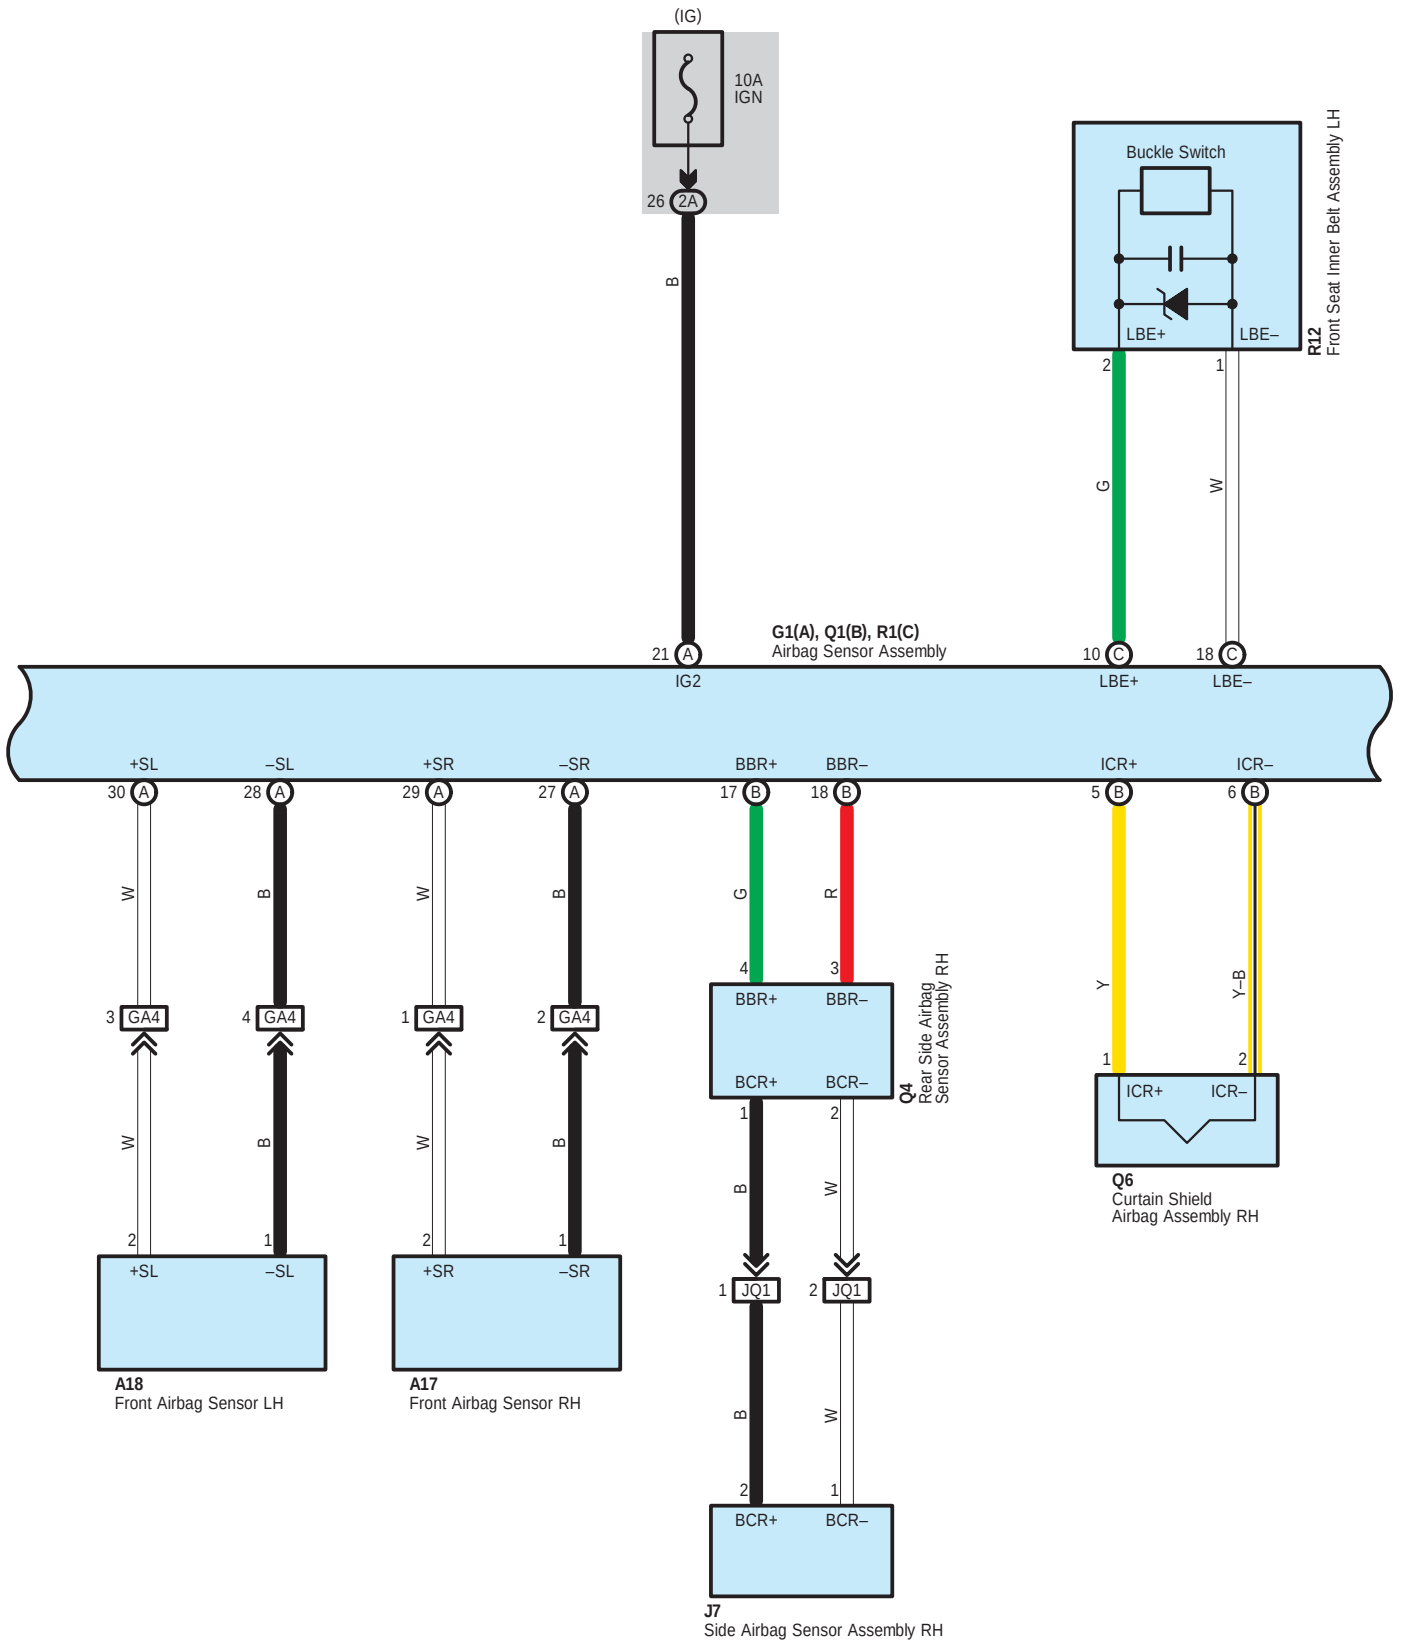

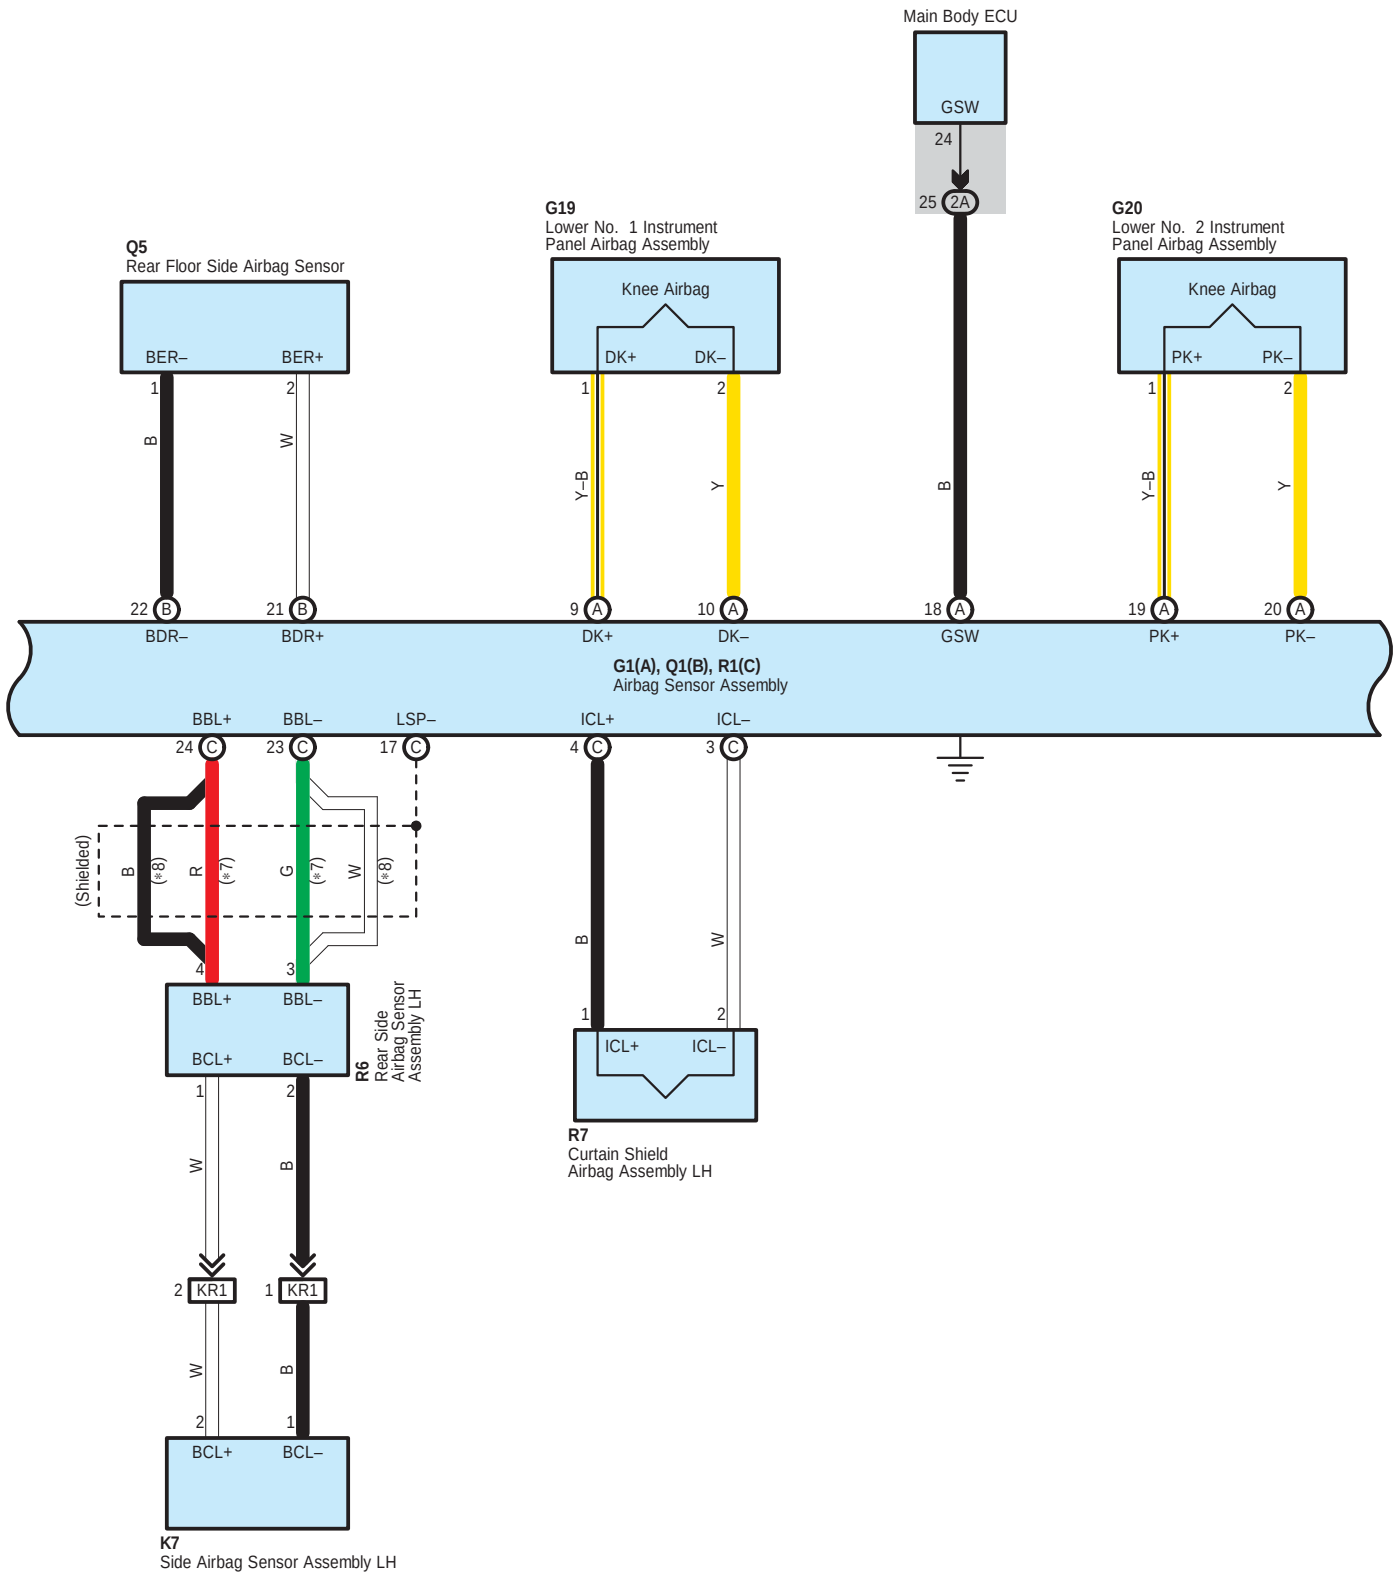


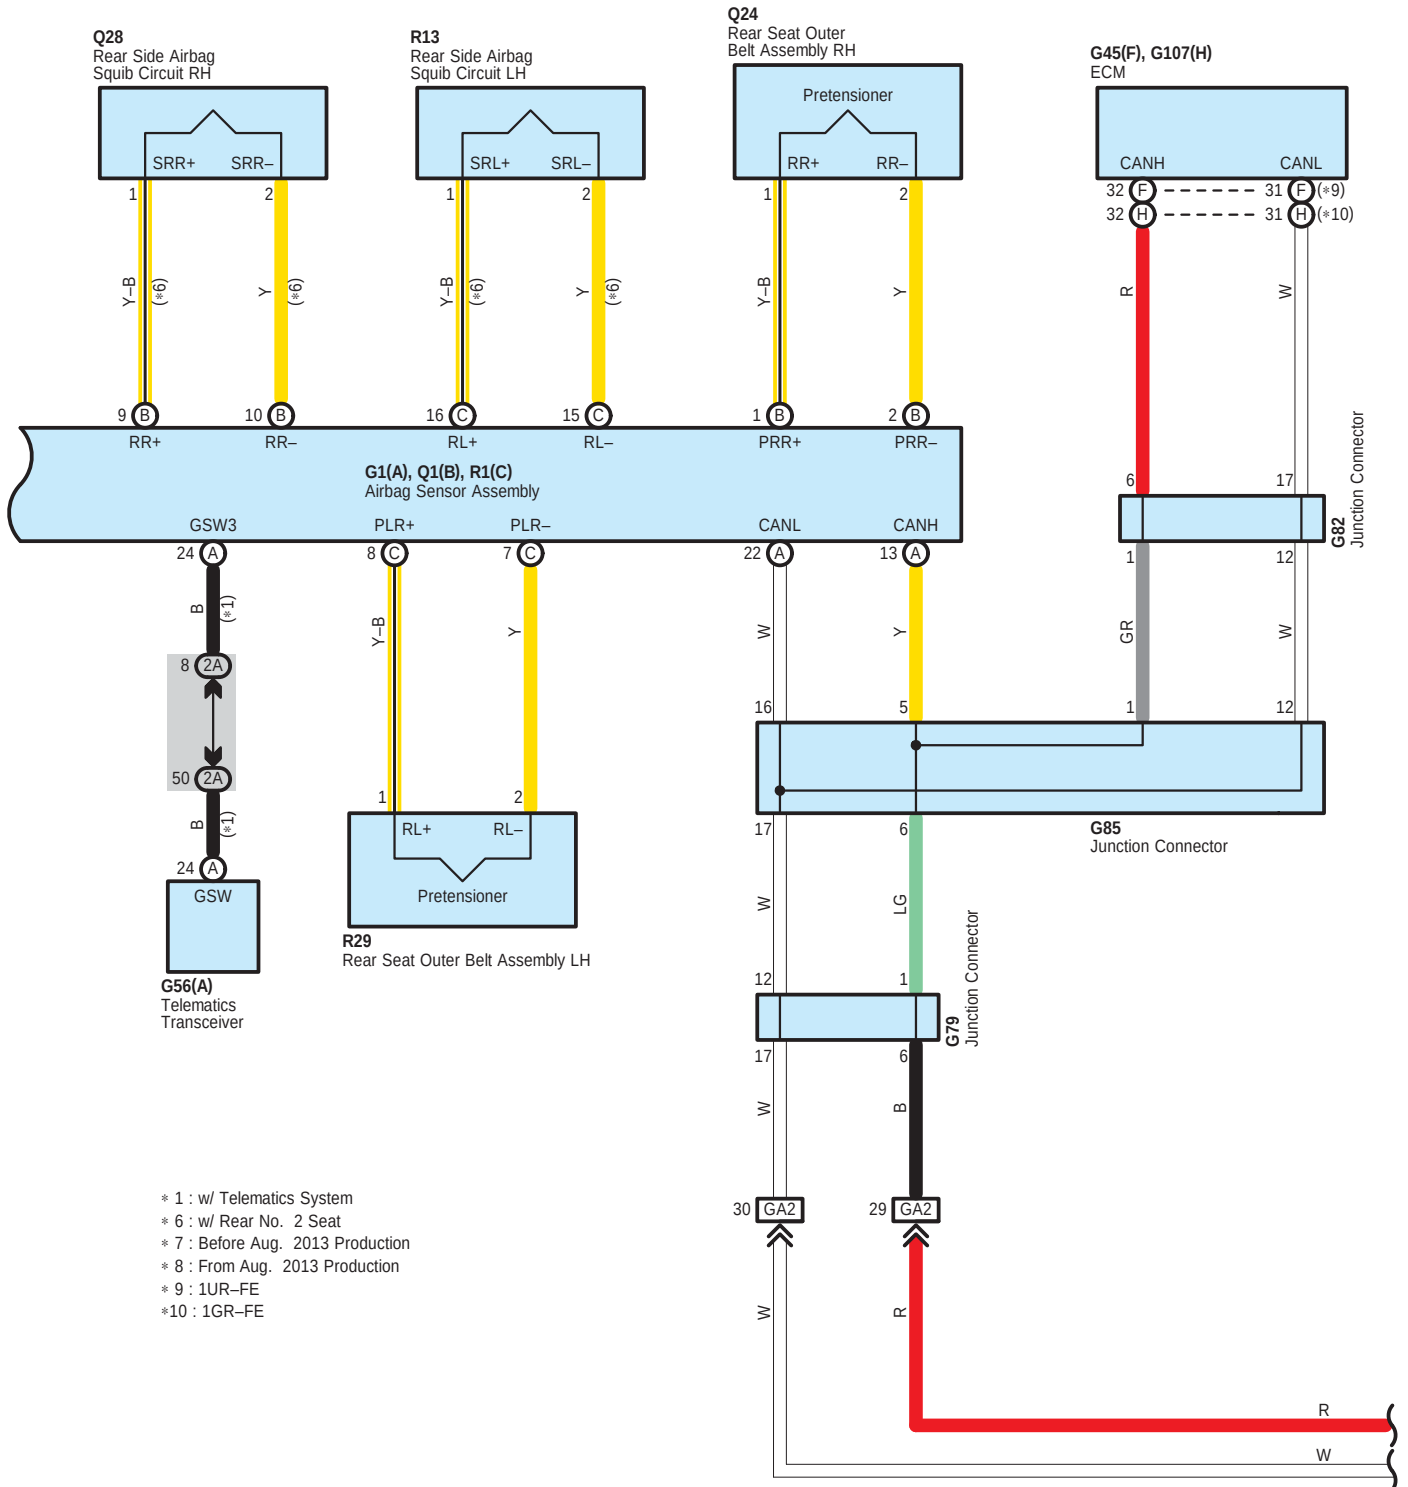

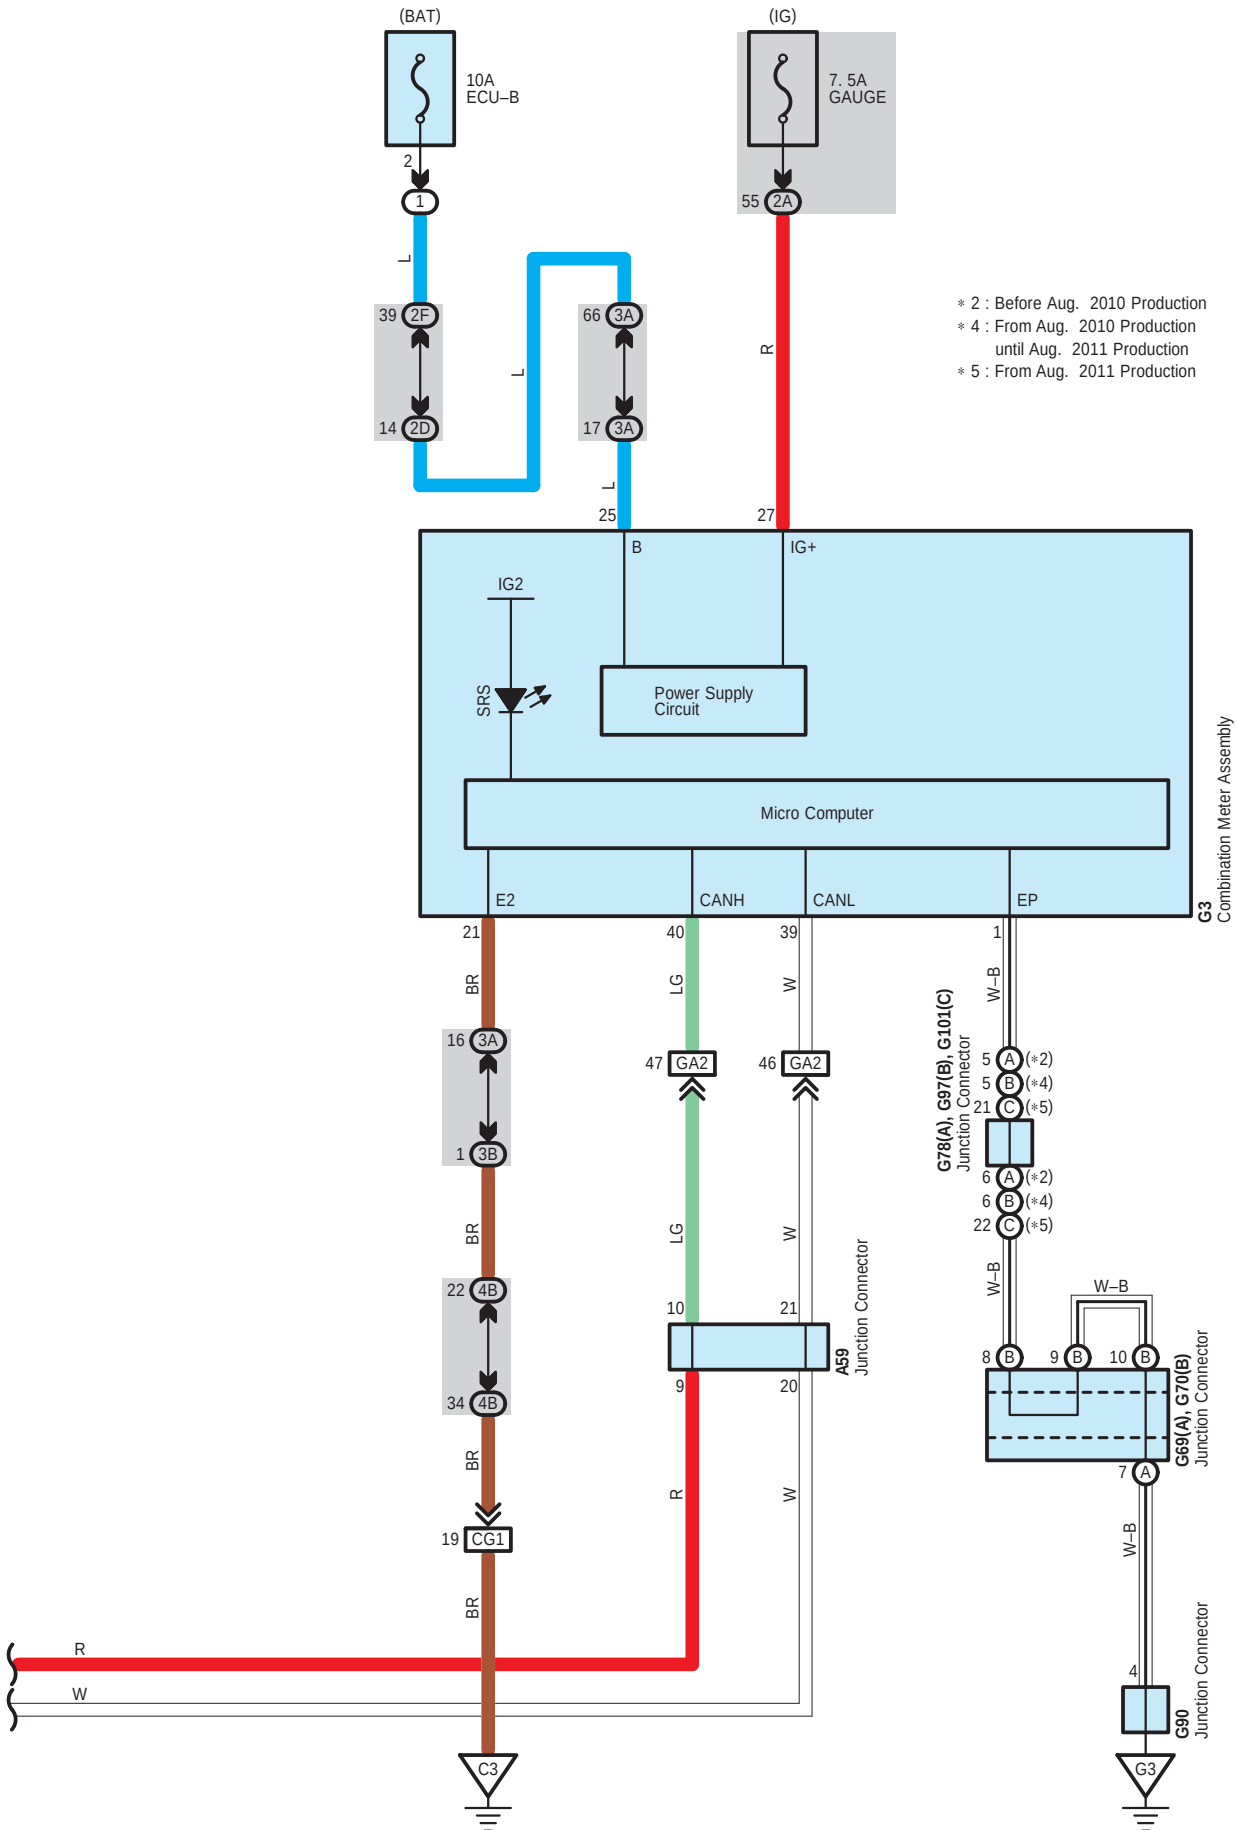


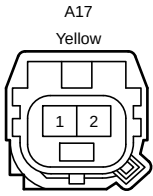


90980-12490

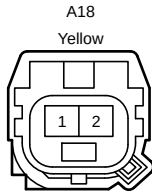


90980-12490

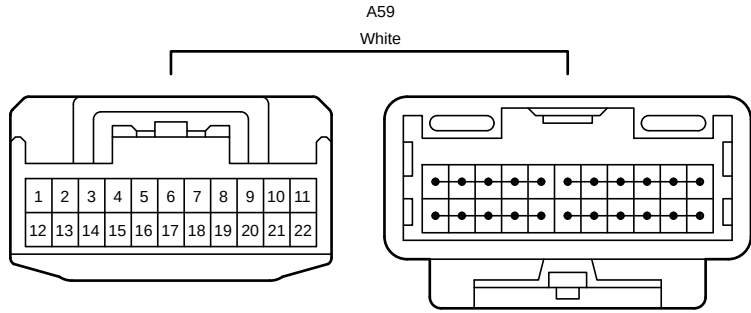


90980-12372

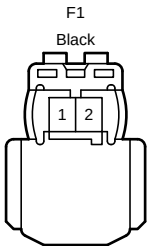


90980-12576

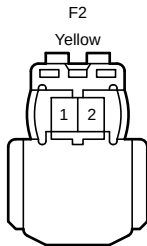


90980-12575

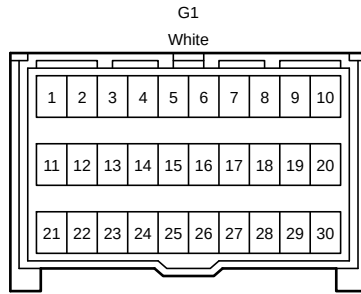


90980-12391

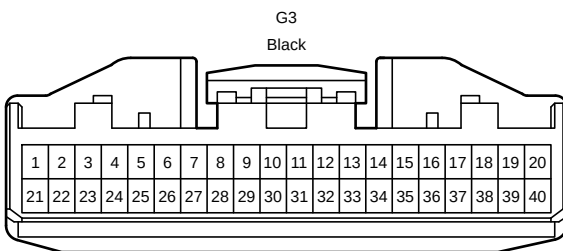


90980-12557




90980-12452




90980-12452

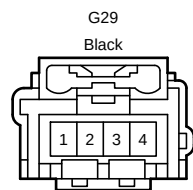

90980-12160

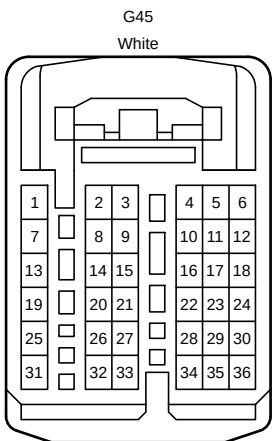


82824-26120

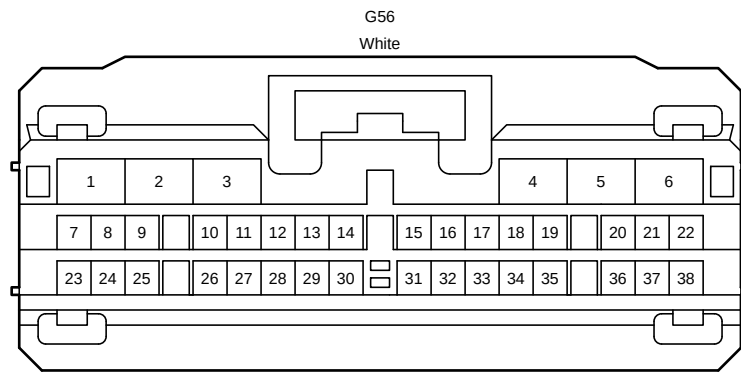


90980-12817

G69
White

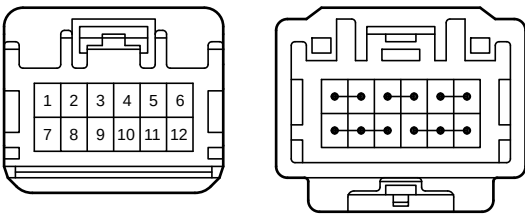


90980-12737

G70
Black

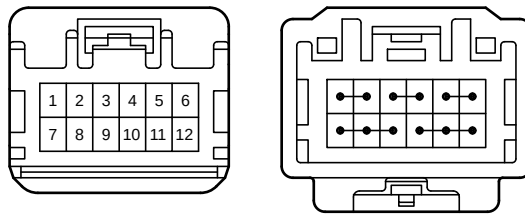


90980-12737

G78
White

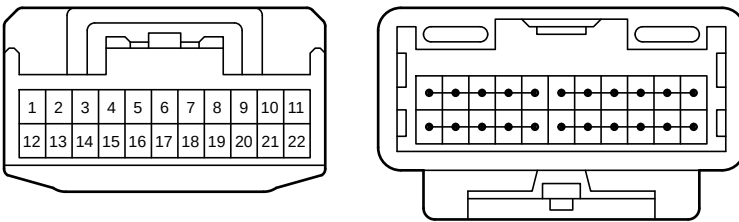


90980-12372

G79
White

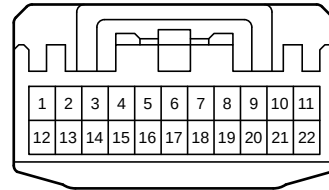


82824-30420

G82
White

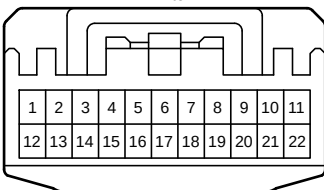


82824-30420

G85
White

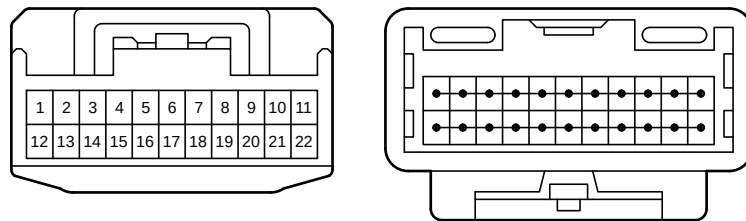


90980-12372

G90
Blue



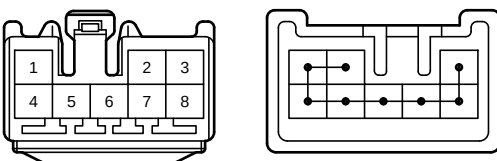



90980-11686

G97
Gray

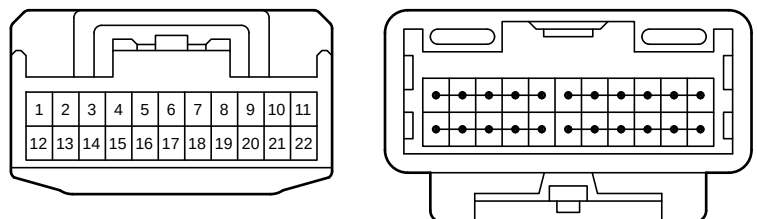


90980-12372

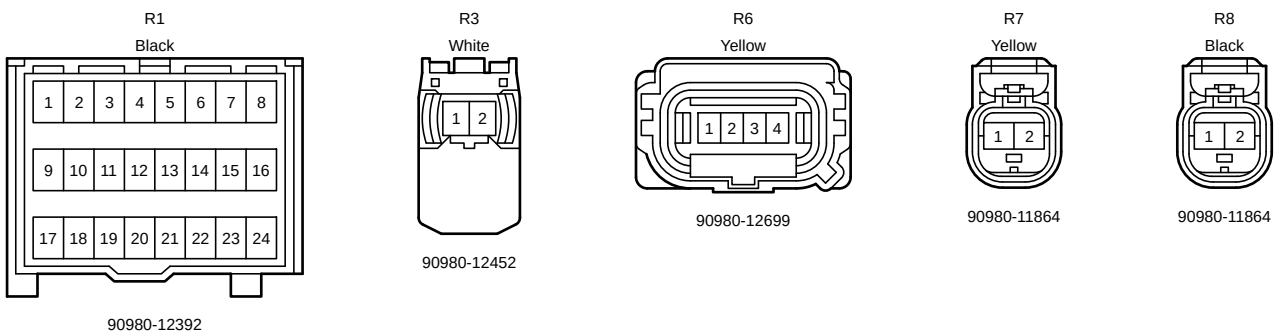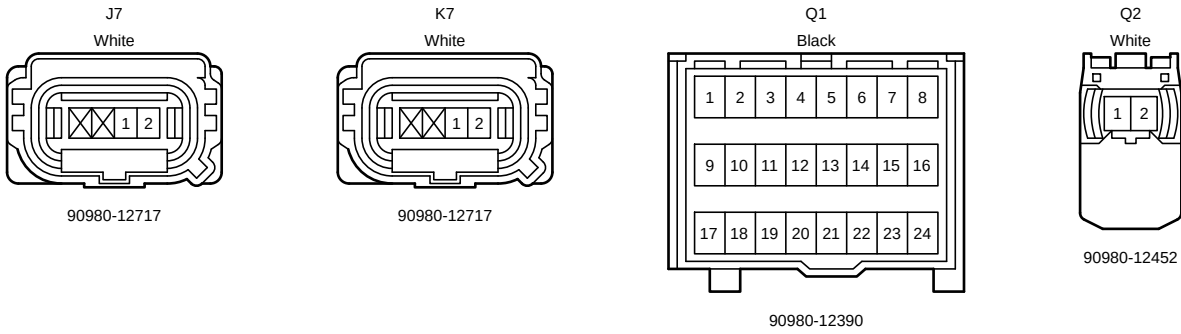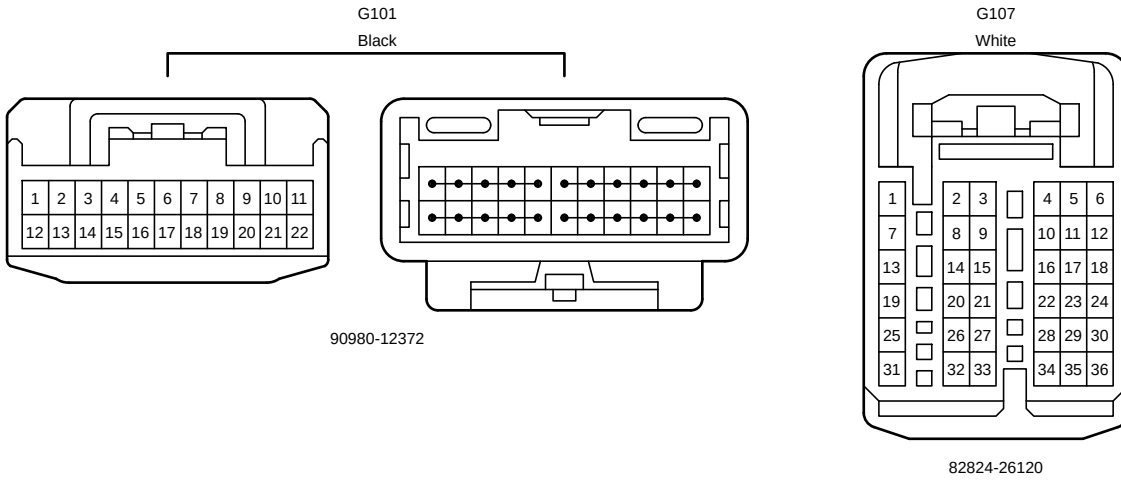


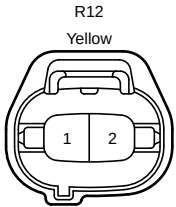


90980-11156

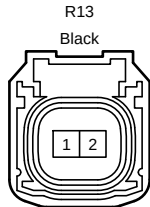


90980-12698




90980-12452




90980-12224




90980-12219

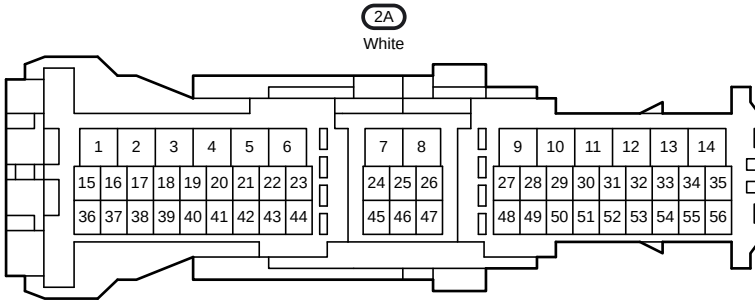


90980-12822

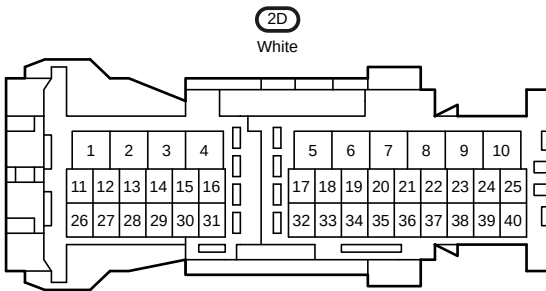


90980-12818

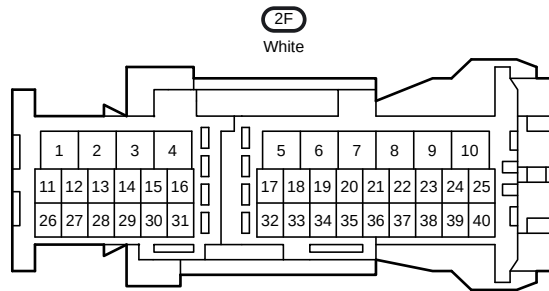

90980-12794

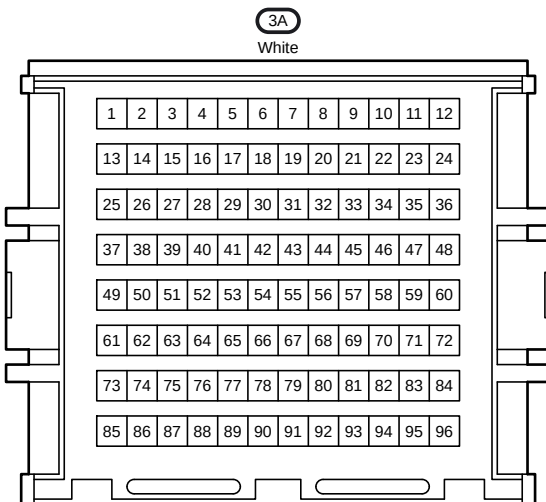

82890-12030

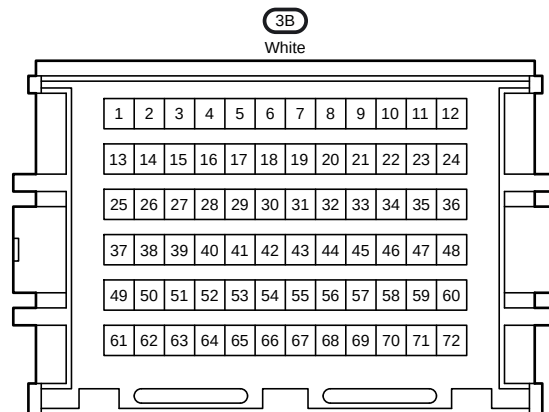

82890-42010

