

FRONT FENDER FRONT APRON (ASSY)



REPLACEMENT

With the radiator support removed.



F24503A


REMOVAL

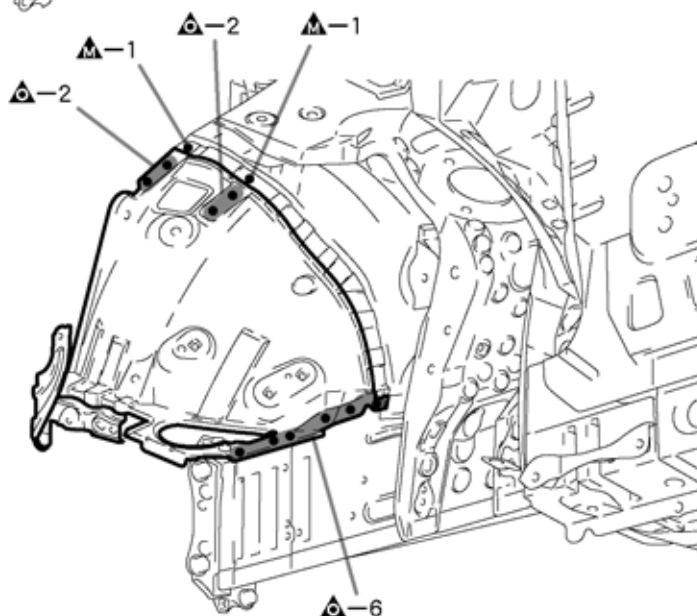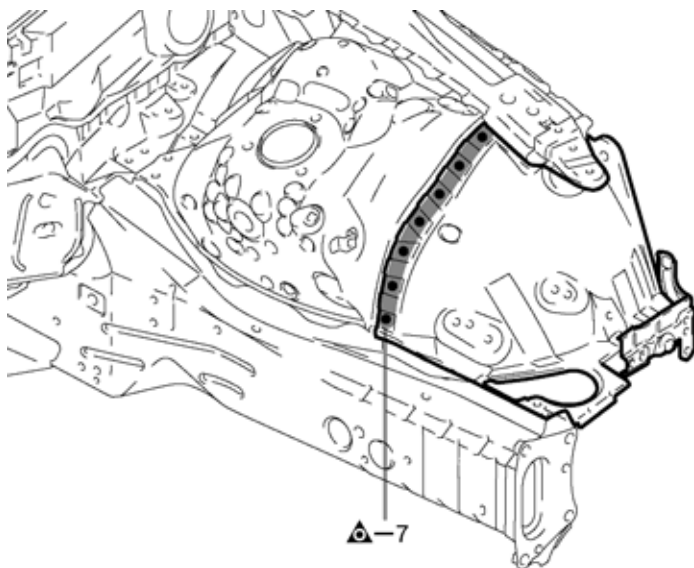

F24503

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

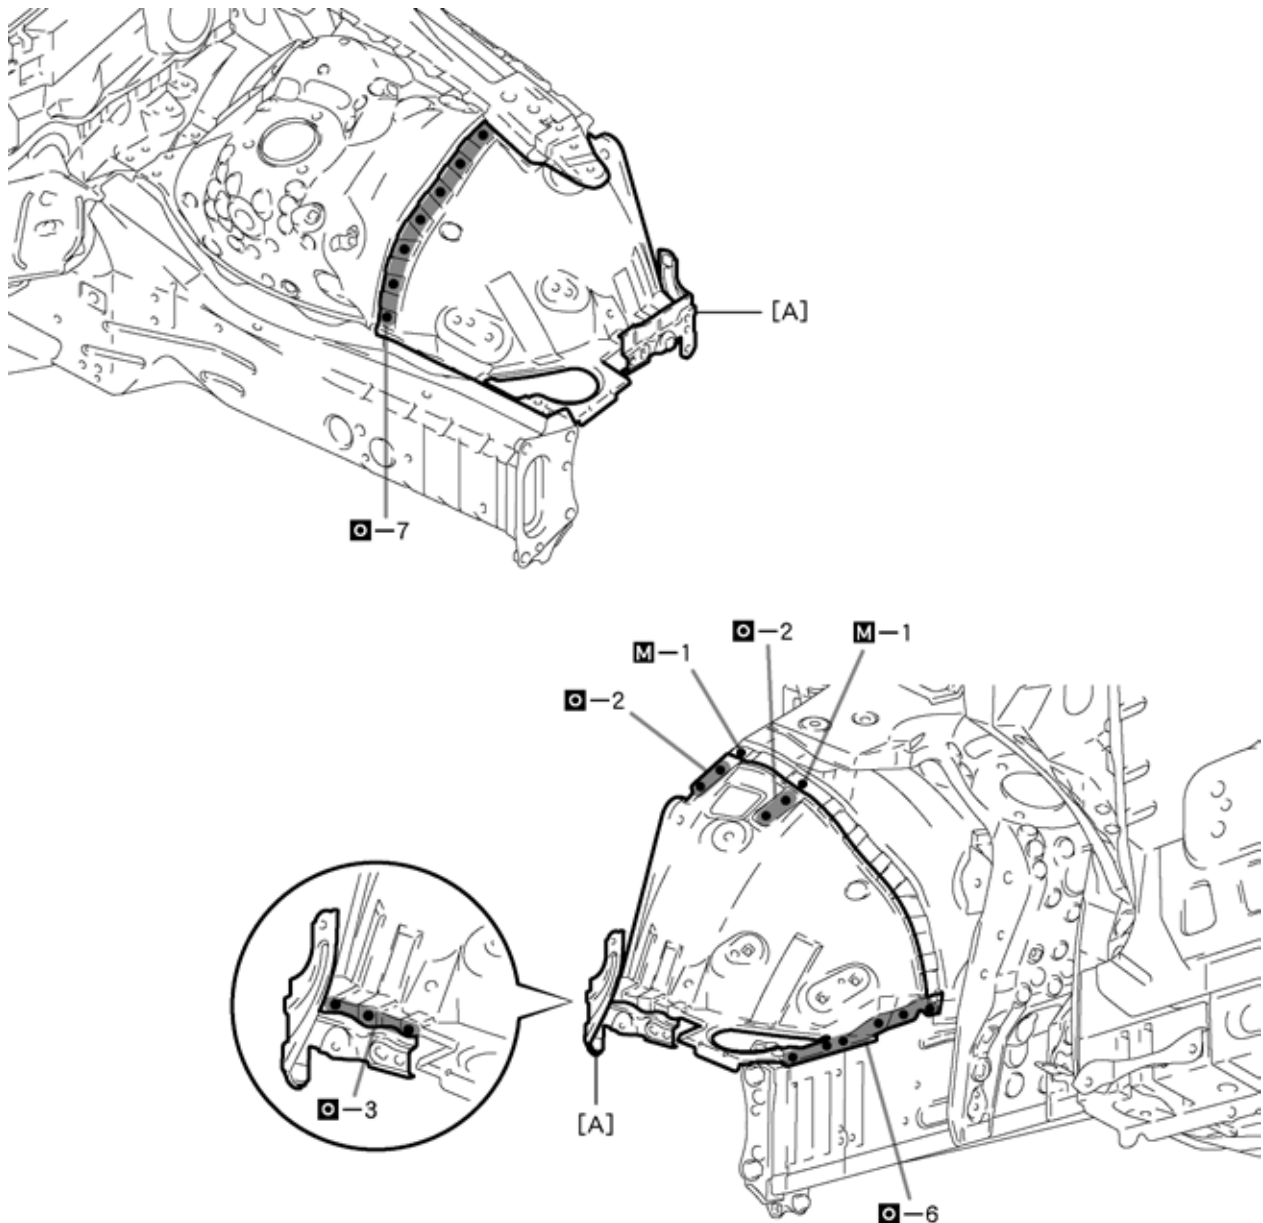

F24504

POINT

- 1 Inspect the fitting of the front fender, hood and other related parts before welding as this affects the appearance of the finish.

PART NAME

[A] Radiator Support To Front Fender Bracket