

FRONT FENDER APRON (ASSY)





REPLACEMENT

With the radiator support and front body pillar lower gusset removed.



F24507A


REMOVAL

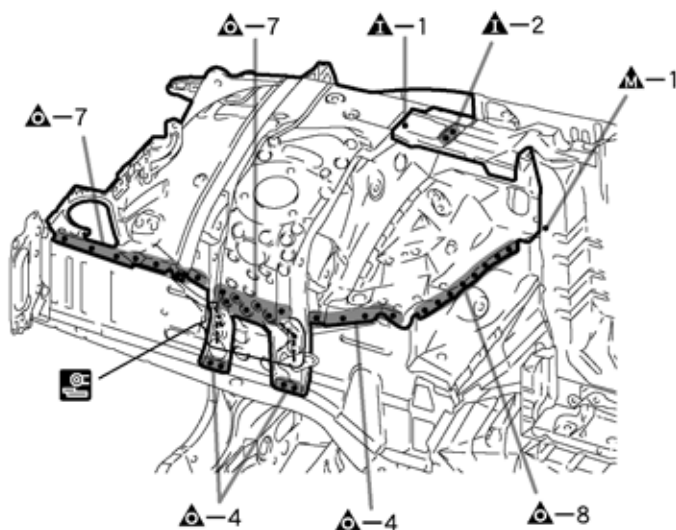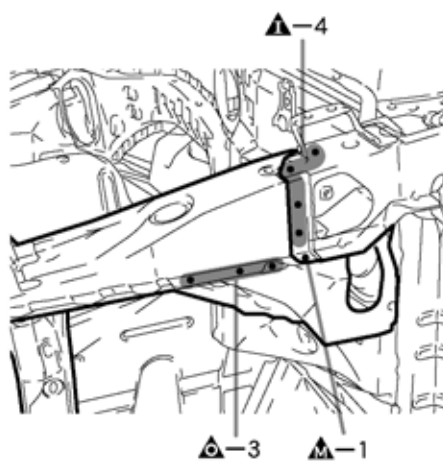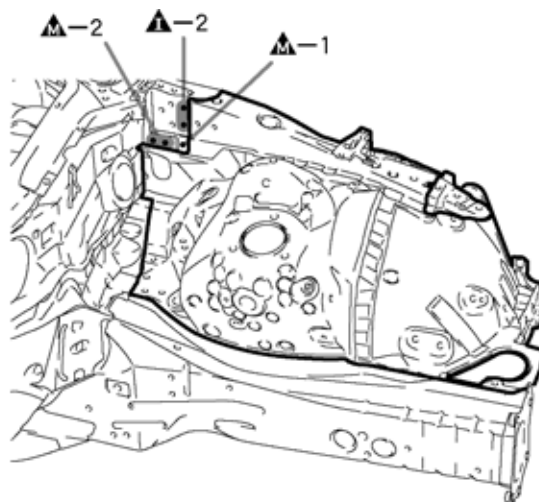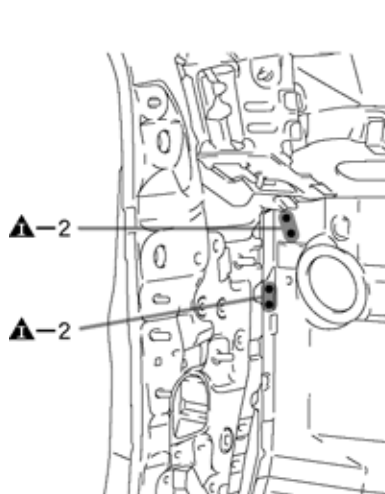

F24507

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

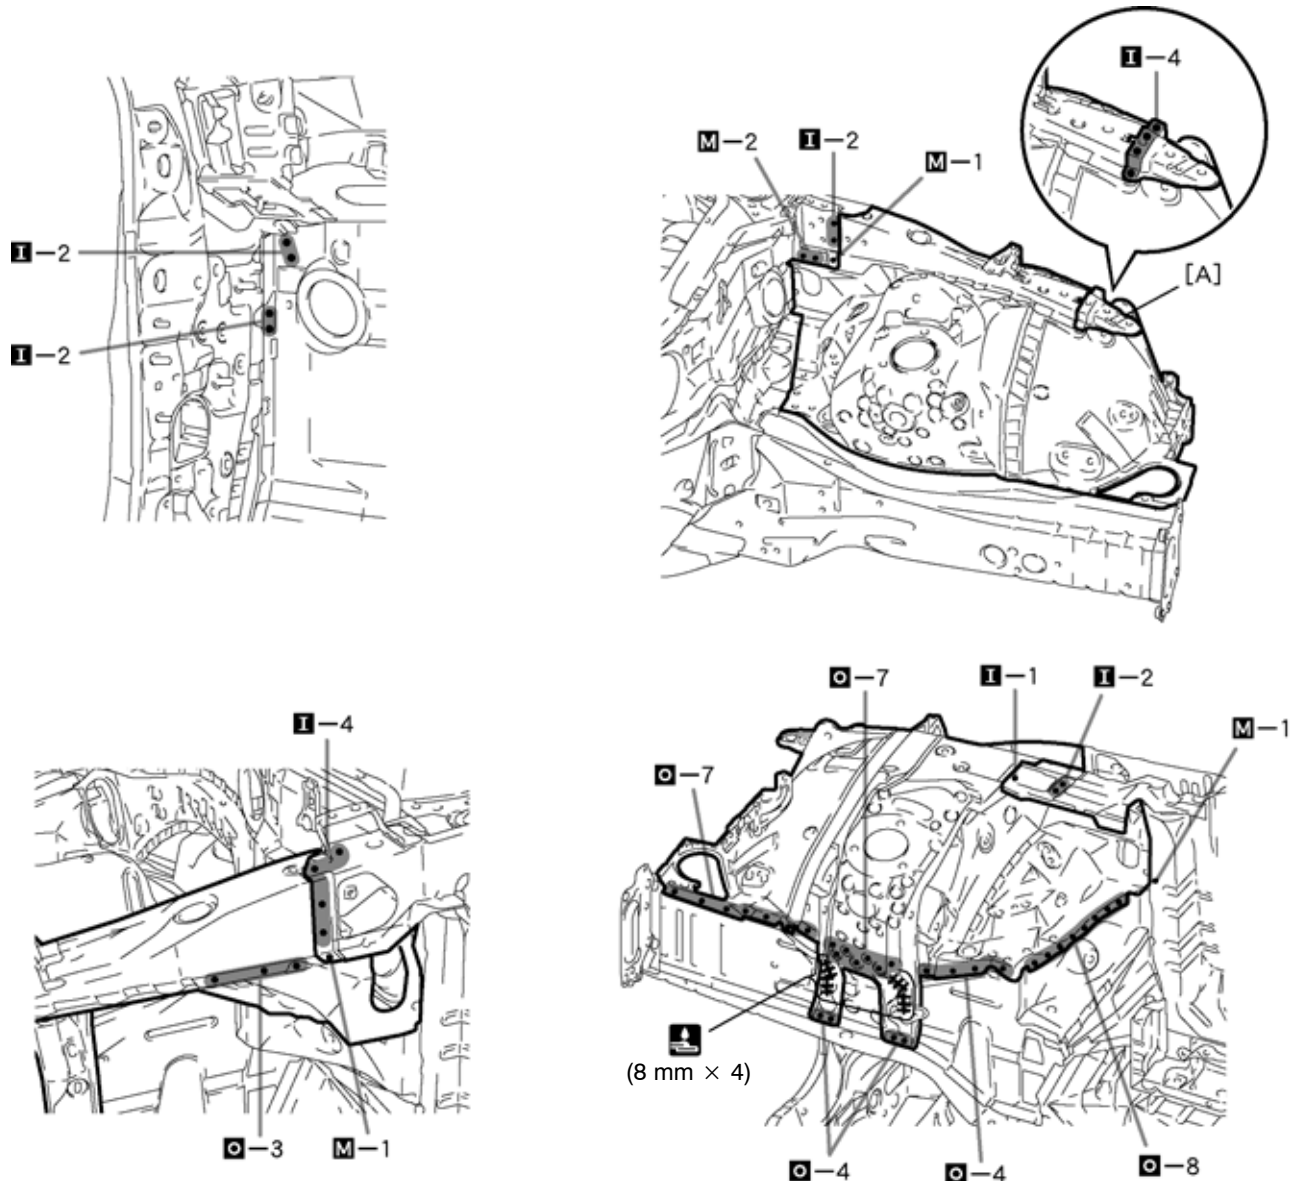

F24508

POINT

- 1 Inspect the fitting of the front fender, hood and other related parts before welding as this affects the appearance of the finish.
- 2 Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

PART NAME

[A] Radiator Support Extension

8 mm (0.31 in.)