



COWL TOP TO APRON BLACE (ASSY)	 F24520A
REPLACEMENT	

REMOVAL

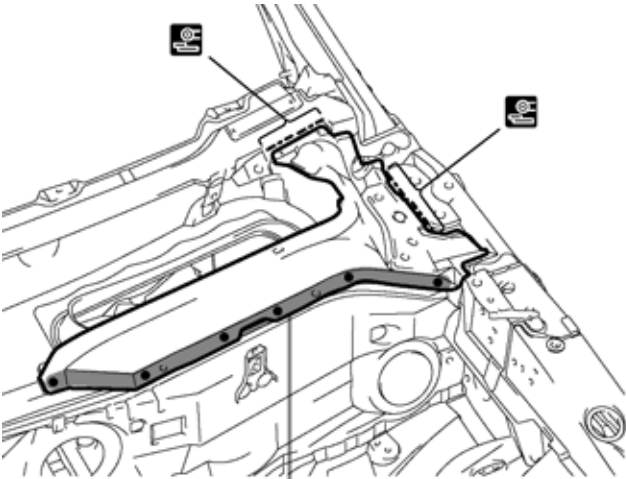

RHD : -6
LHD : -4


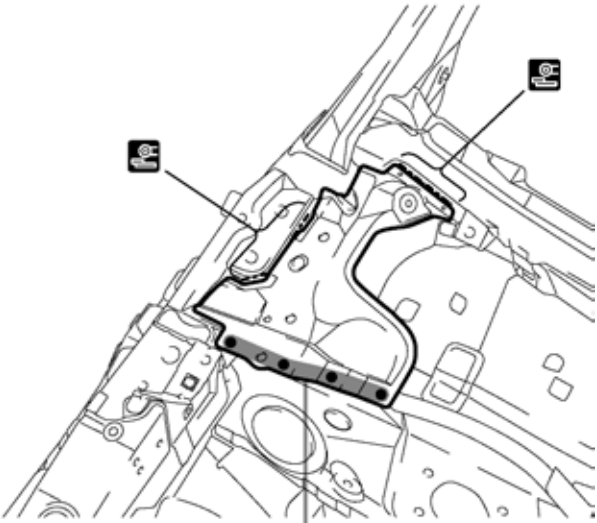


RHD : -4
LHD : -6

F24520

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

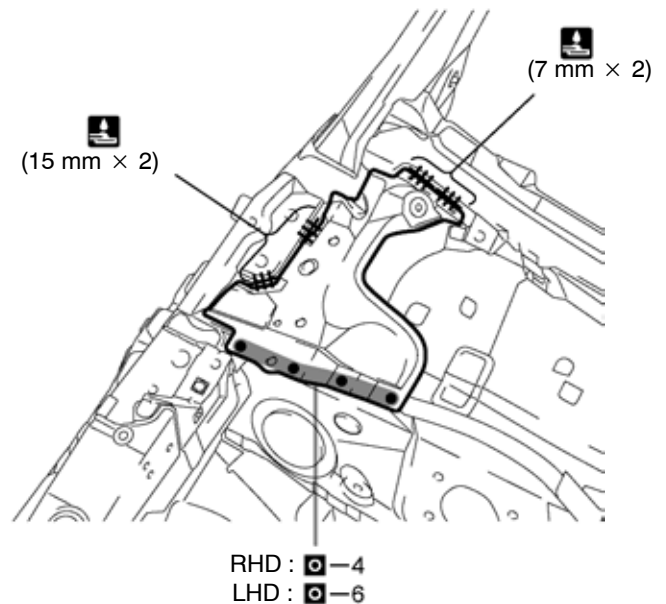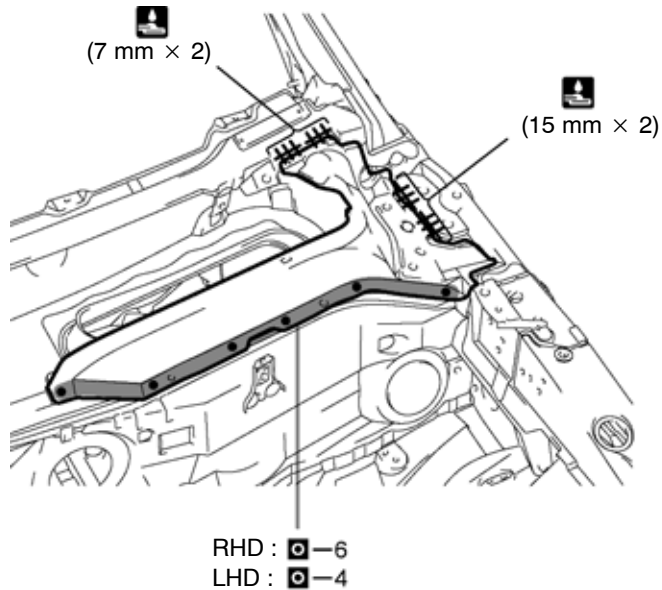

F24521

7 mm (0.28 in.)

15 mm (0.59 in.)