


REAR FLOOR PAN (ASSY)

REPLACEMENT


With the body lower back panel removed.

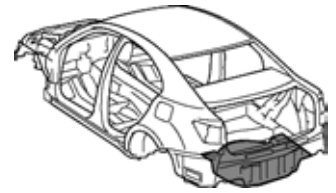


F24571A

REMOVAL

[EX. USA]

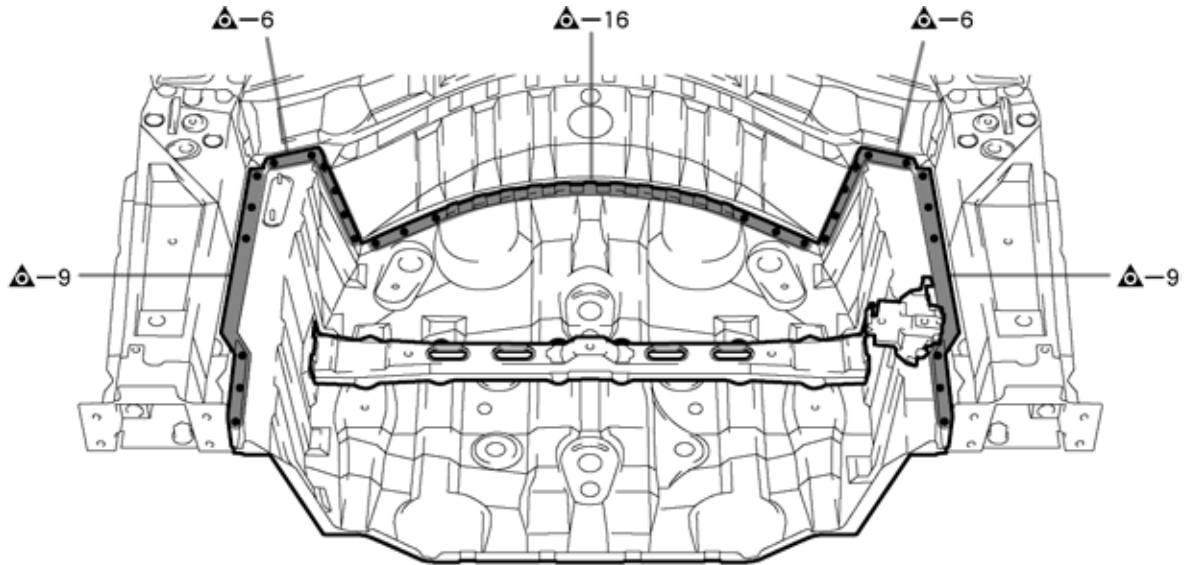

[USA]

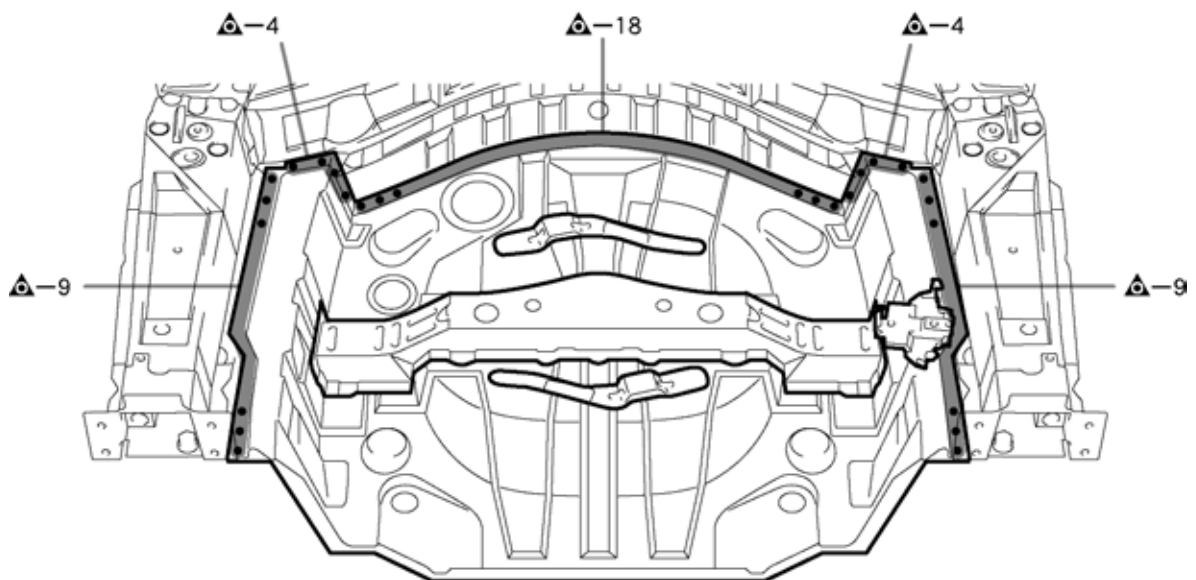


F24571

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply polyurethane foam to the corresponding parts.
- After welding, apply body sealer and undercoating to the corresponding parts.
- After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.

[EX. USA]

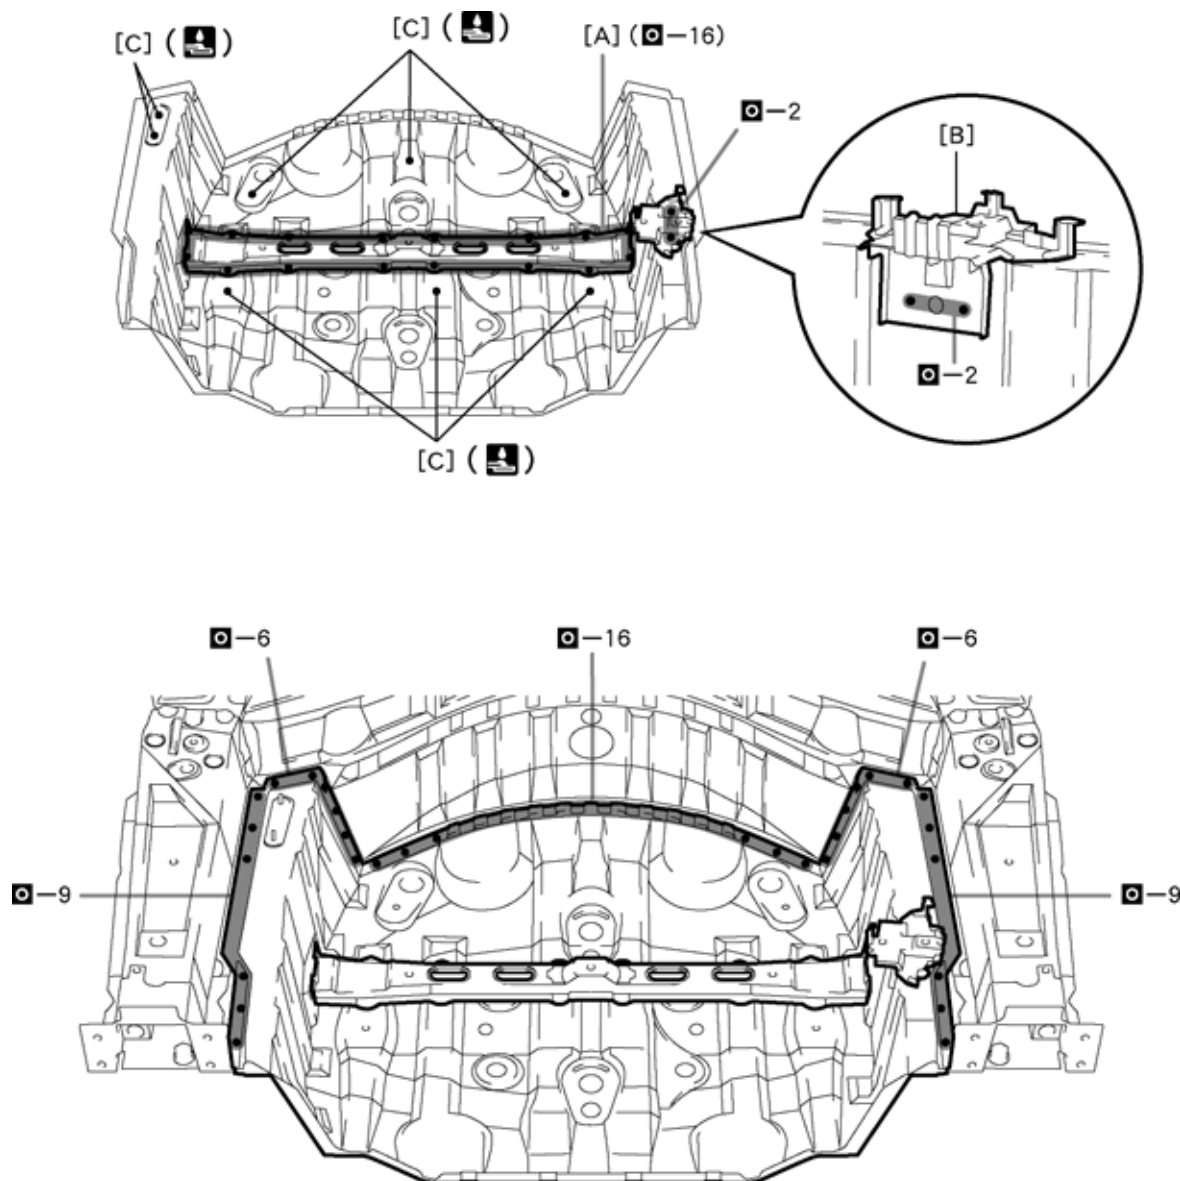


F24572

PART NAME

[A] Spare Wheel Clamp Bracket [B] Jack Carrier [C] Weld Bolt

[USA]

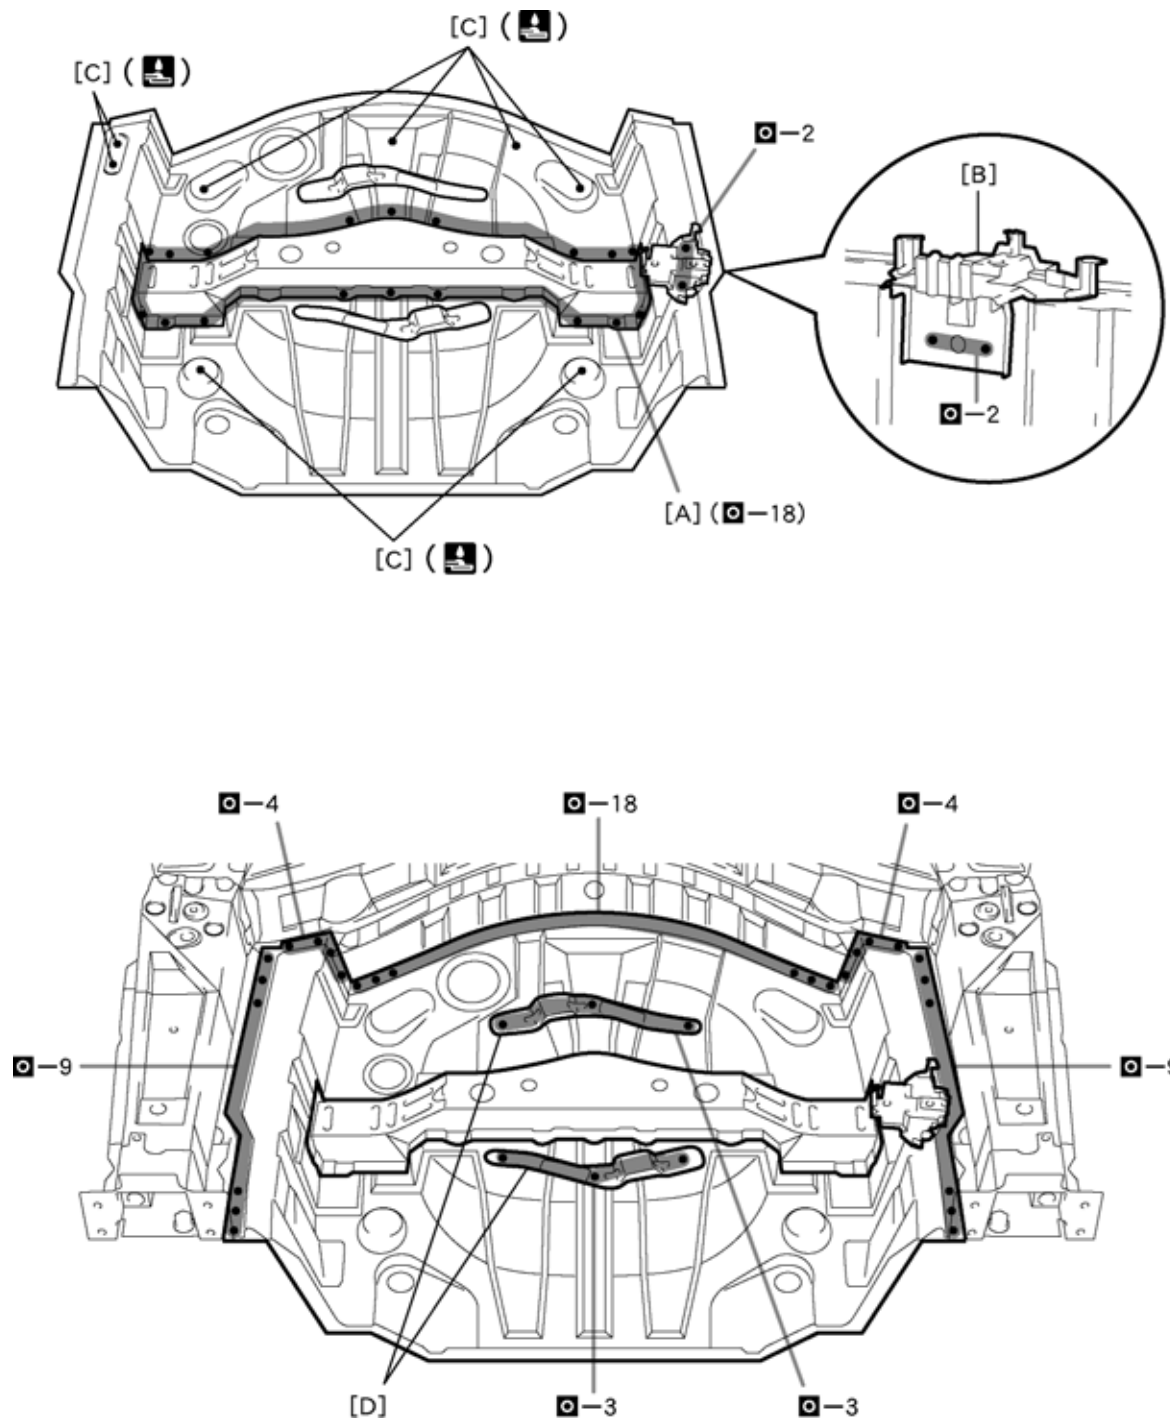

F24573

PART NAME

[A] Spare Wheel Clamp Bracket

[B] Jack Carrier

[C] Weld Bolt

[D] Fuel Tube Bracket