





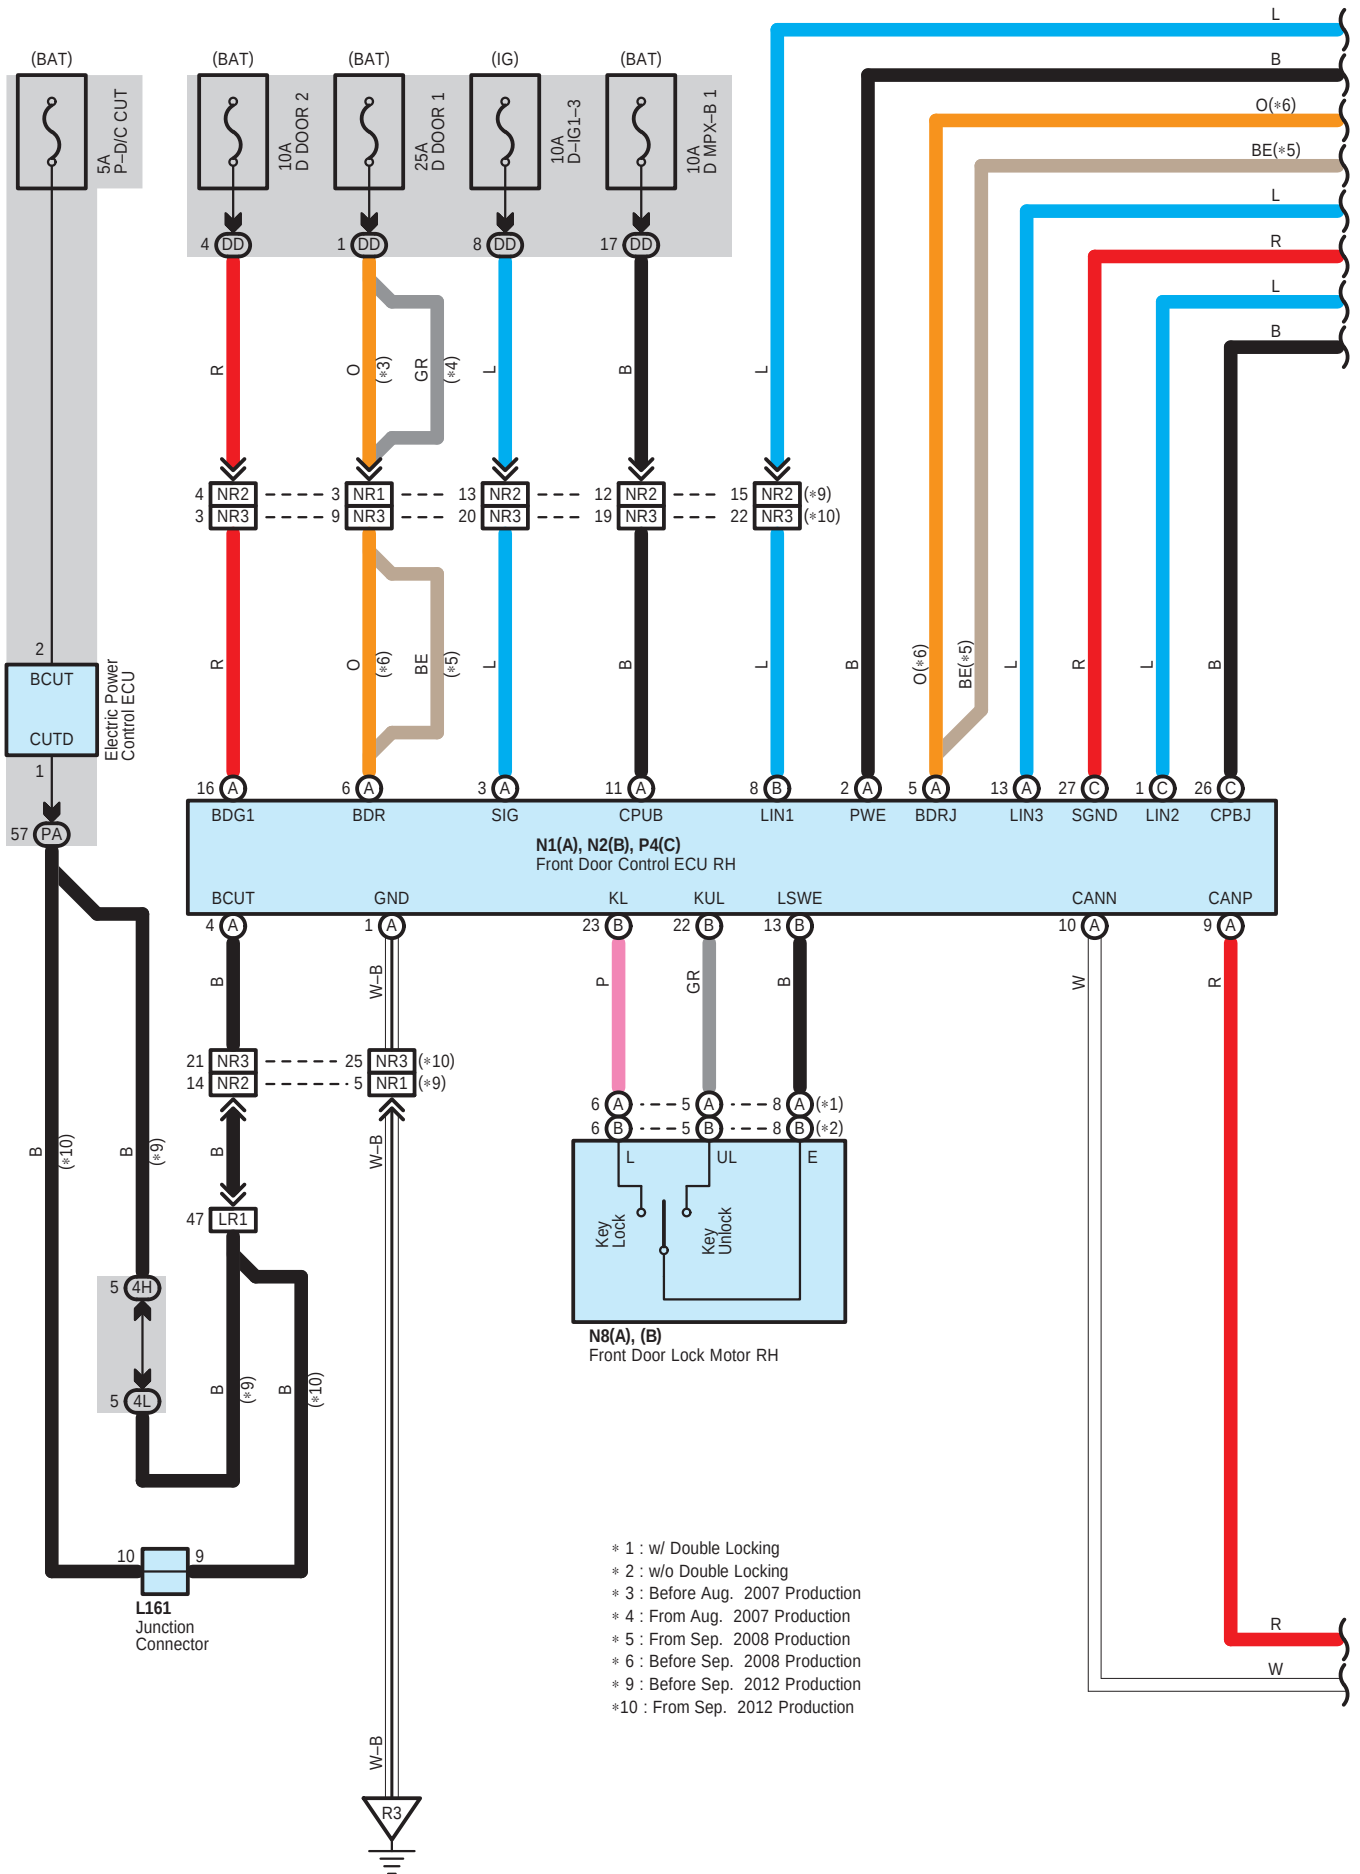



Power Window <RHD>

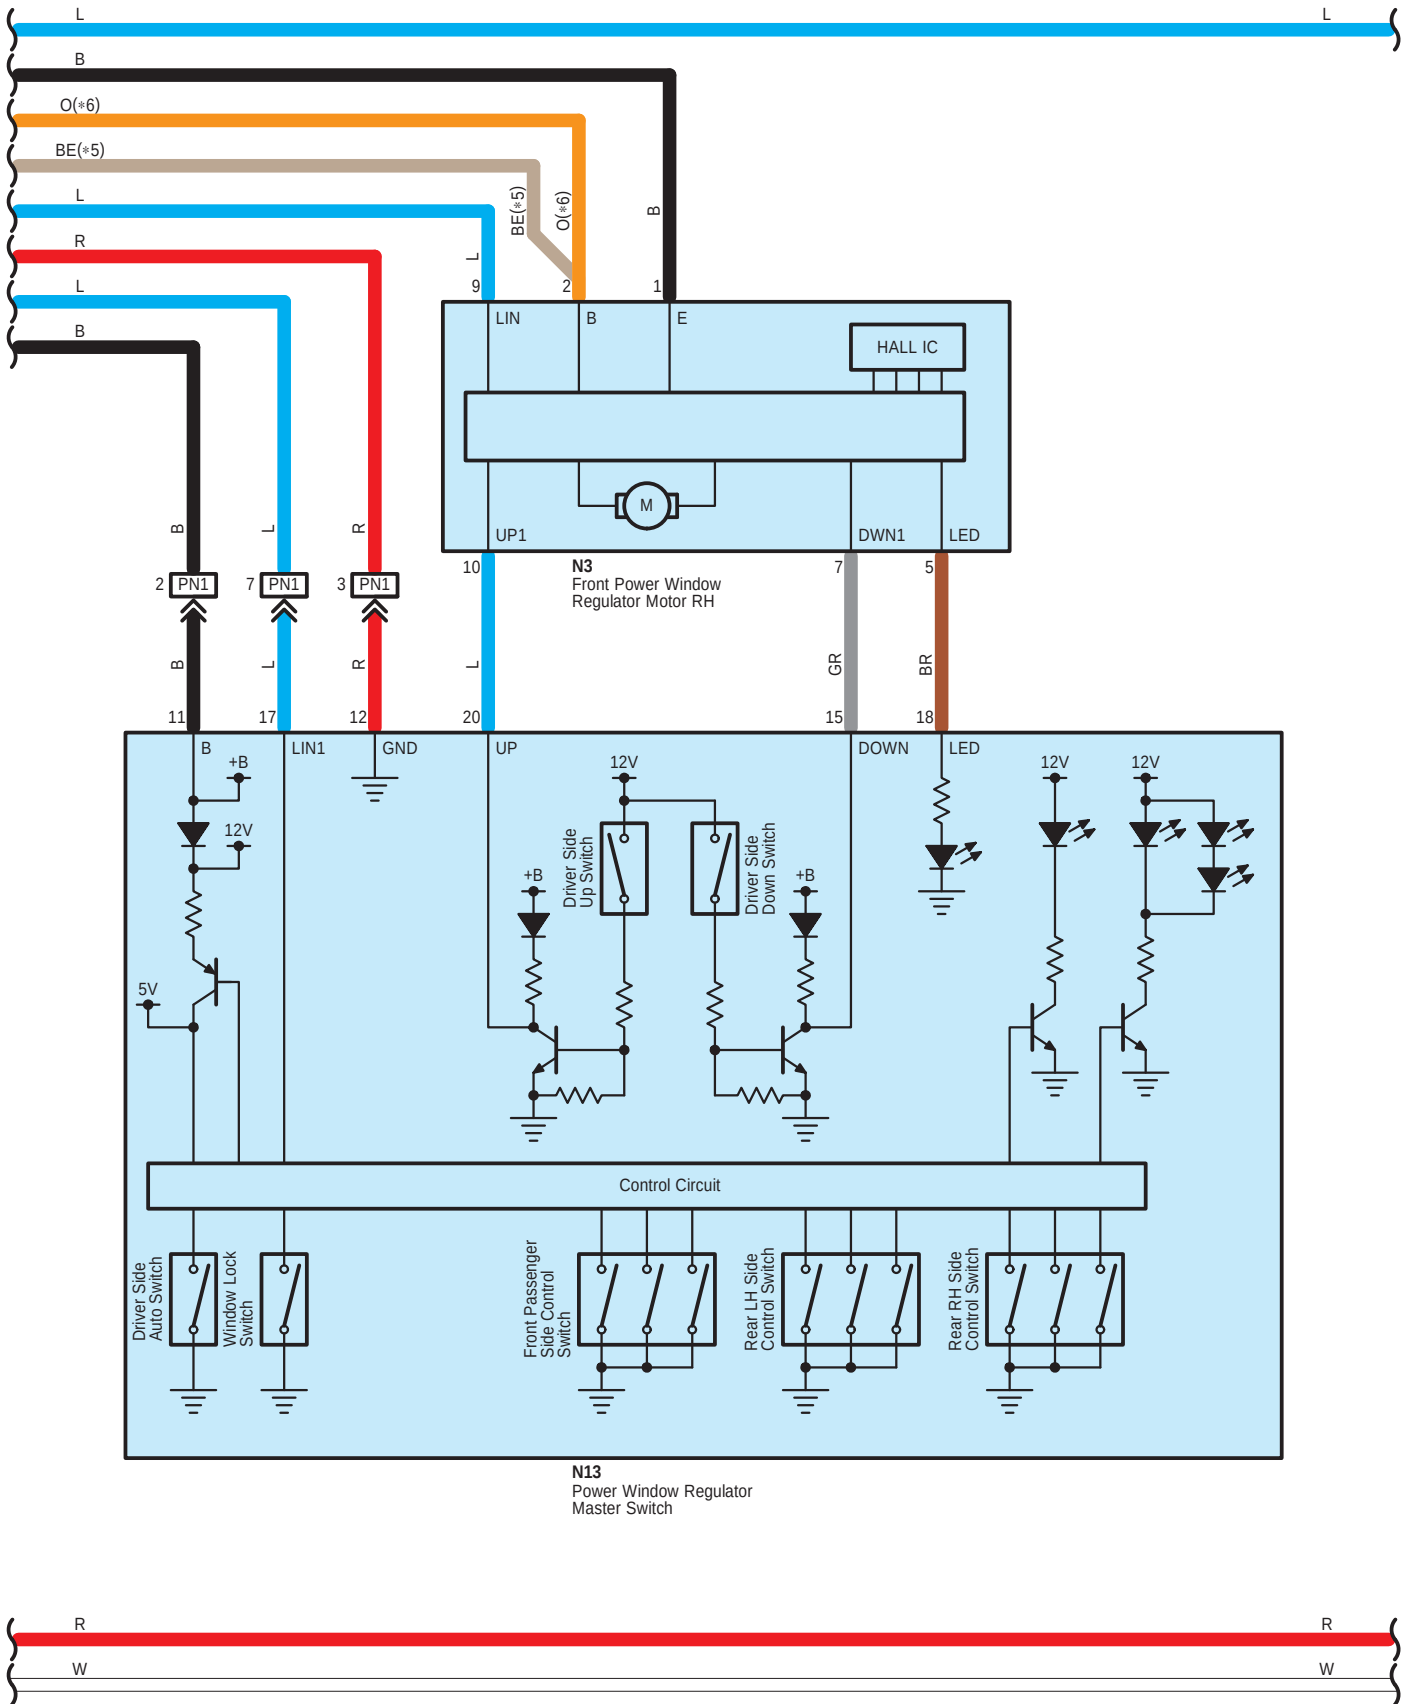

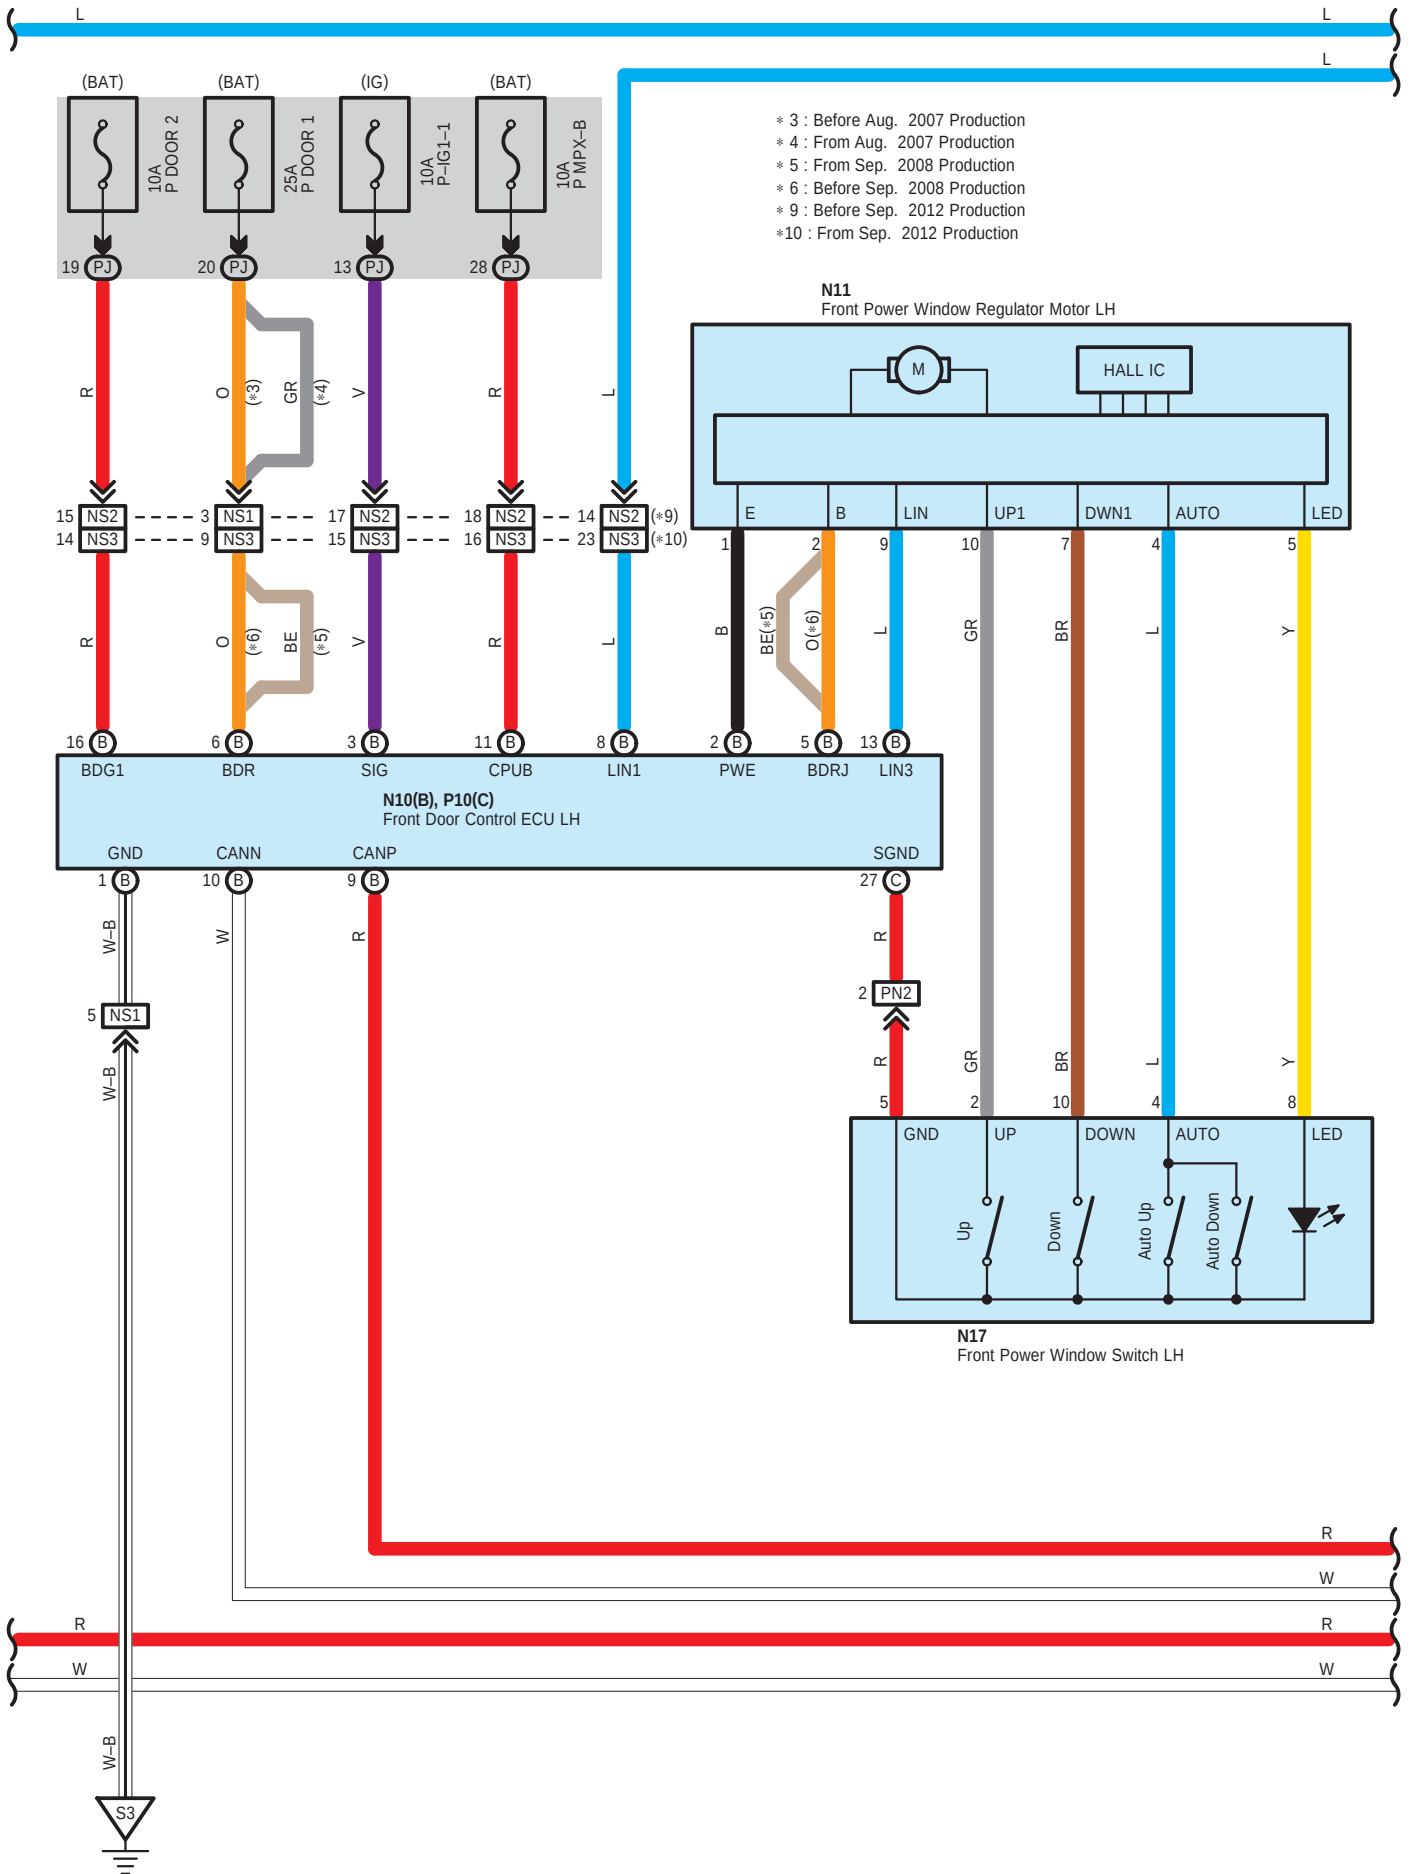


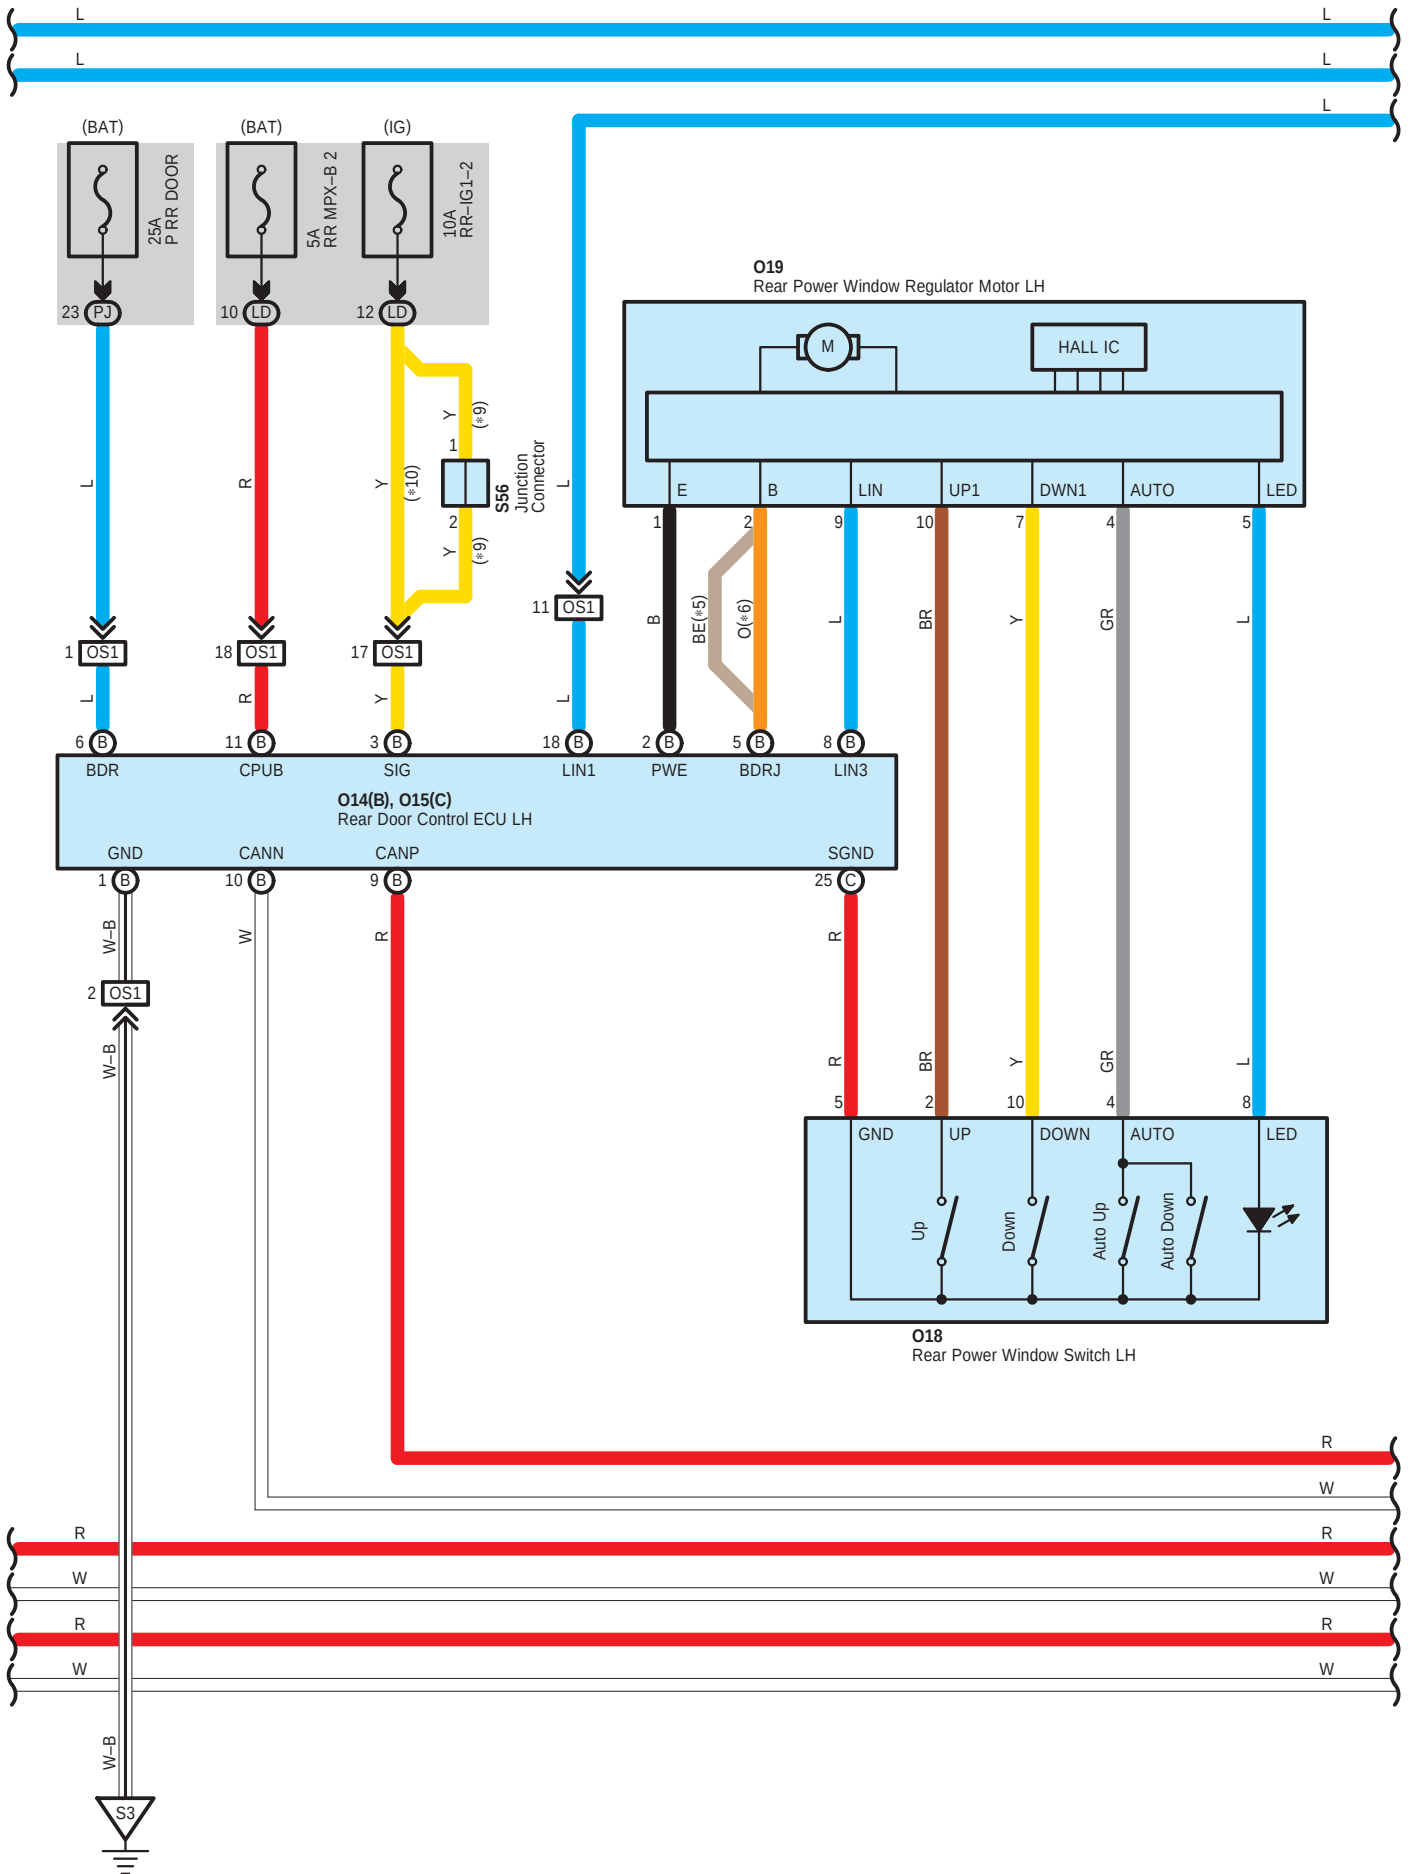
















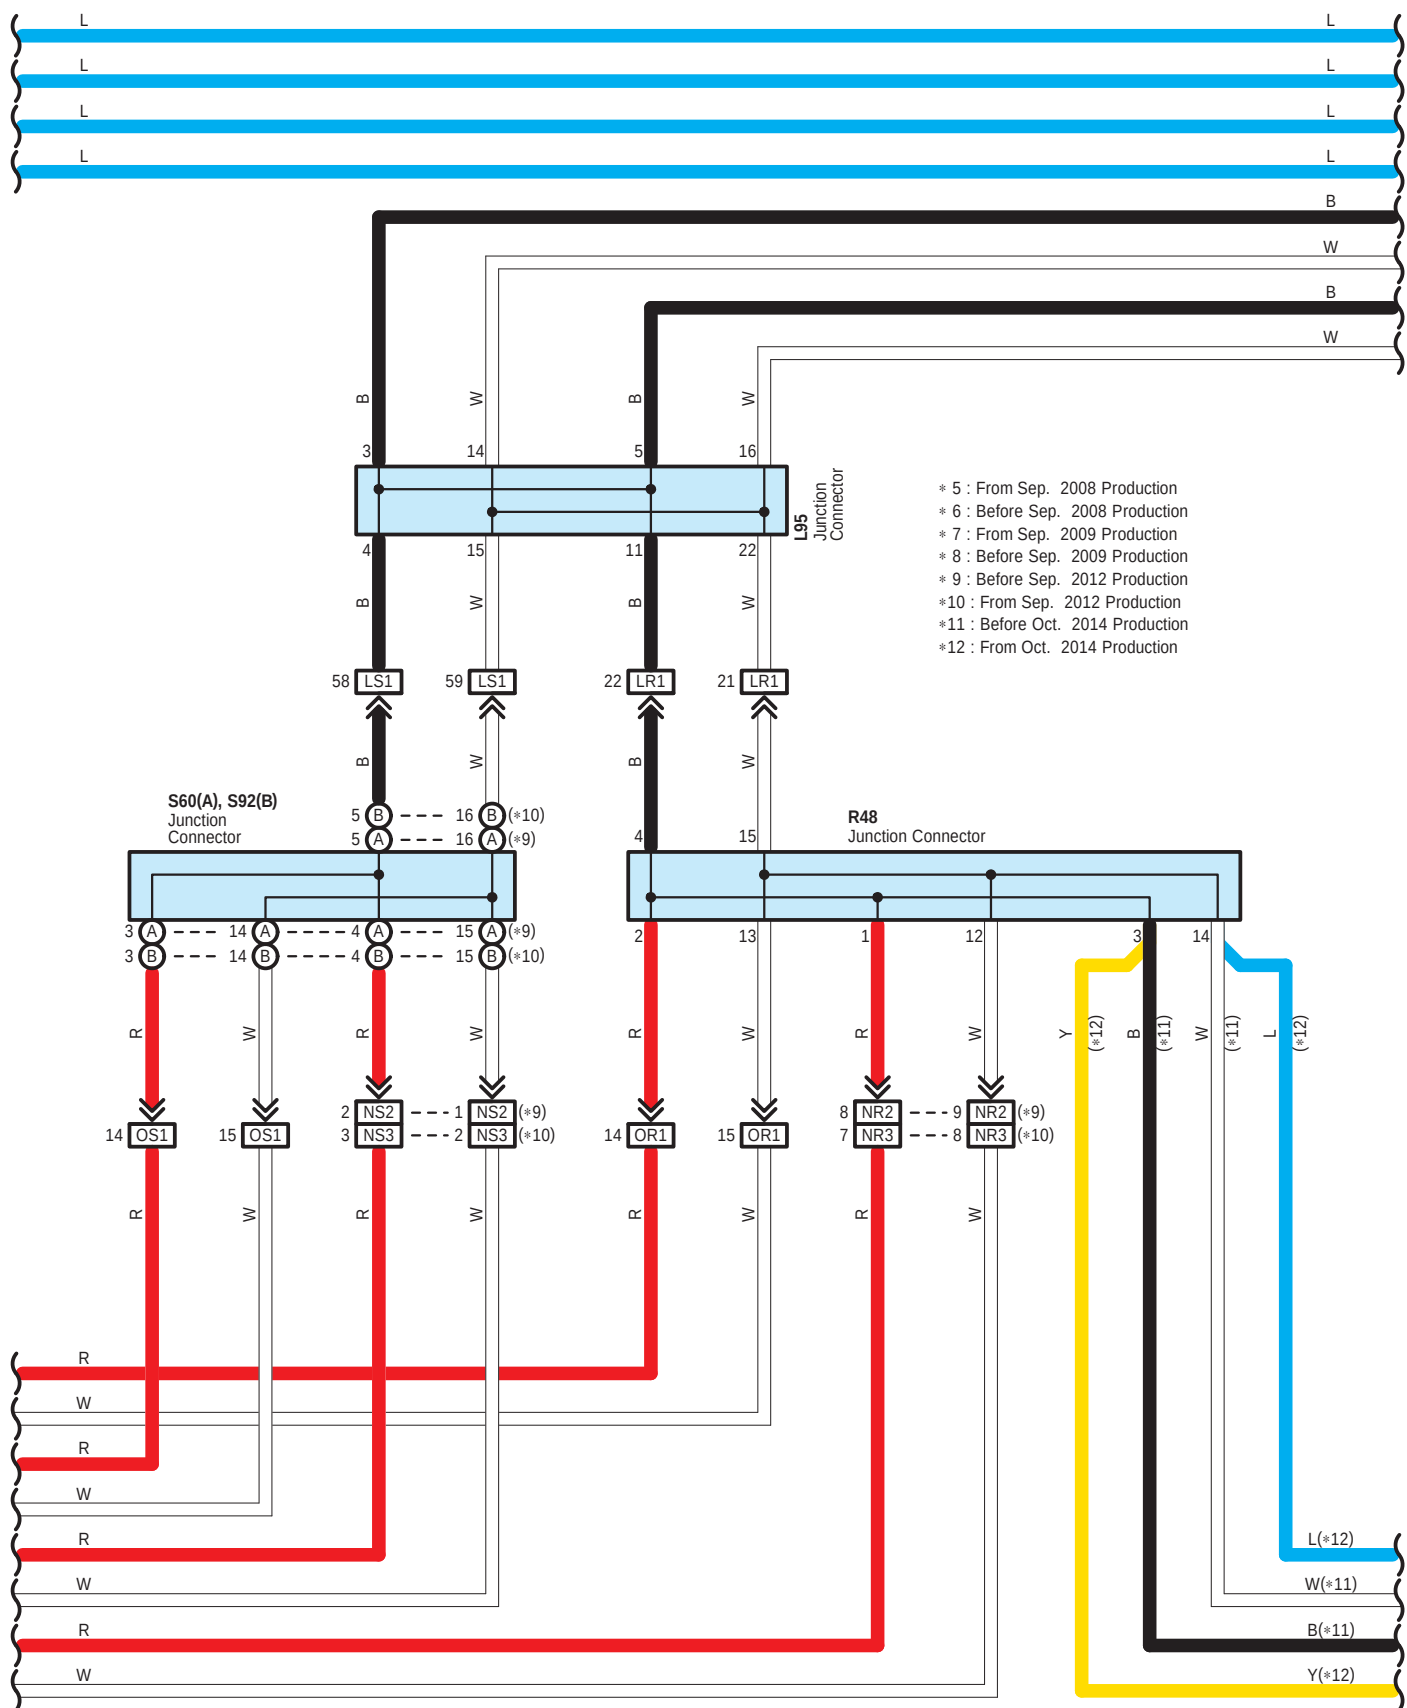


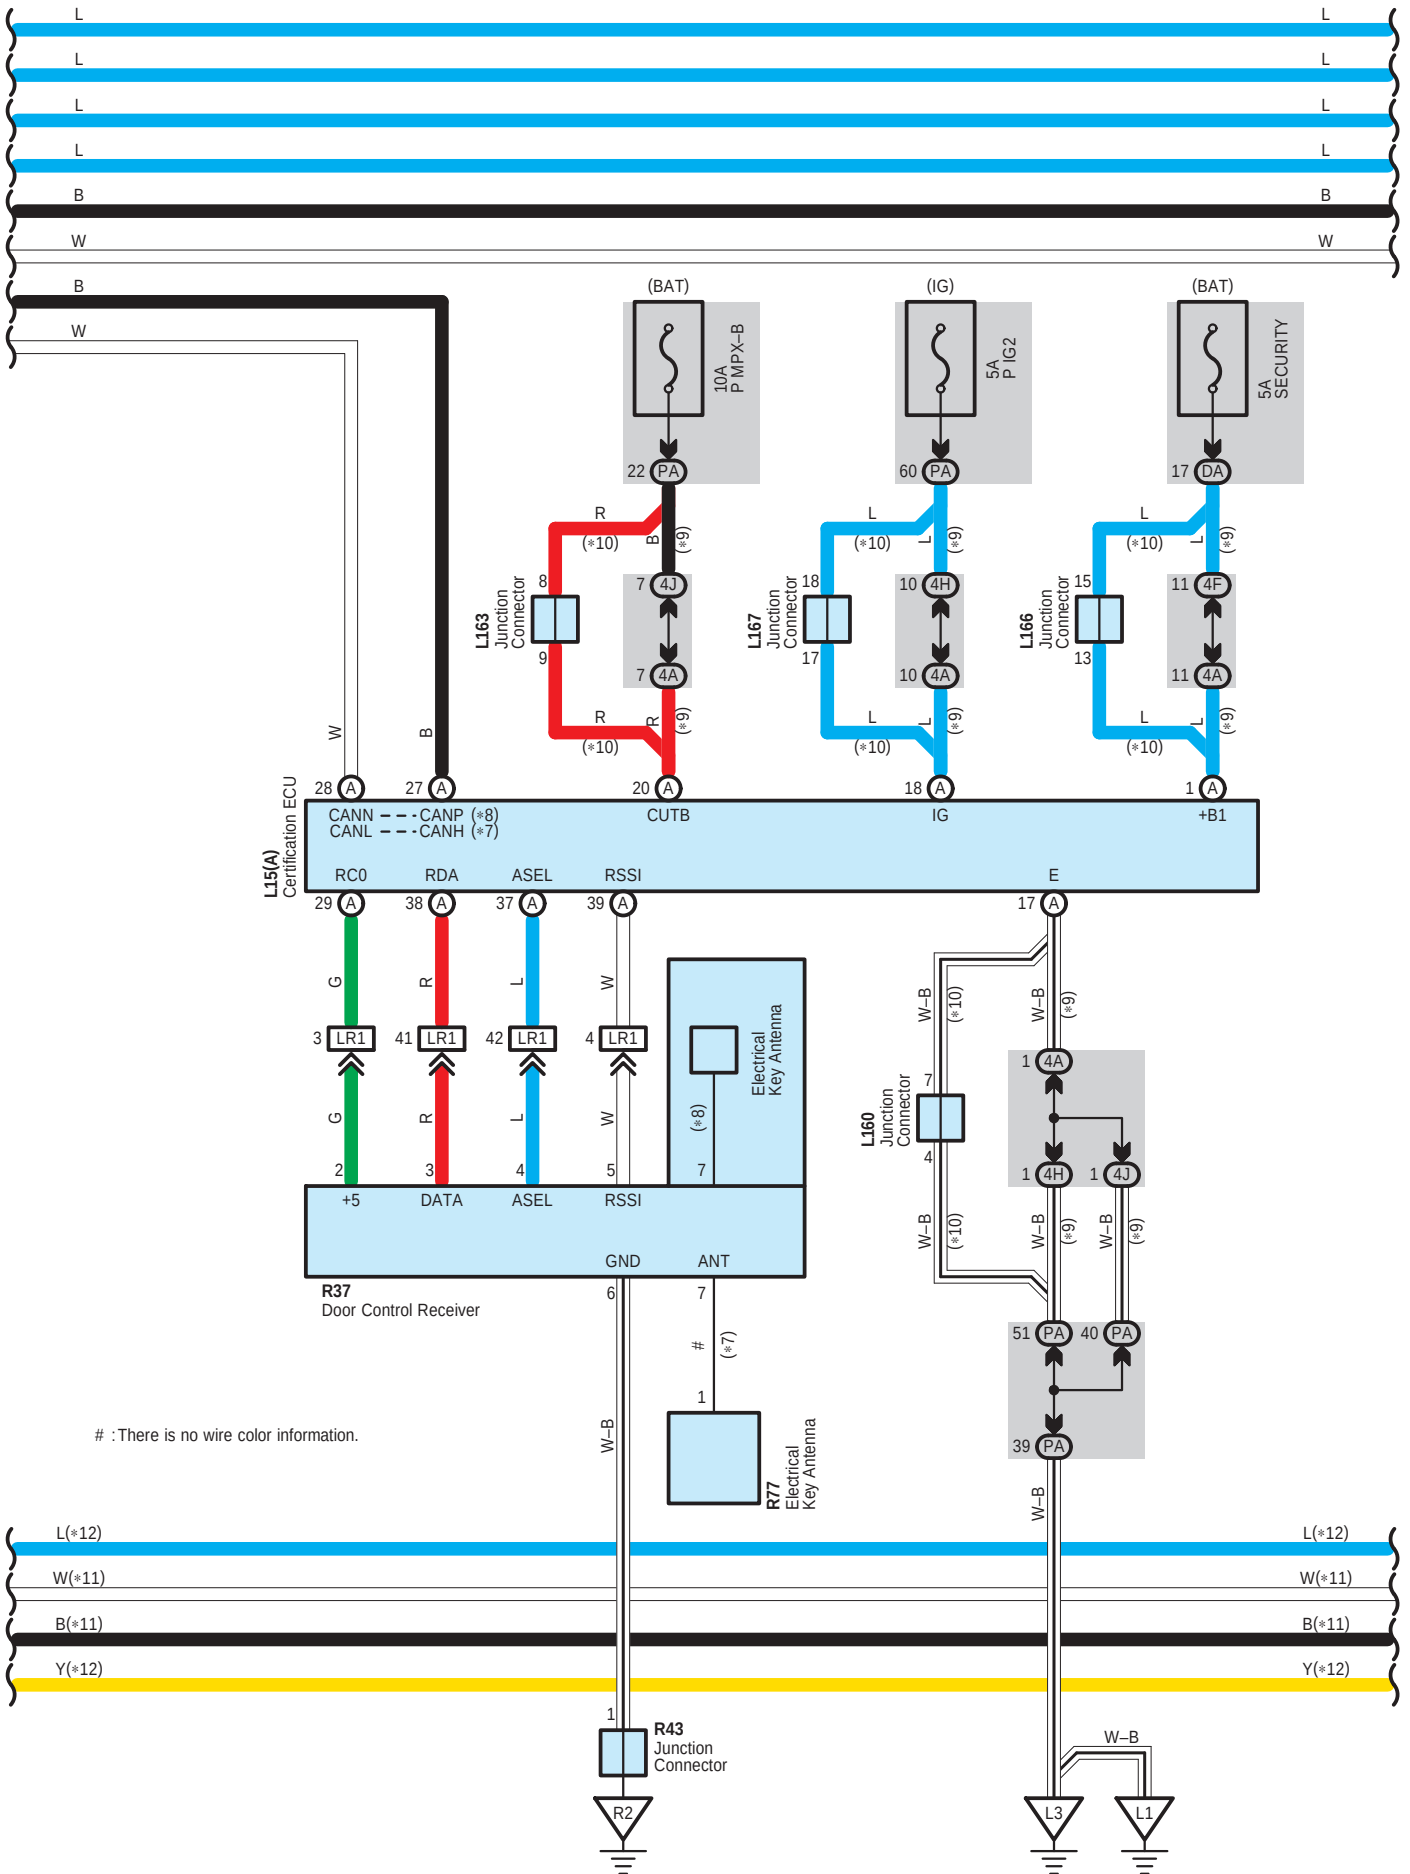


: There is no wire color information.

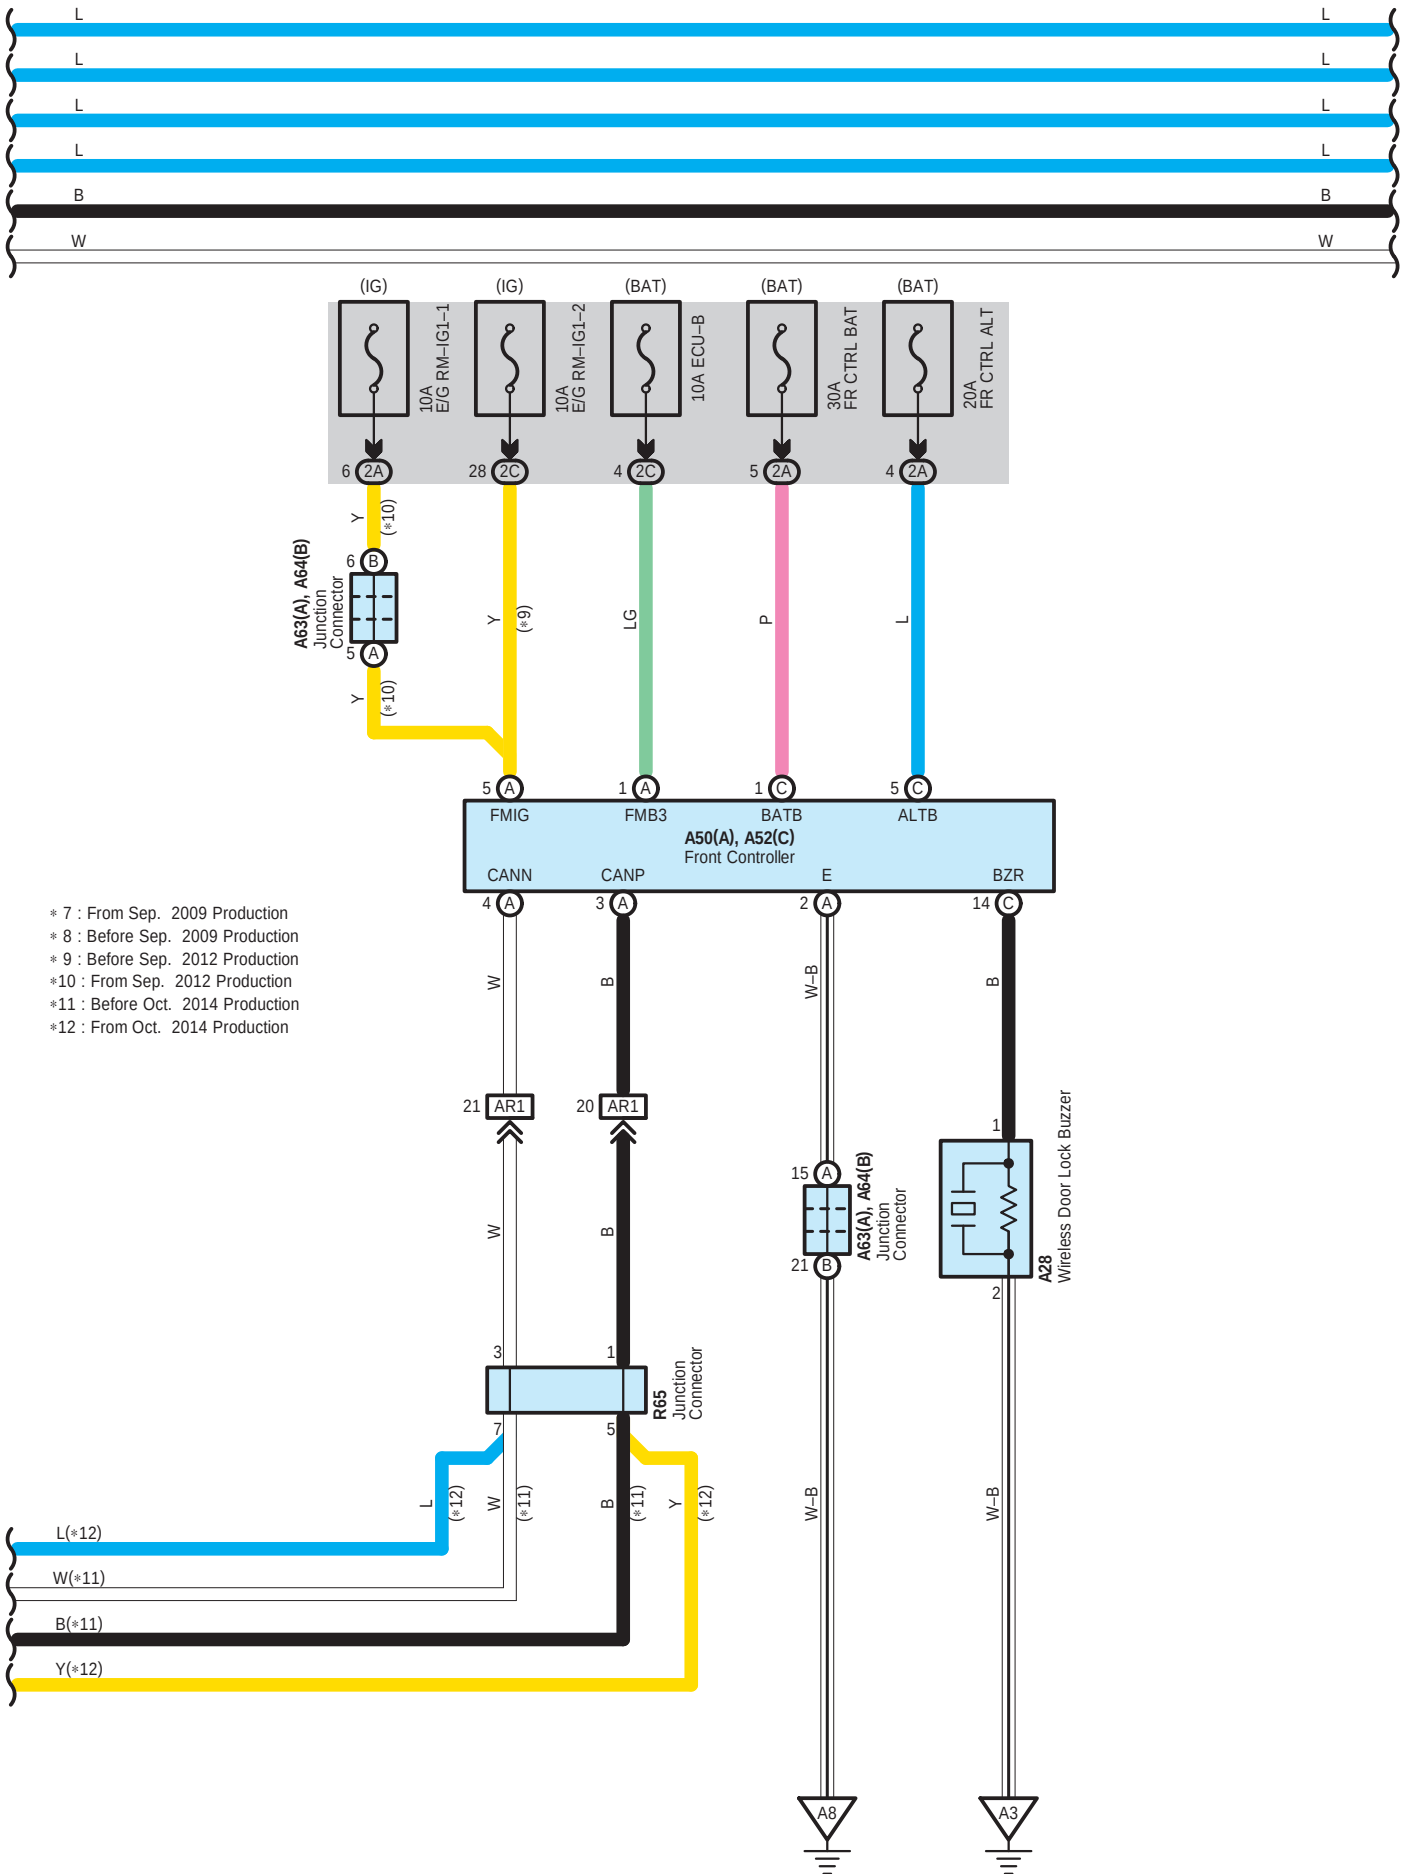

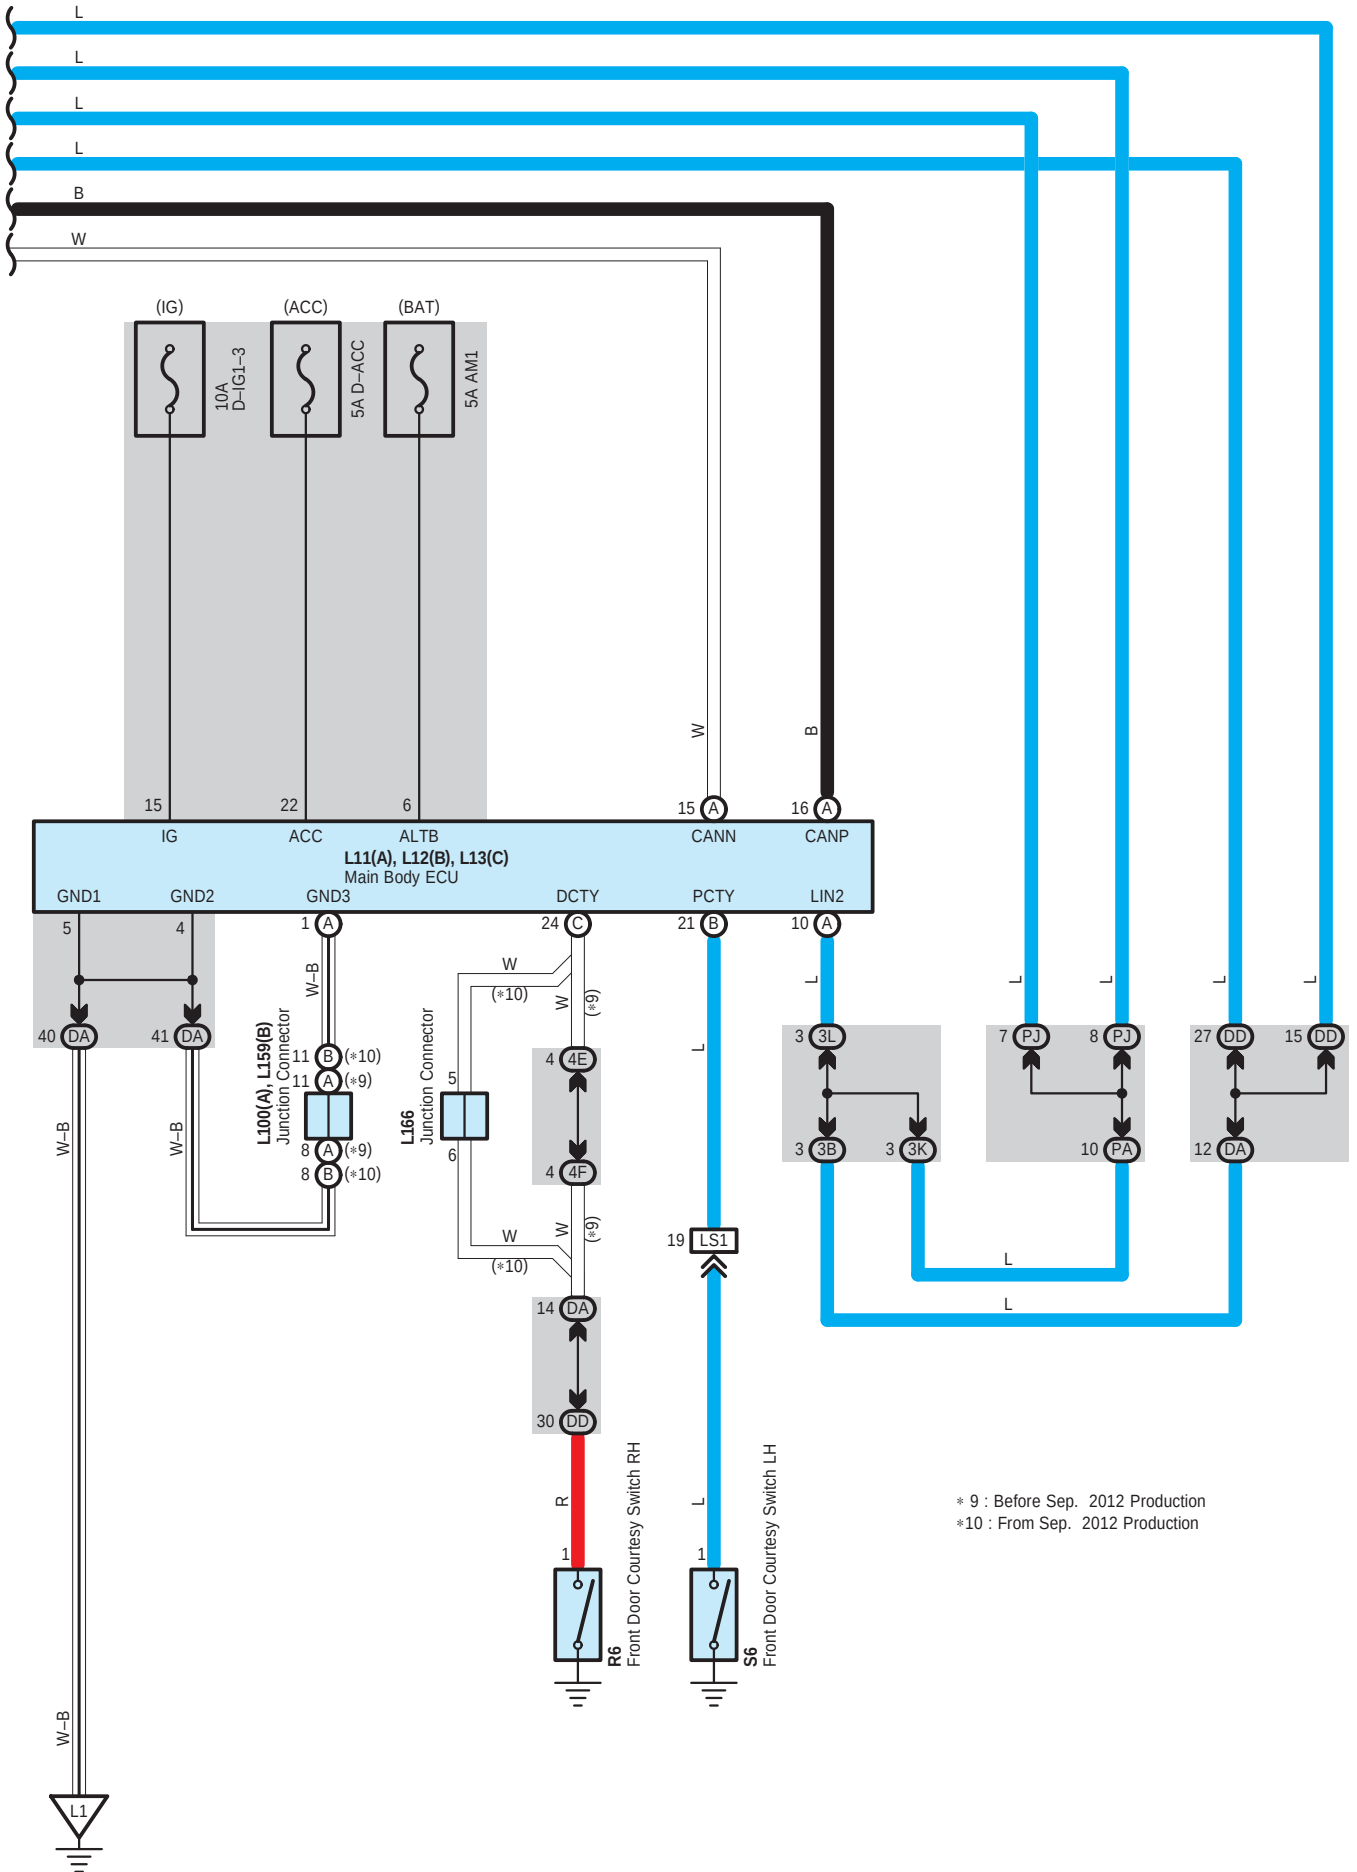


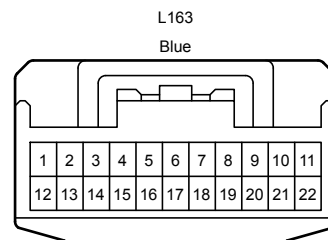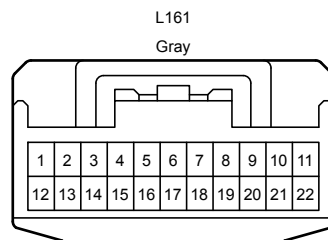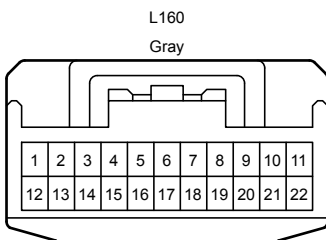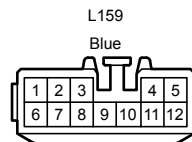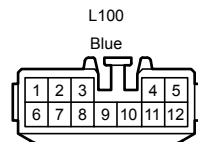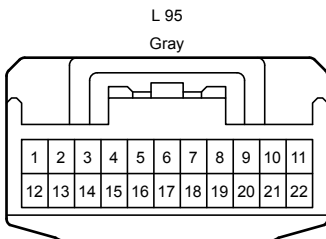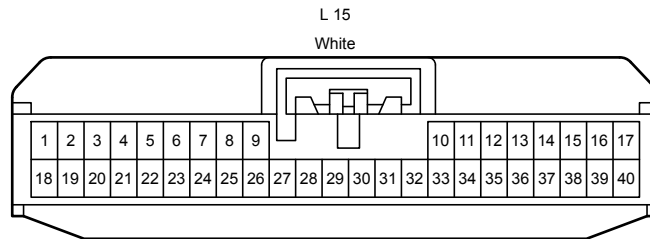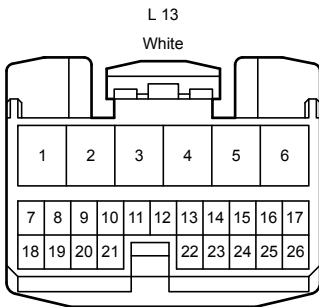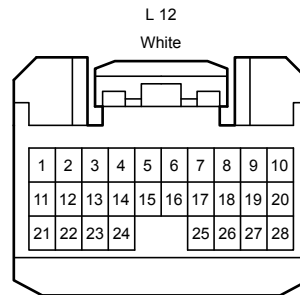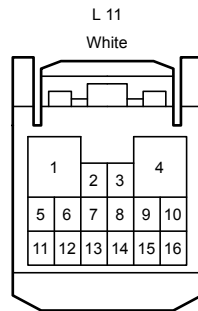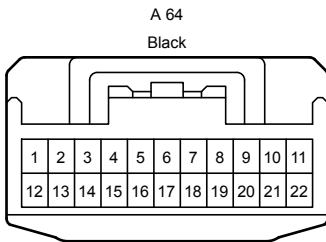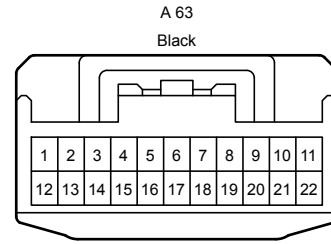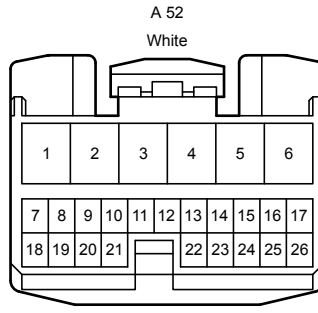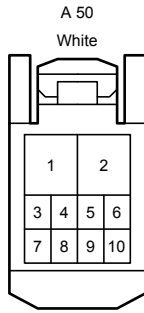


L166
White

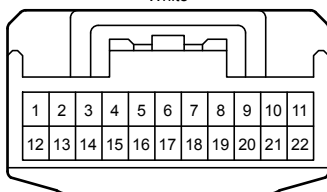


L167
White

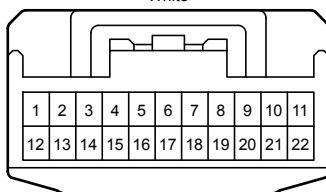


N 1
White

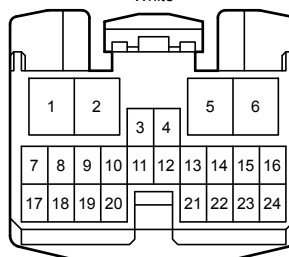


N 2
White

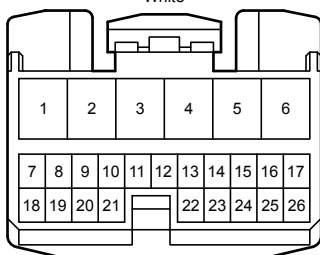


N 3
White

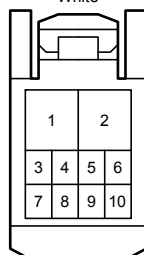


N 8
White

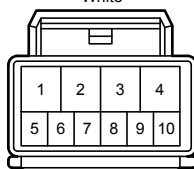


N 10
White

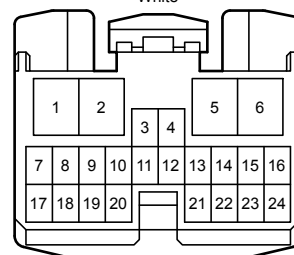


N 11
White

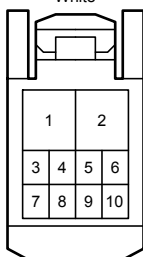


N 13
White

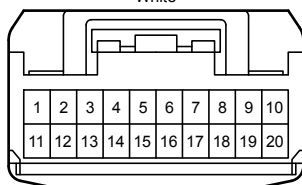


N 17
White

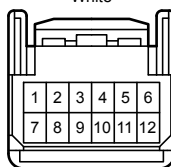


O 2
White

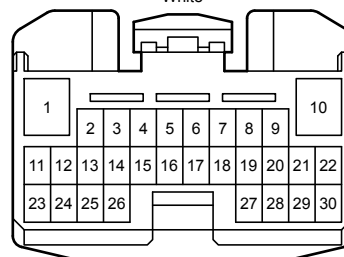


O 3
White

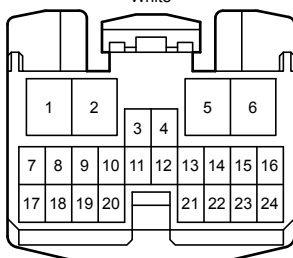


O 7
White

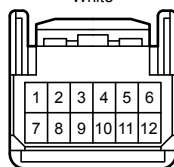


O 8
White

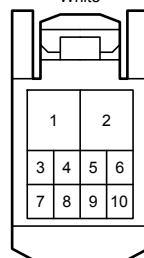


O 14
White

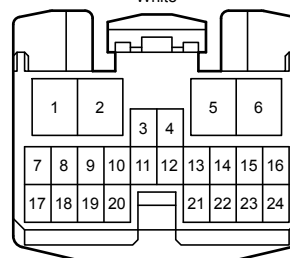


O 15
White















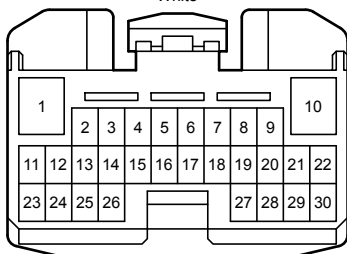


O 18
White

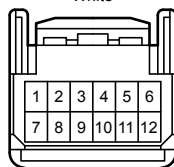


O 19
White

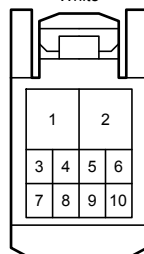

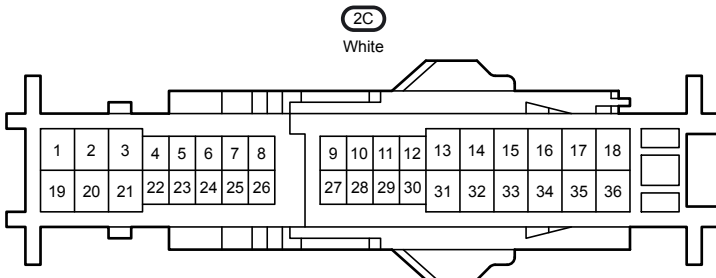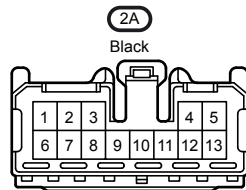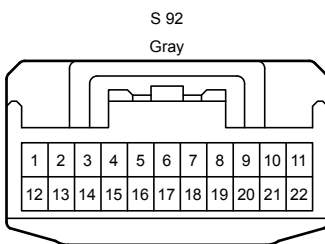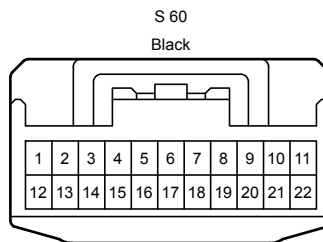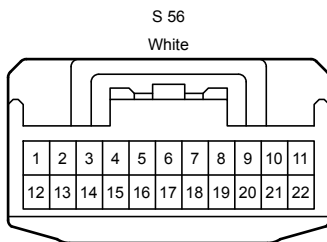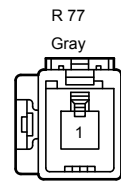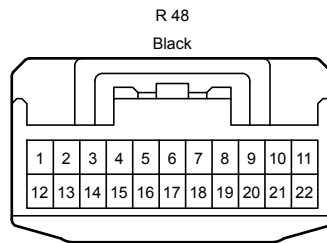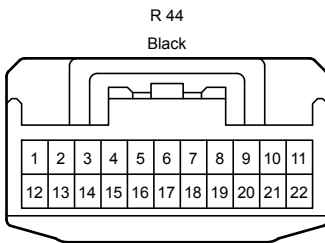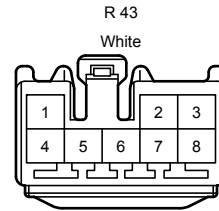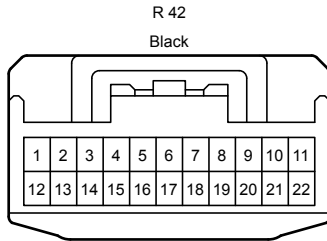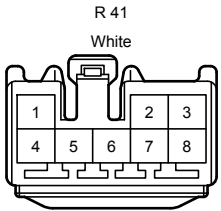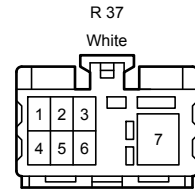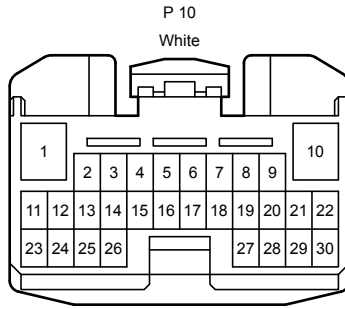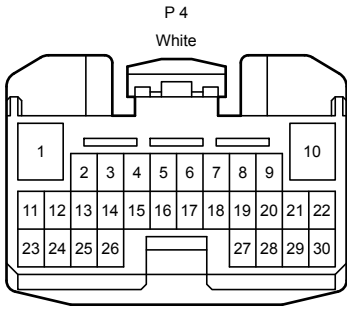


3K

White



3L

Gray




4A

White



4E

White




4F

Gray




4H

Gray




4J

Gray




4L

Gray




DA

White

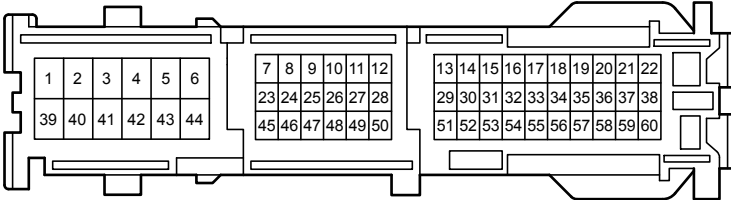


DD

Gray

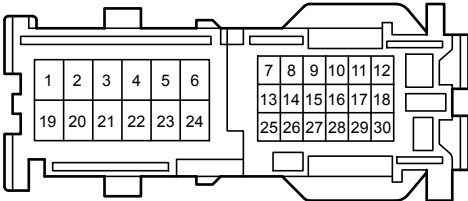


LA

White

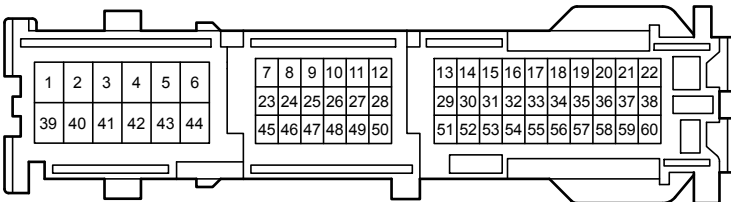


LD

Gray

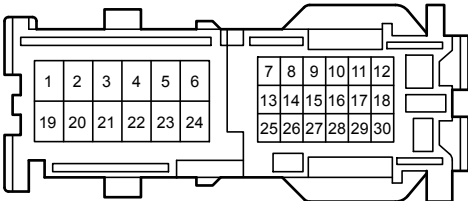


PA

White

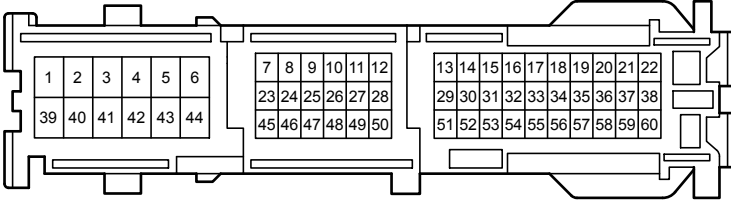


PJ

Gray

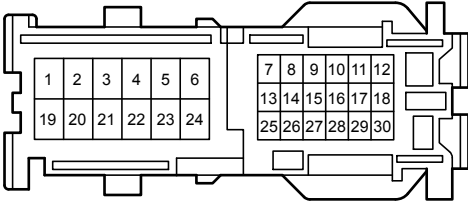


AR1

White

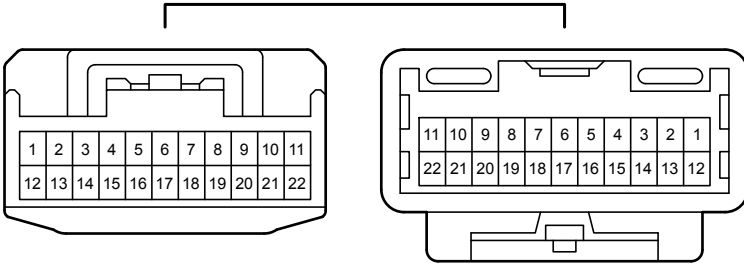


LR1

White

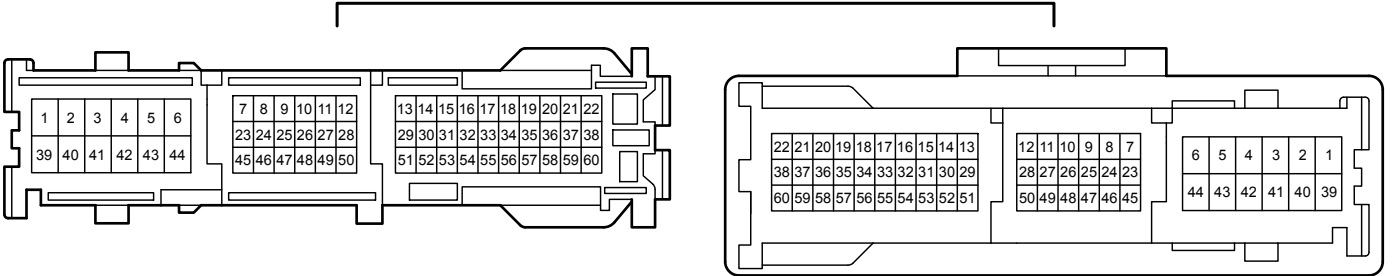


LS1


White

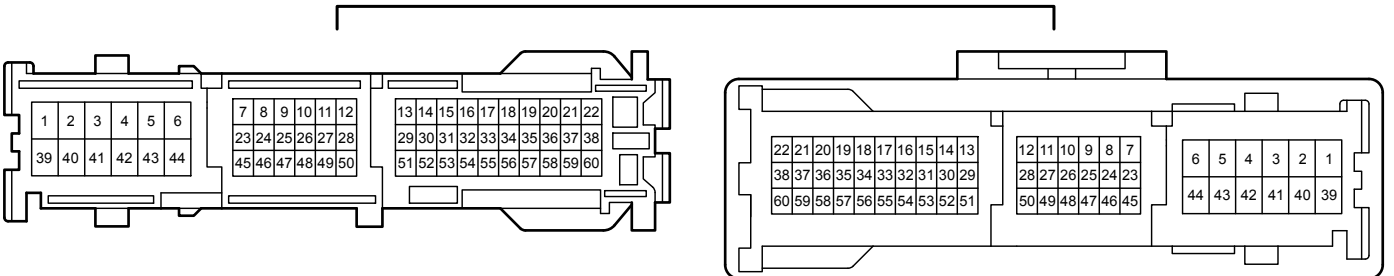


NR1
White

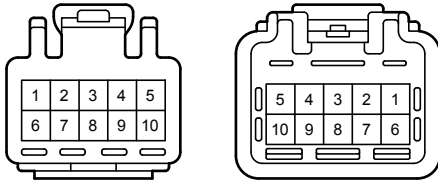


NR2
White

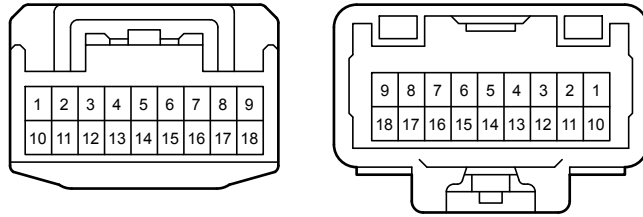


NR3
White

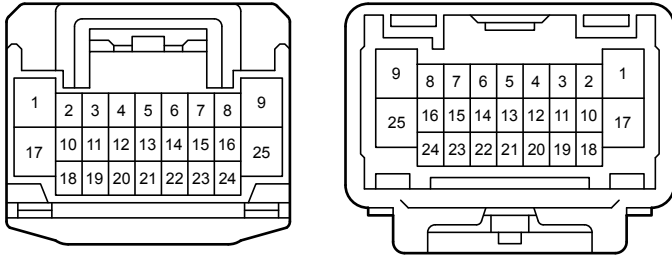


NS1
White

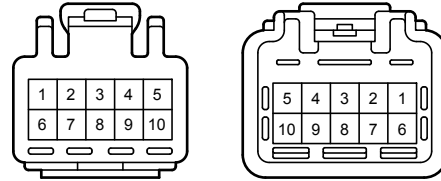


NS2
White

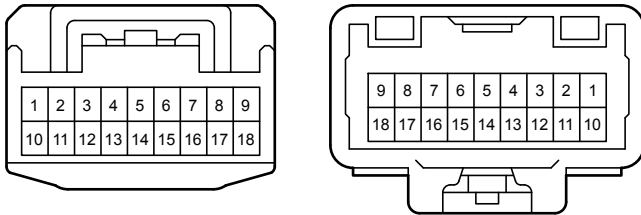


NS3
White

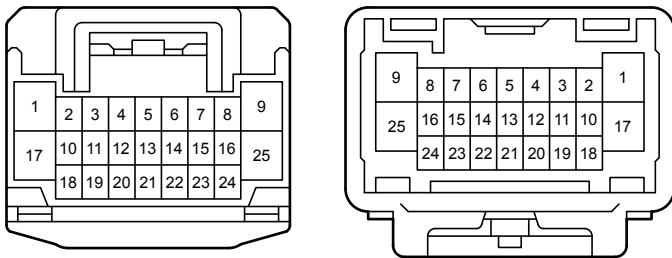

OR1
White

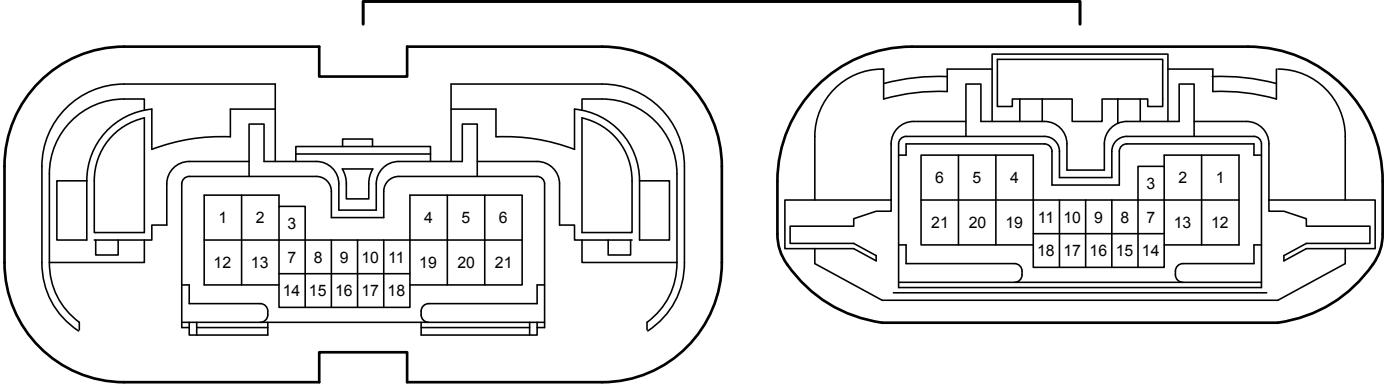


OS1
White

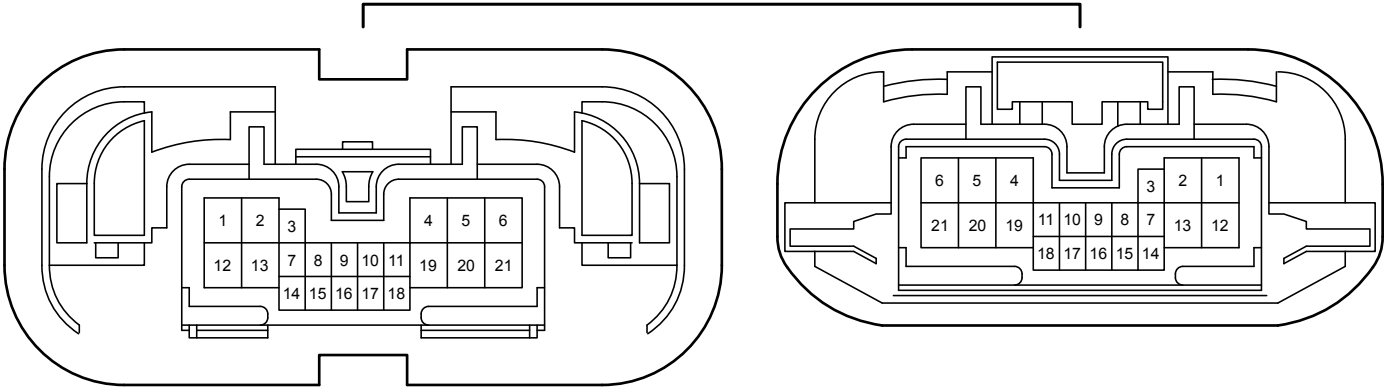

PN1
White

PN2
White

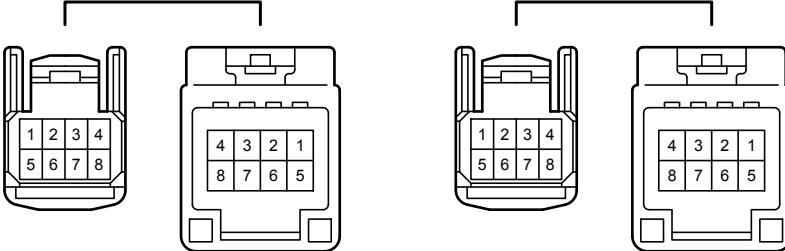

RS1
White

