






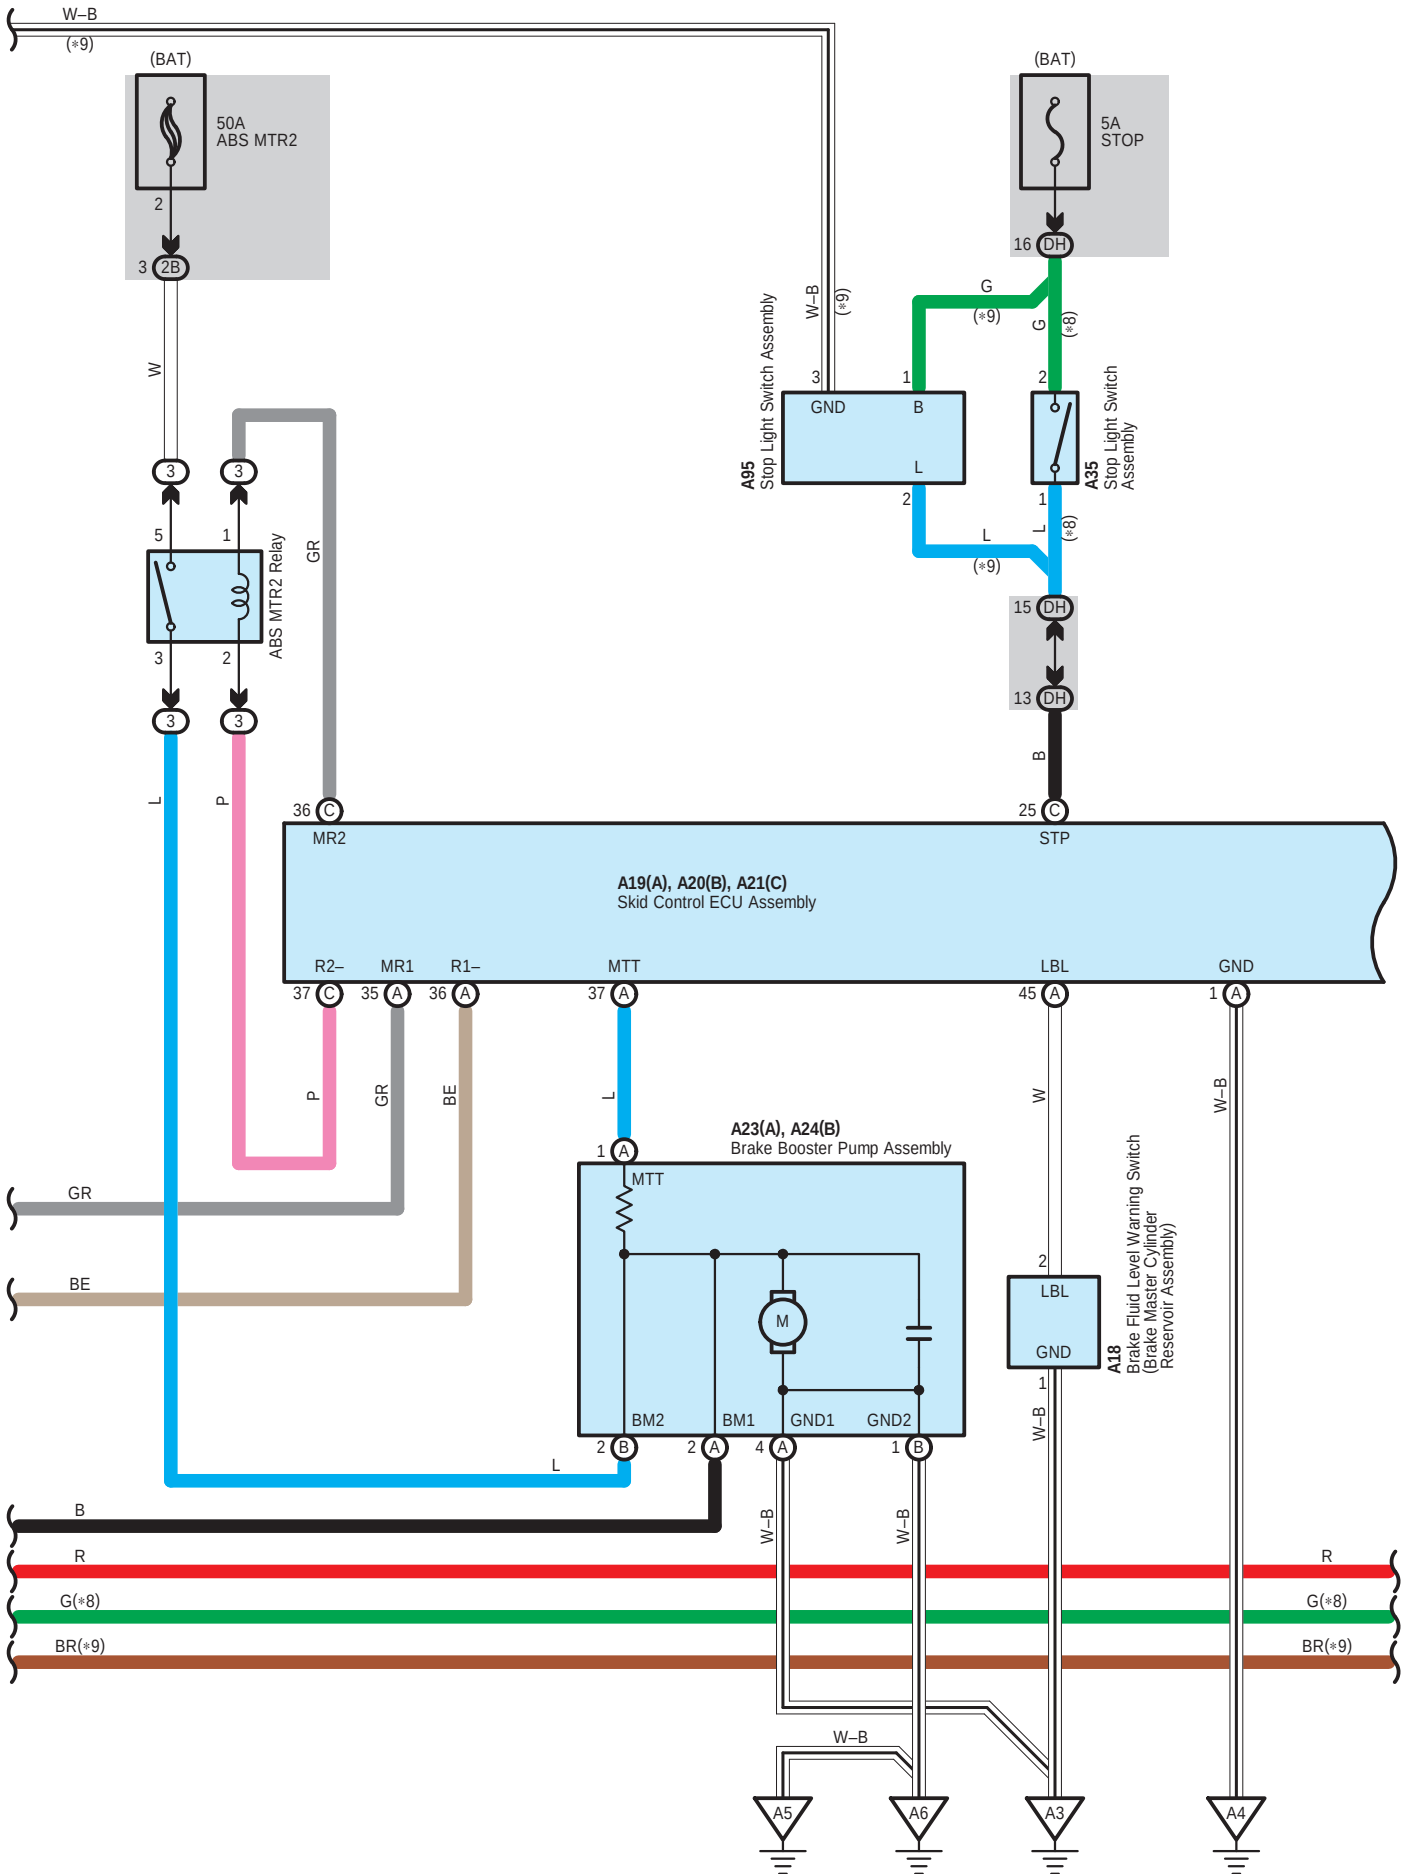



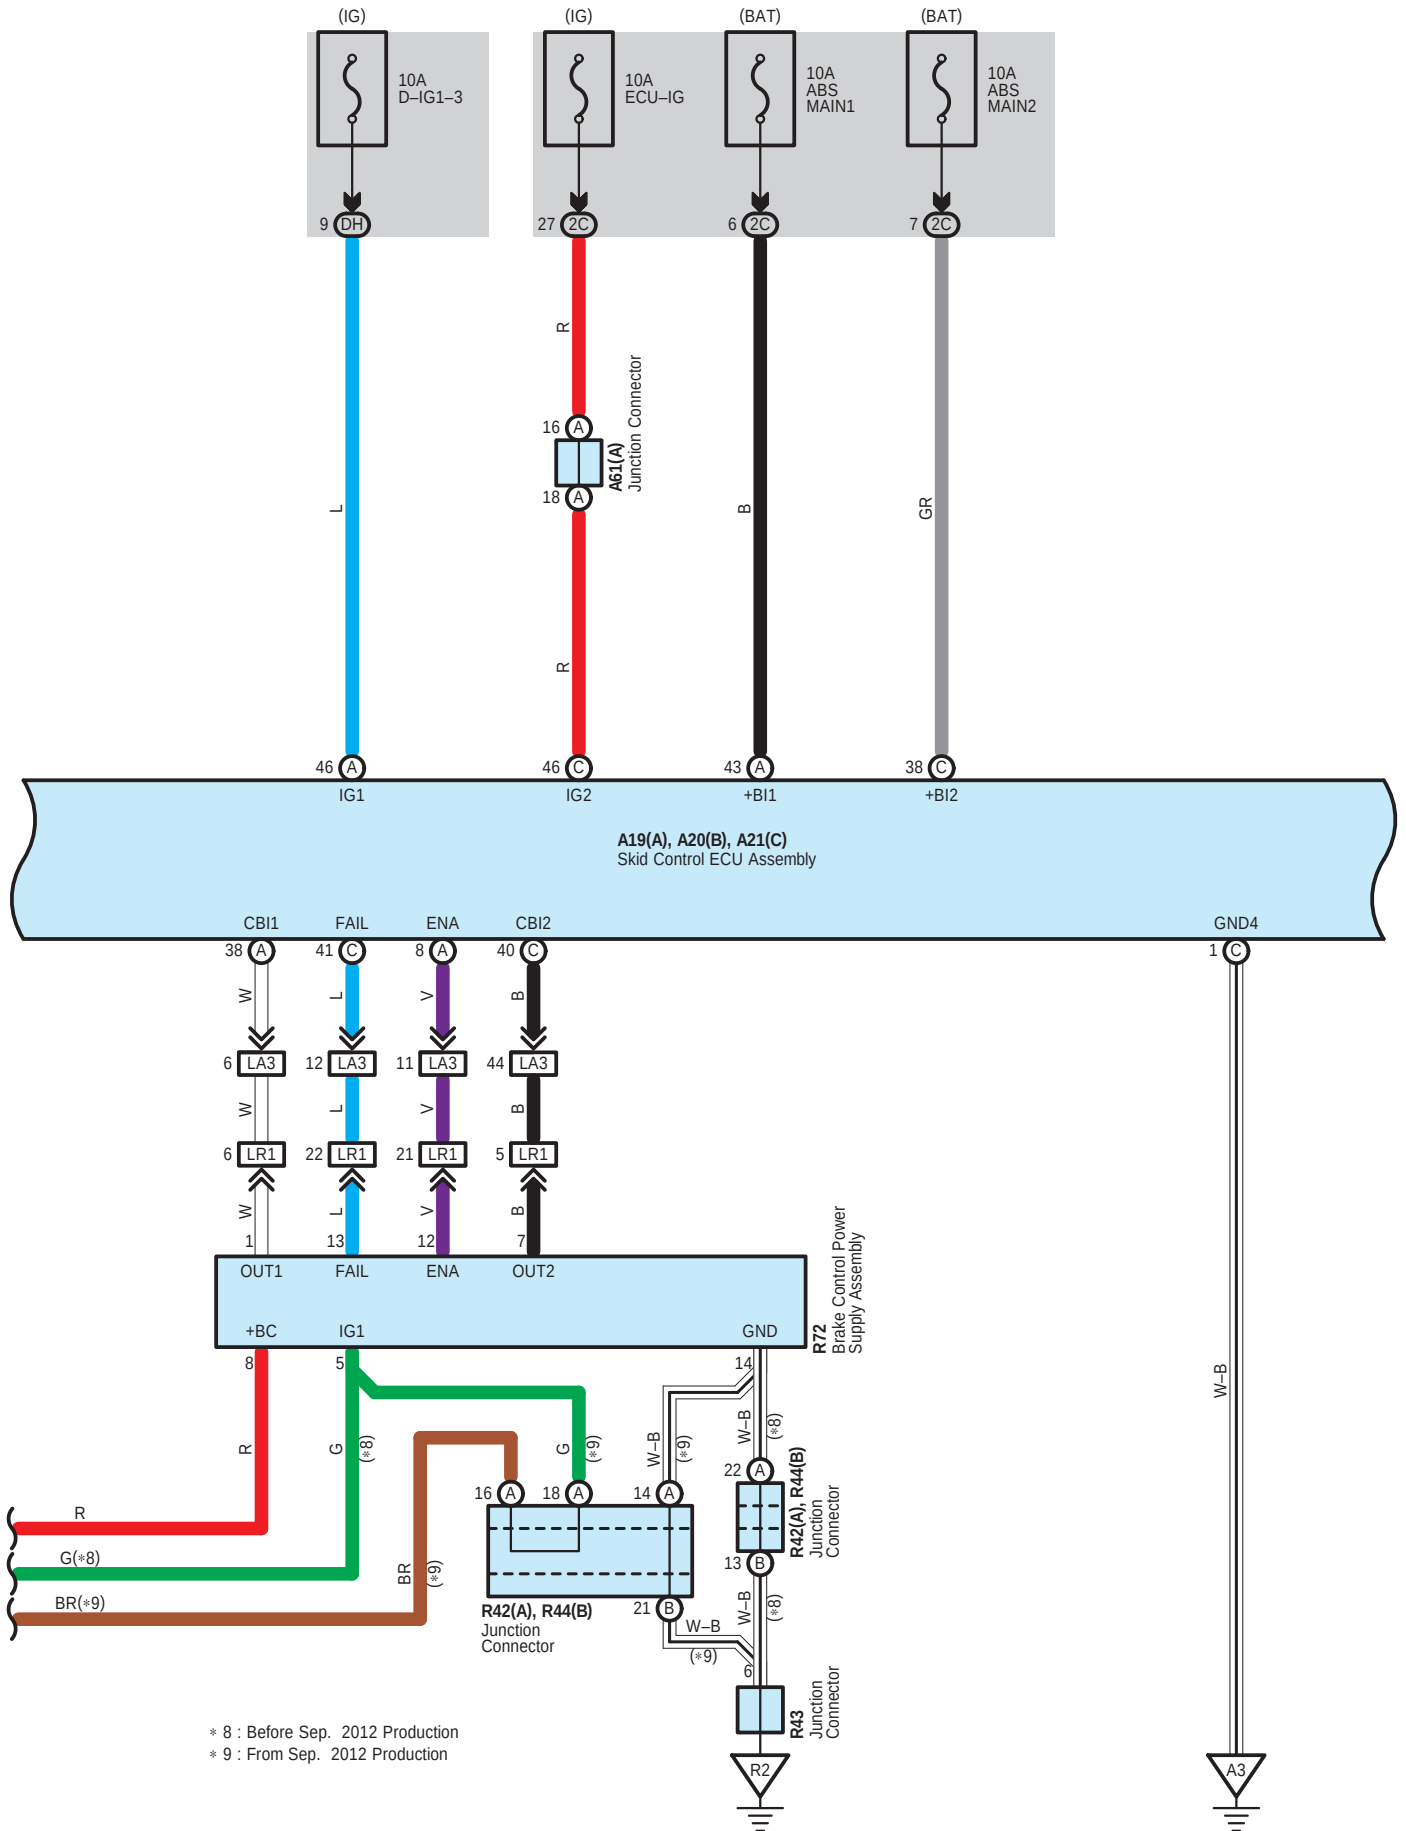


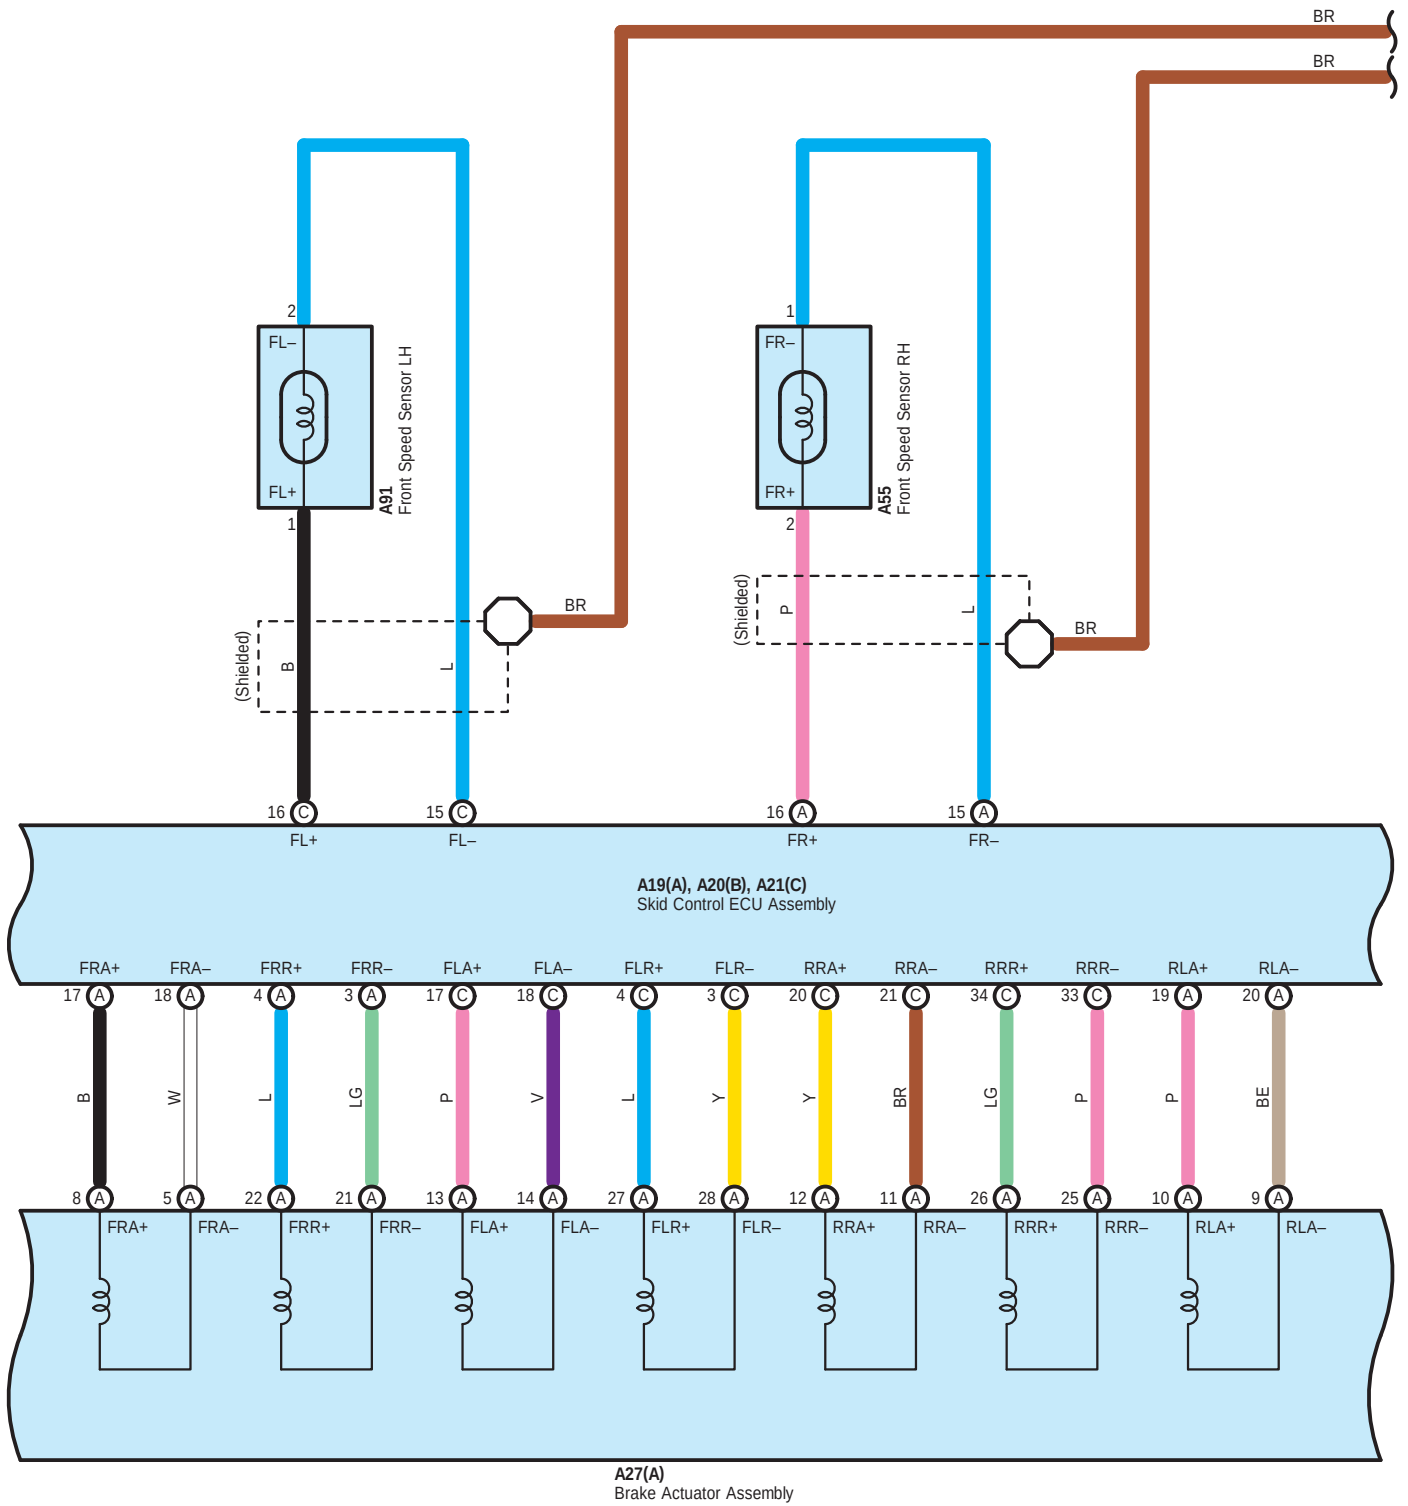


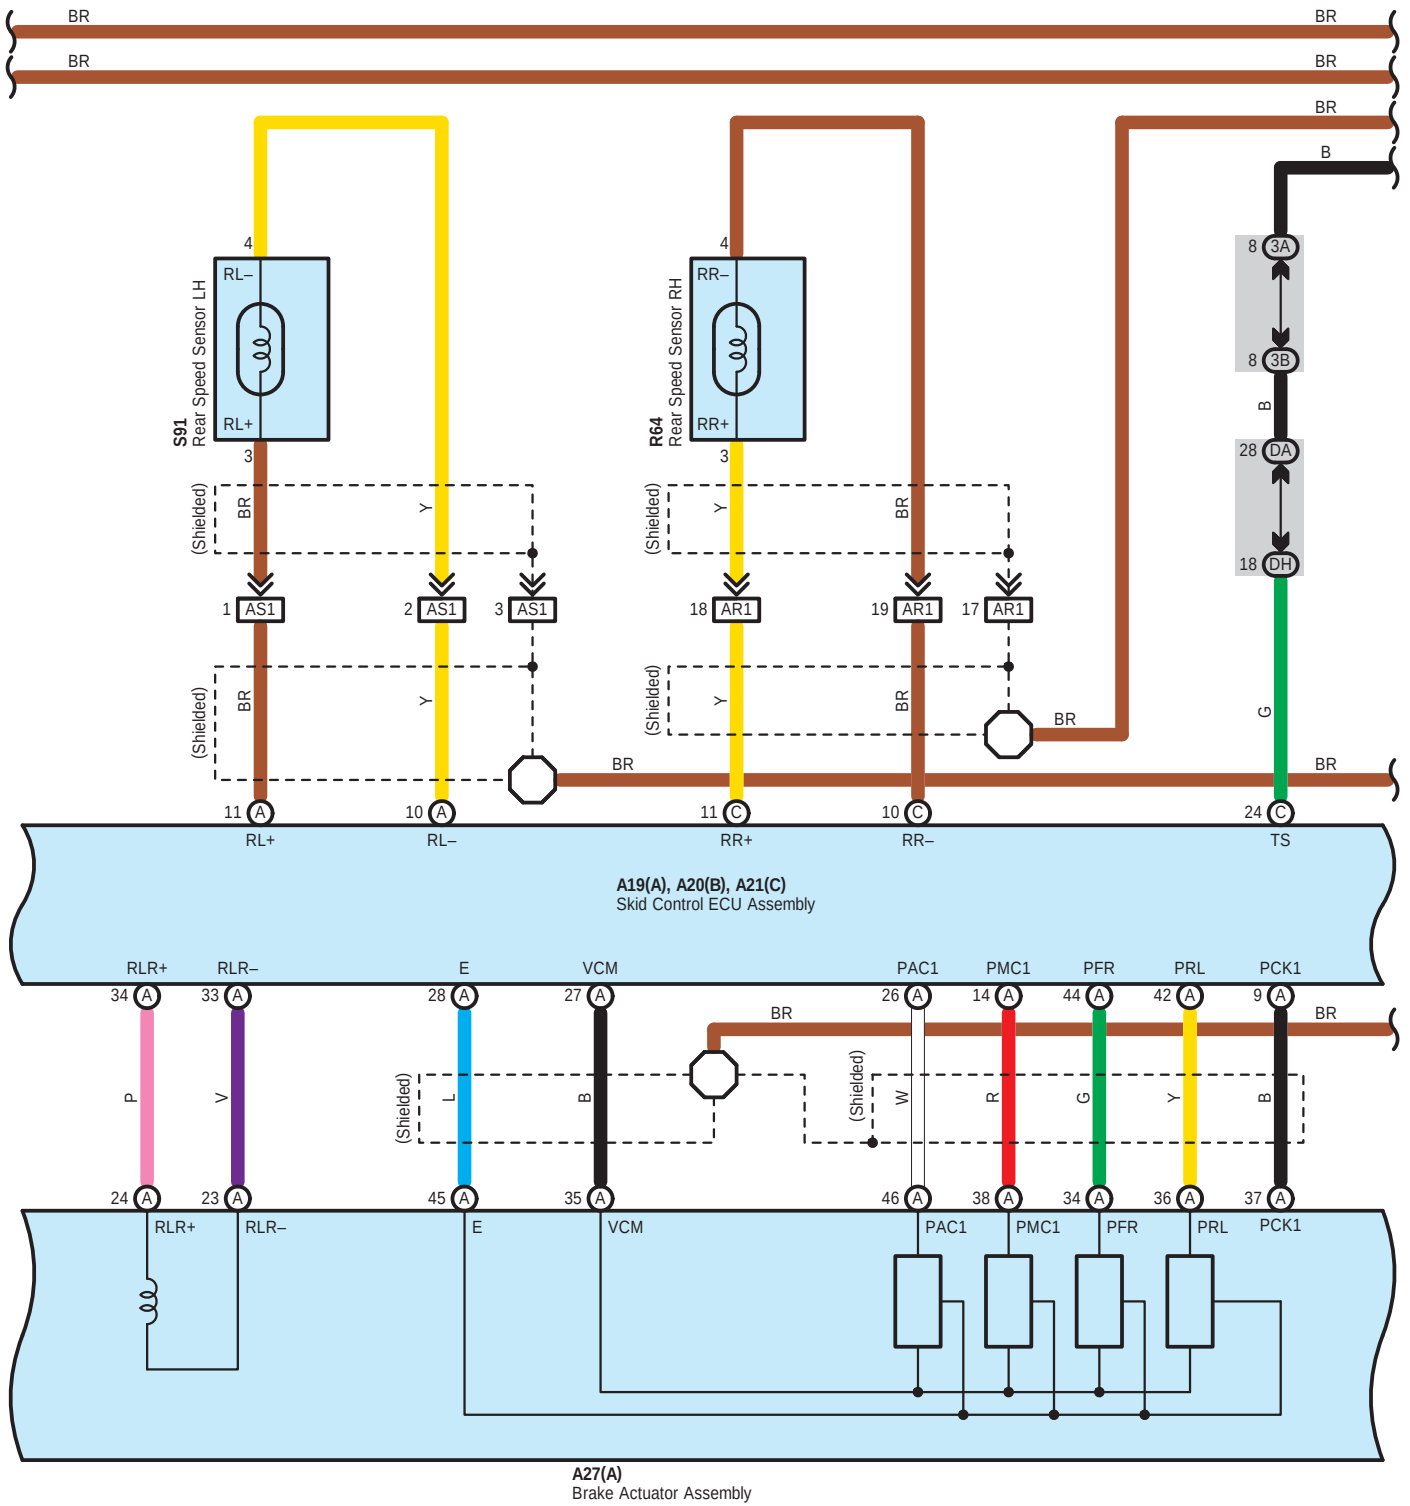


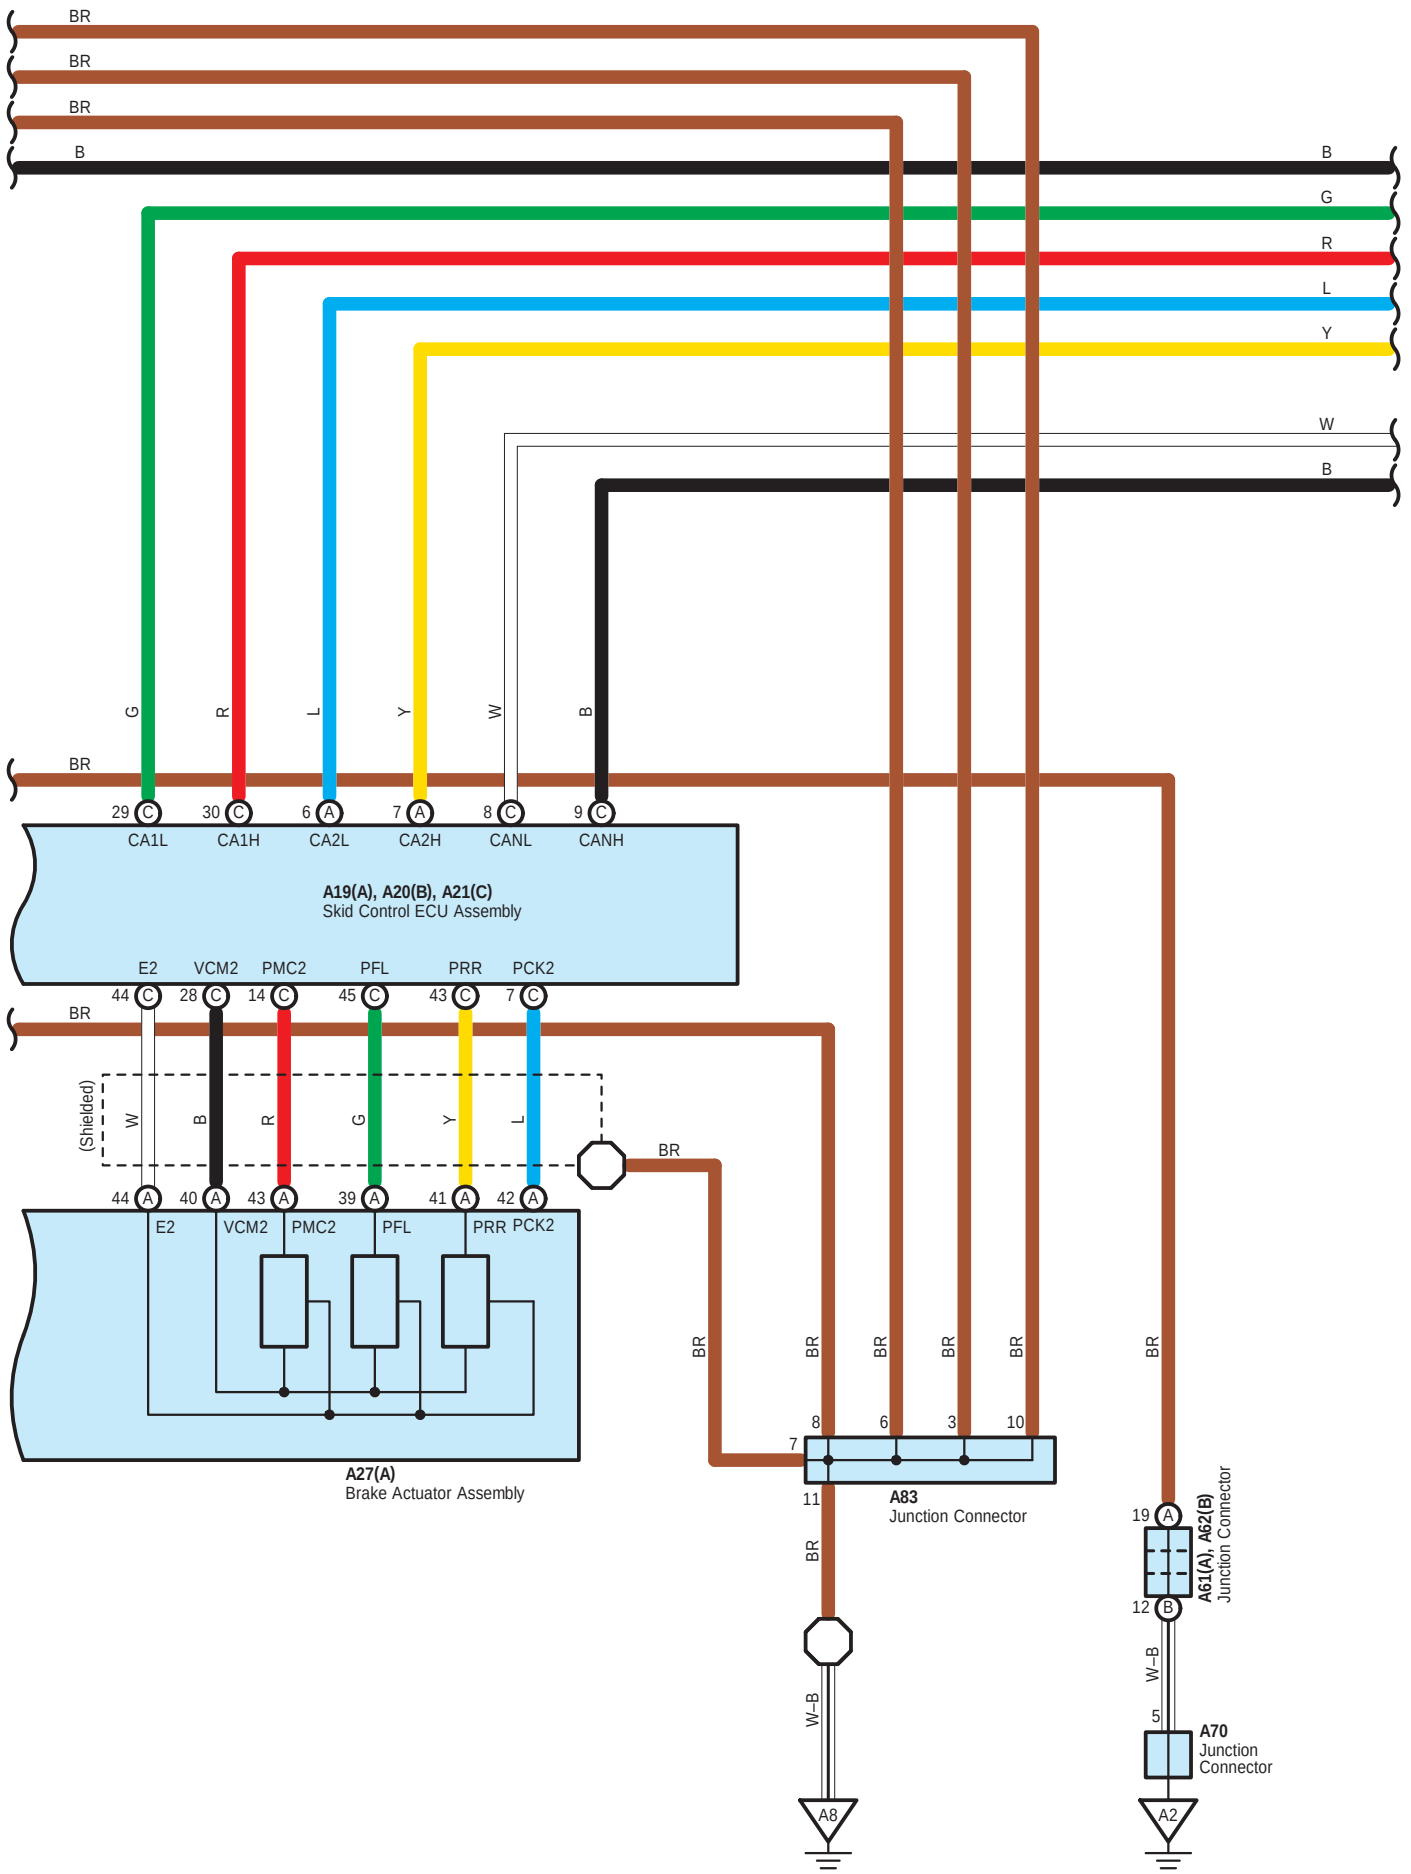


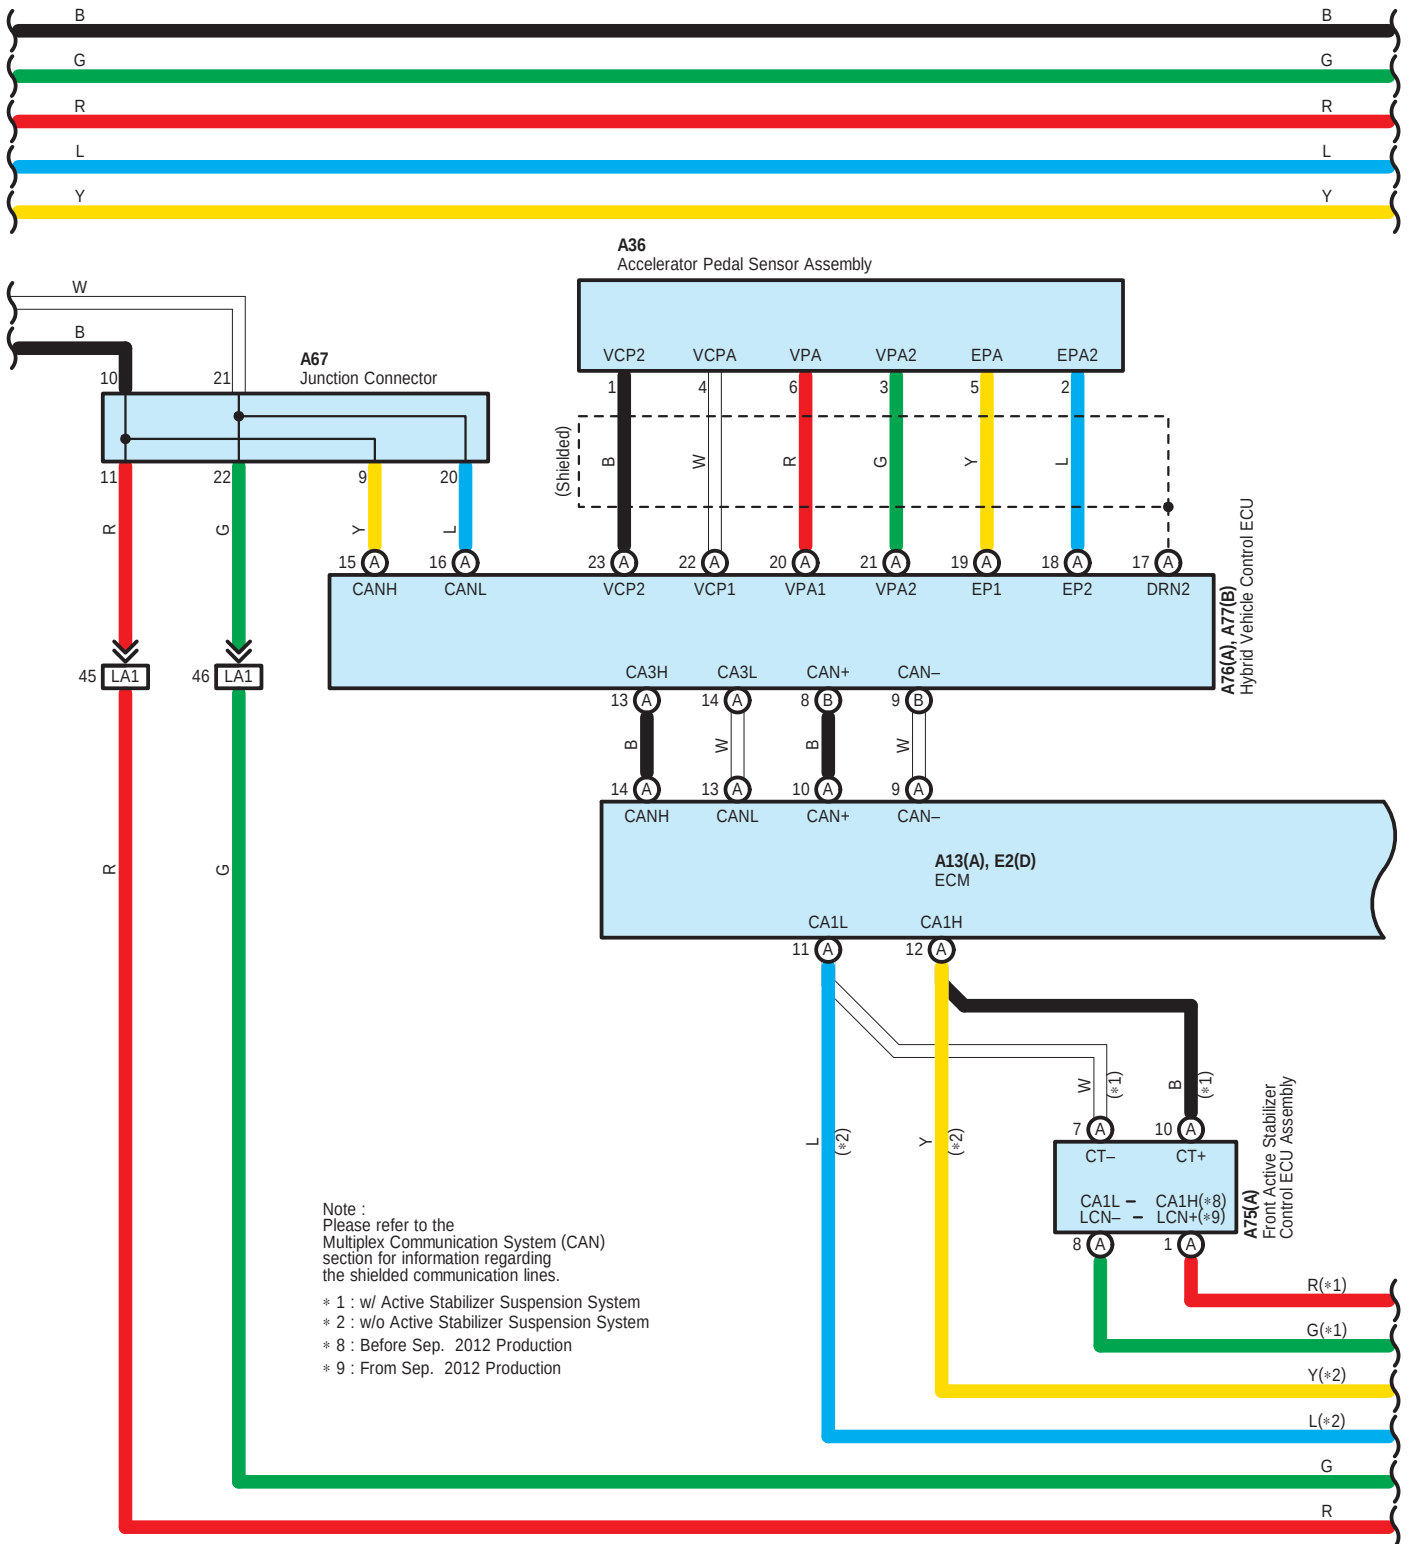


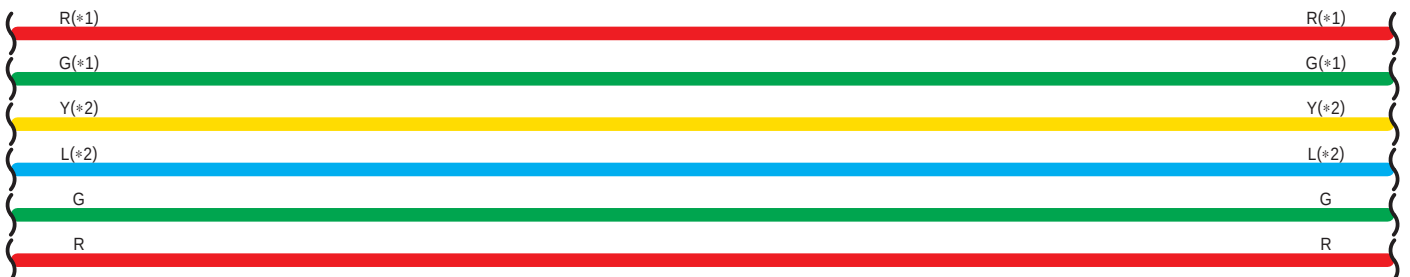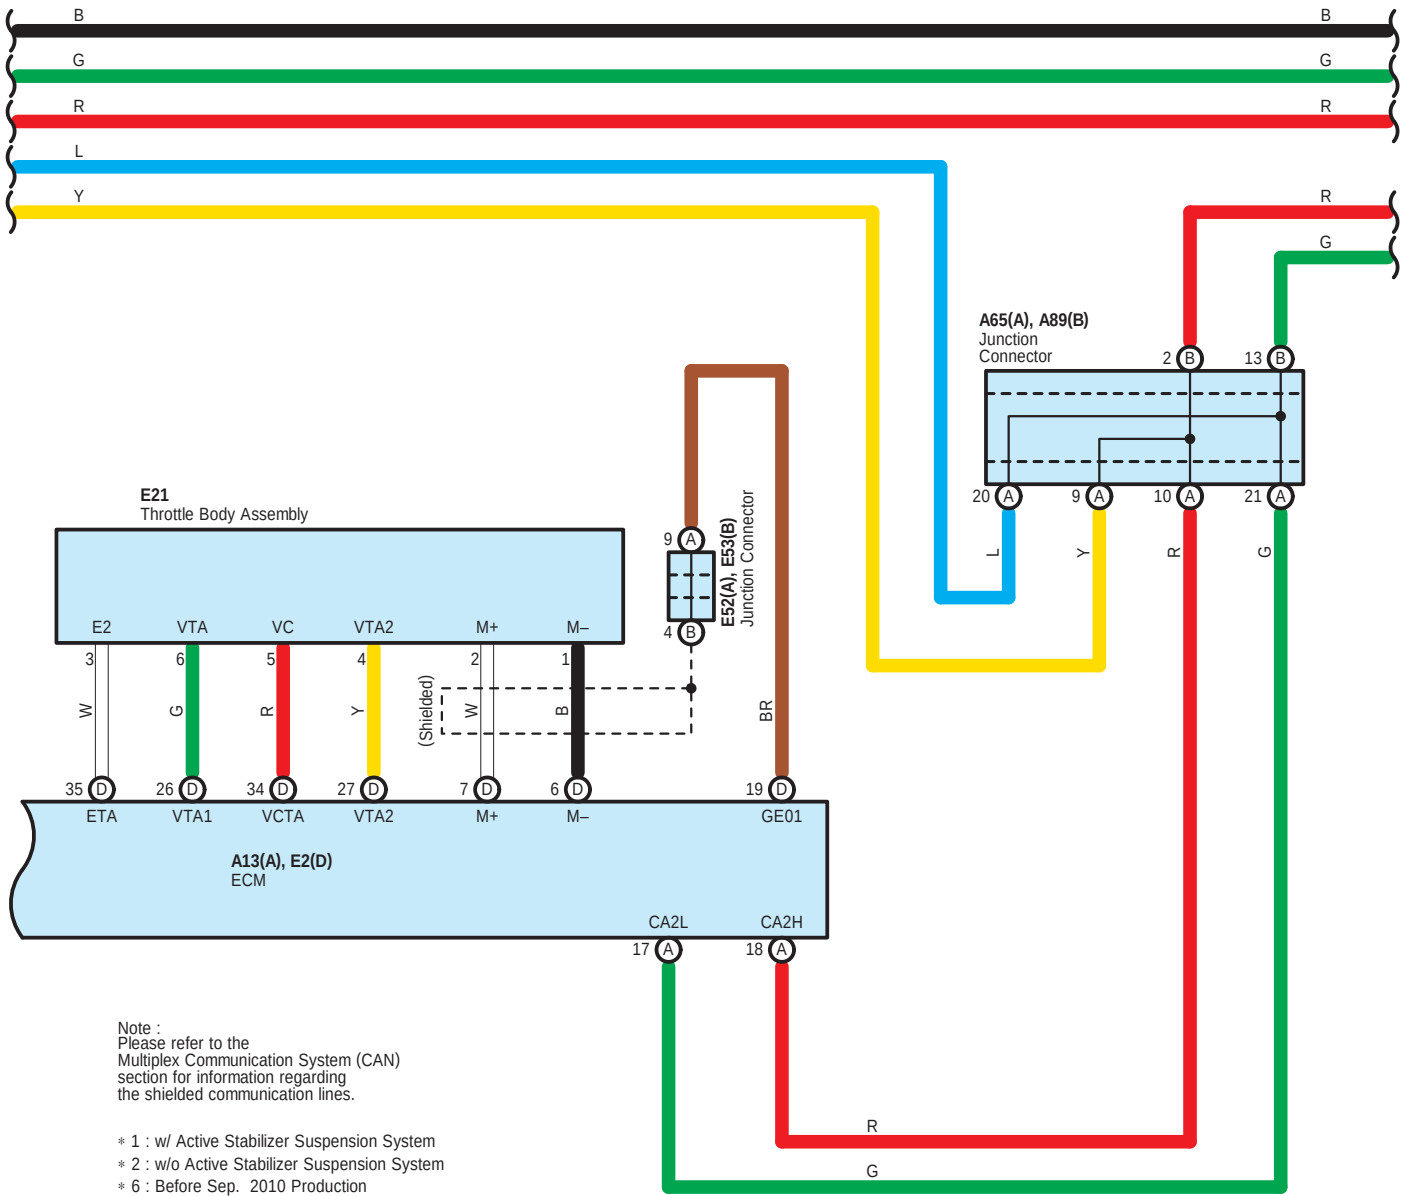


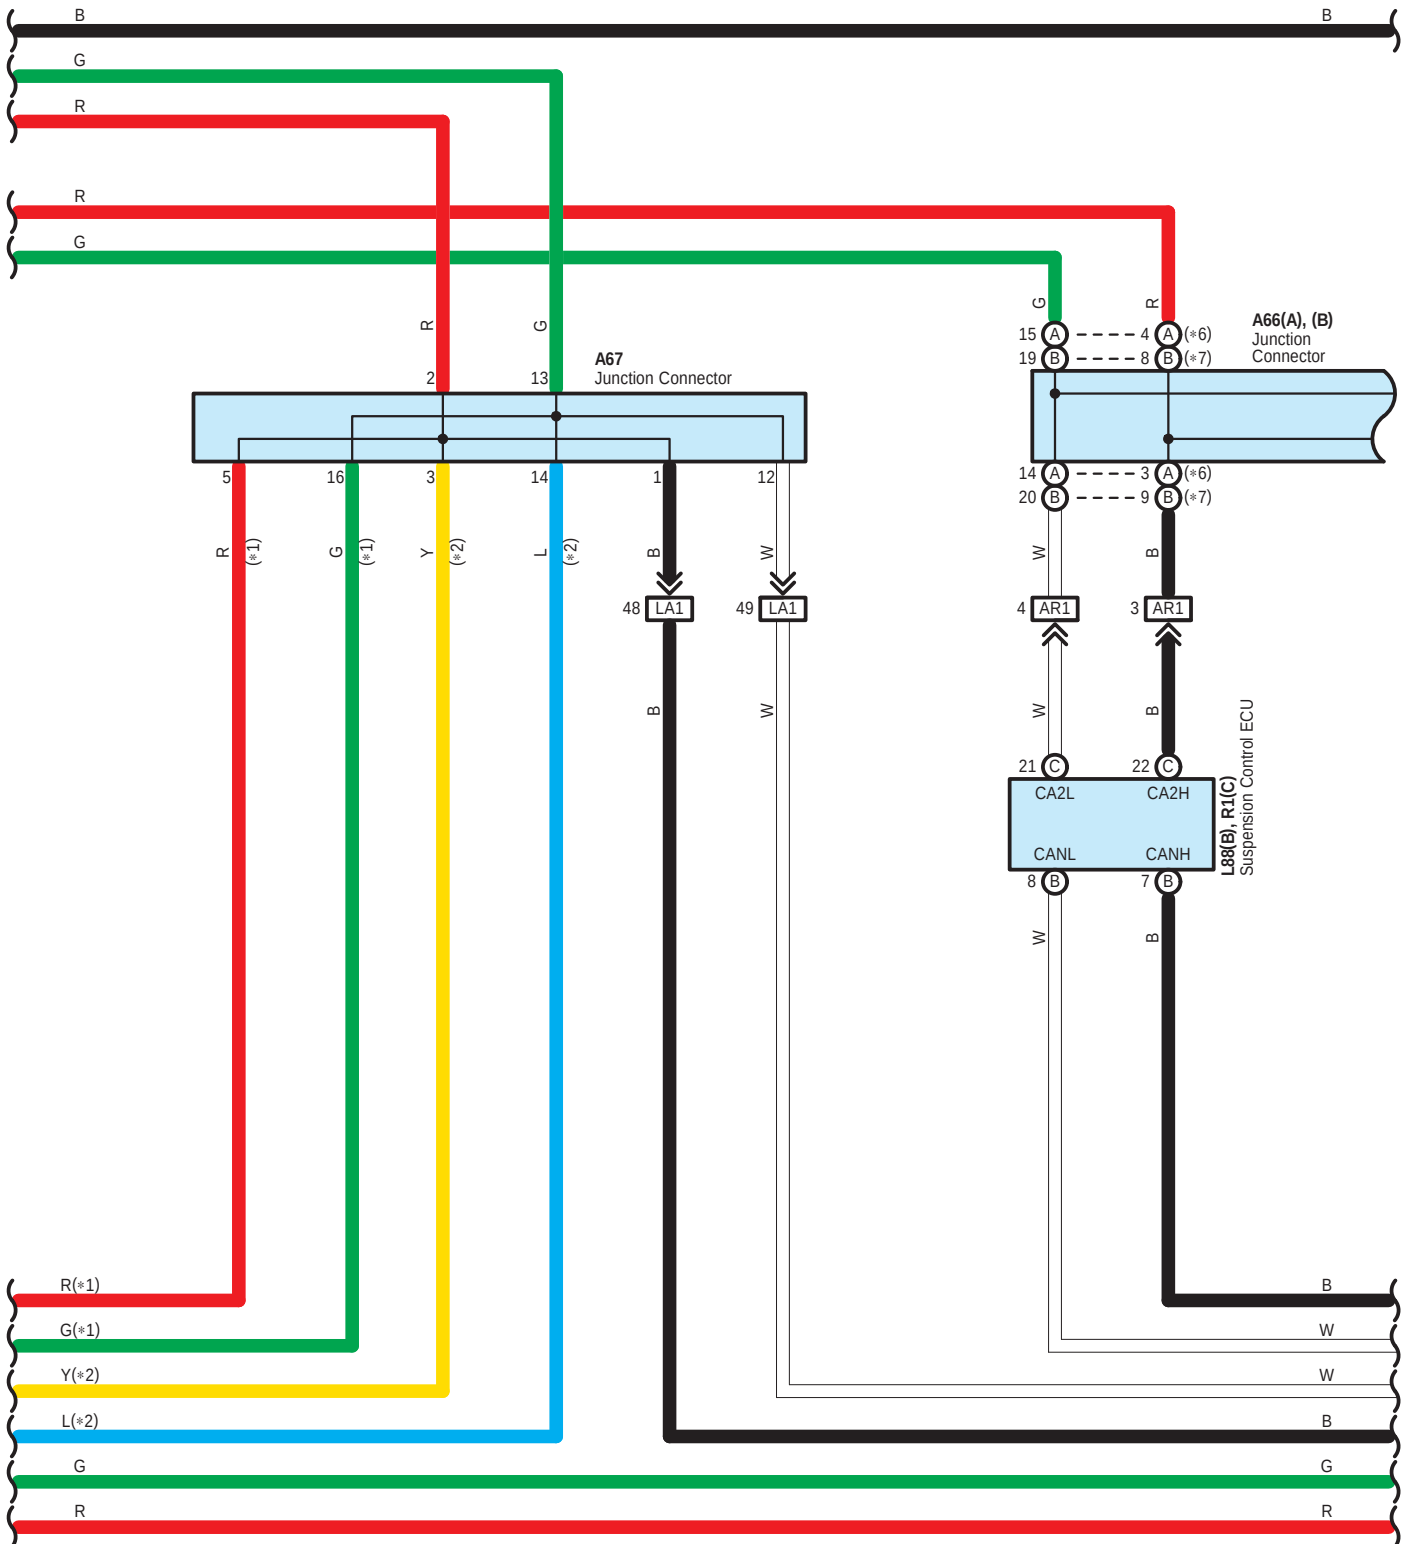


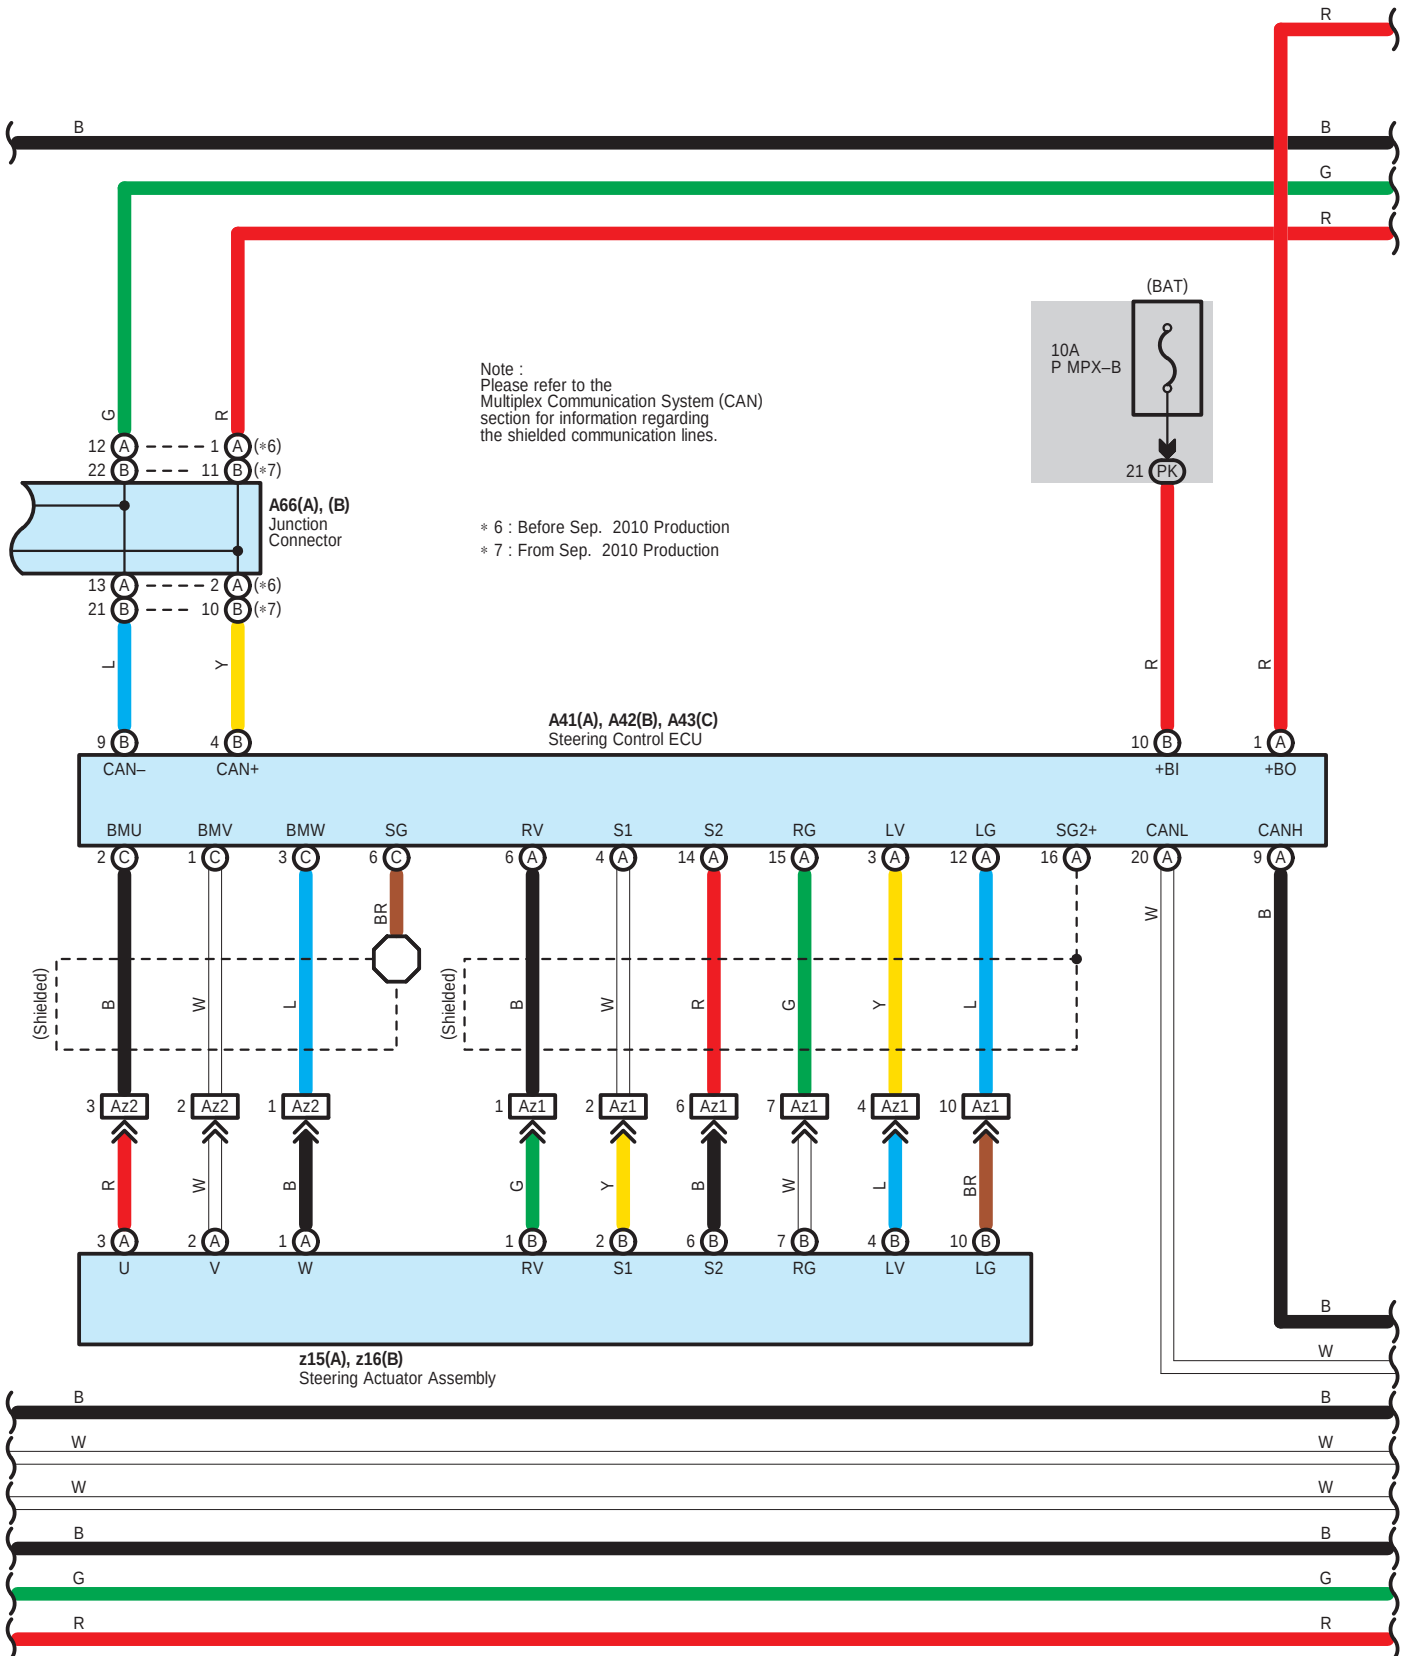


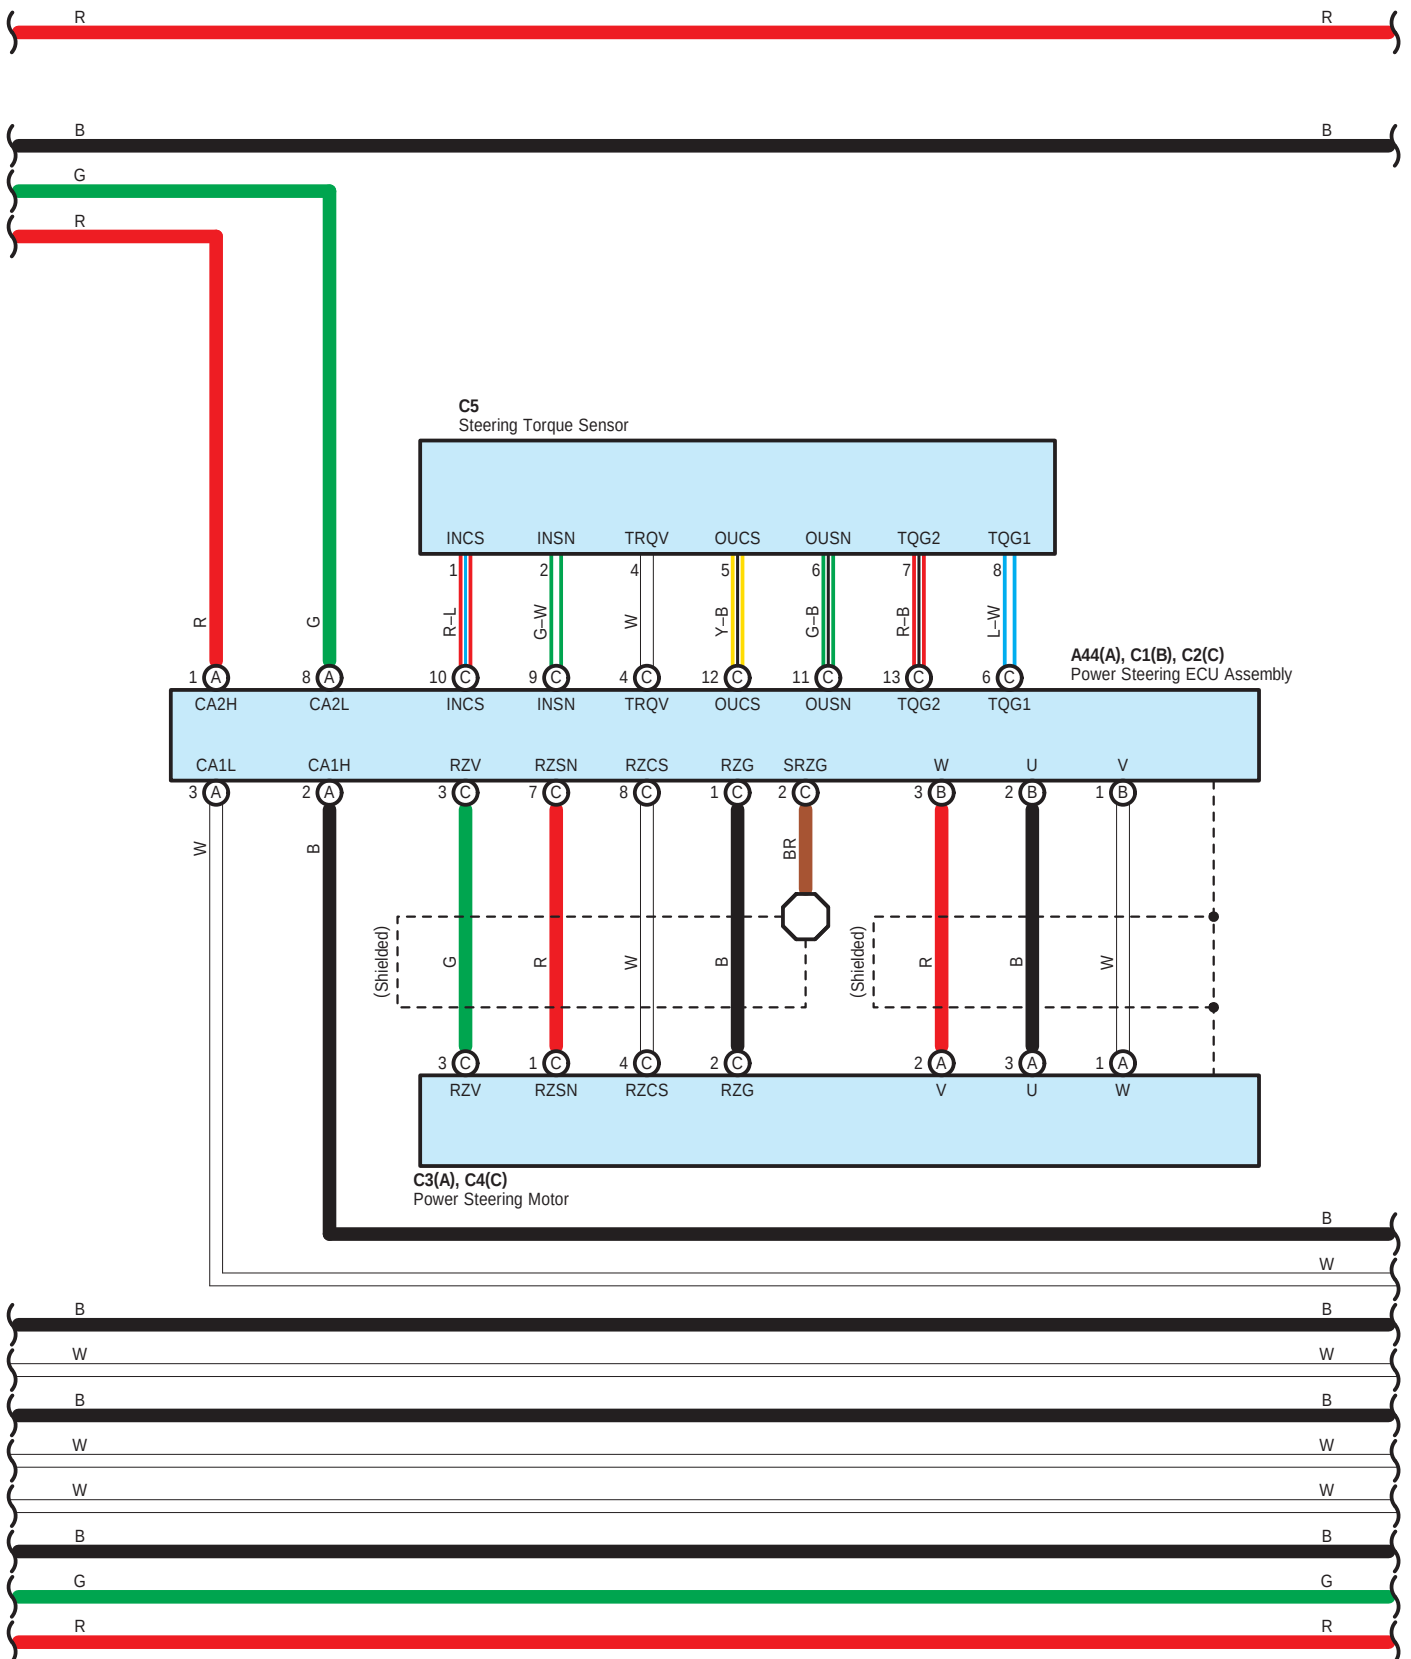











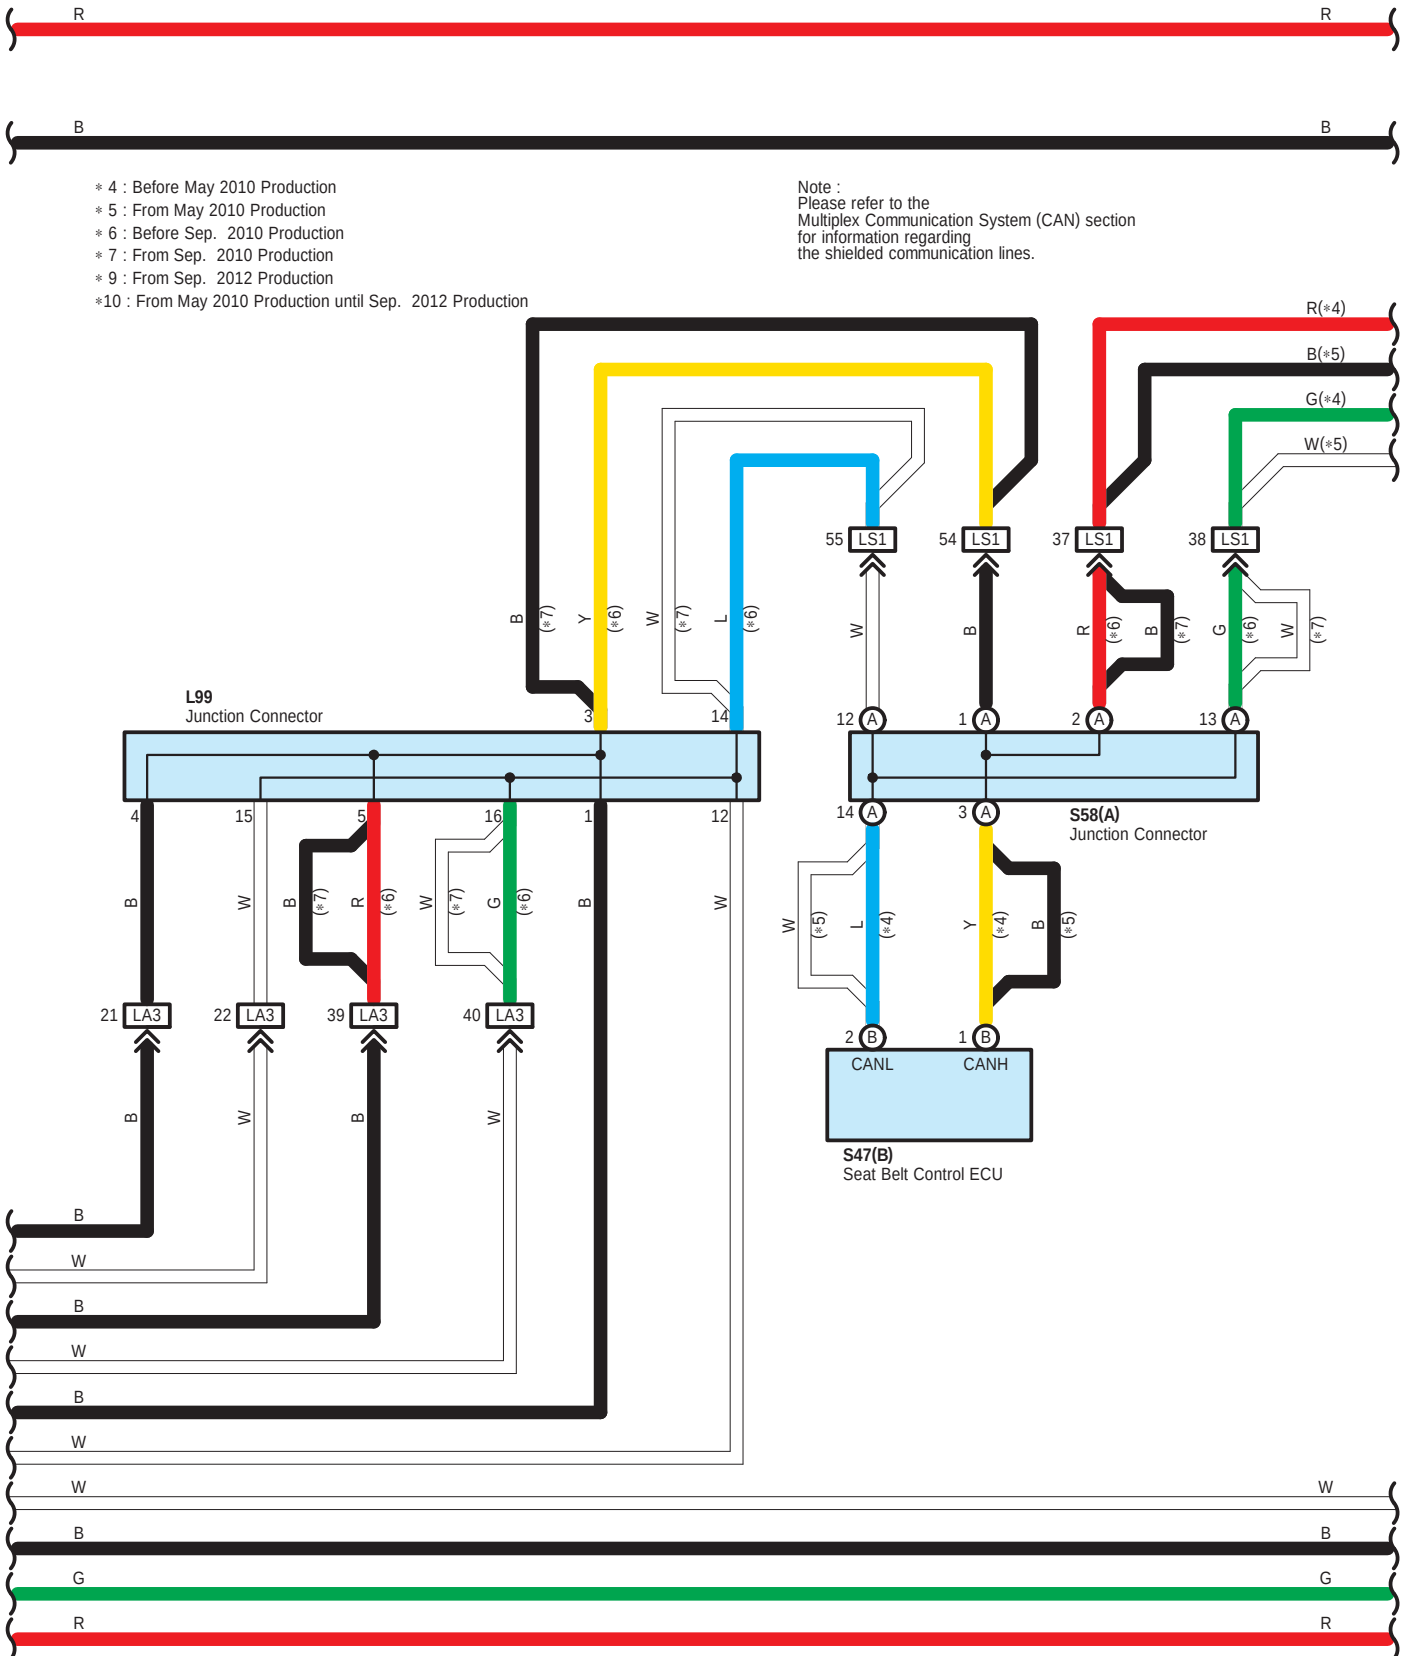


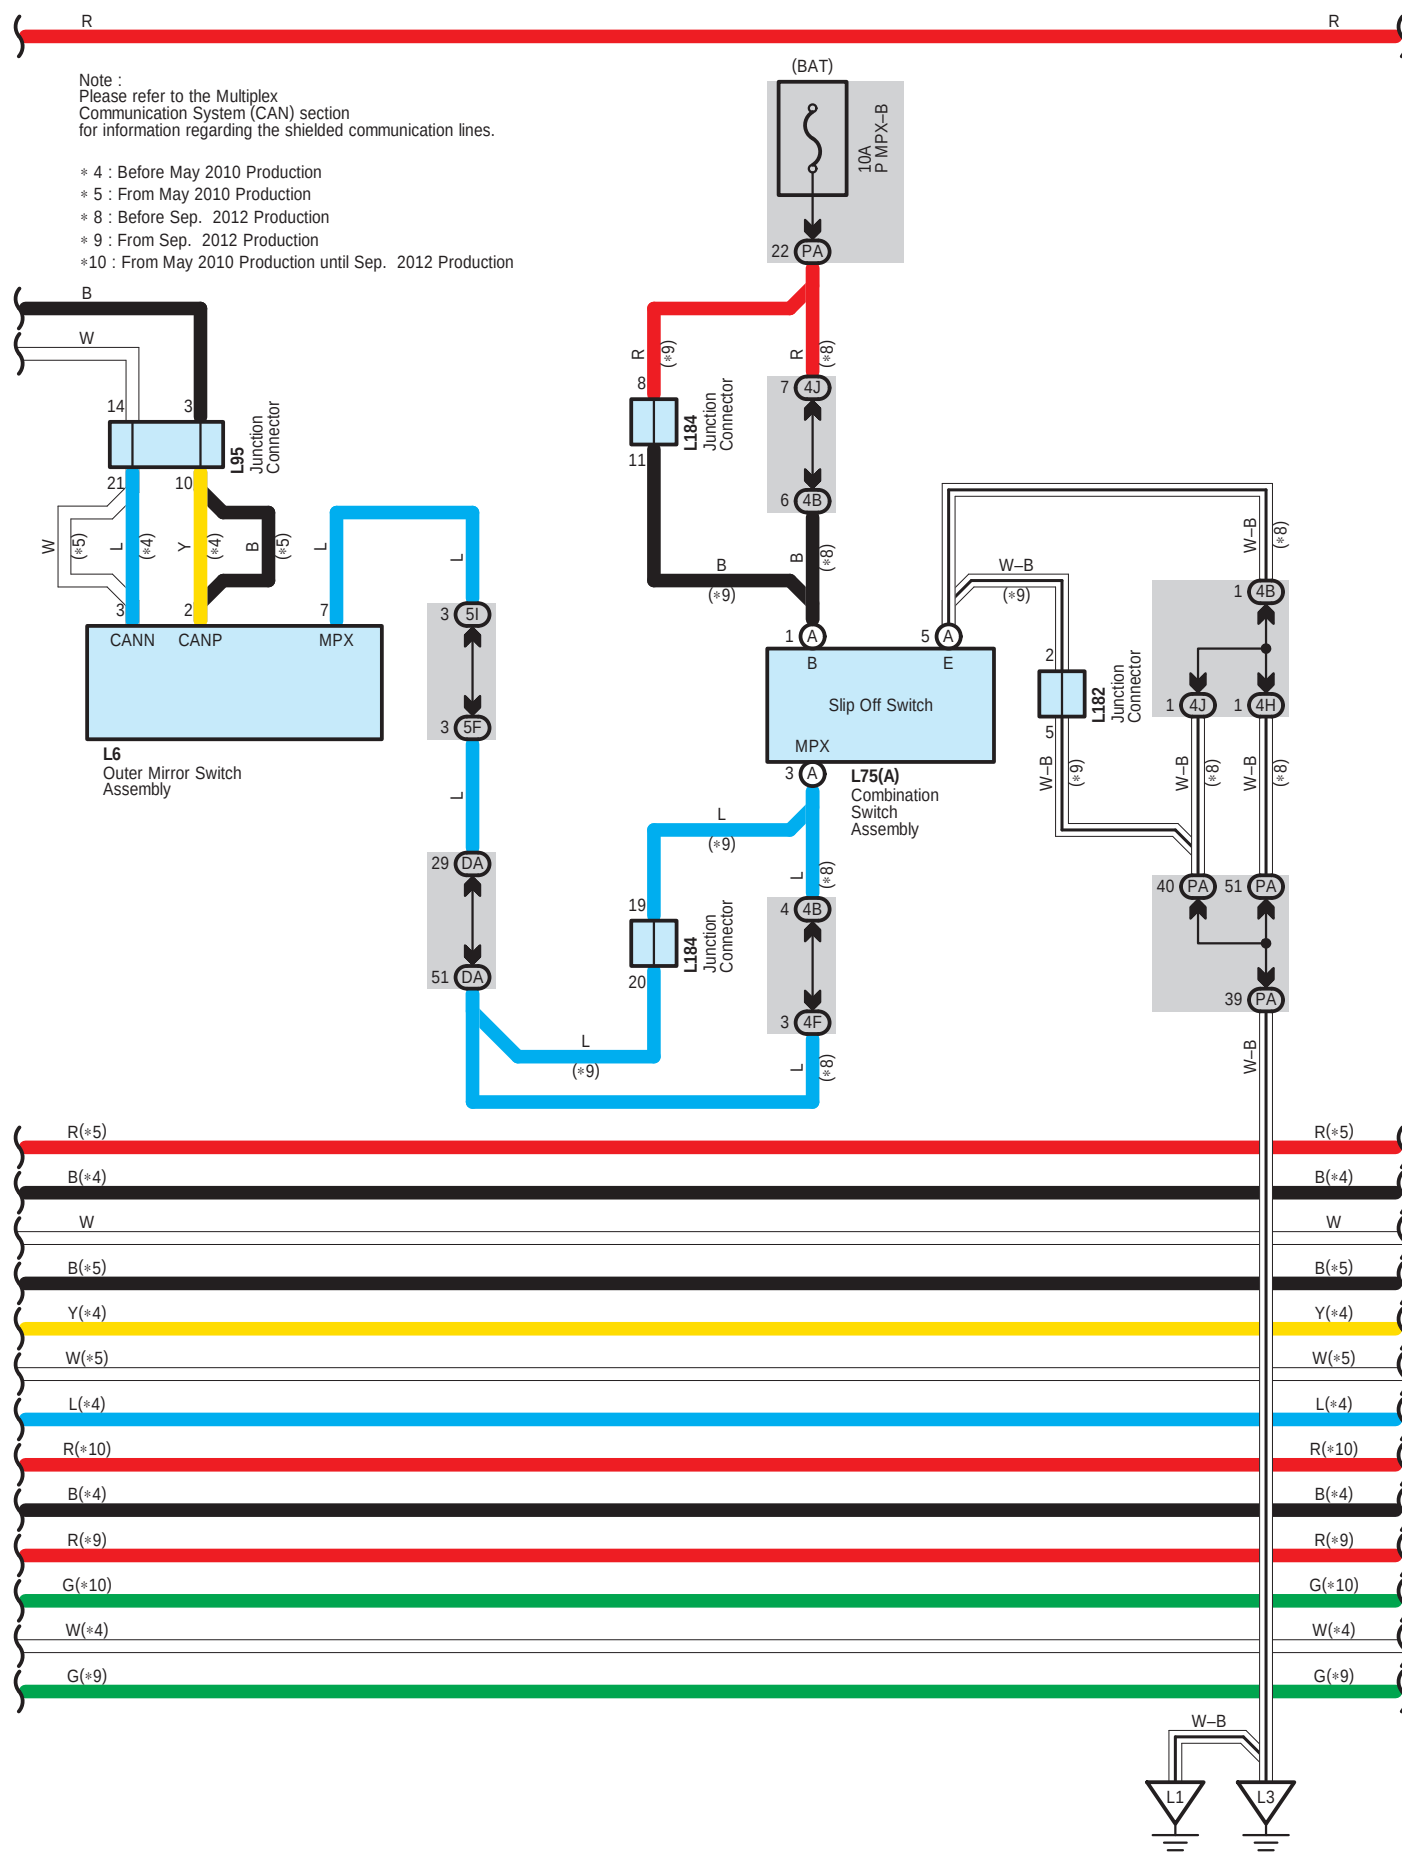

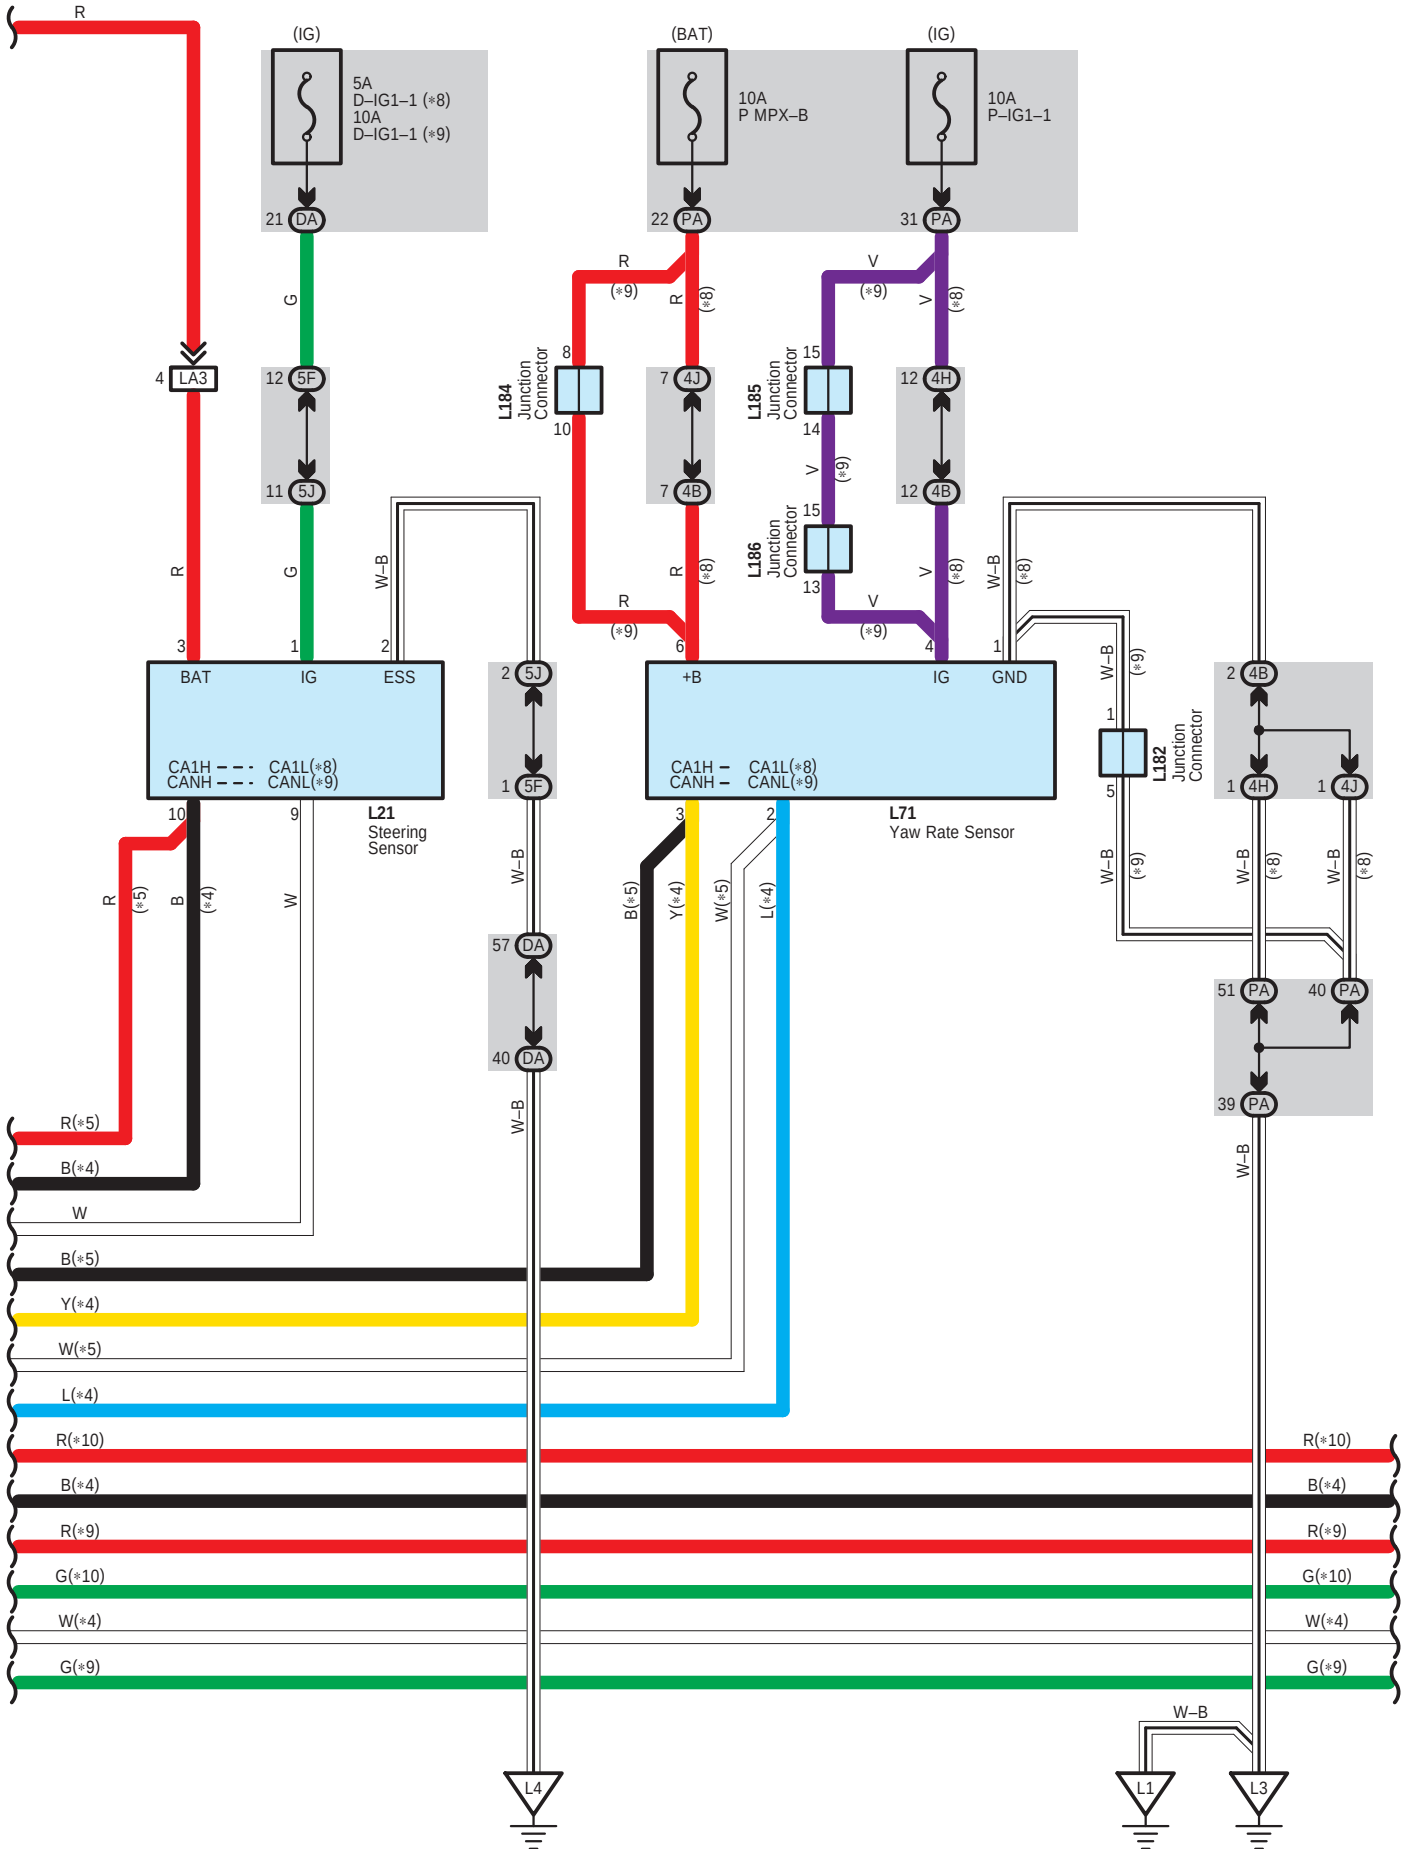


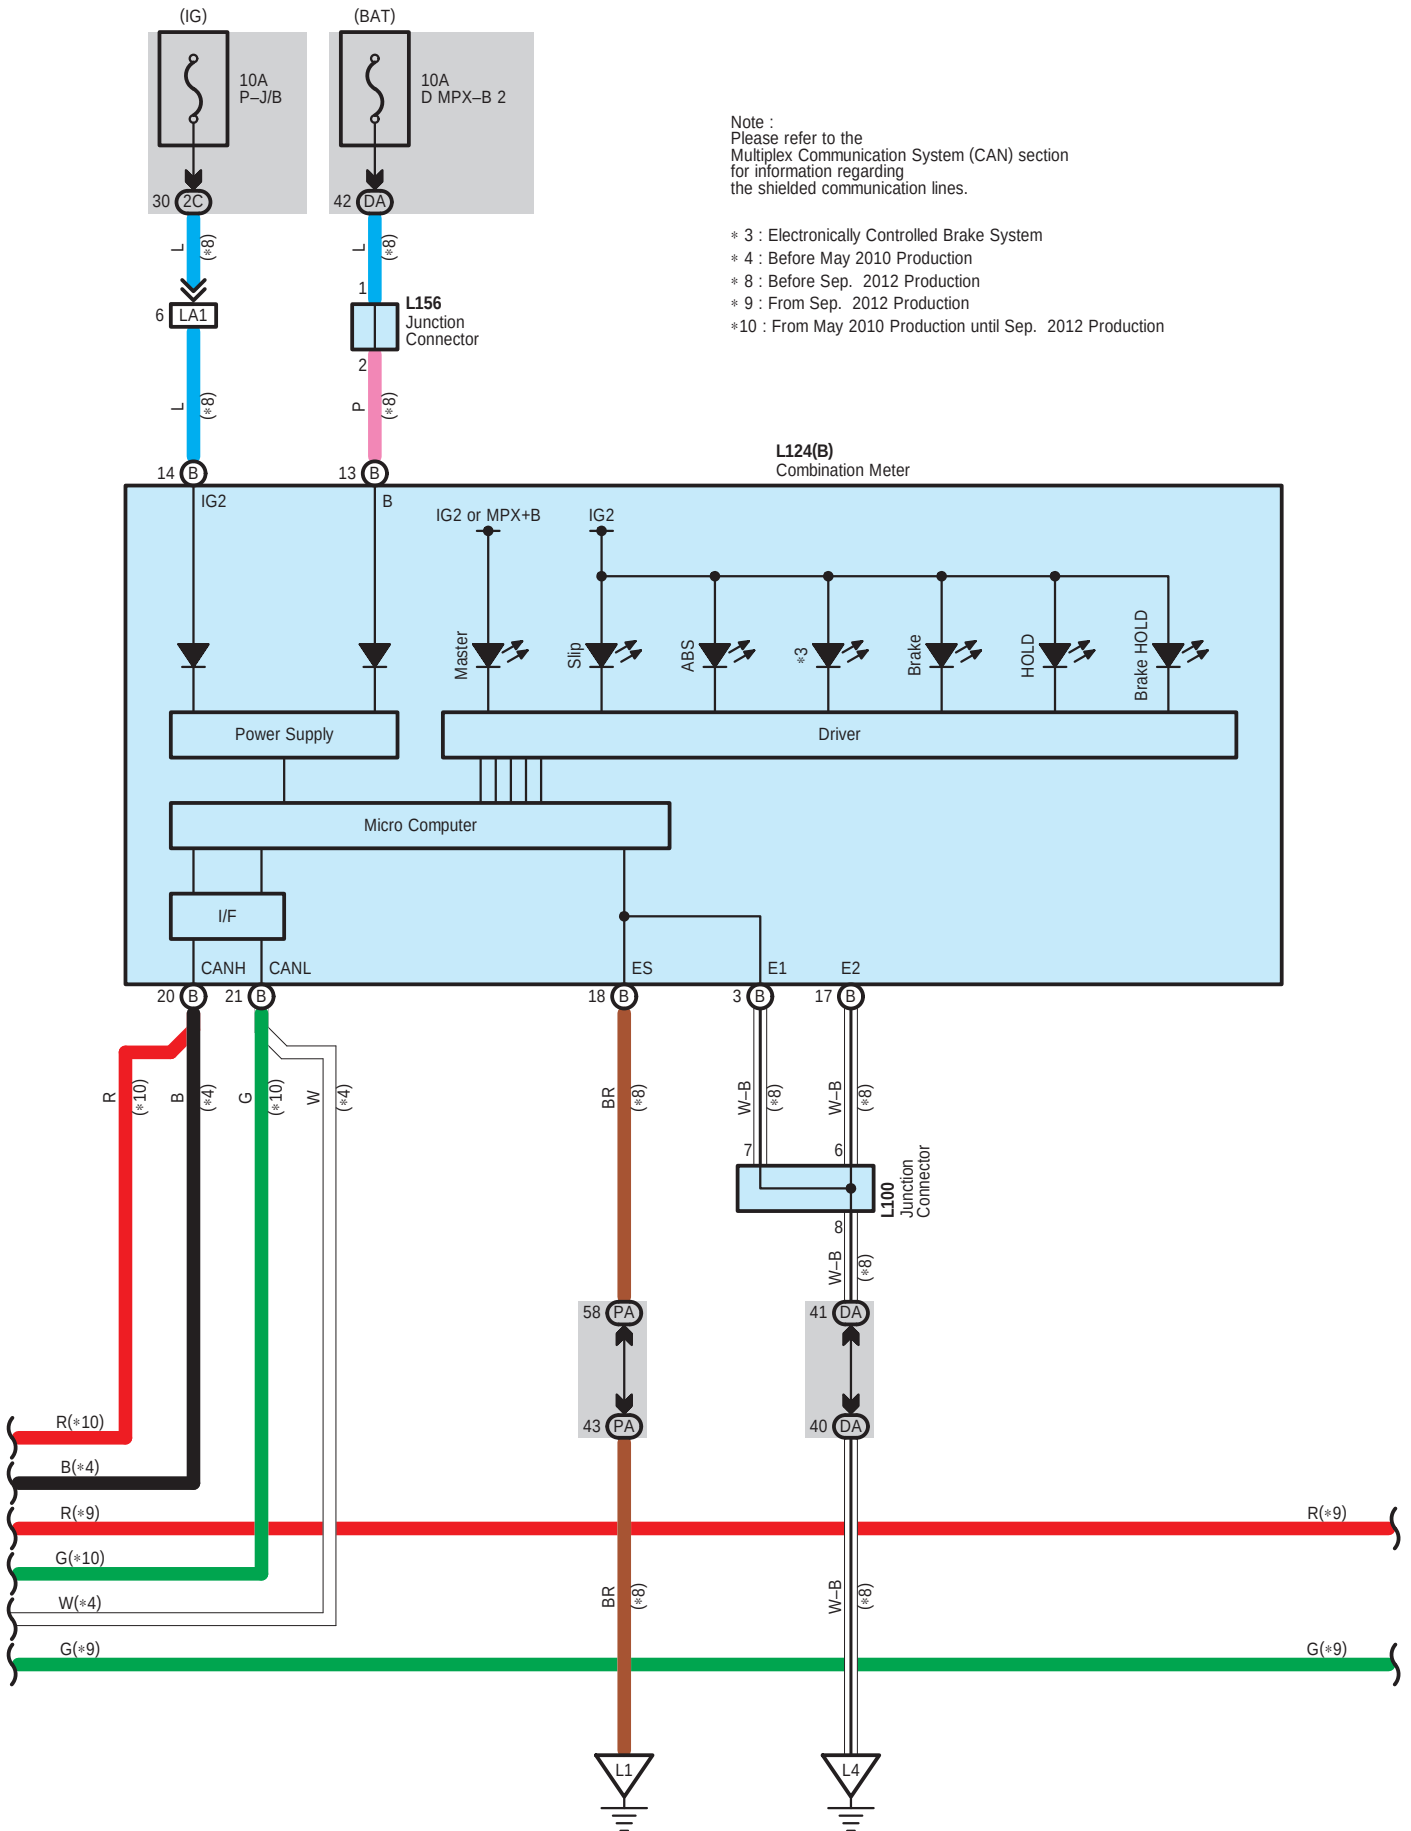

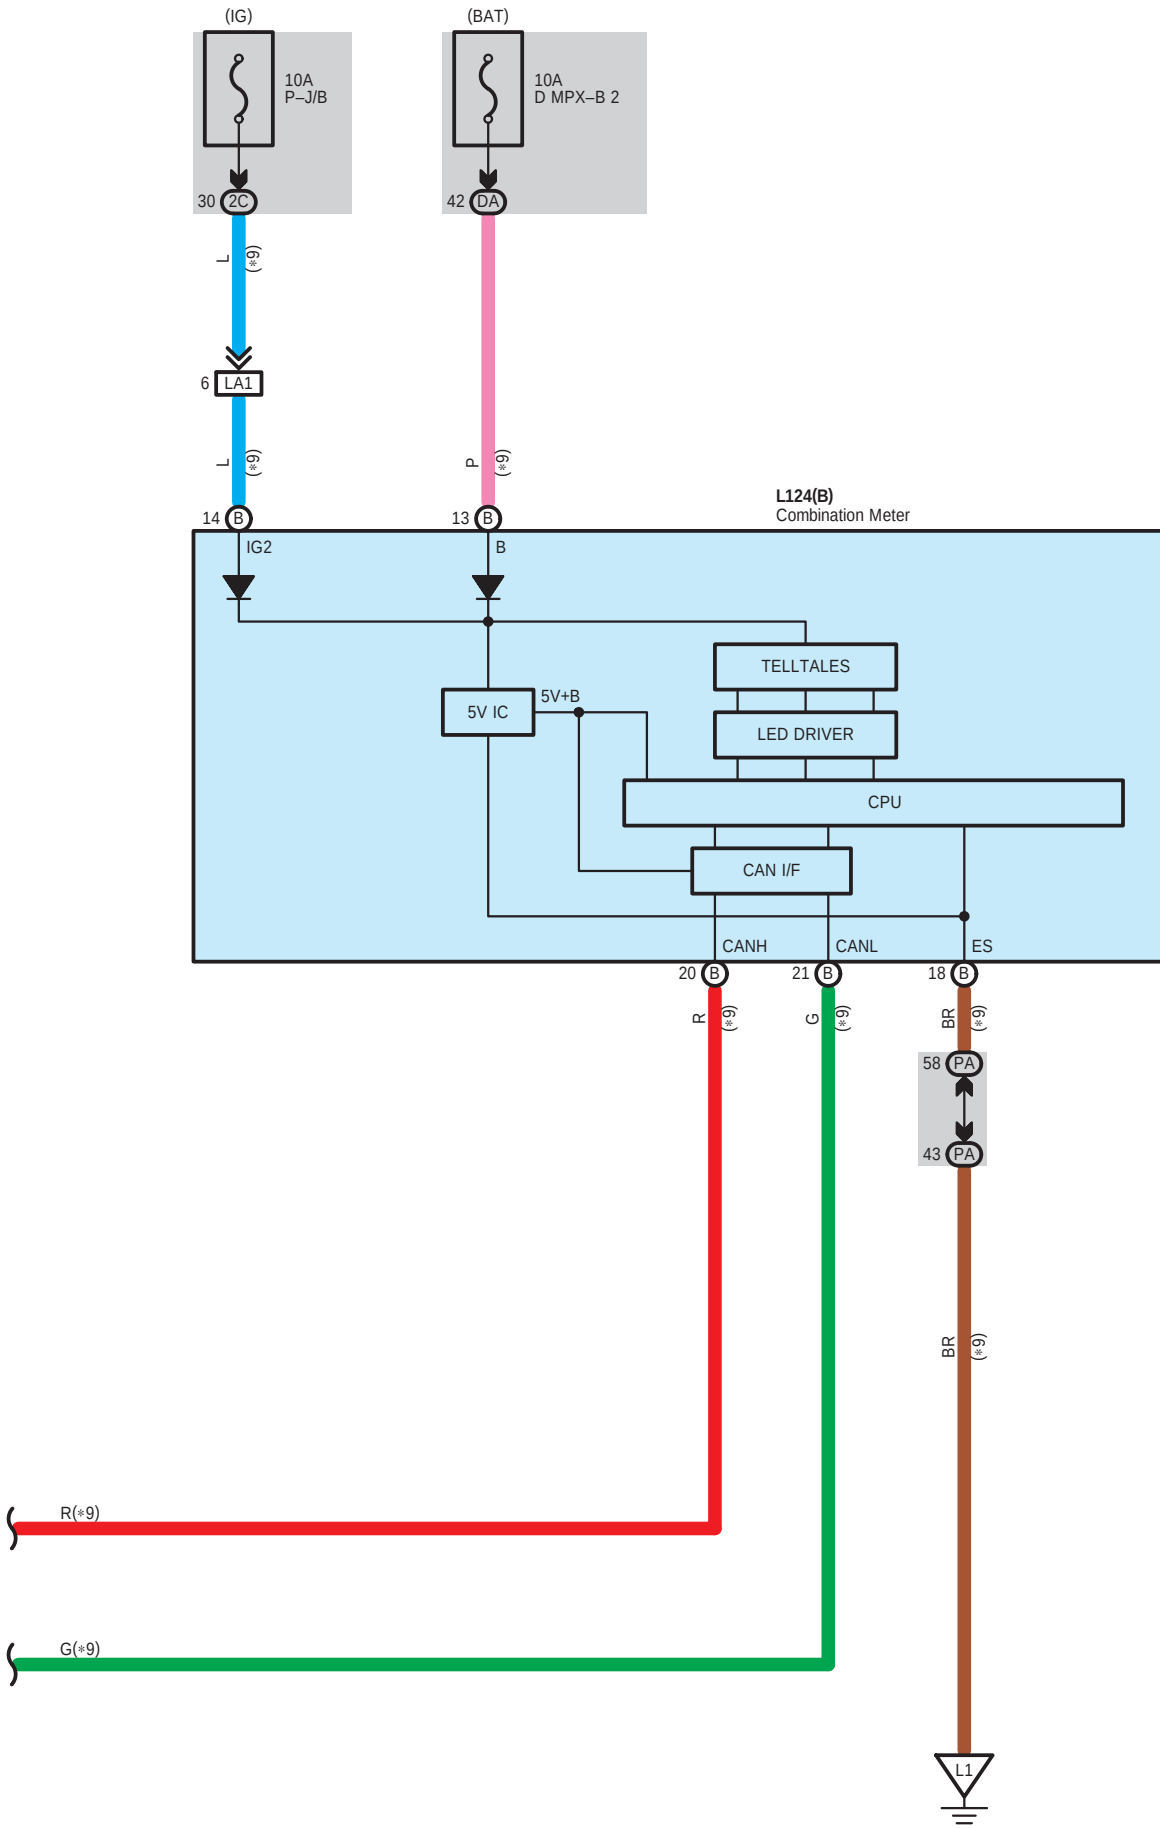


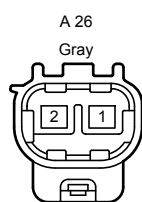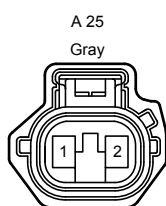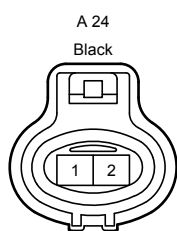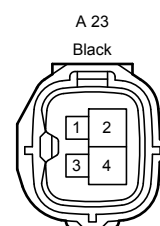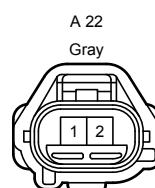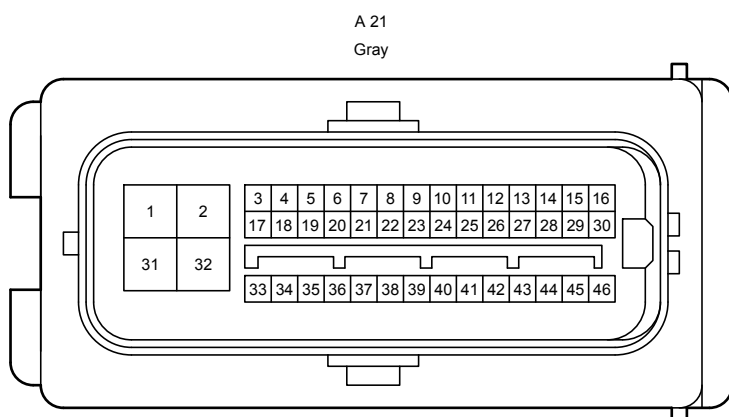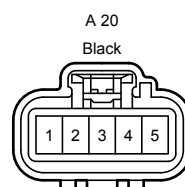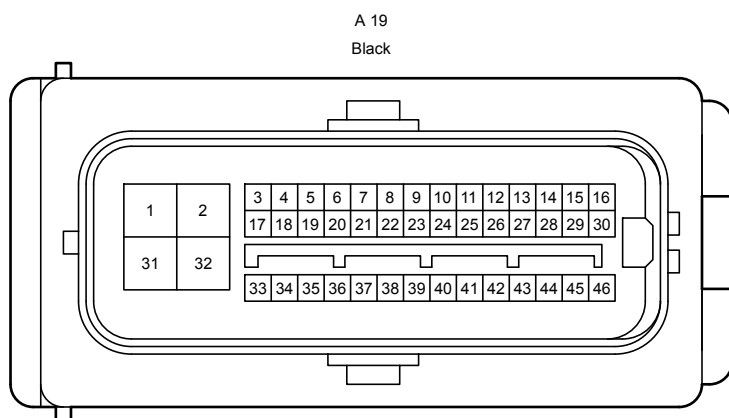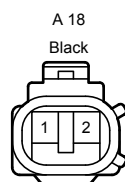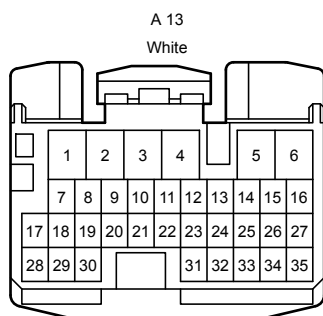


A 27
Black

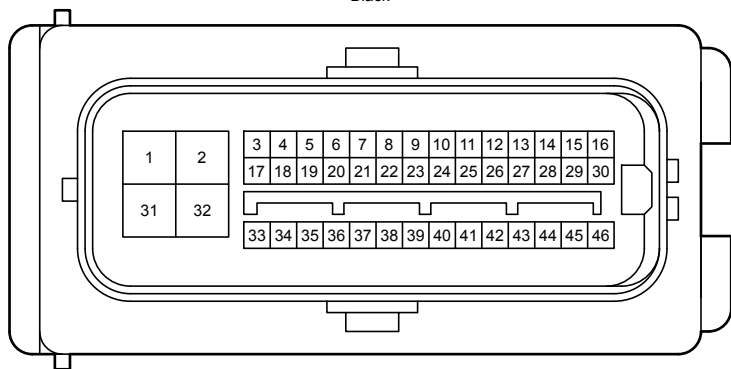


A 34
Black




A 35
Green




A 36
Black

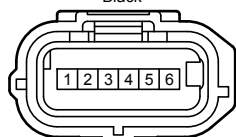


A 41
White

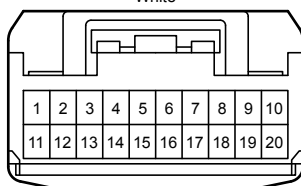


A 42
White

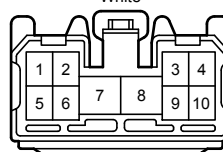


A 43
White

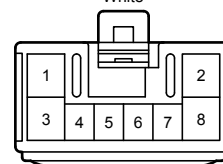


A 44
Black

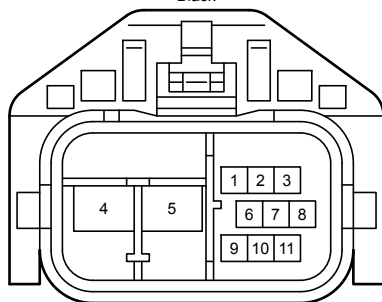


A 55
Gray

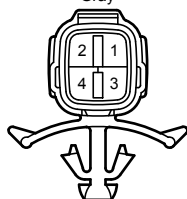


A 60
Blue

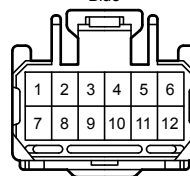


A 61
Black

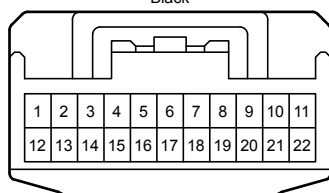


A 62
Blue

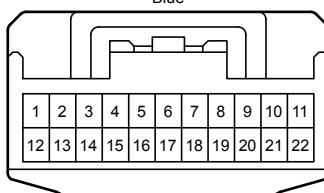


A 64
Black

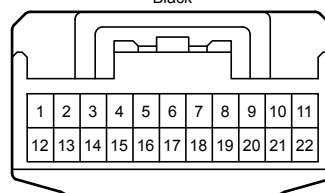


A 65
White

















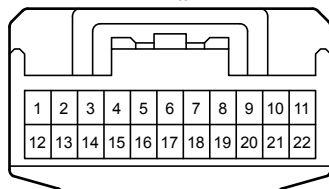


A 66
Black

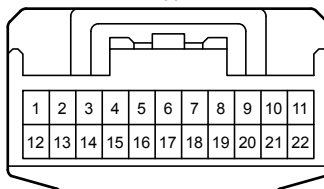


A 67
Black

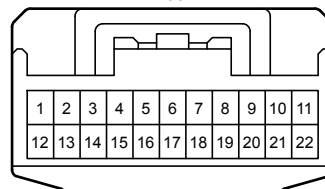


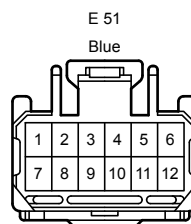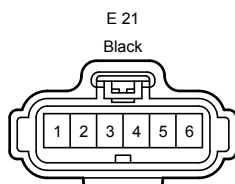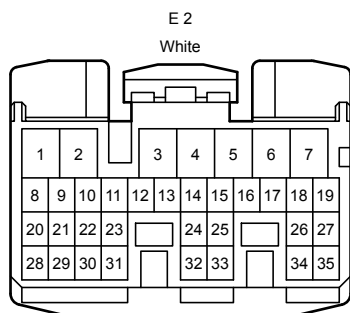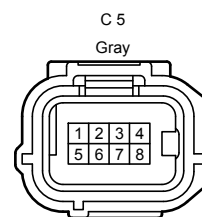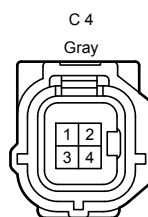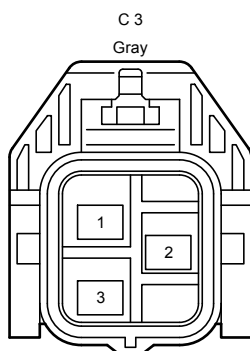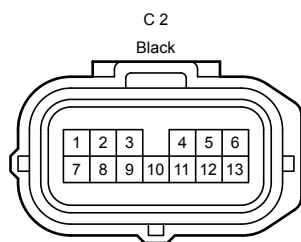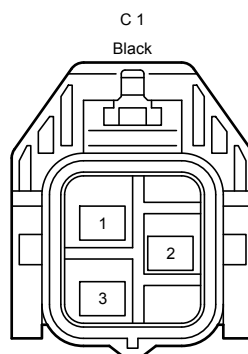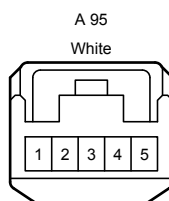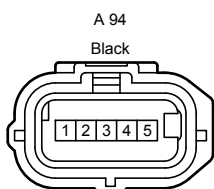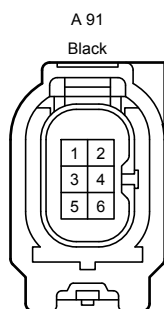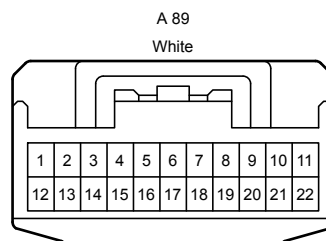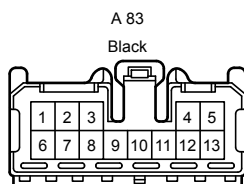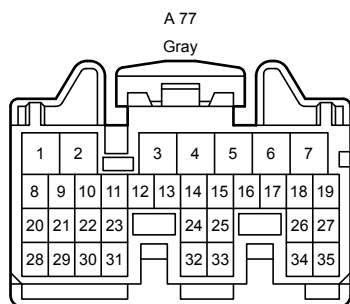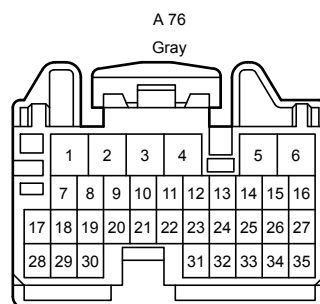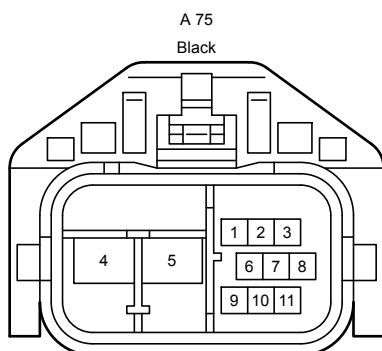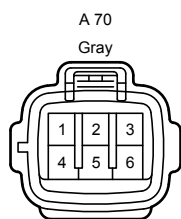


E 52
Black

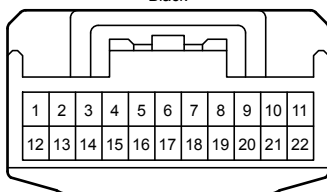


E 53
Black

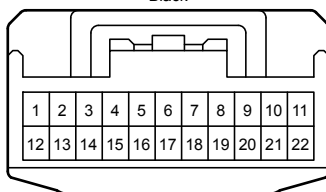


L 2
Blue




L 6
White

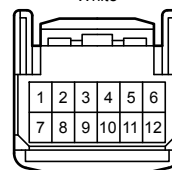


L 11
White

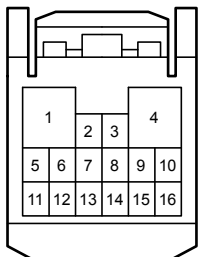


L 21
White

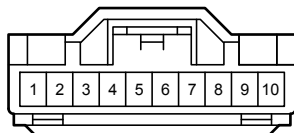


L 31
White

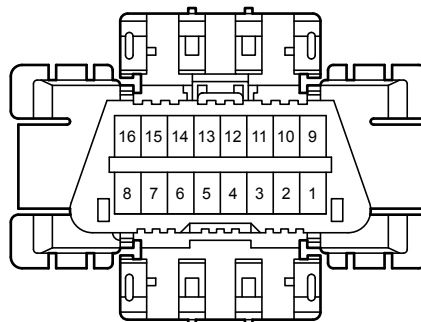


L 71
Black

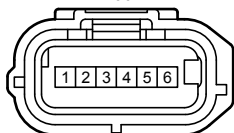


L 75
White

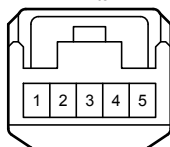


L 88
Black

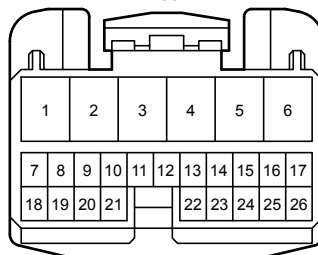


L 95
Gray

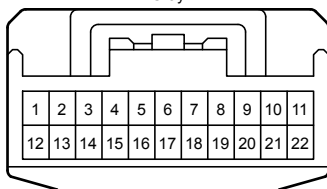


L 97
Black

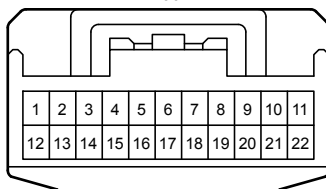


L 99
Black

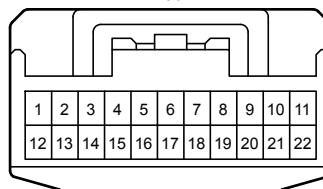


L100
Blue




L124
Black

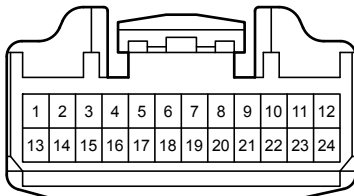


L156
Black




L182
Gray

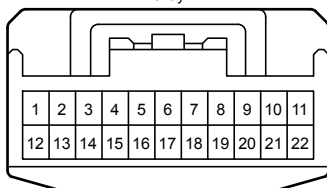


L184
Black

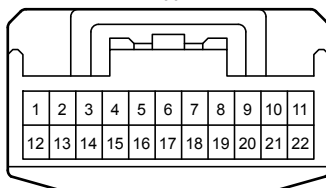


L185
Black

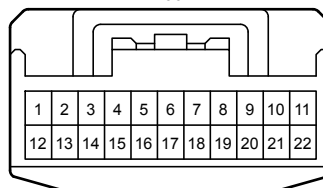


L186
Blue

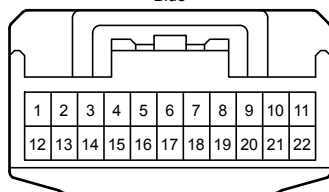


R 1
Black

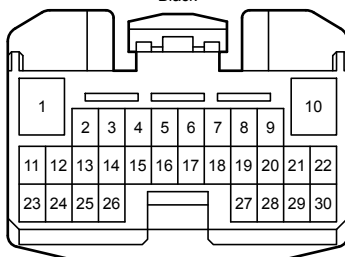


R 42
Black

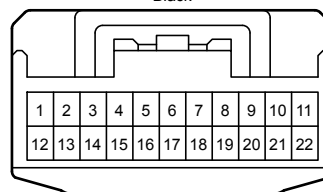


R 43
White

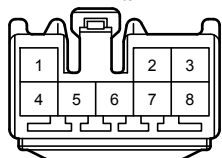


R 44
Black

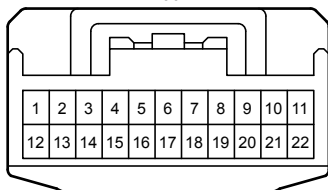

R 64
White

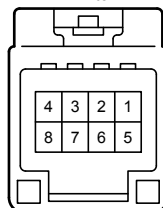


R 72
White

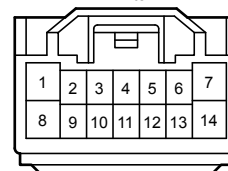


S 6
White




S 47
White

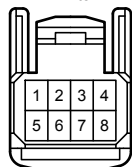


S 58
White

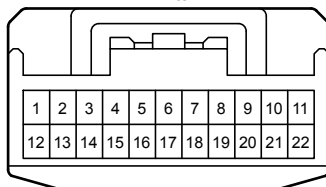


S 91
White

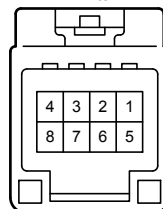


z 15
Gray

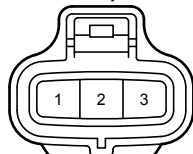


z 16
White

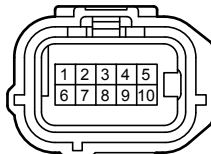


2B
Black

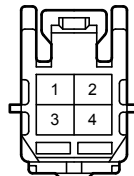


2C
White

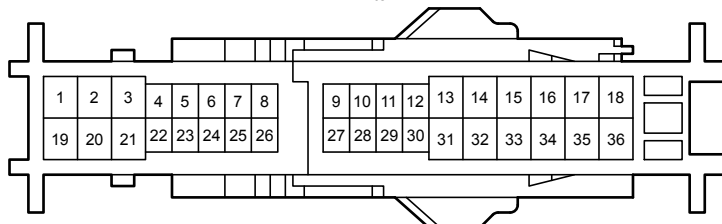


2G
Black

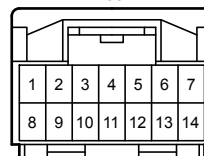


3A
White




3B
Gray



4B
Gray




4F
Gray




(4H)

Gray




(4J)

Gray




(5F)

Gray




(5I)

White




(5J)

Gray




(DA)

White

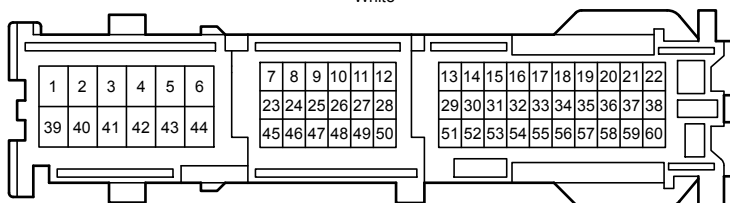


(DD)

Gray

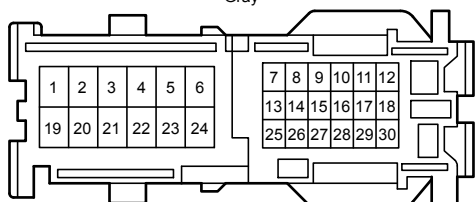


(DH)

Gray

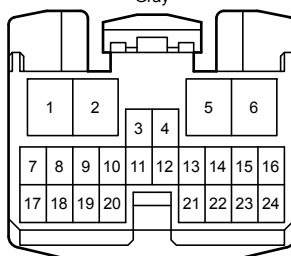


(LA)

White

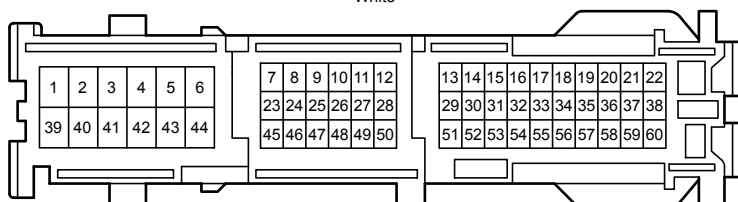


(PA)

White

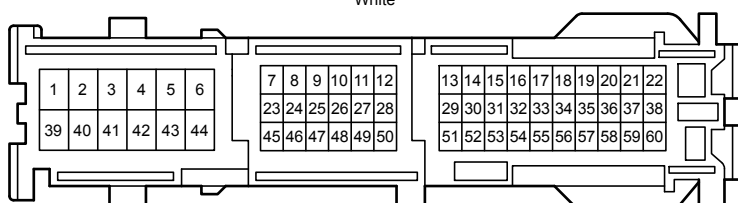


(PK)


Gray

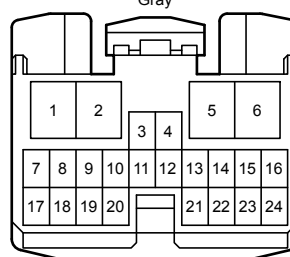


AR1
White

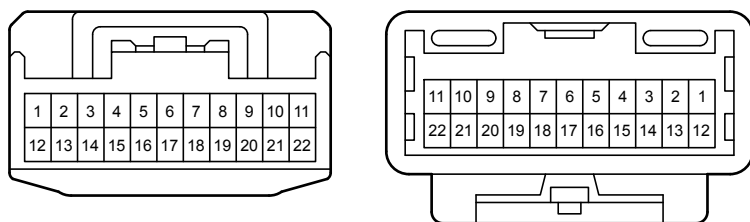


AS1
White

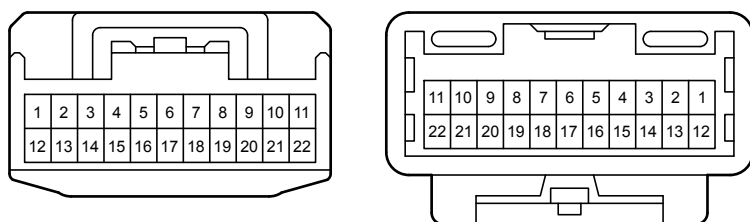


Az1
Black

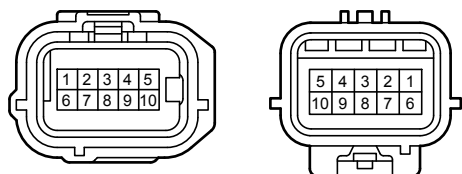


Az2
Gray

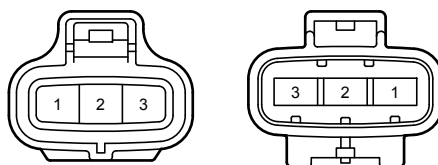

LA1
White

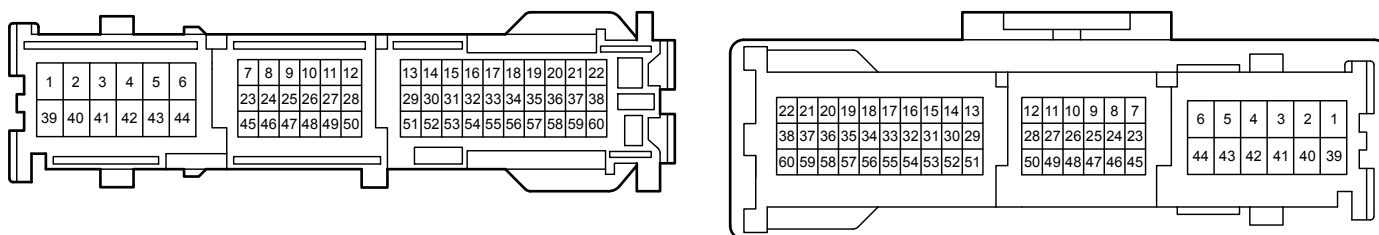


LA3
White

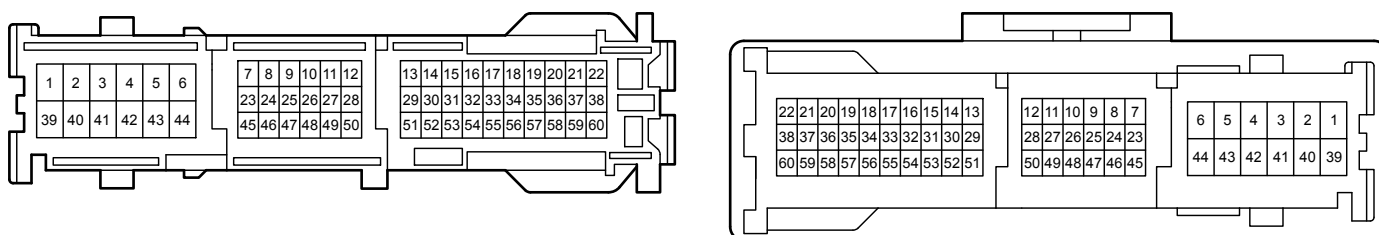



LR1

White

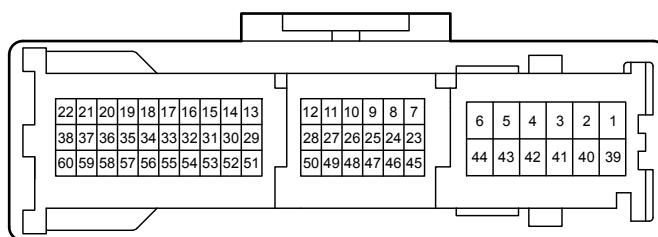



LS1

White

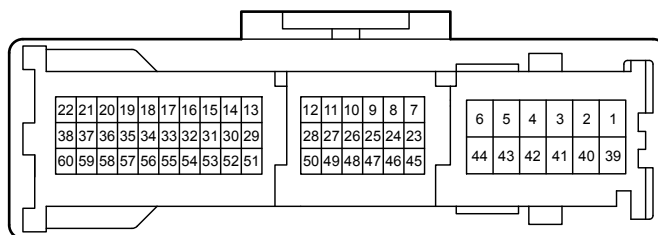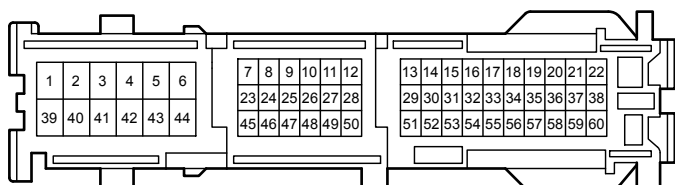

RS2

White

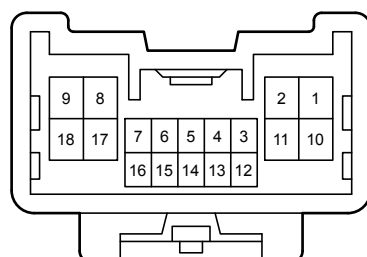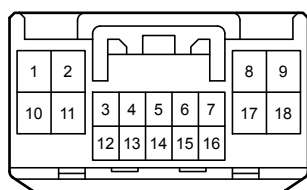

SR2

Gray

