

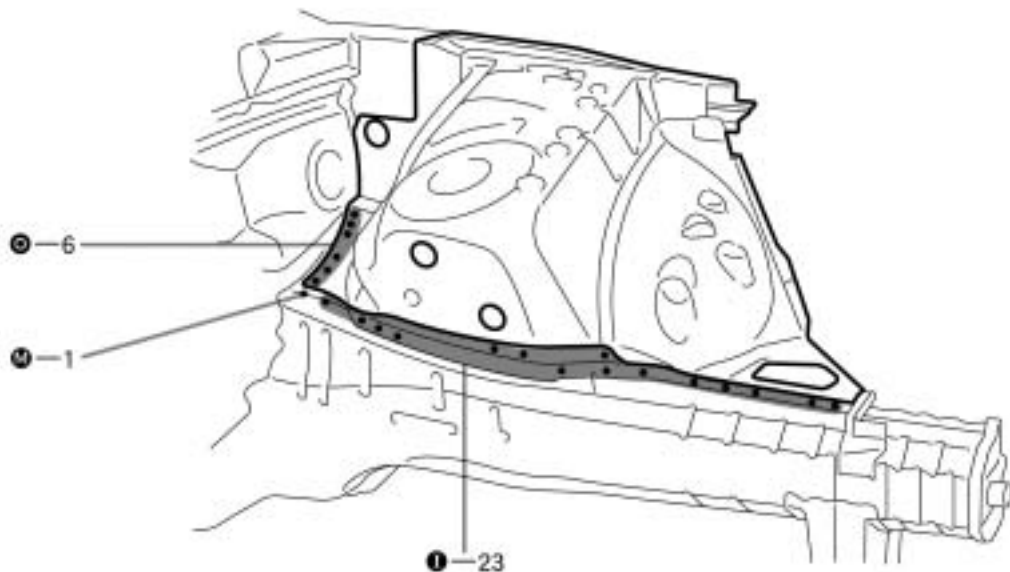
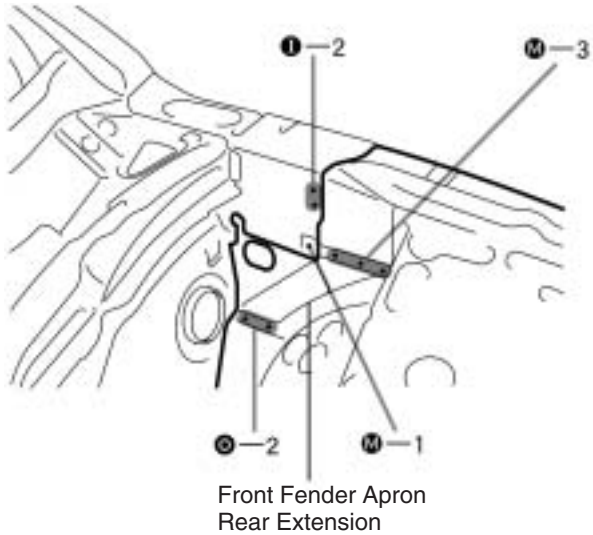


FRONT FENDER APRON (ASSY) REPLACEMENT

1. REMOVE RADIATOR SUPPORT ([See page BP-1](#))
2. REMOVE FRONT FENDER APRON
 - (a) Leave the front fender apron rear extension to the vehicle, remove the front fender apron.

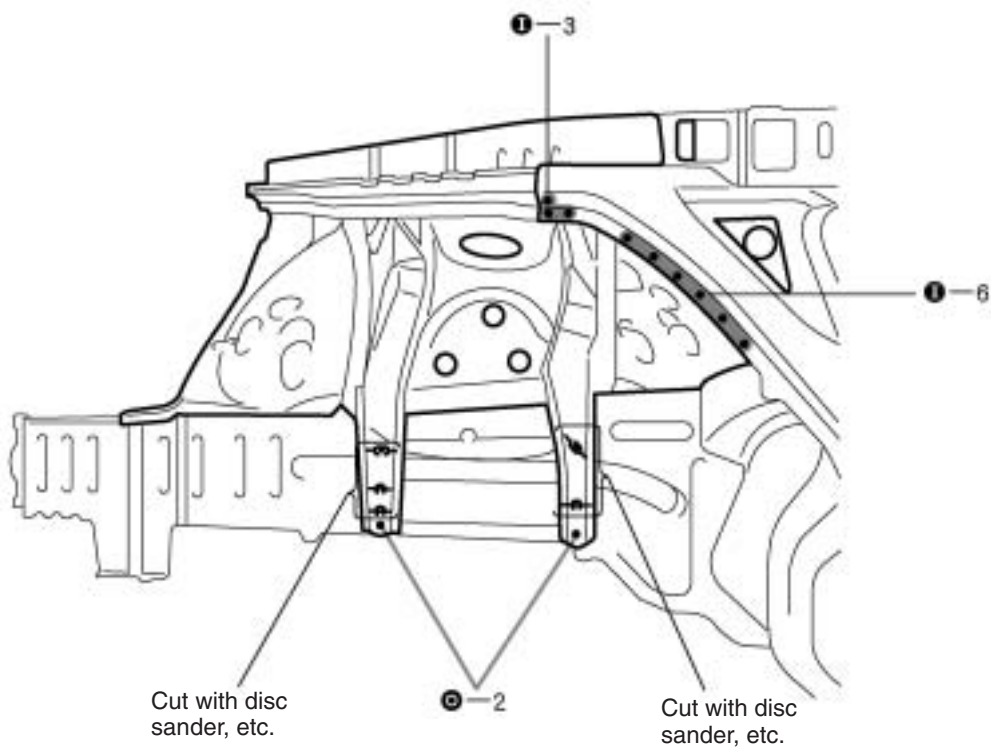

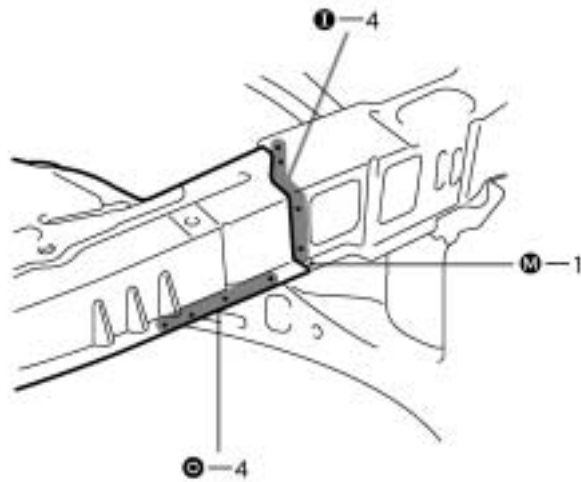

3. INSTALL FRONT FENDER APRON


HINT:


Inspect the fitting of the front fender and hood, etc. before welding, since this affects the appearance of the finish.

- (a) Remove the front fender apron rear extension from the new parts of front fender apron.
- (b) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

HINT:

Make sure each measurement is correct, as this parts affects the front wheel alignment.

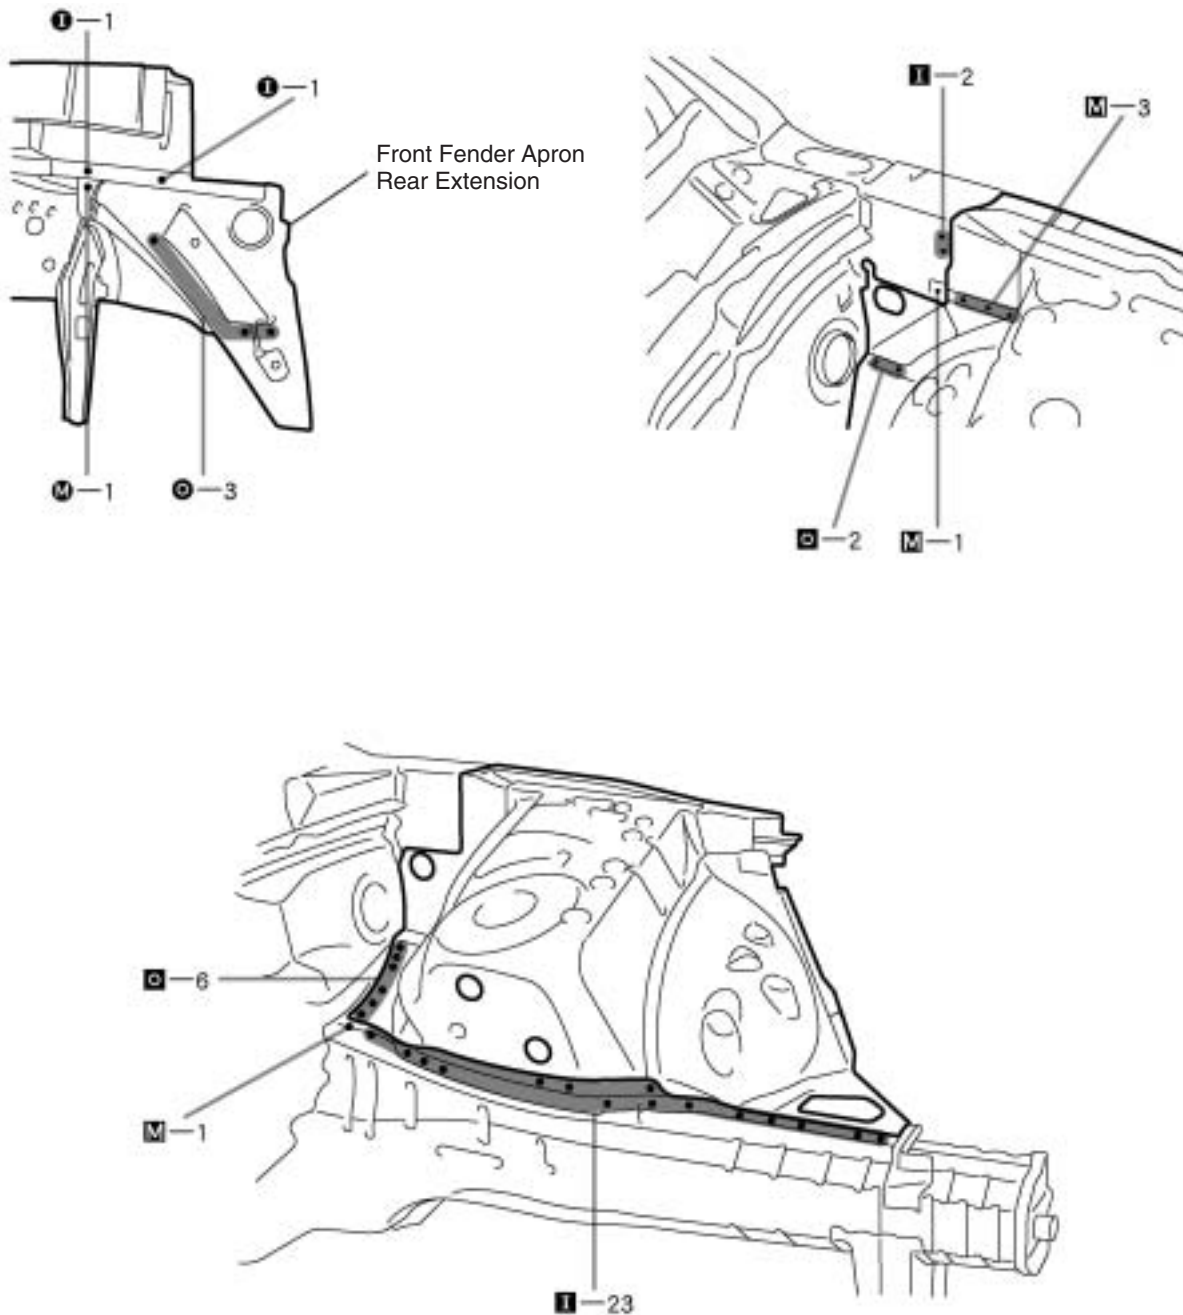

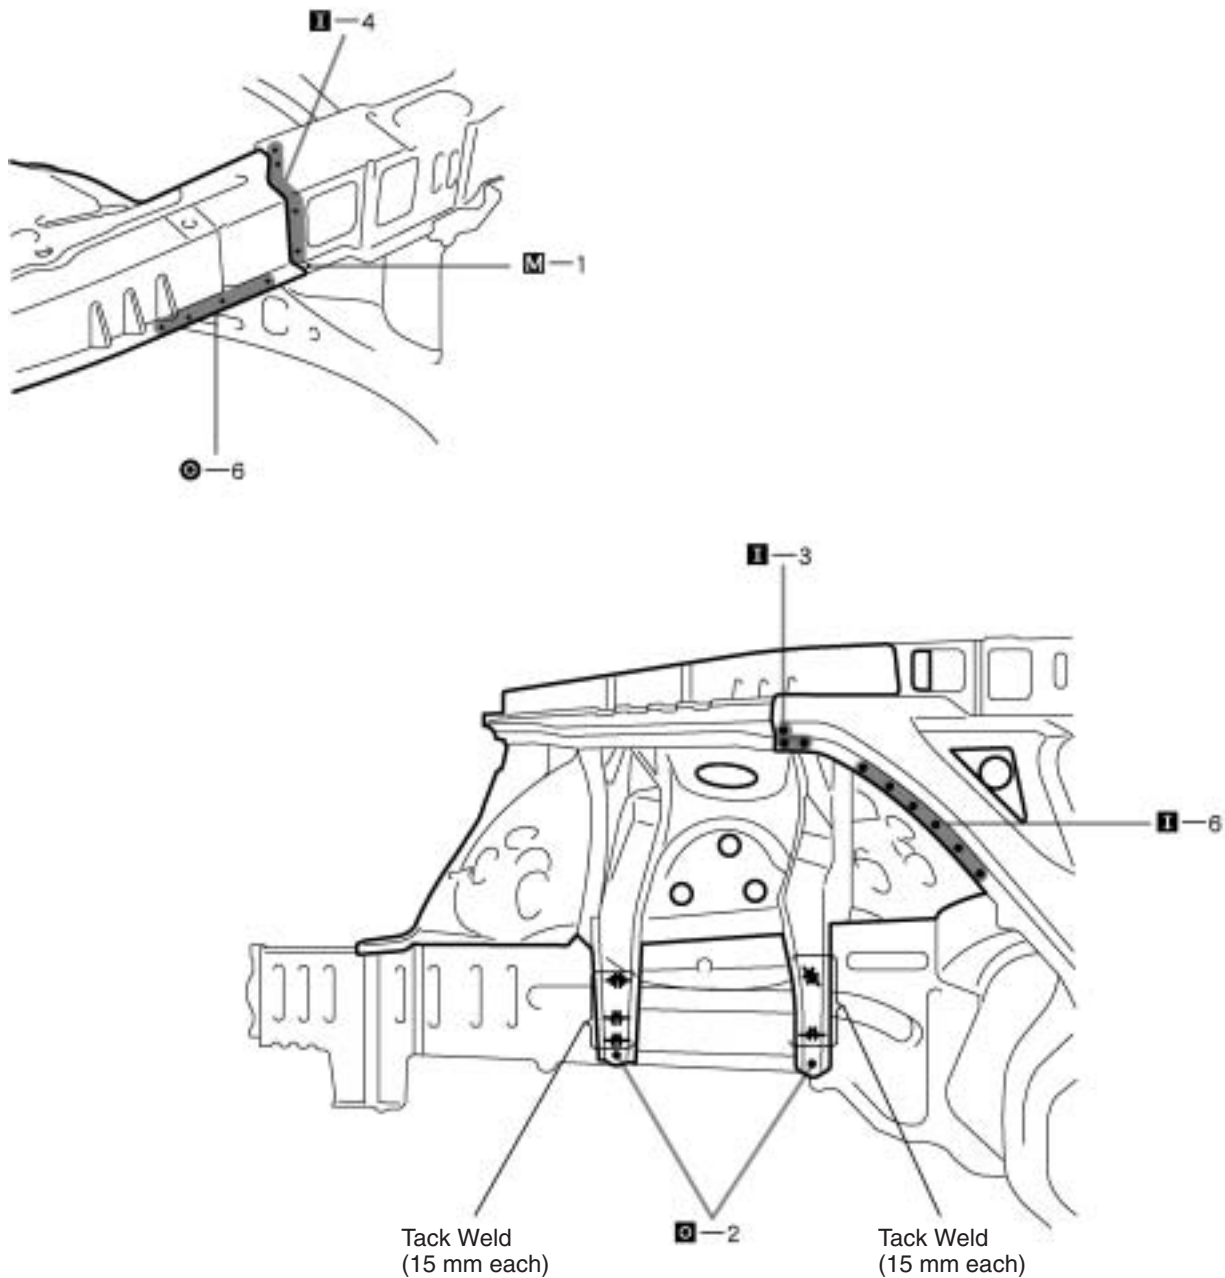

mm	in.
15	0.59

F11410A

4. MEASURING THE ENGINE COMPARTMENT DIMENSIONS ([See page BP-88](#))
5. MEASURING THE UNDER BODY DIMENSIONS ([See page BP-88](#))
6. INSTALL RADIATOR SUPPORT ([See page BP-1](#))
7. APPLYING SEALER TO THE ENGINE COMPARTMENT ([See page PC-1](#))
8. APPLYING UNDER COATING ([See page PC-7](#))
9. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.