






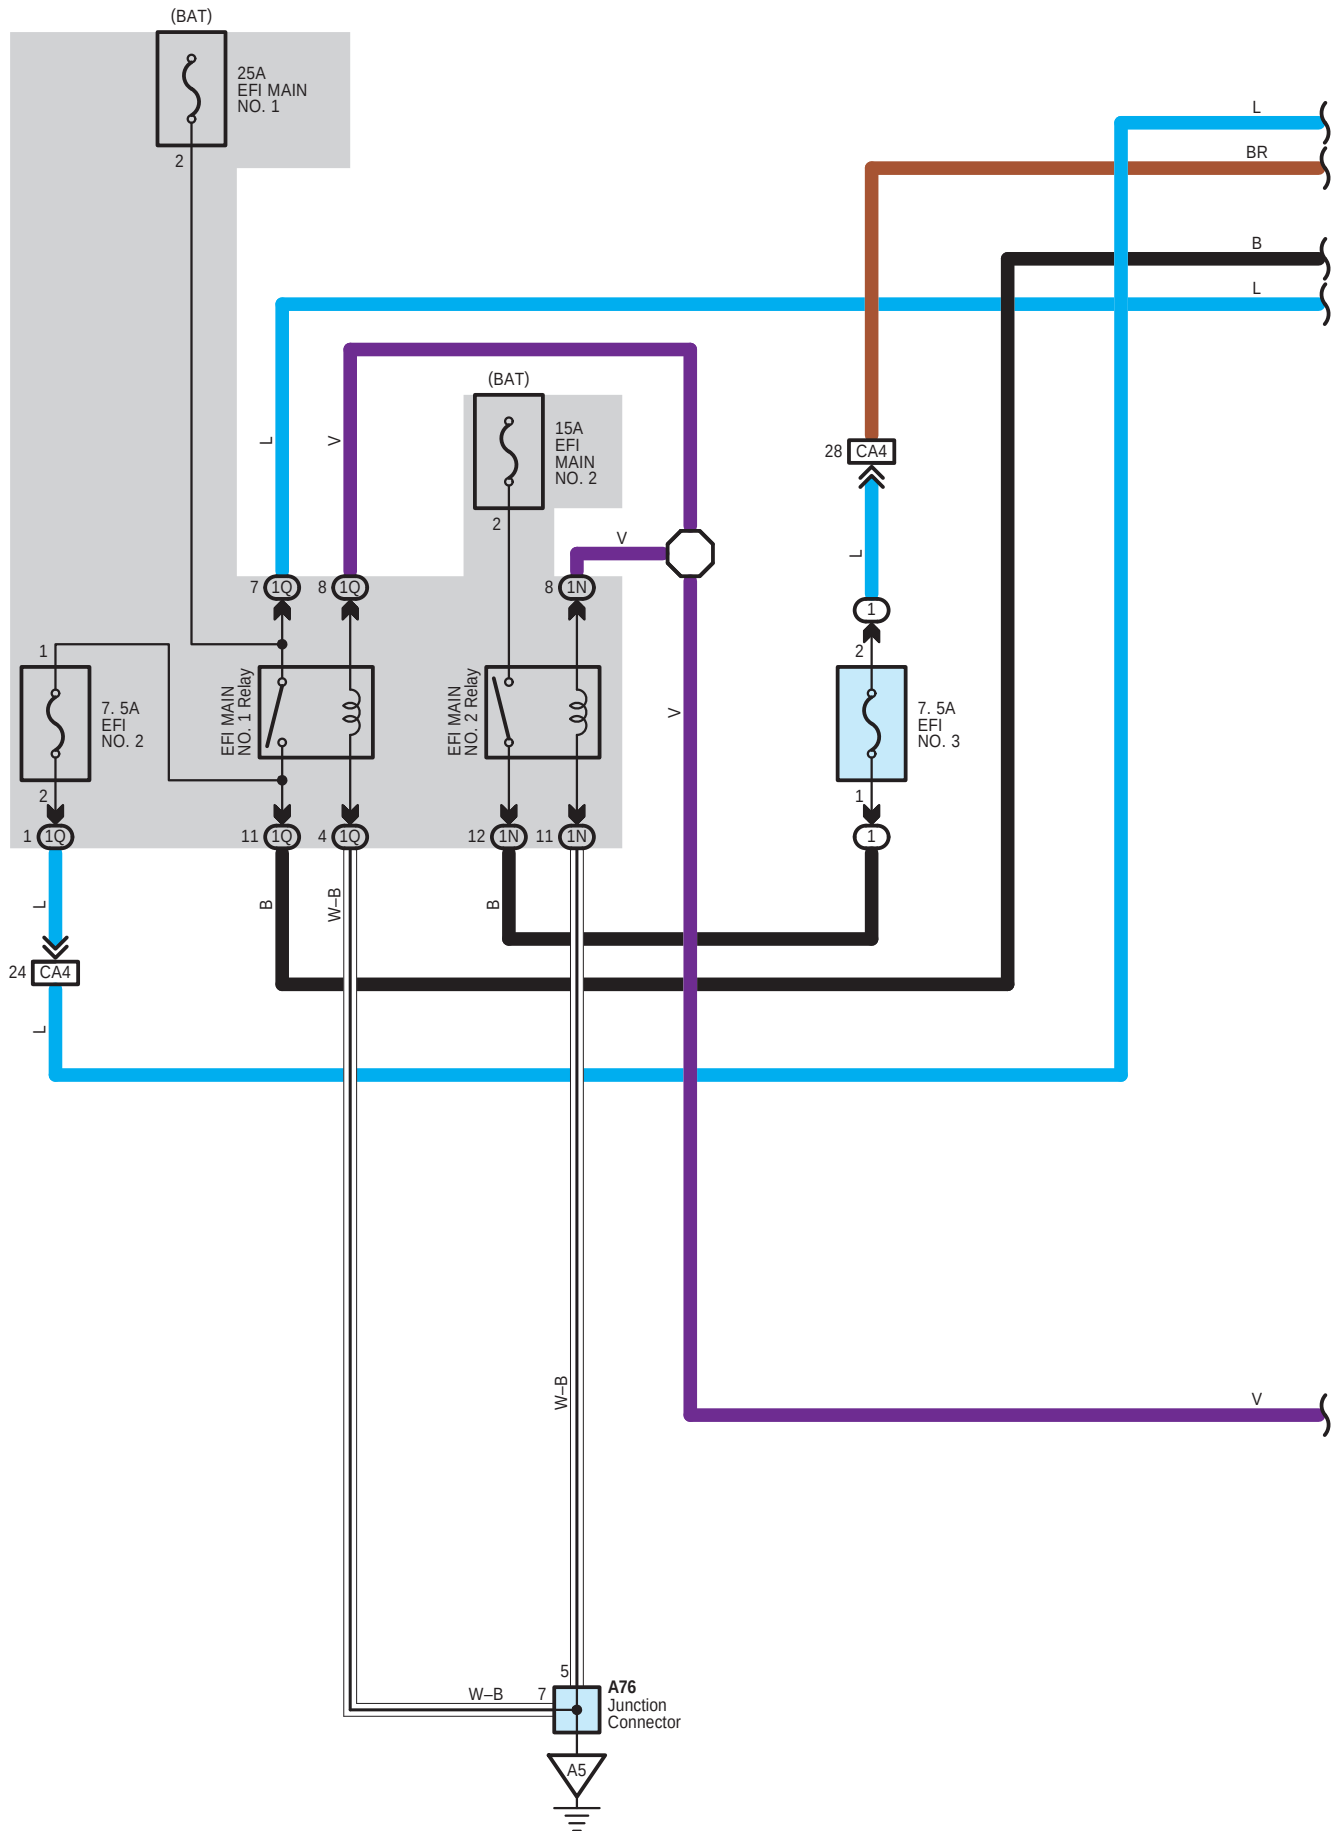


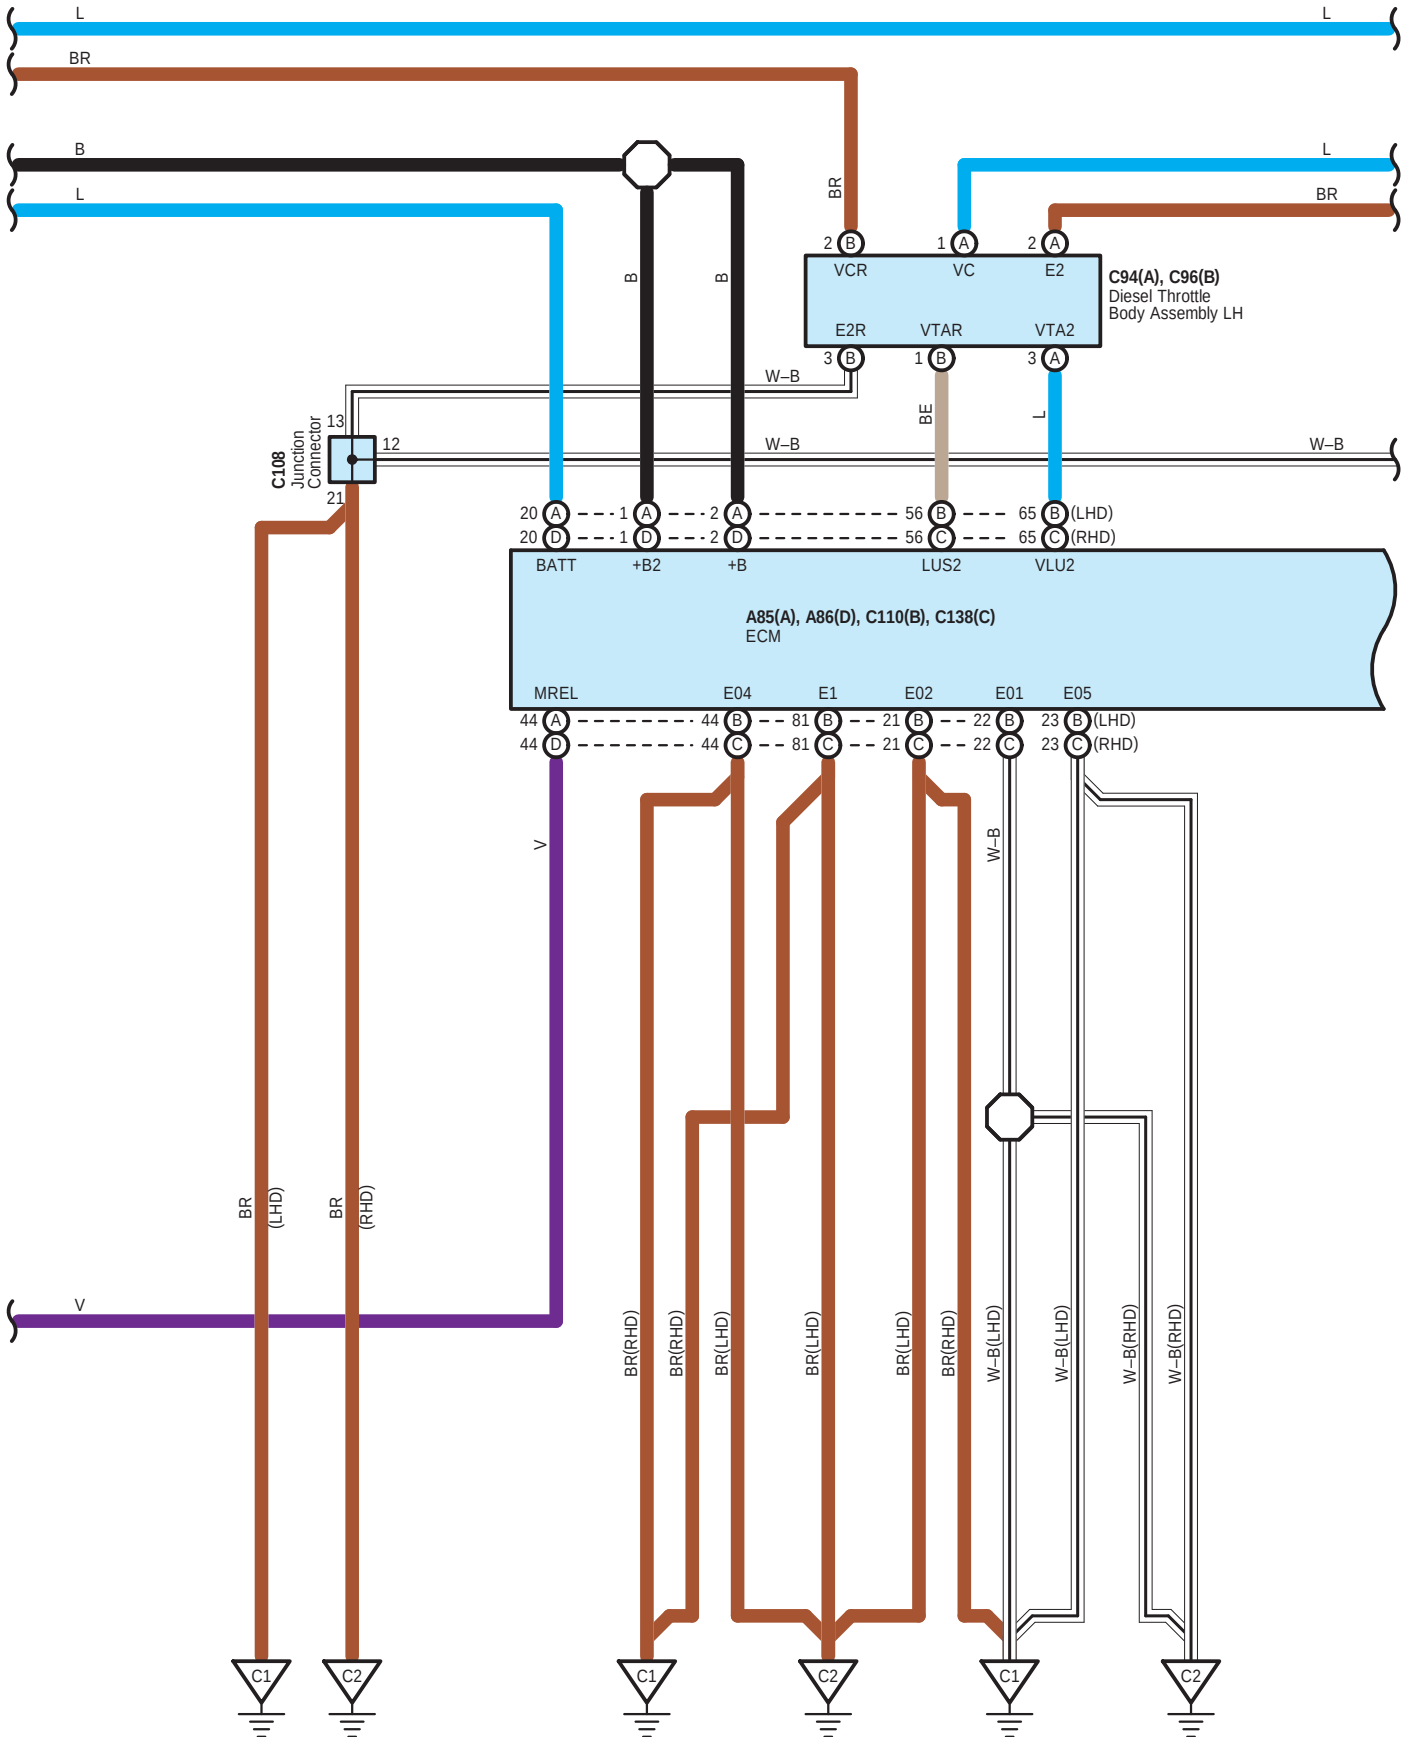


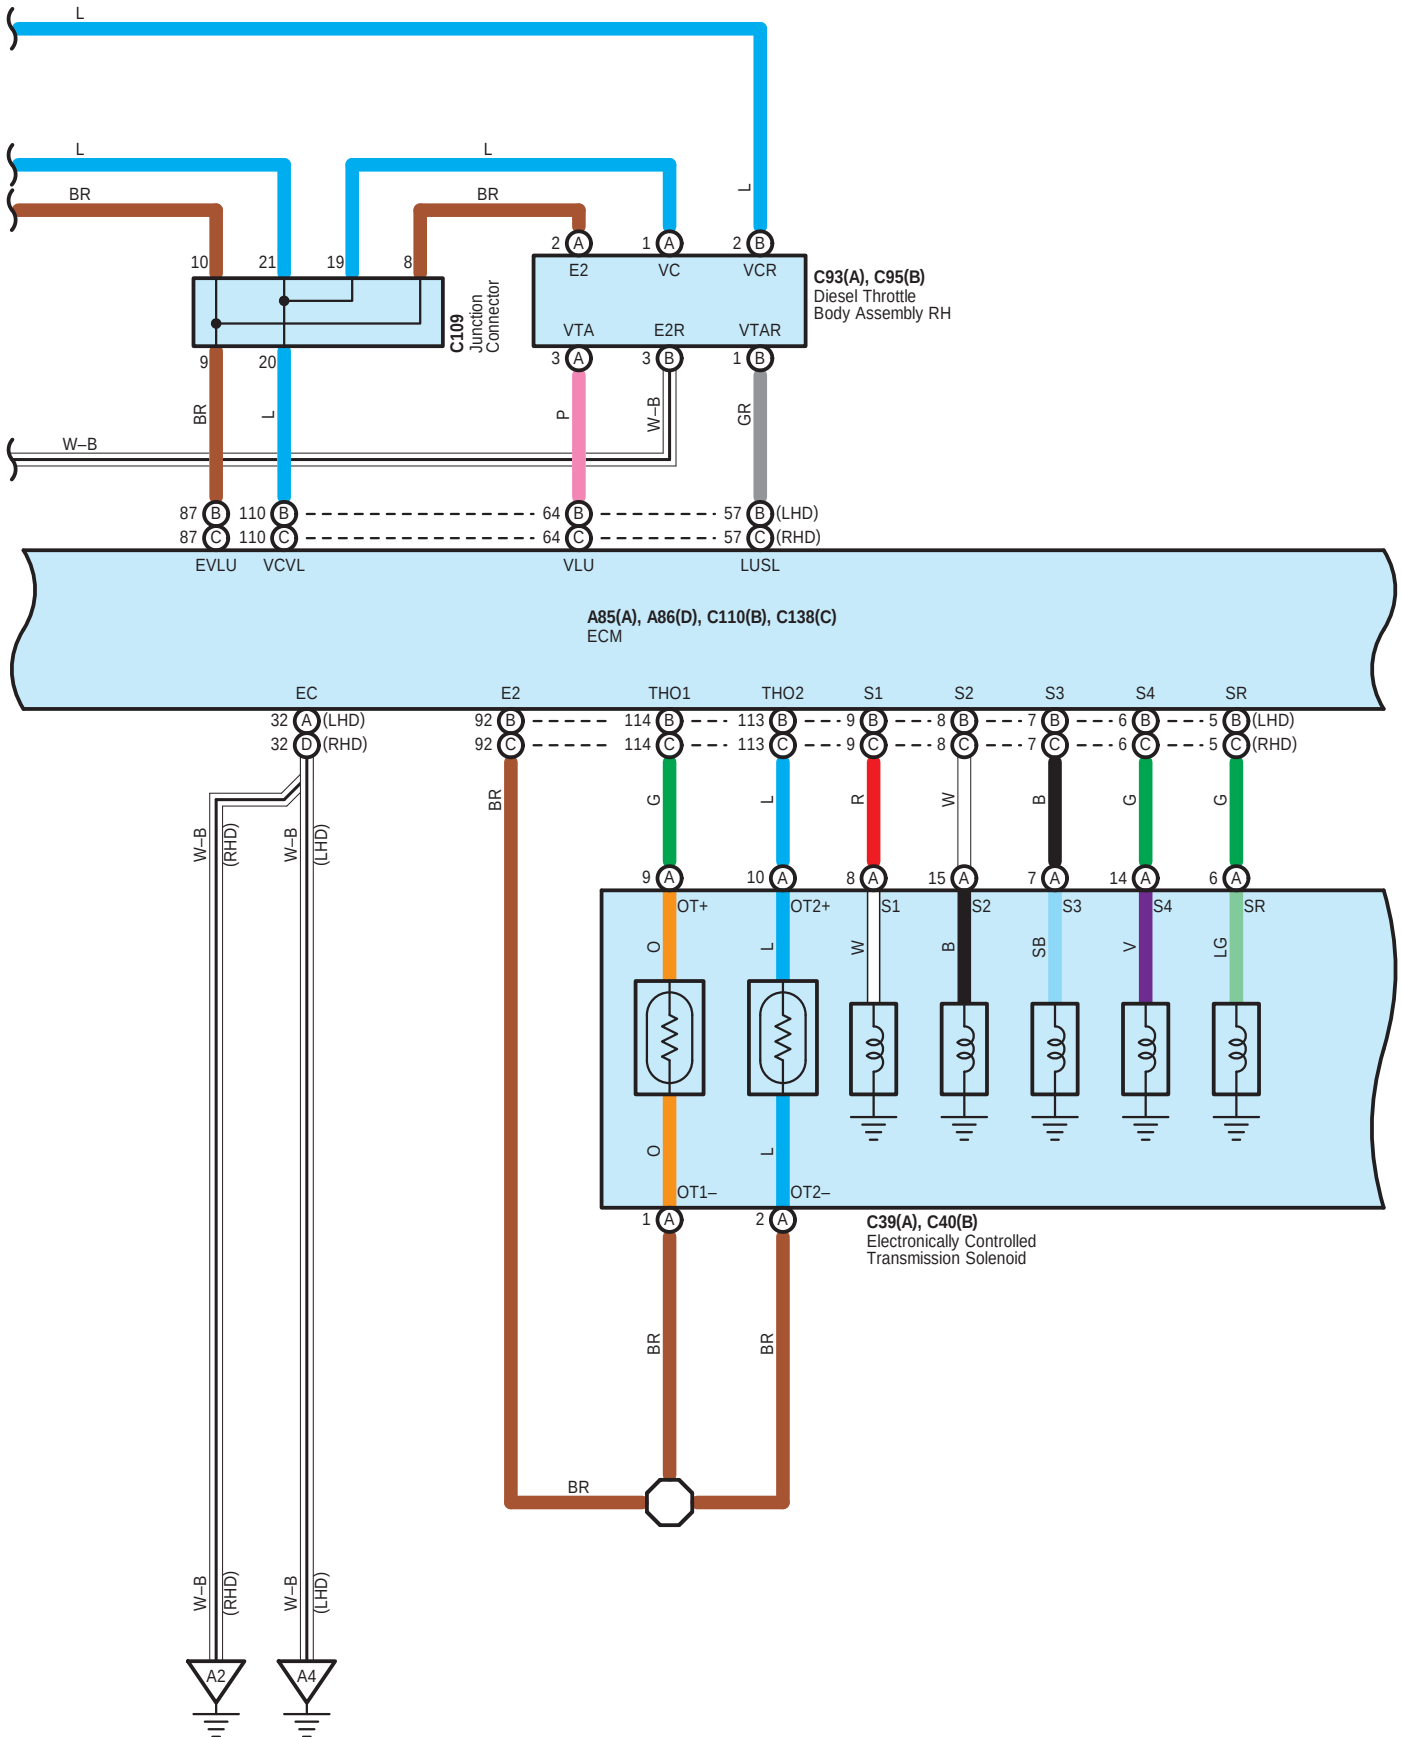


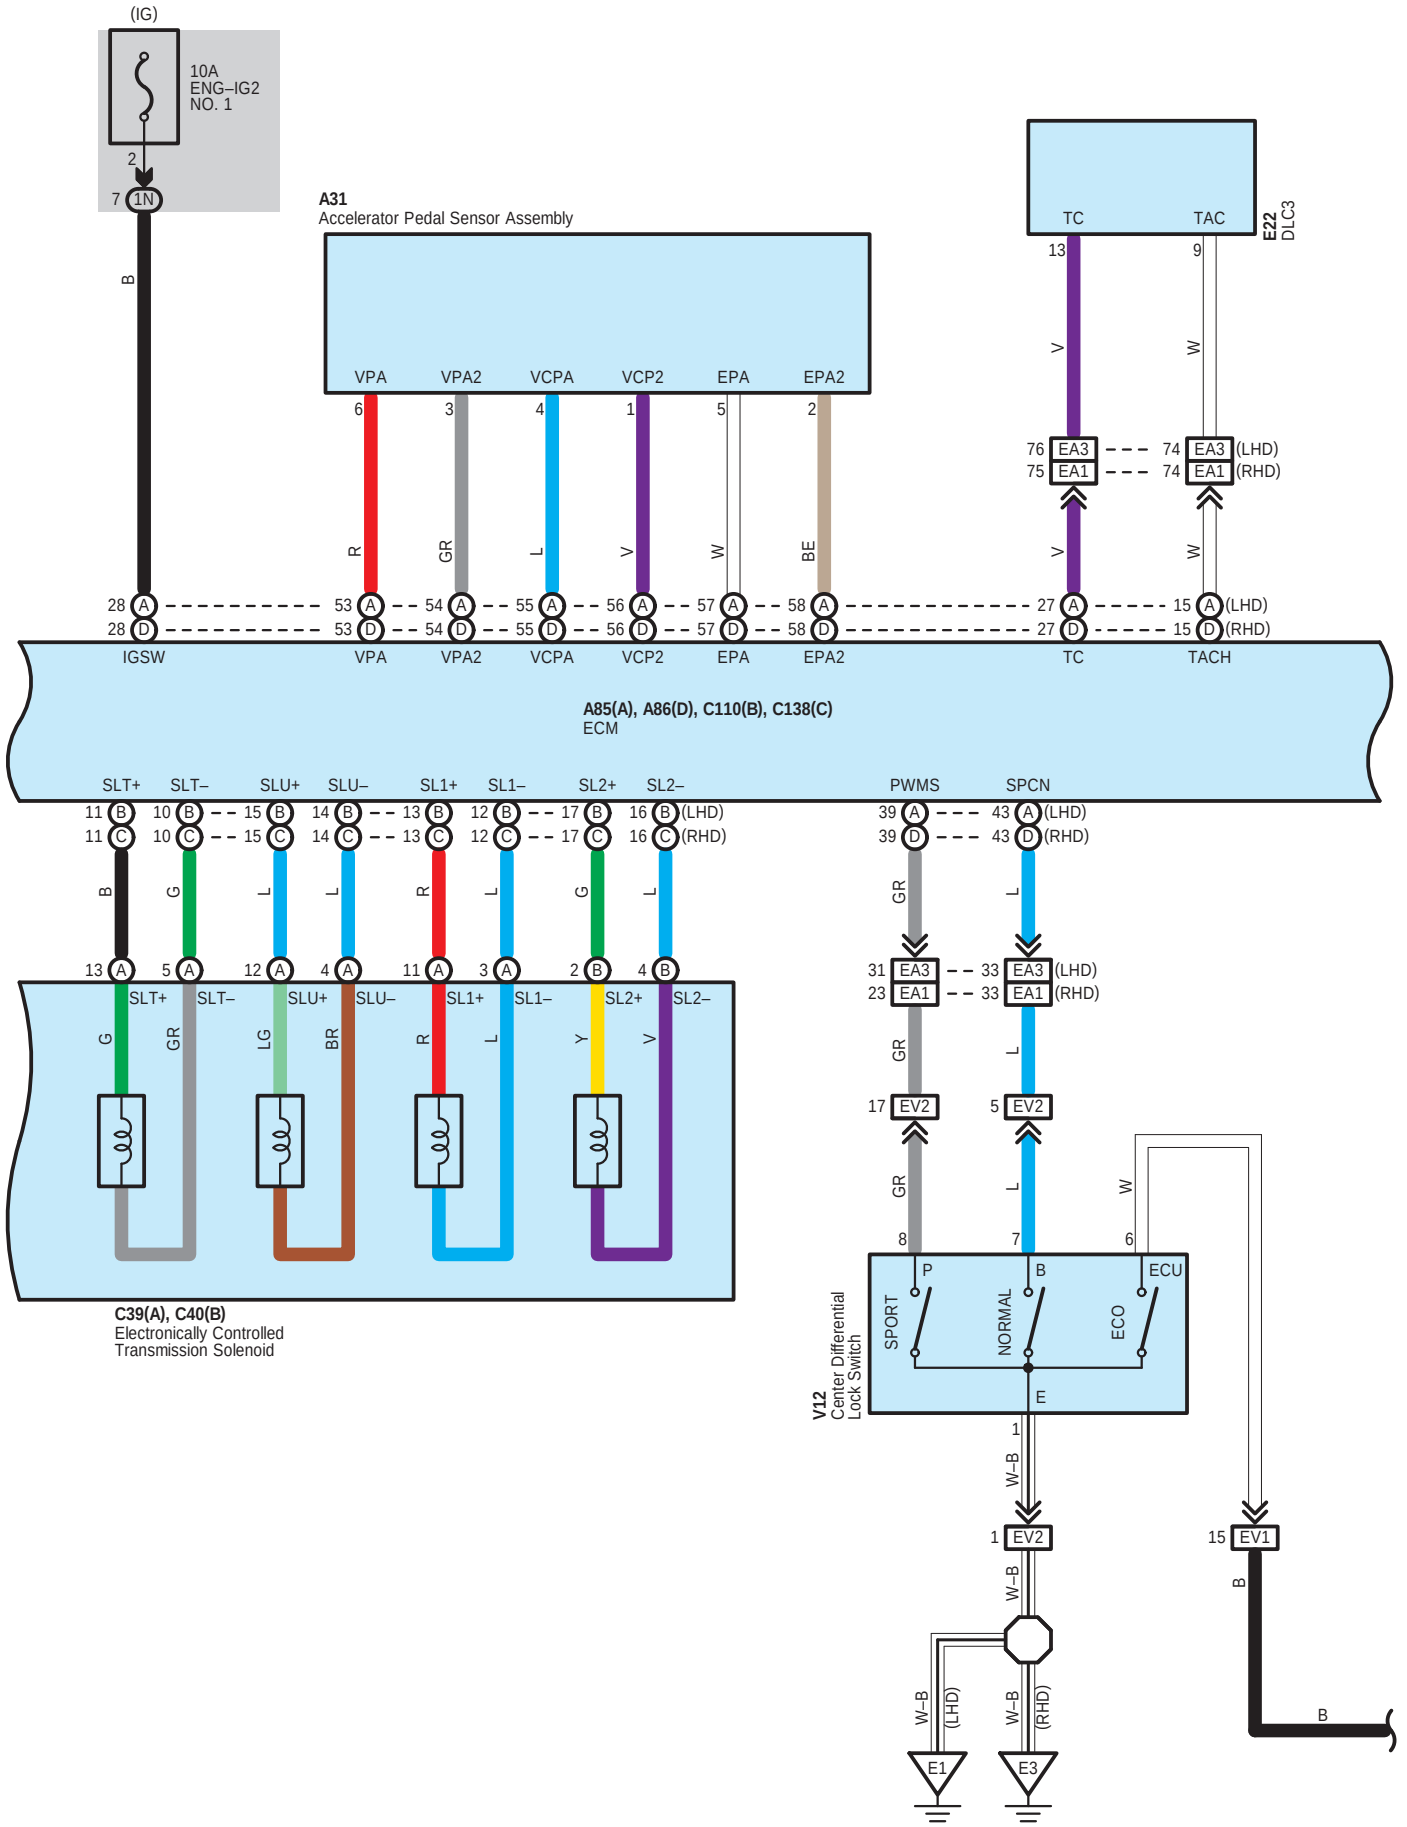


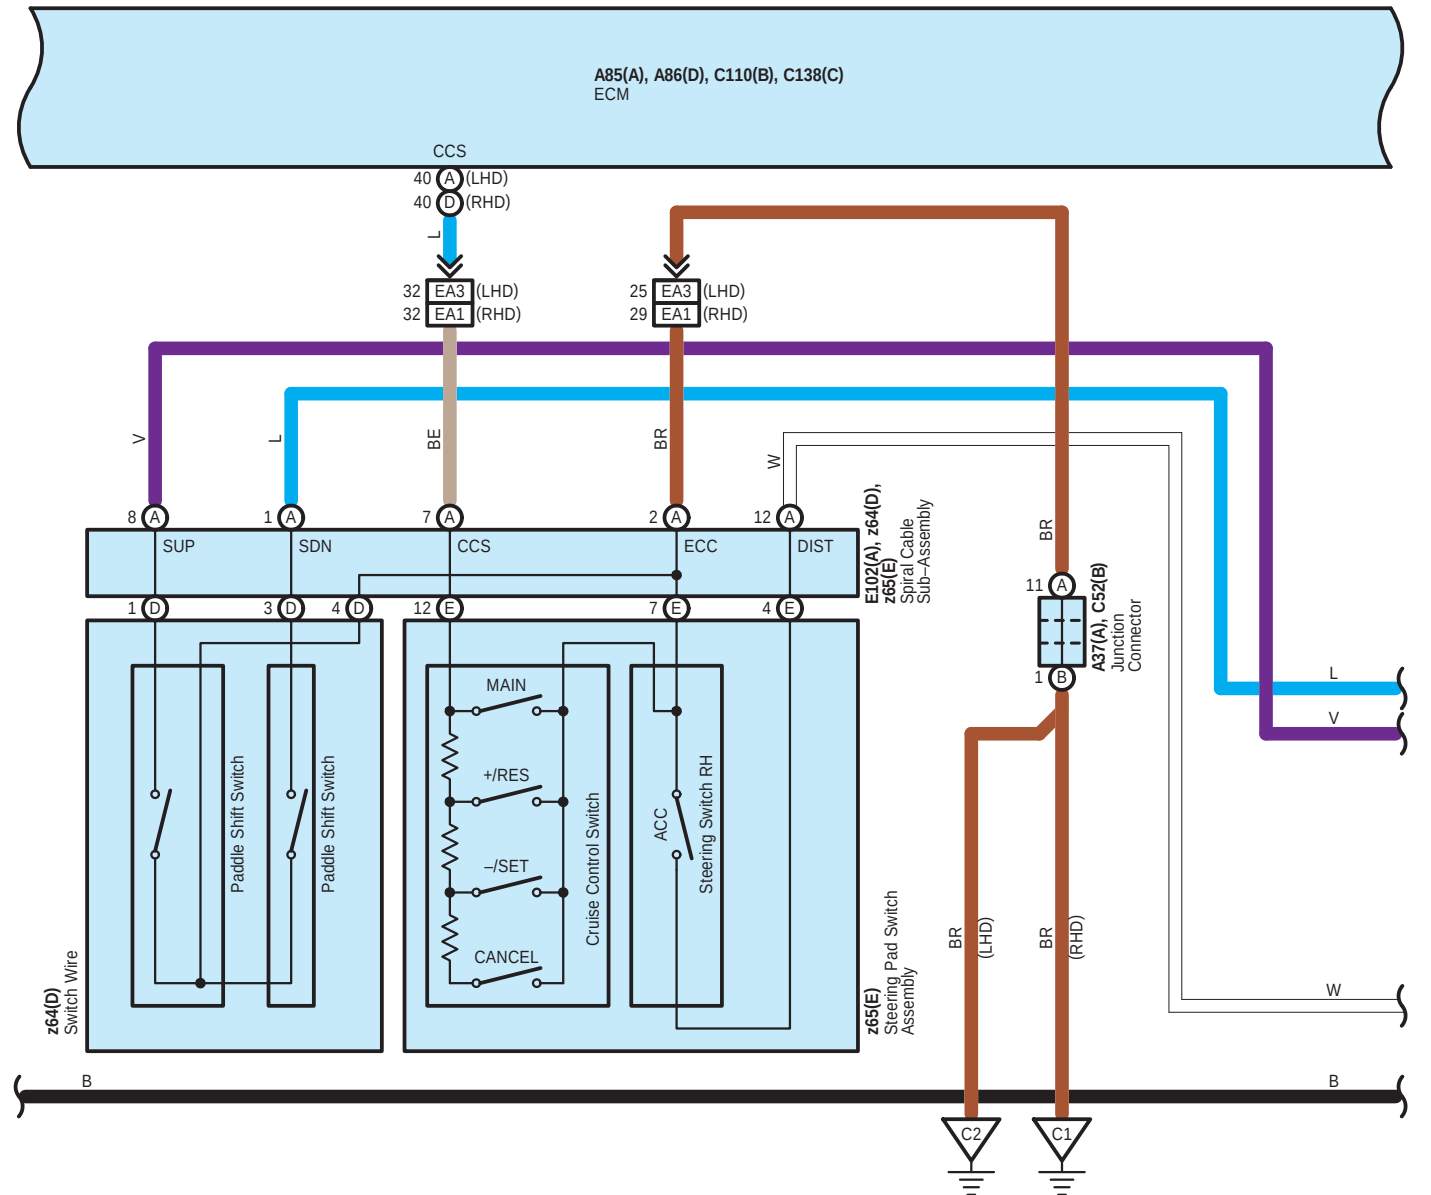


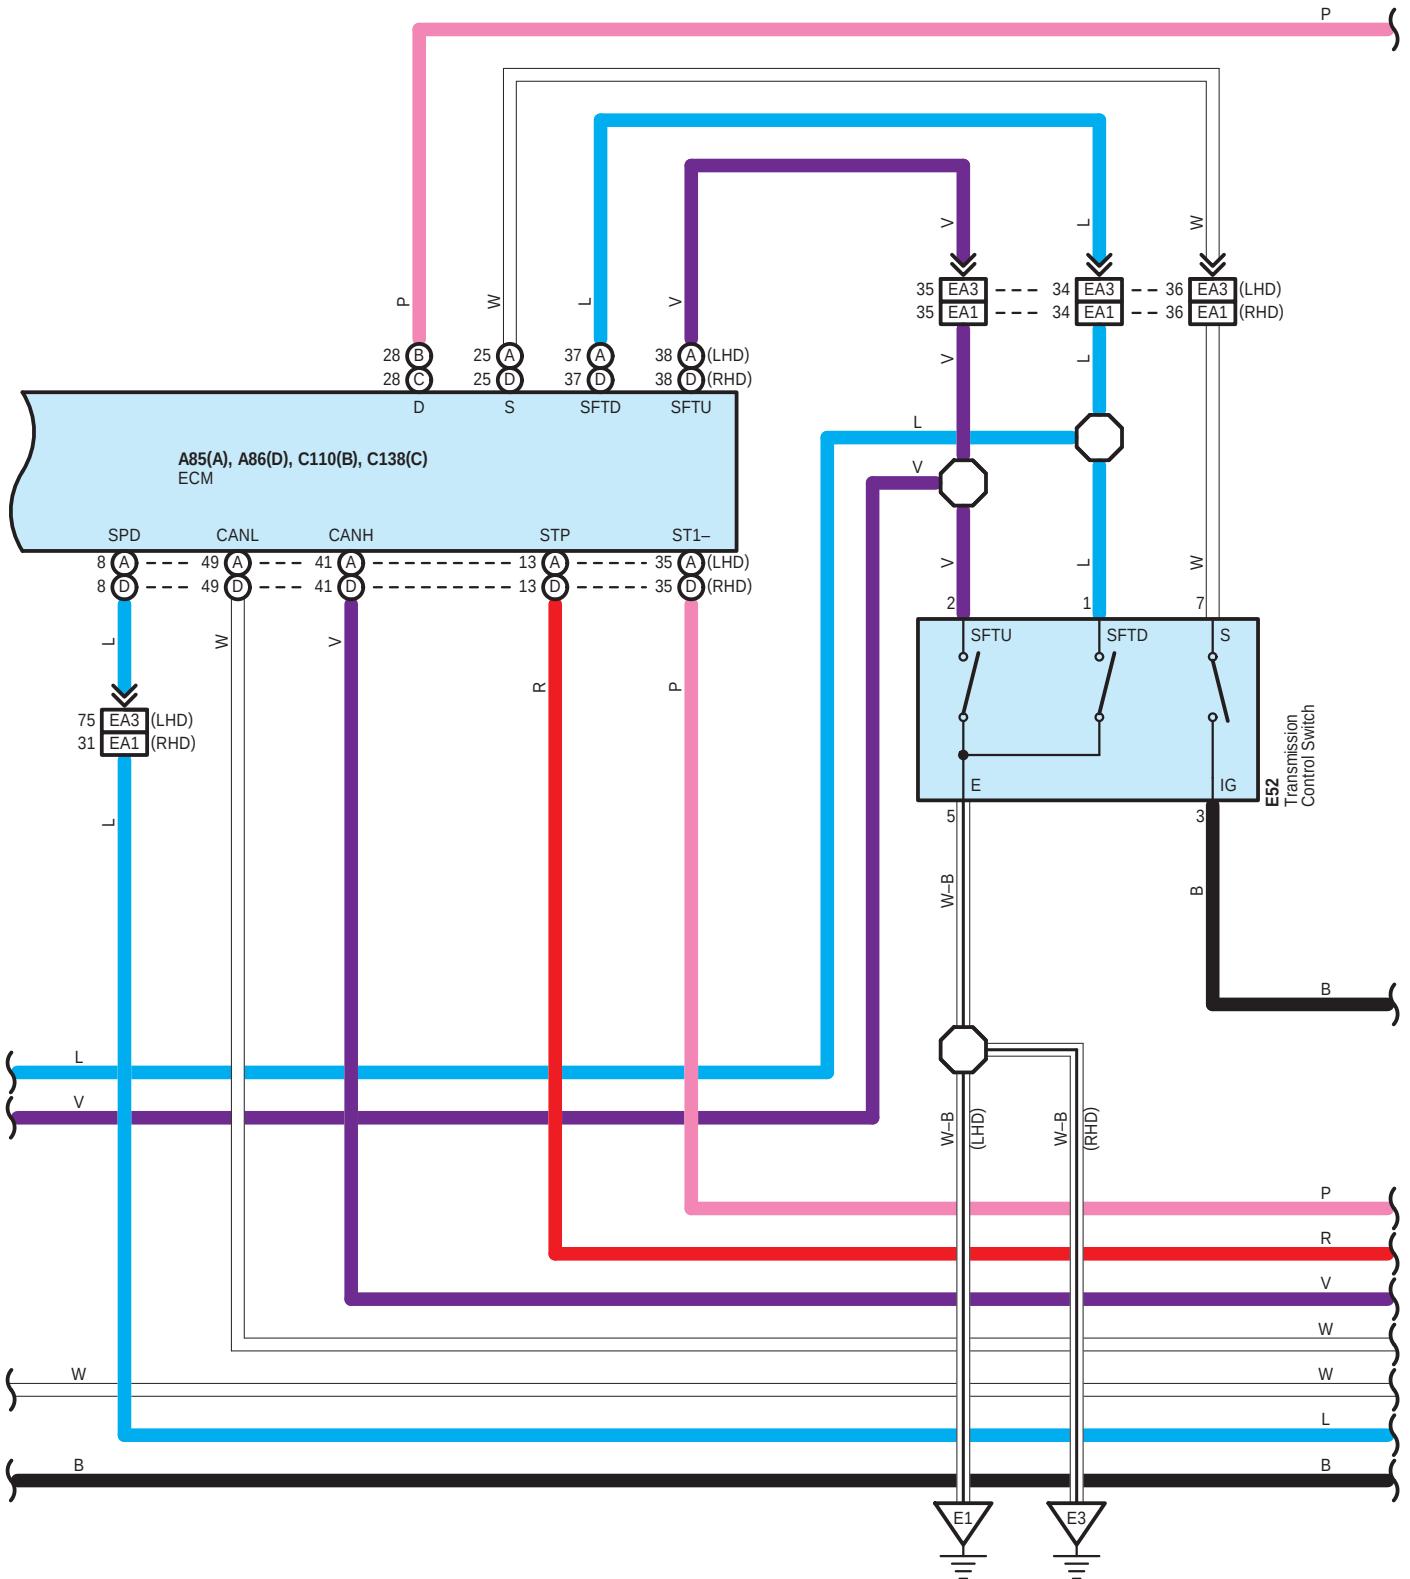


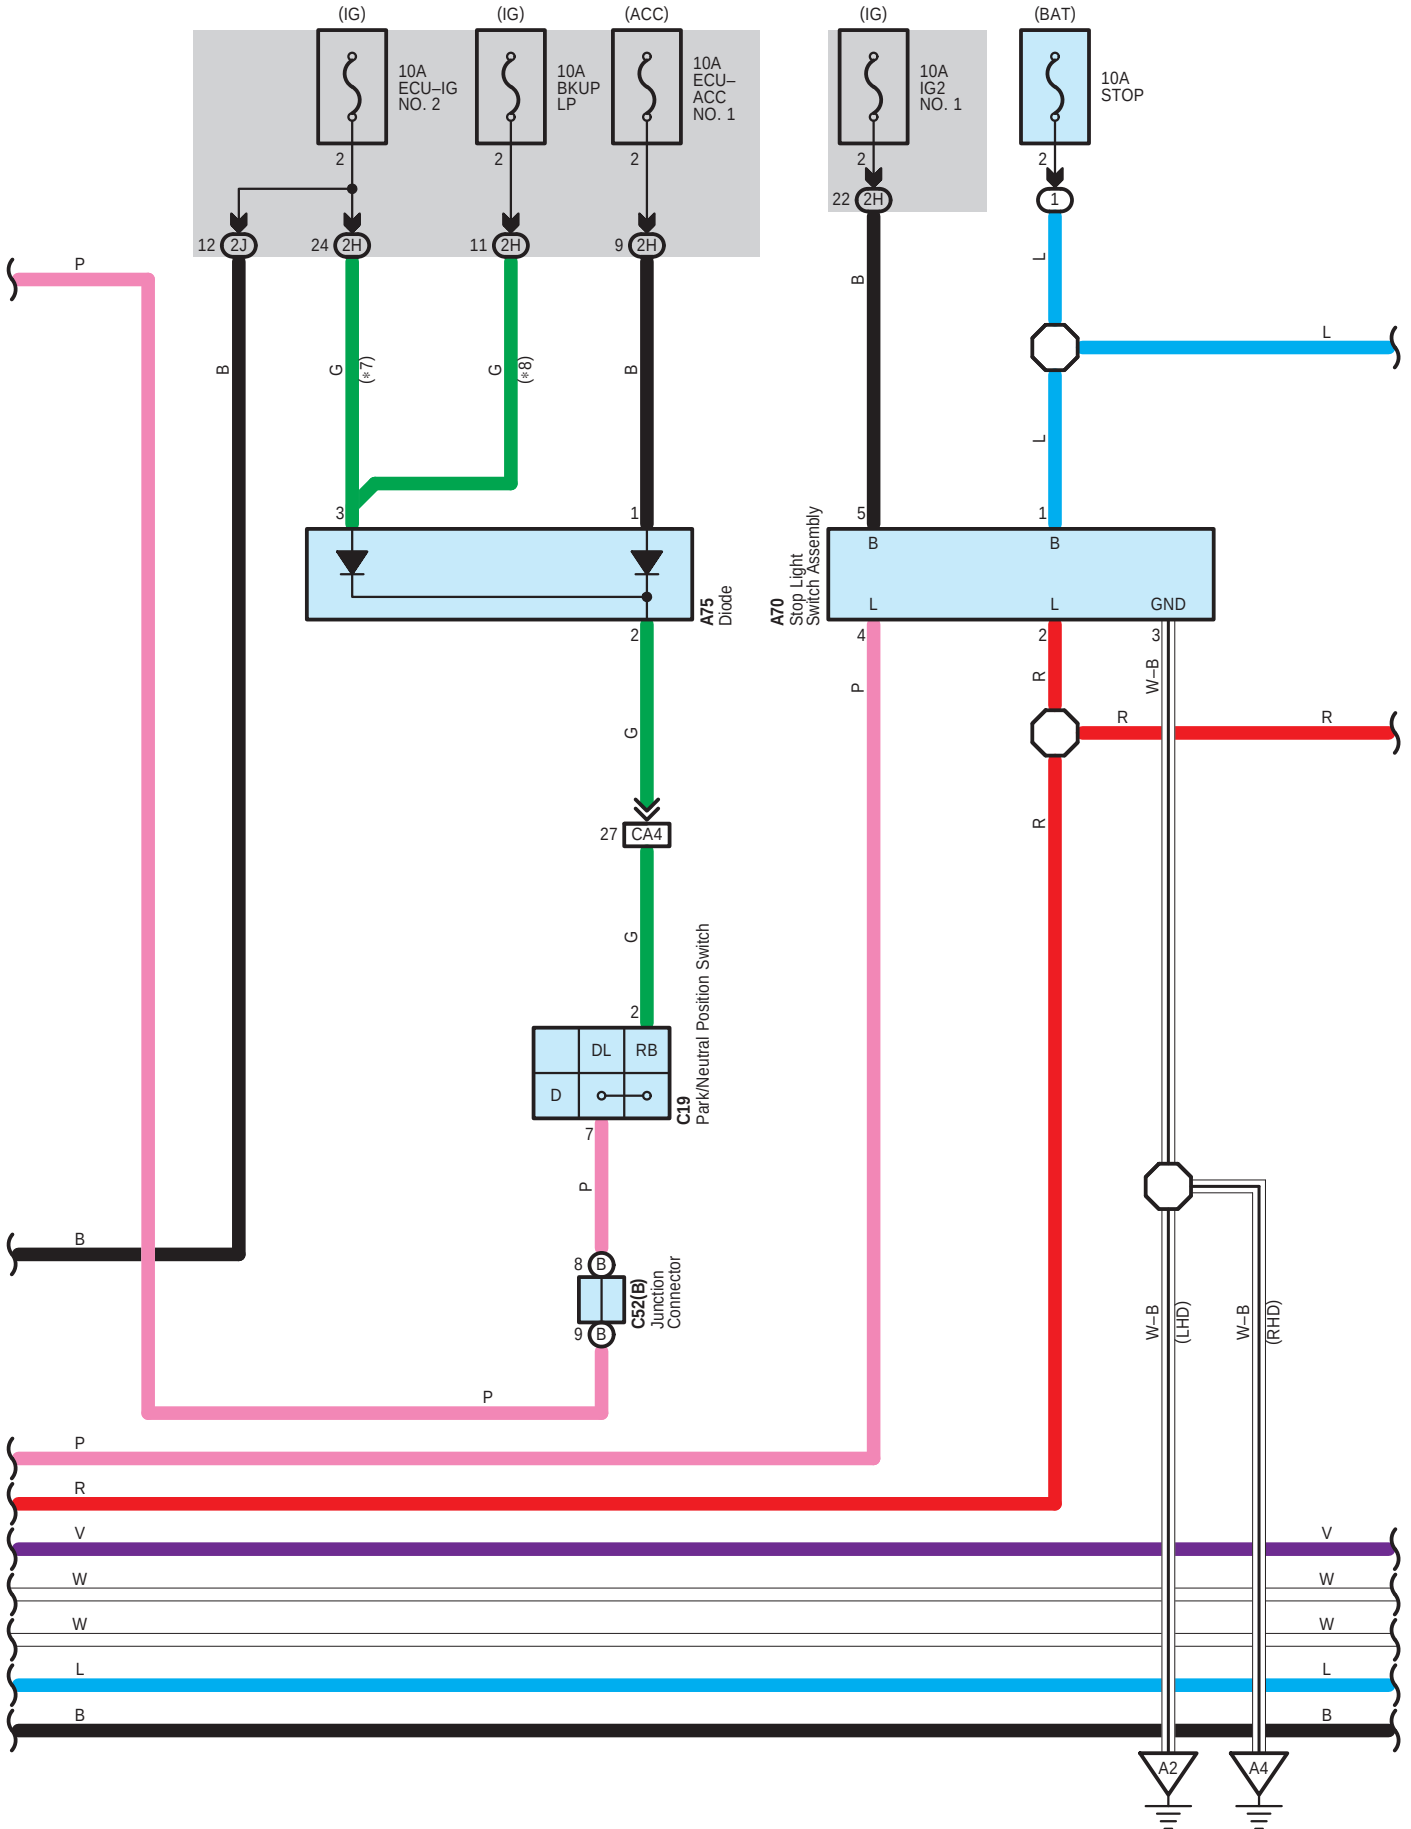


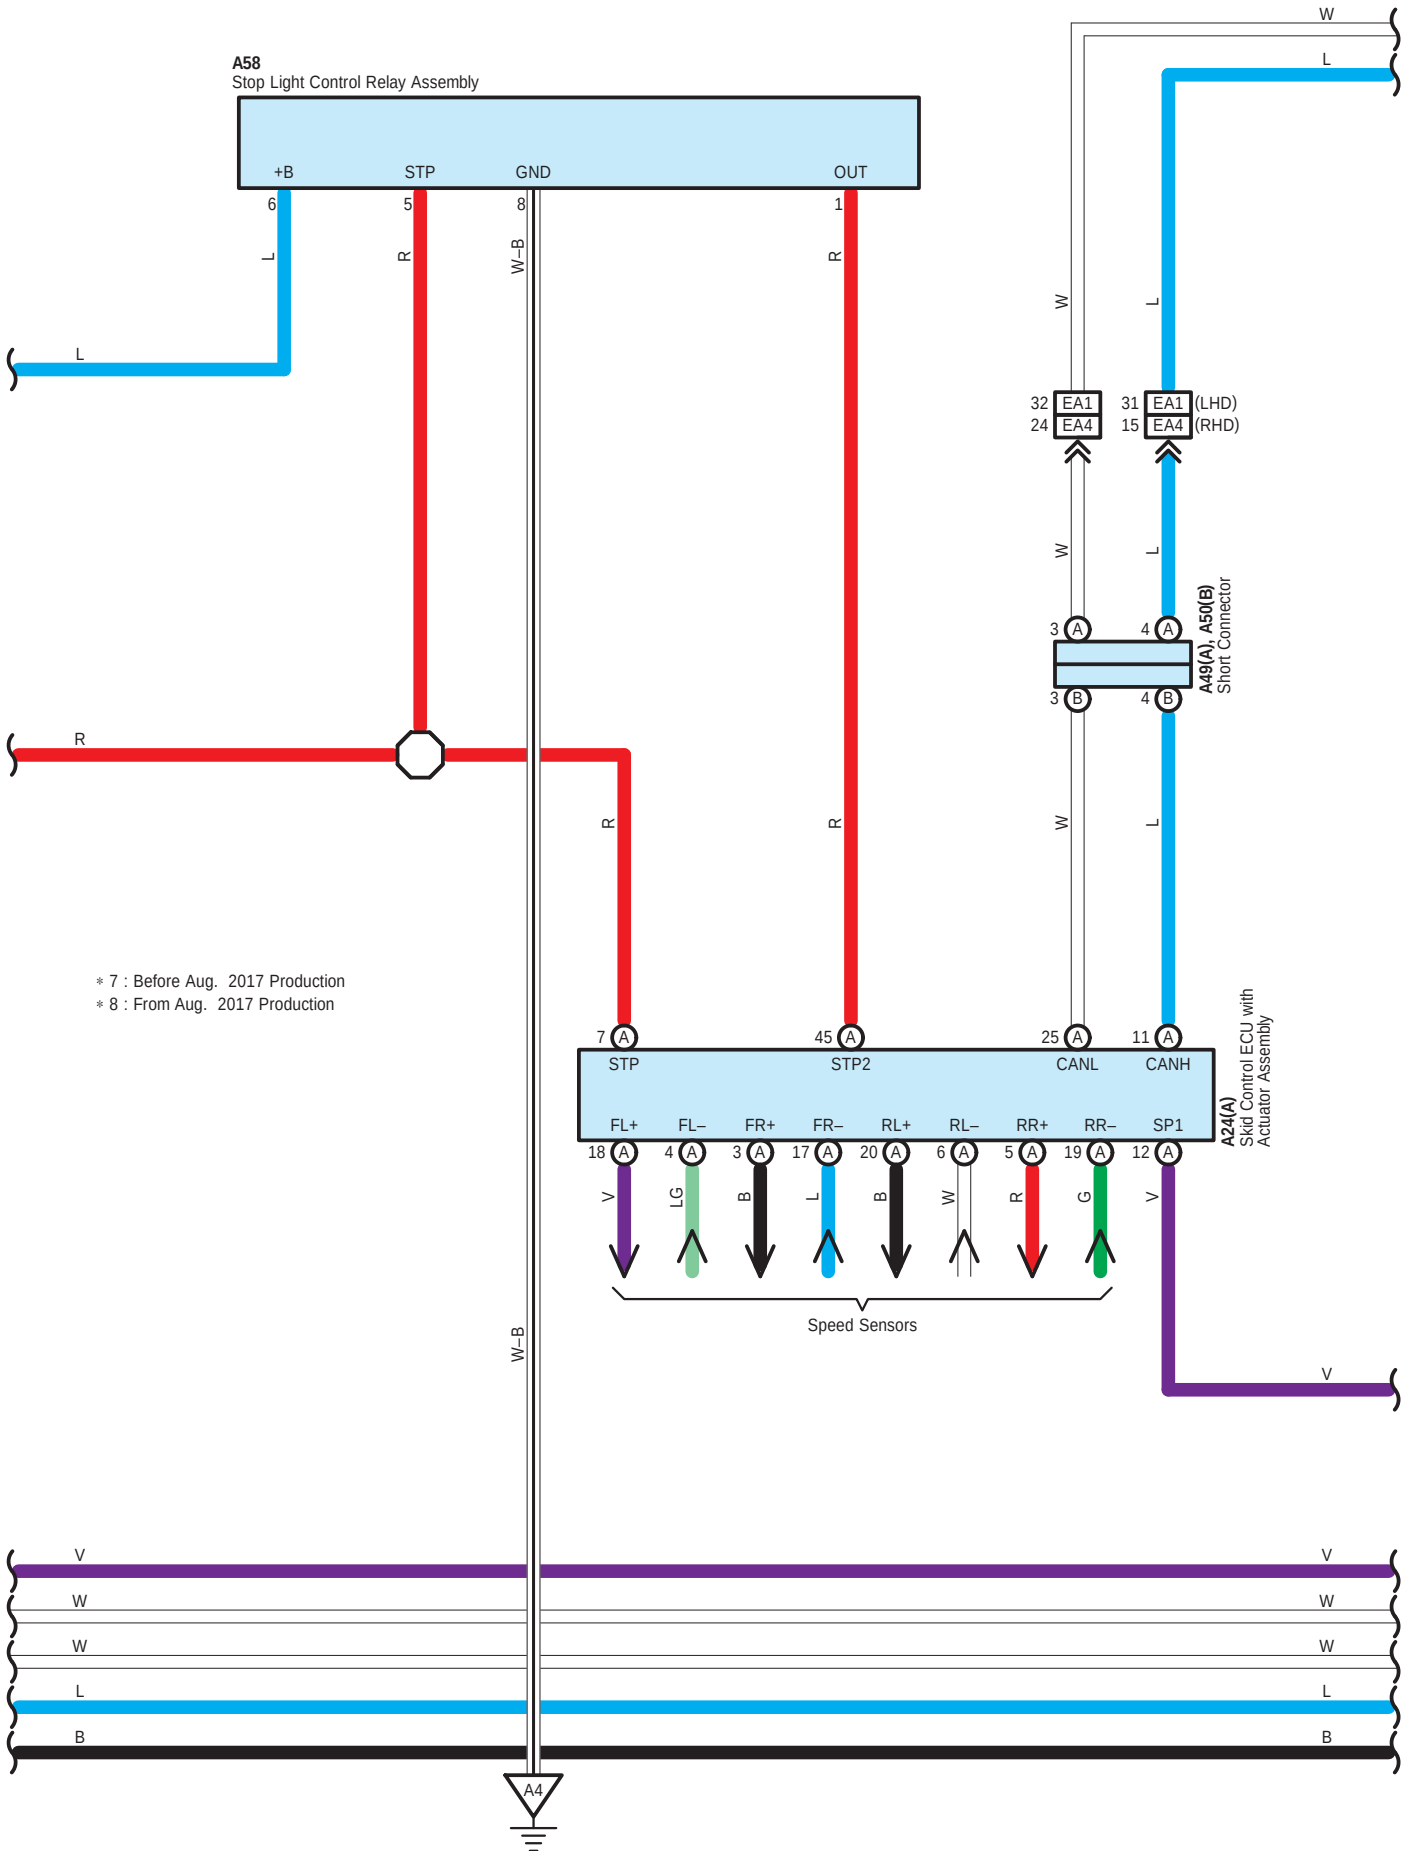


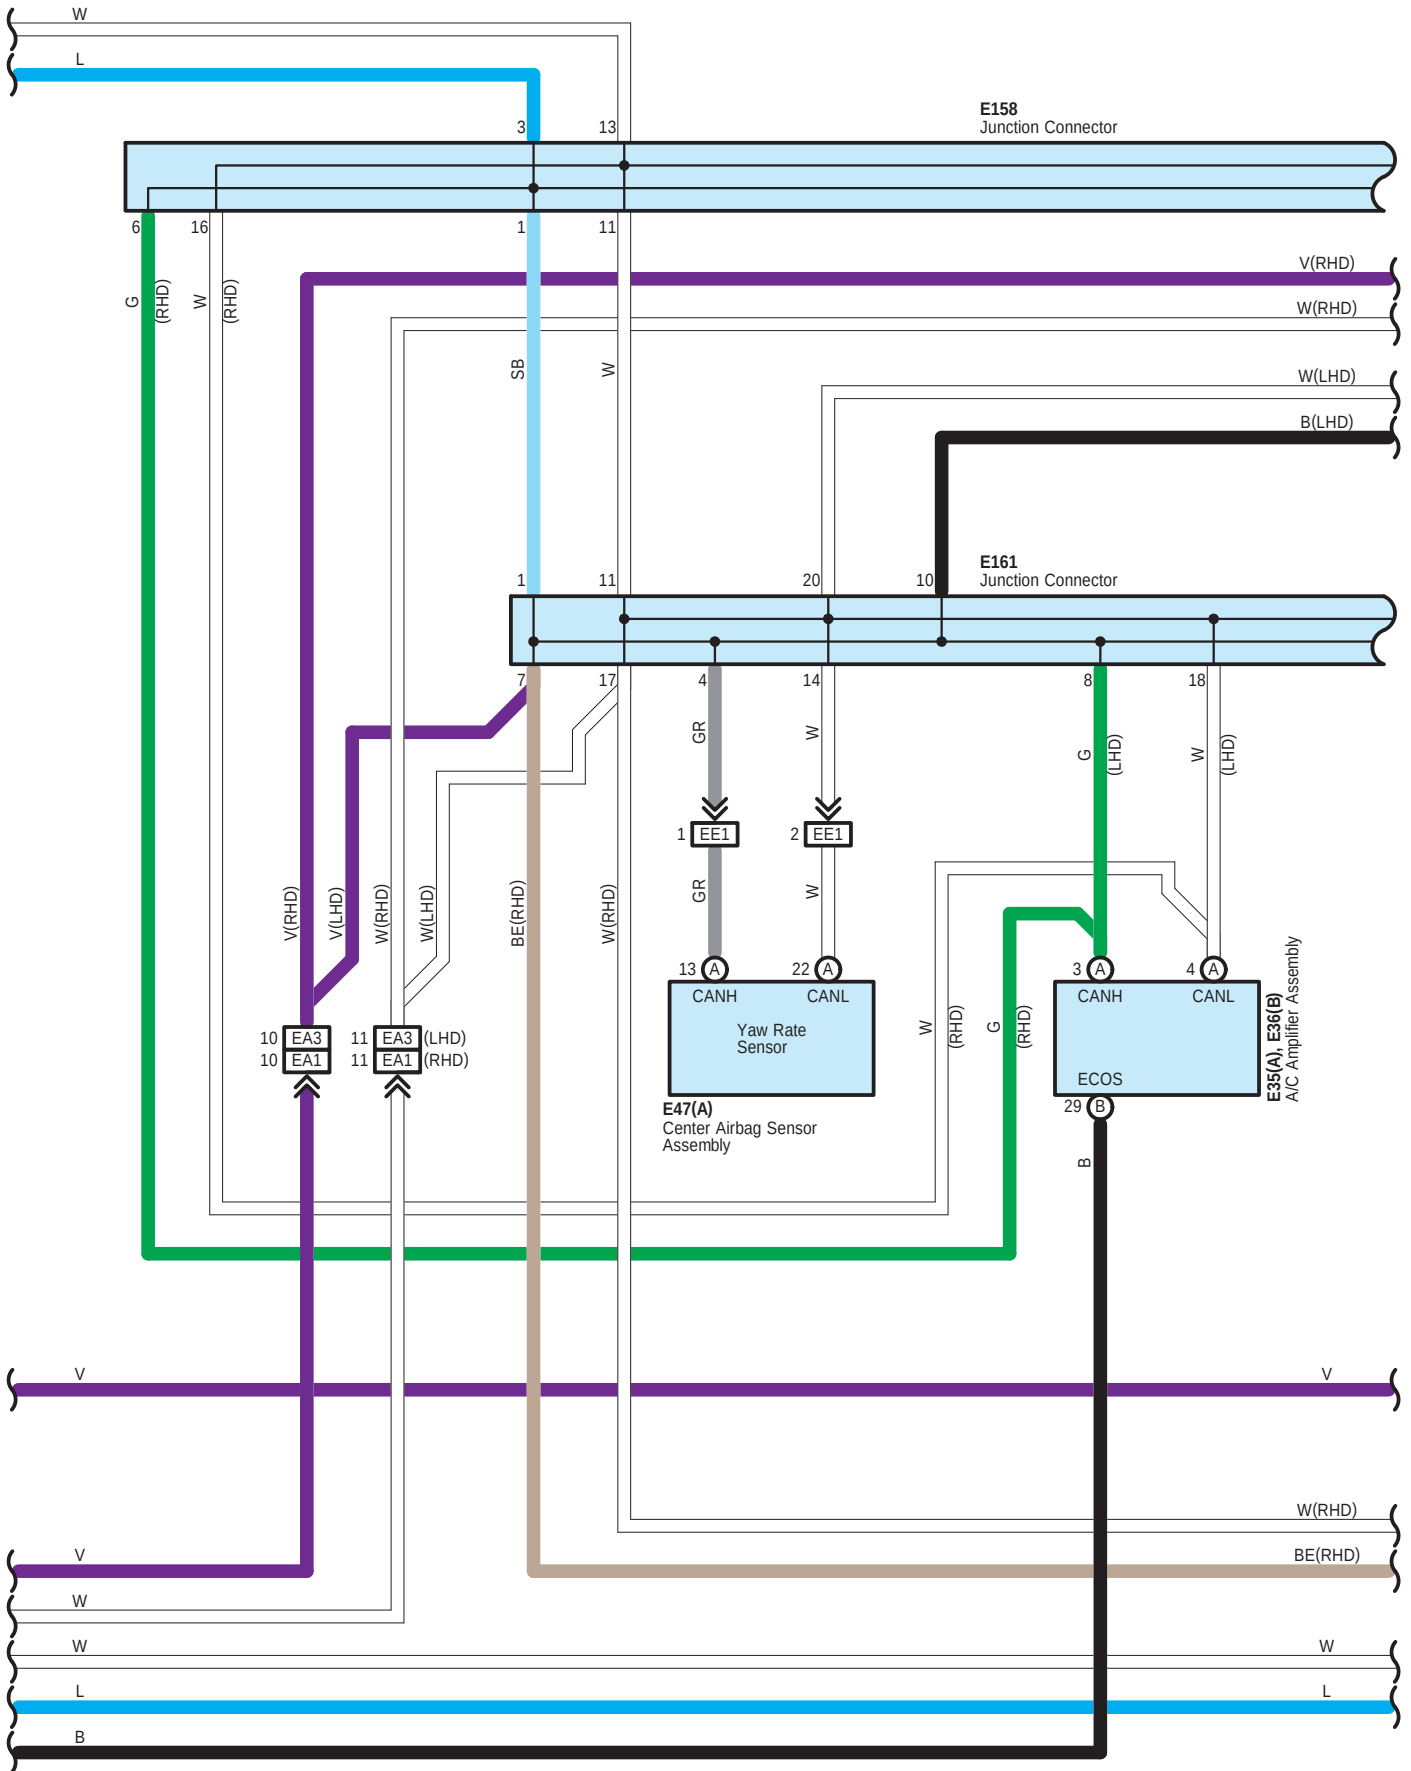

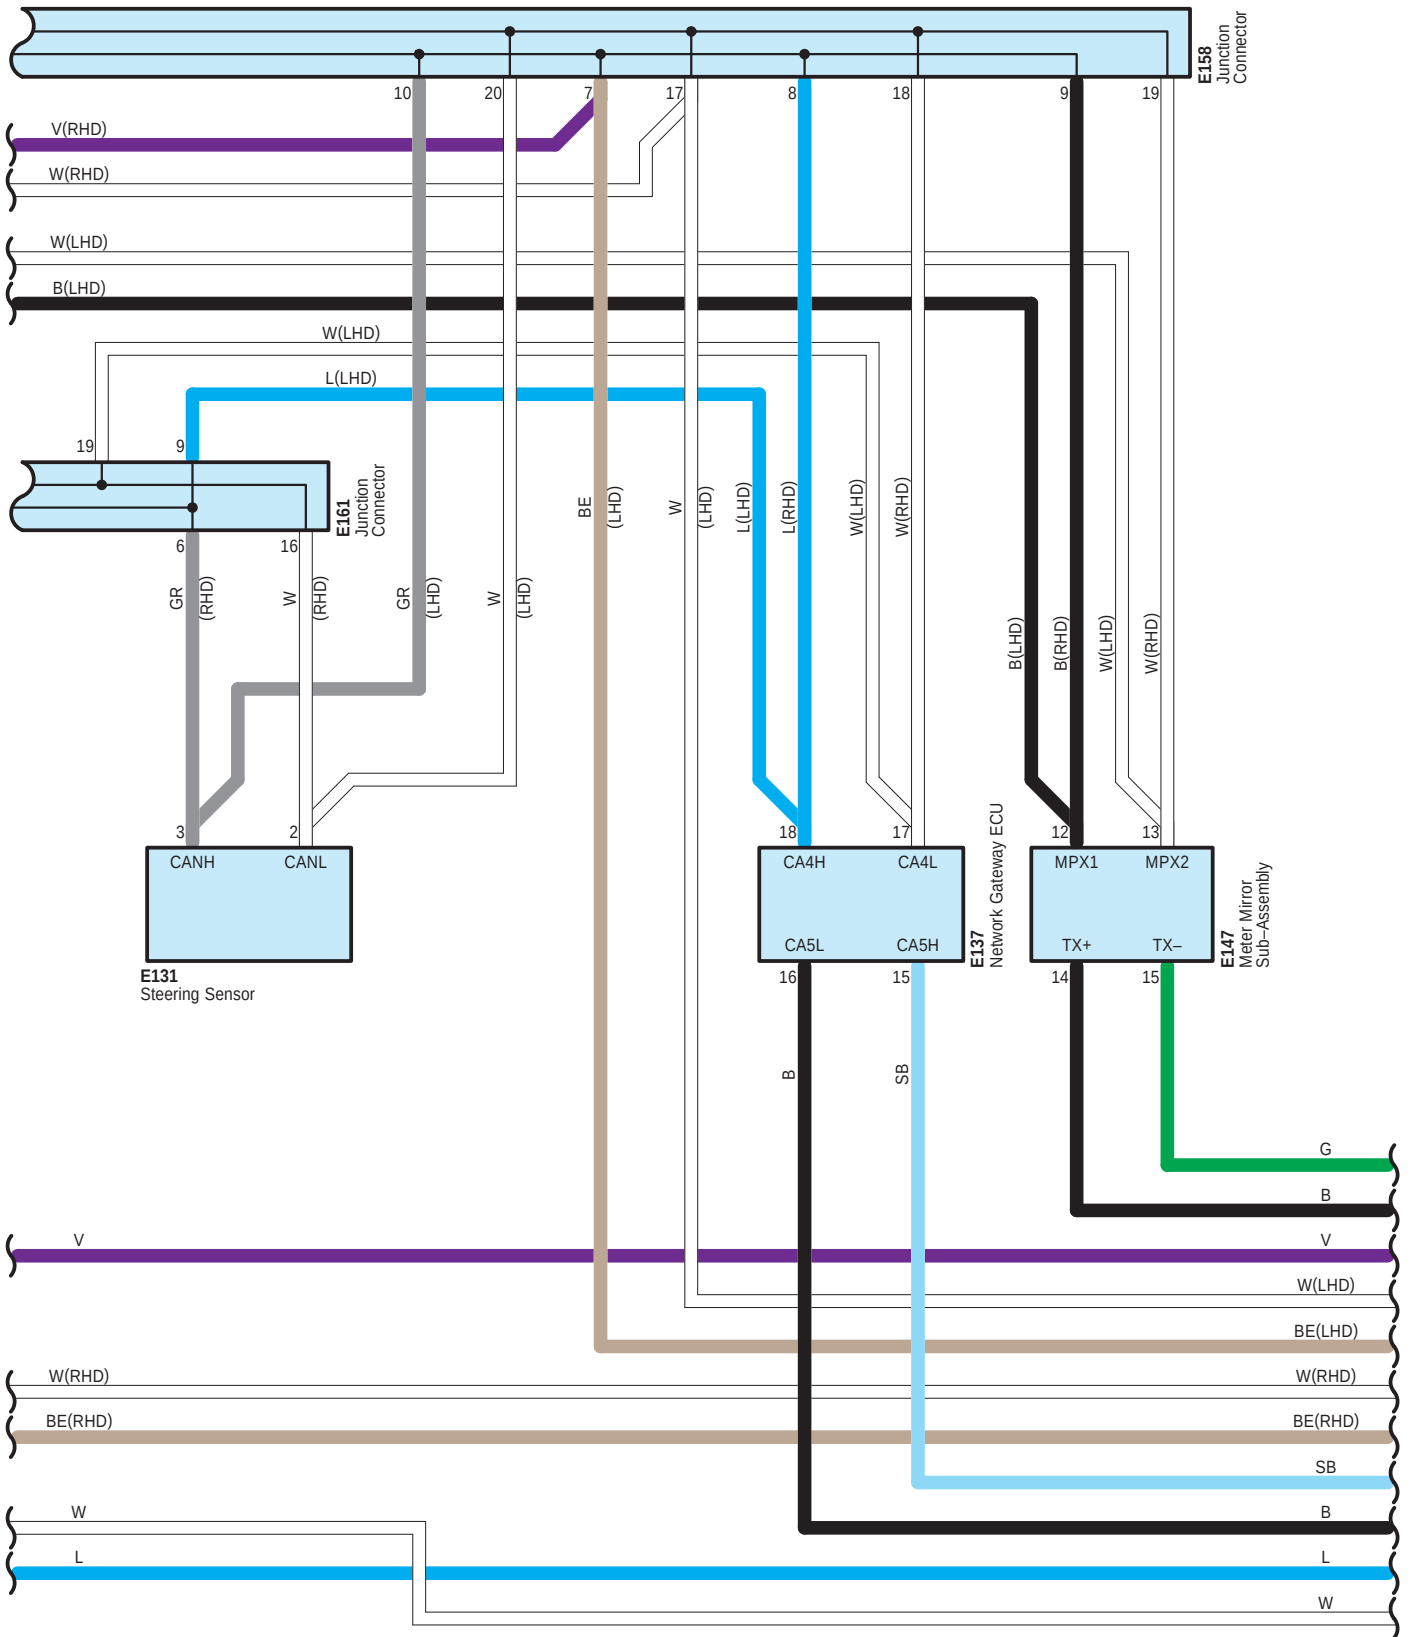


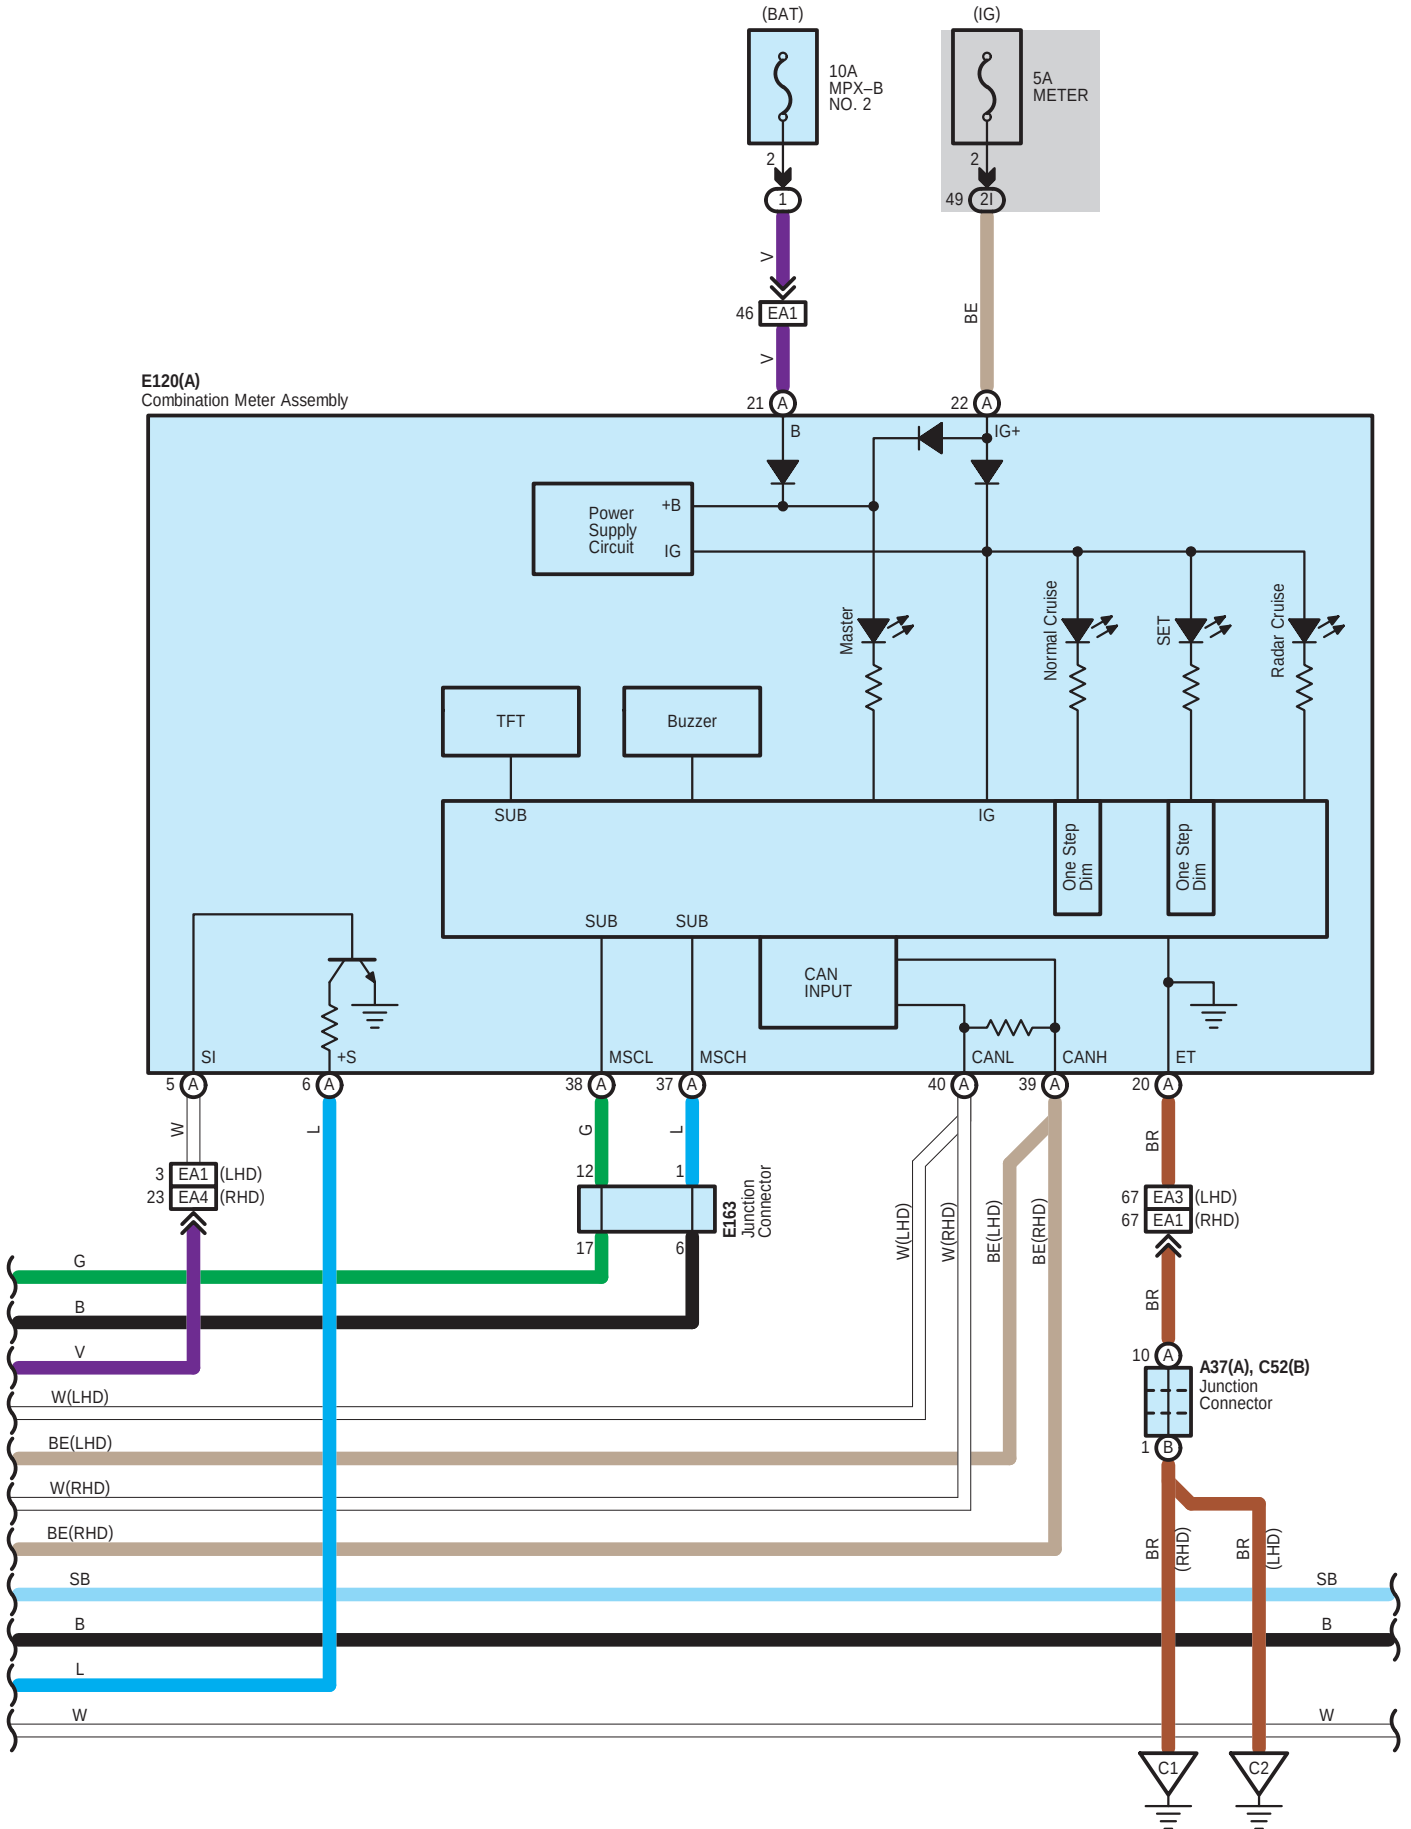

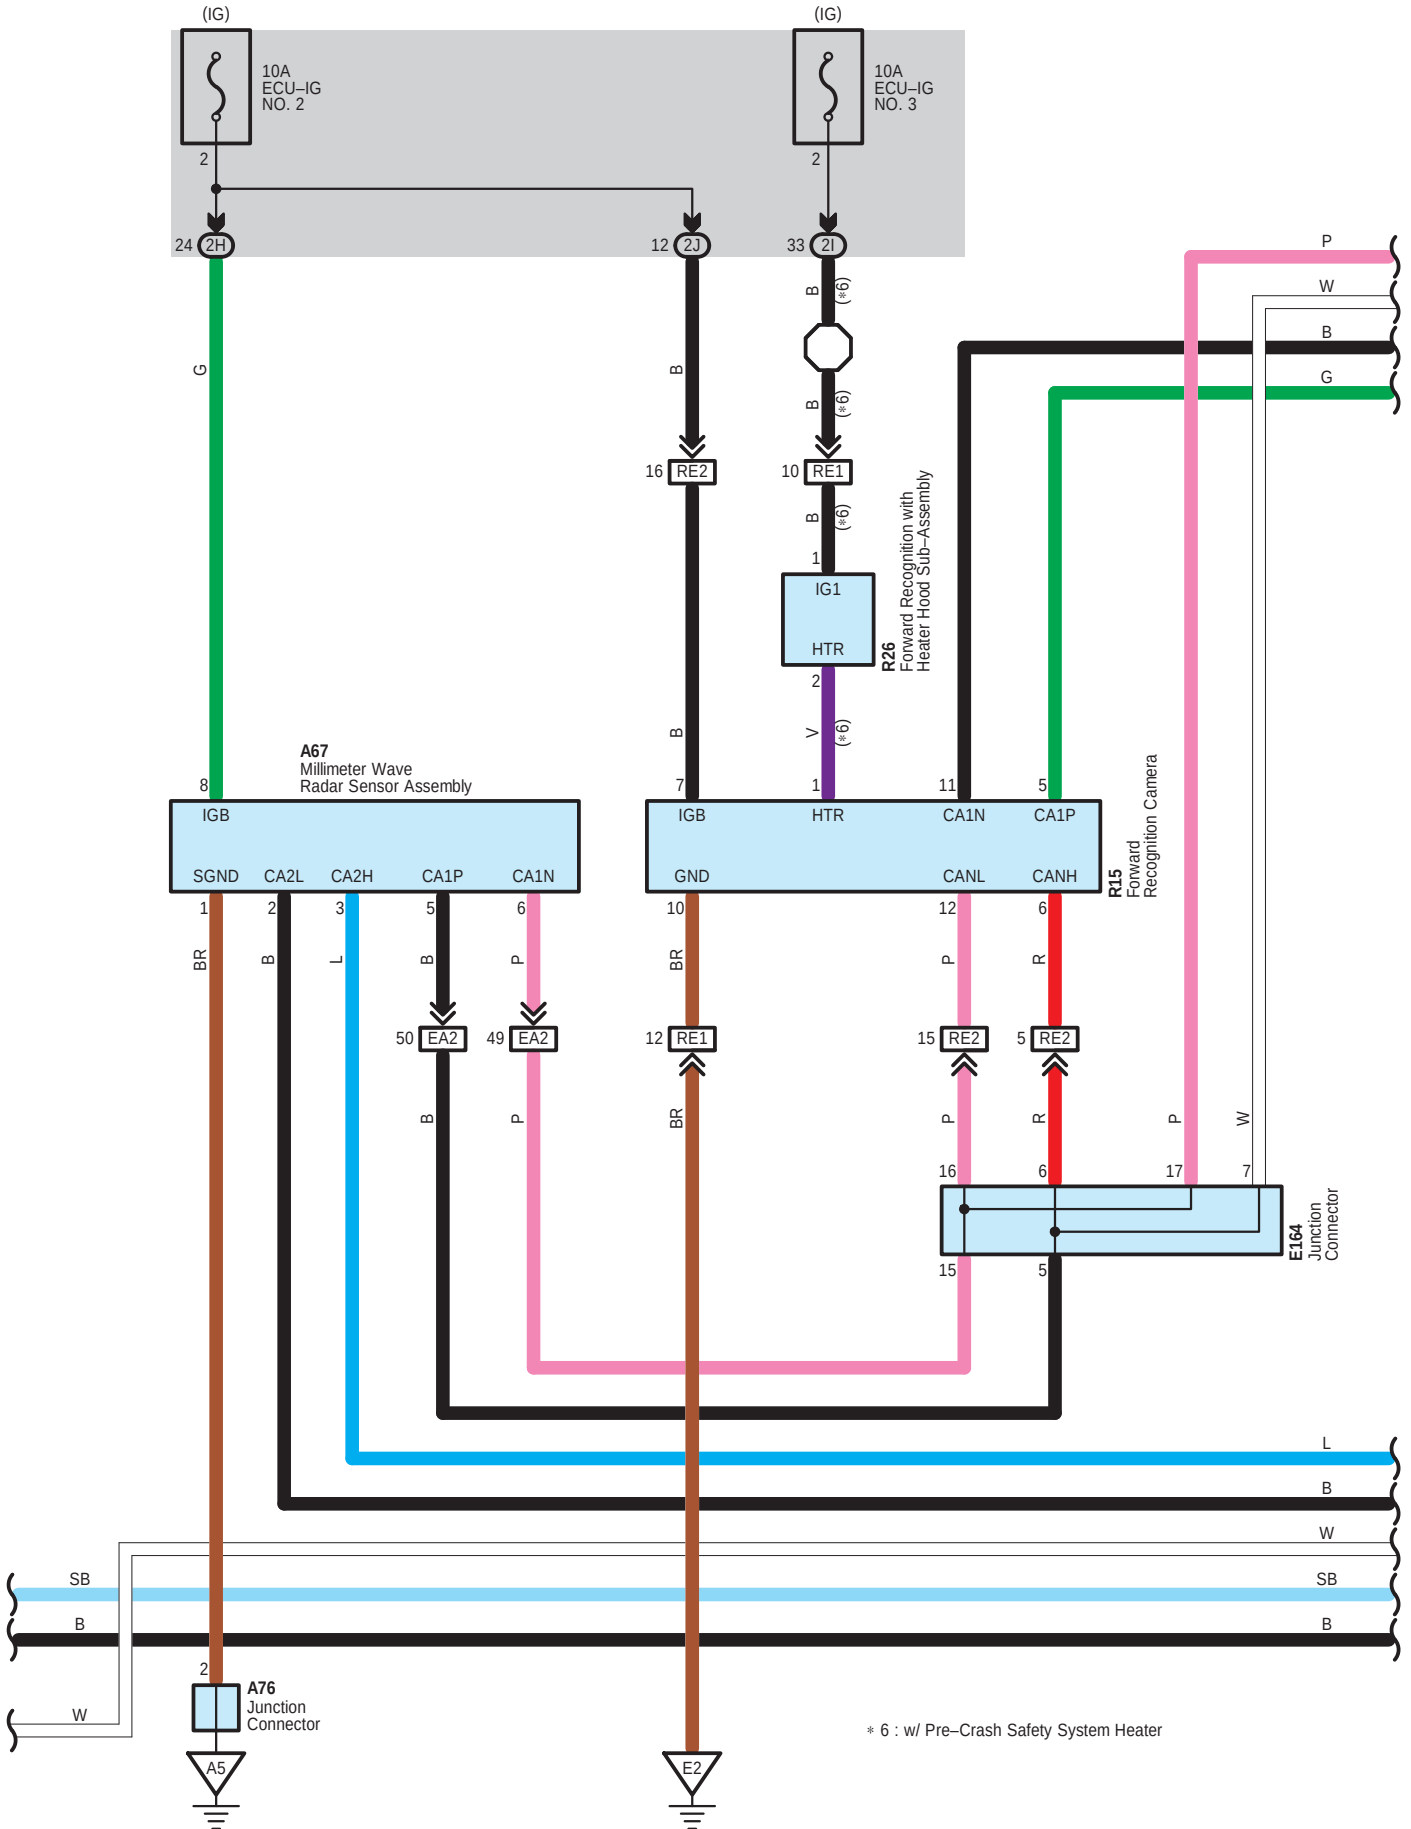


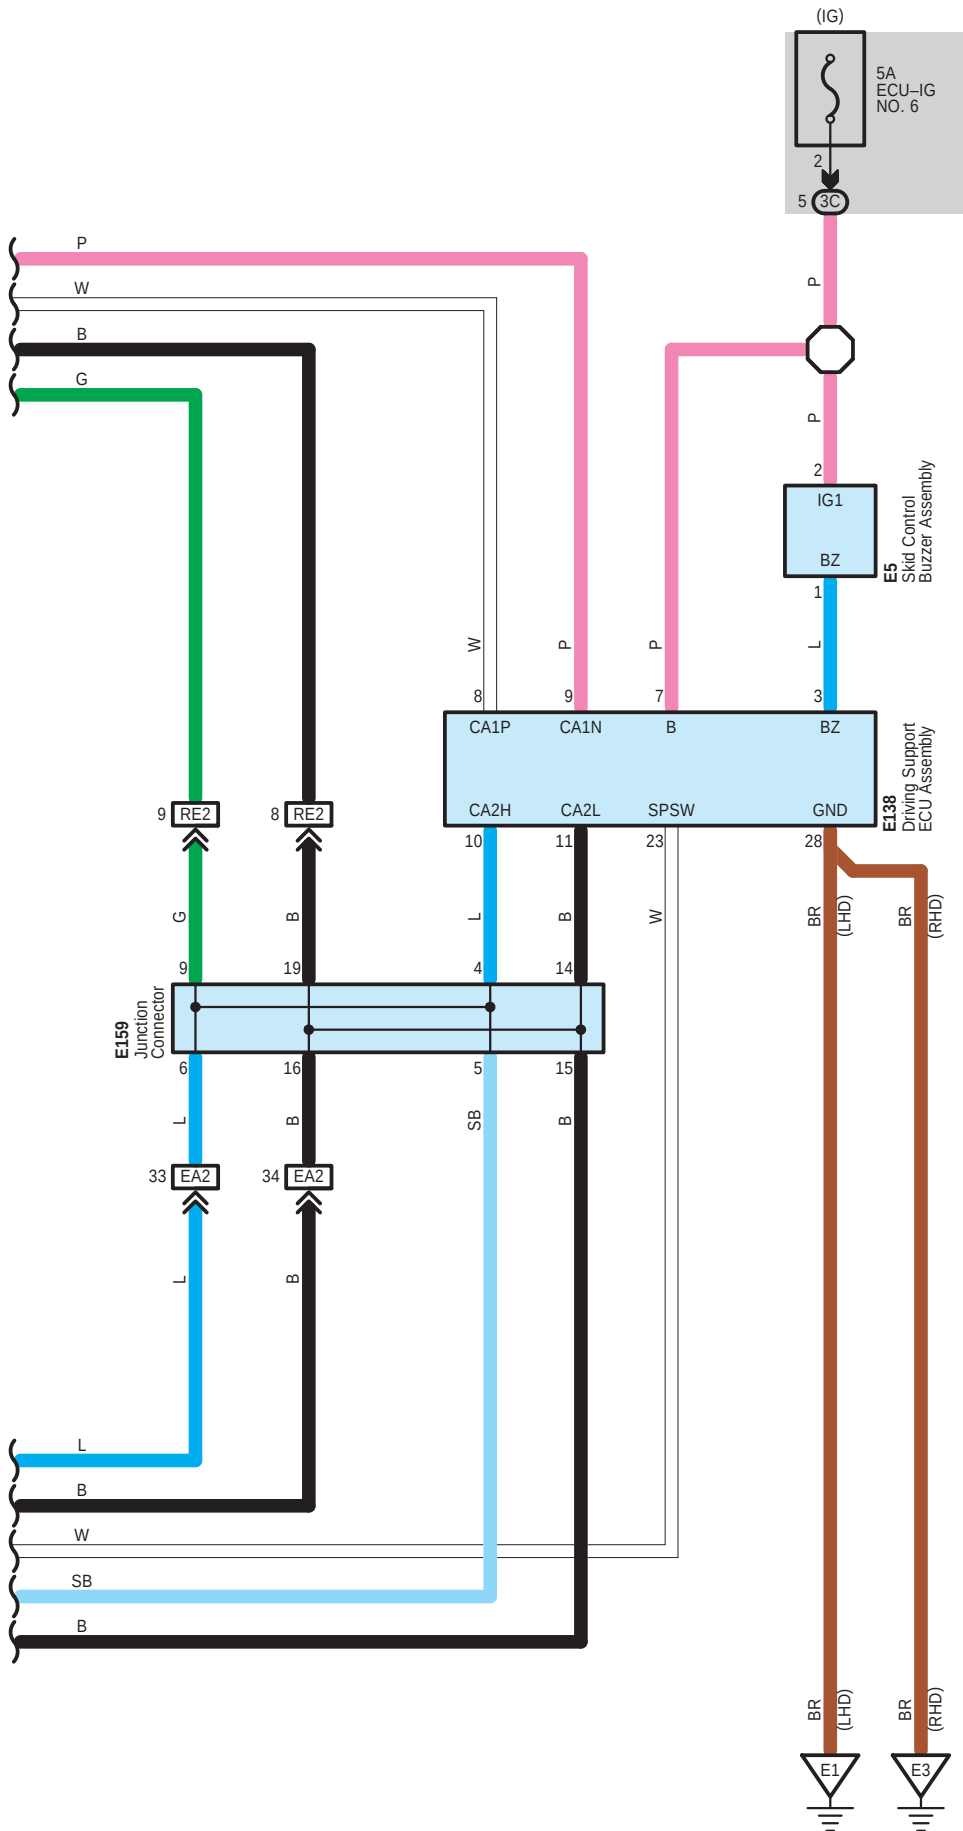


A 24
Black

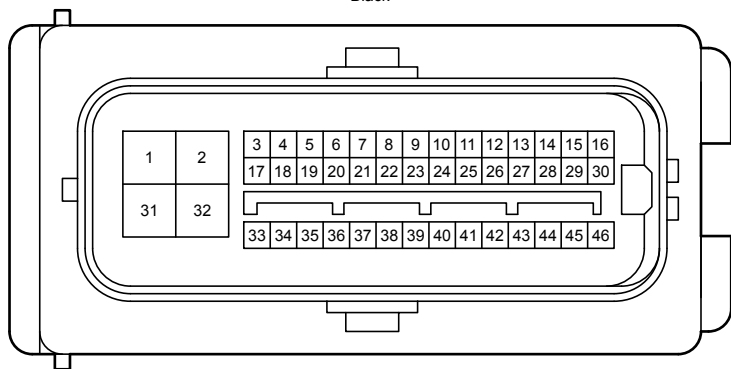

A 31
Black

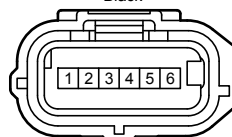

A 37
Blue

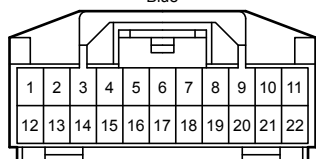


A 49
Gray




A 50
Gray




A 58
Black



A 67
Black

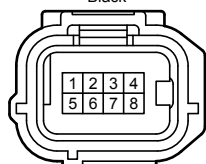


A 70
Gray

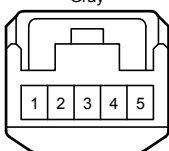


A 75
Gray




A 76
Black

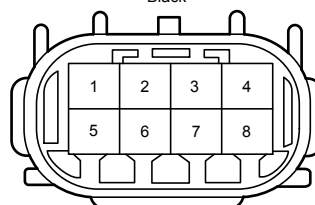


A 85
Black

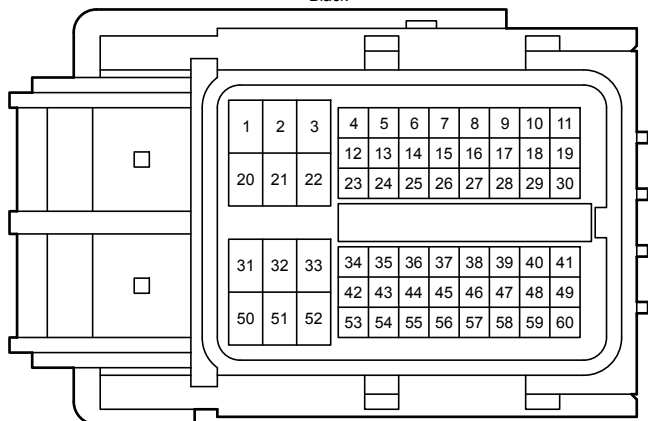


A 86
Black

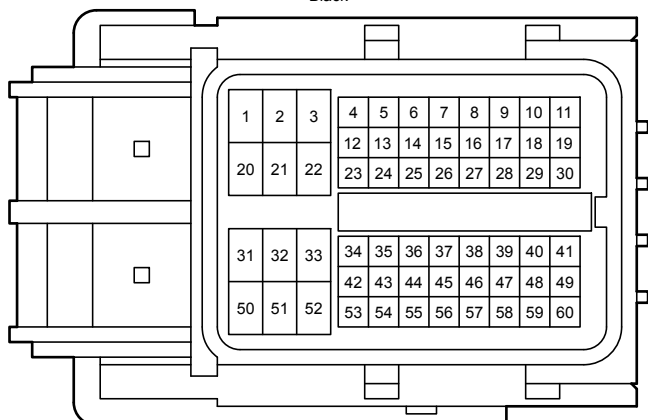


C 19
Gray

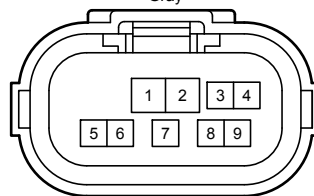


C 39
Gray

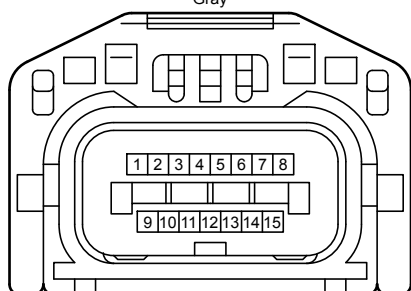

C 40
Gray

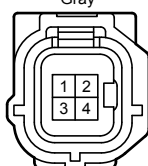

C 52
Blue

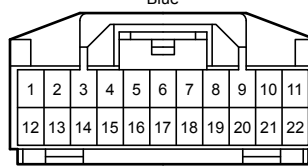


C 93
Black




C 94
Black




C 95
Black

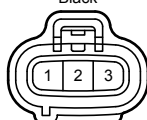


C 96
Black

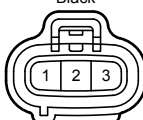


C108
Gray

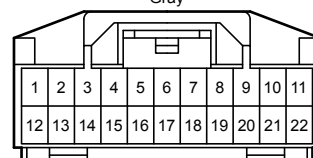


C109
Black

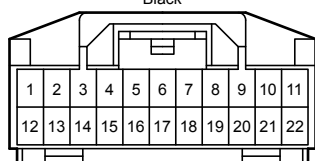


C110
Black

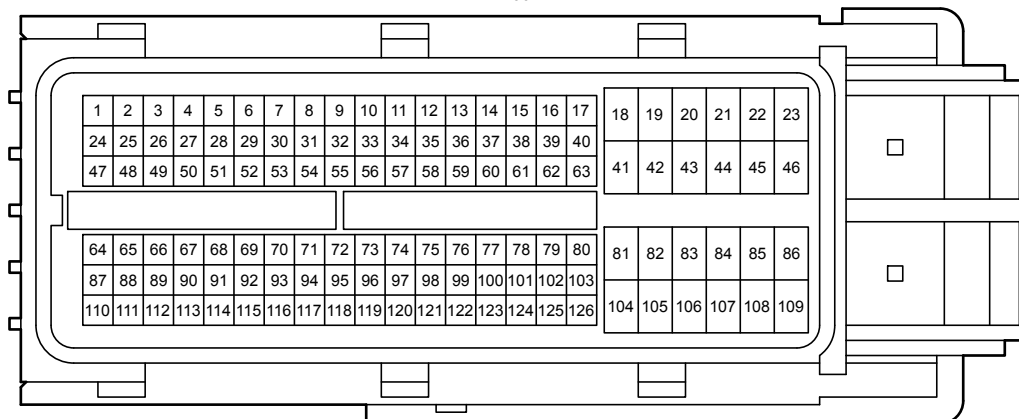


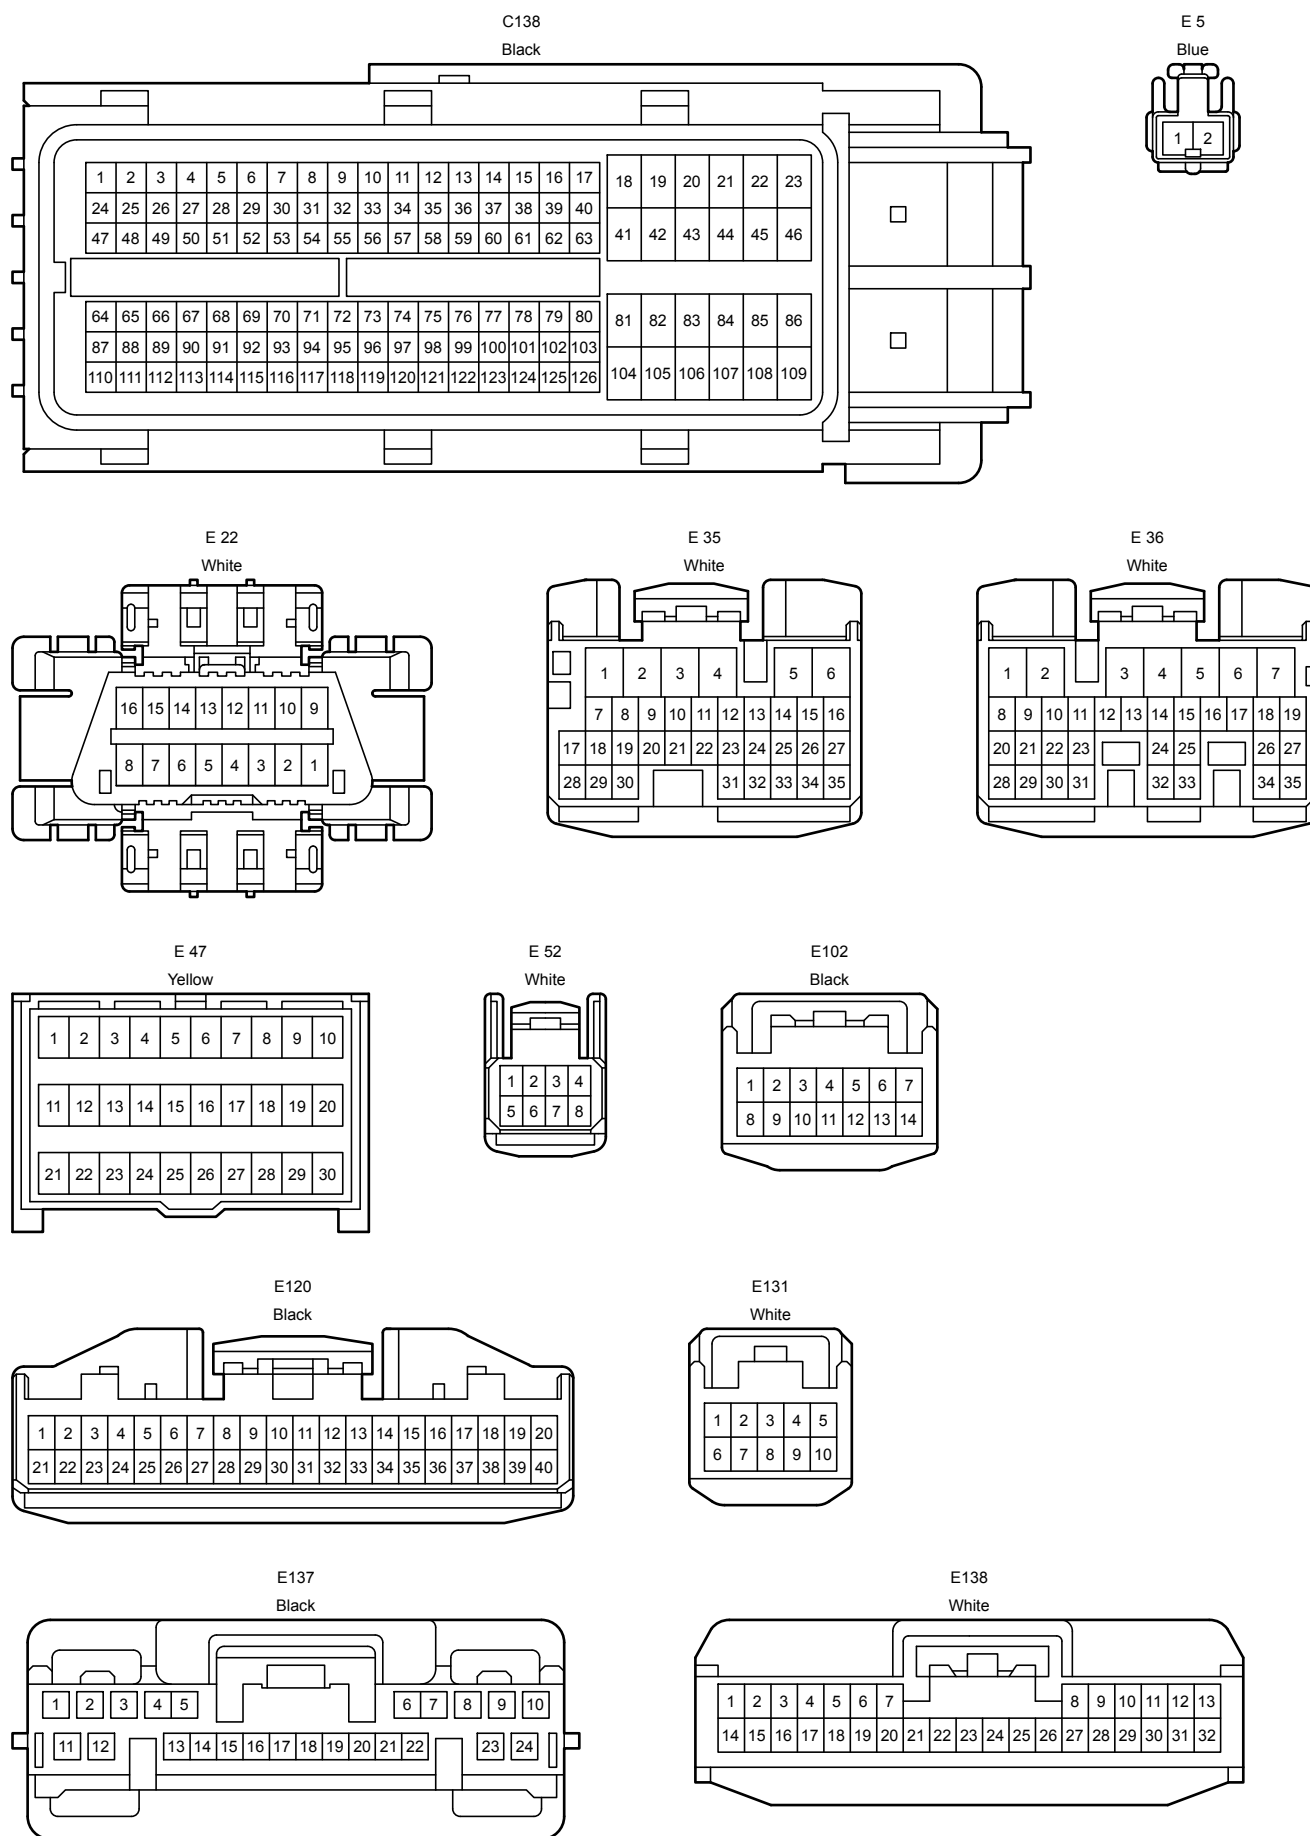


E147
White

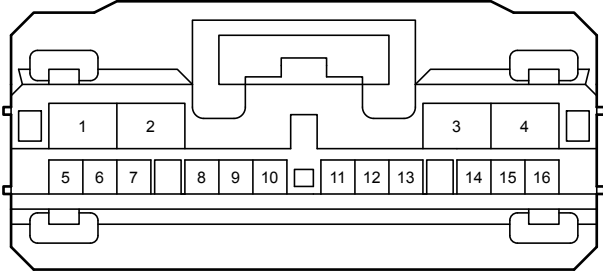


E158
White

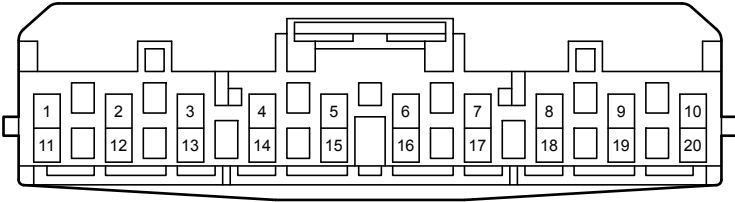


E159
White

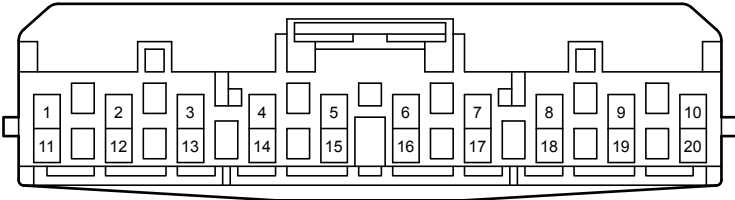


E161
White

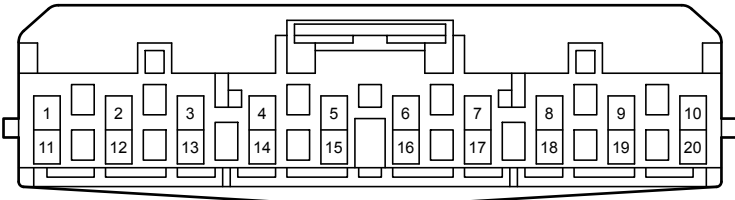


E163
Black

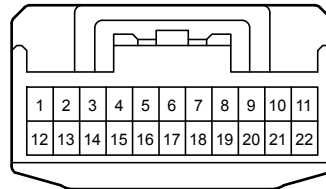

E164
White

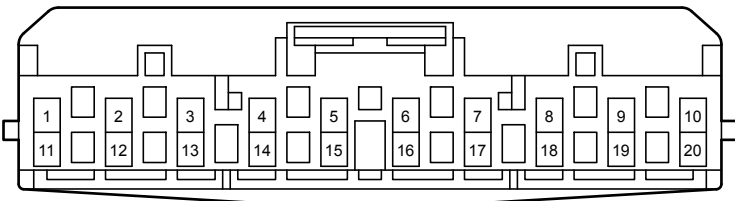


R 15
Gray

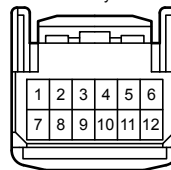


R 26
Black




V 12
Black

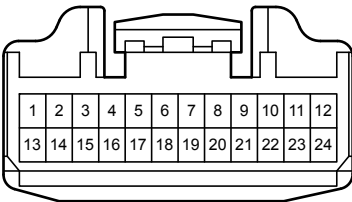


z 64
Black



z 65
Black

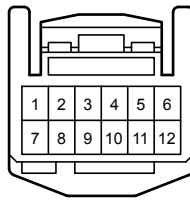


1N
White

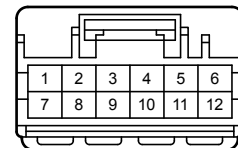


1Q

White

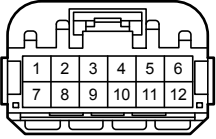


2H

White

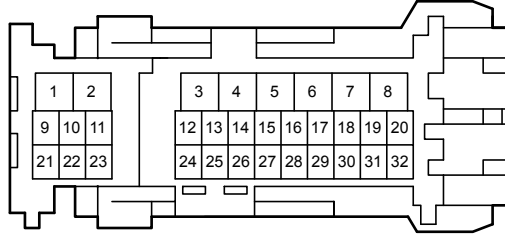


2I

White

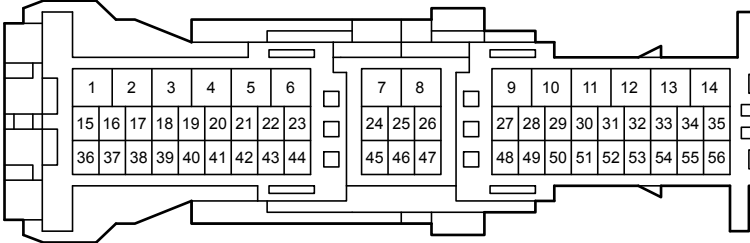


2J

White

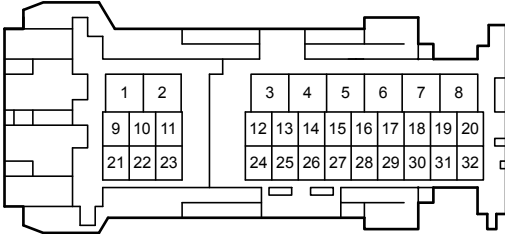



3C

White


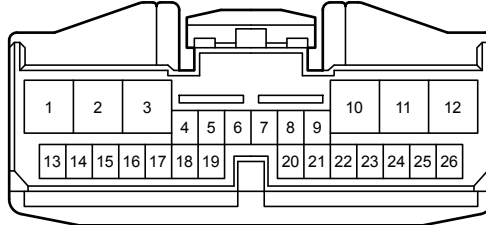


CA4

White

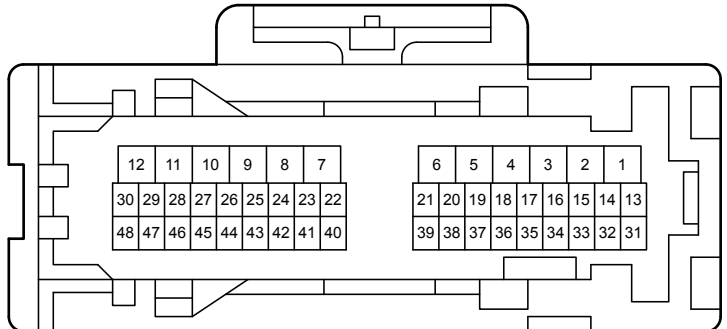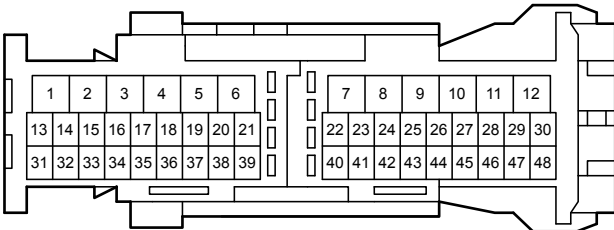



EA1
White

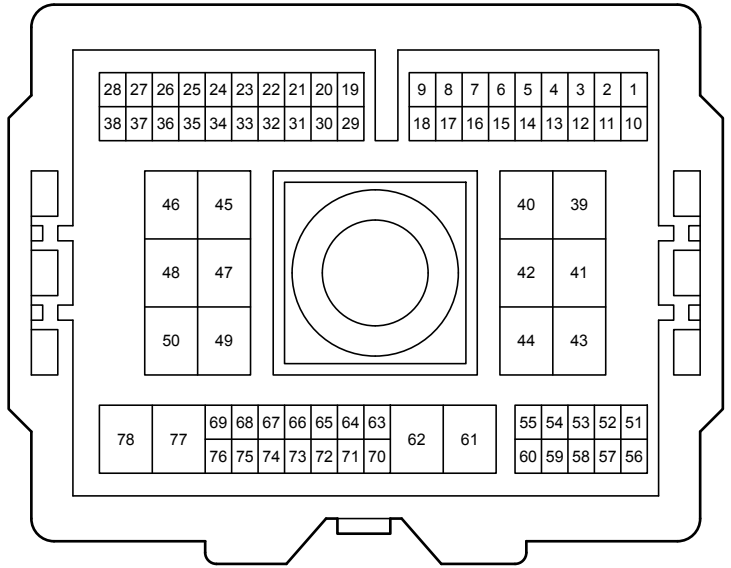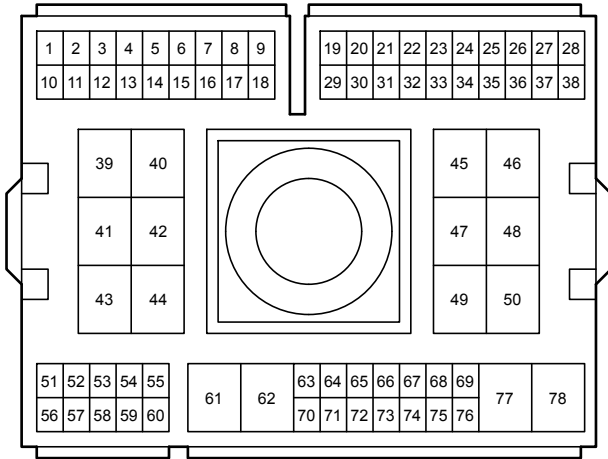


EA2

White


Gray

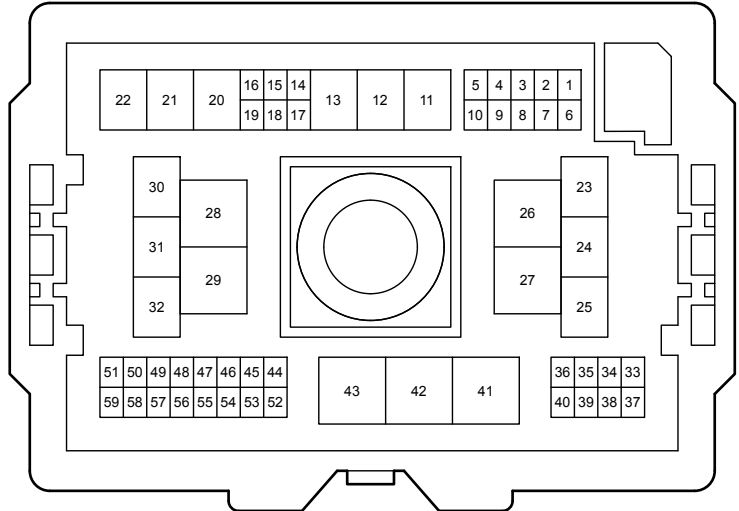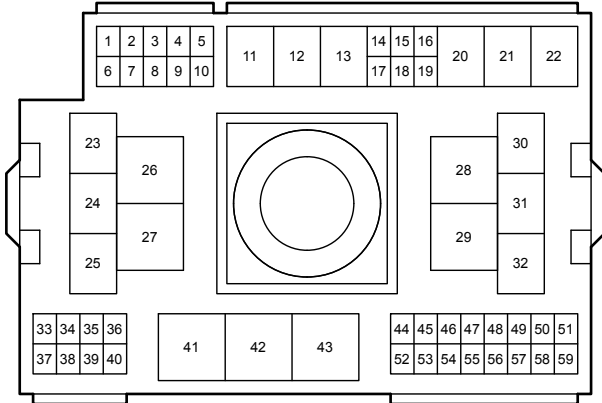


EA3
White

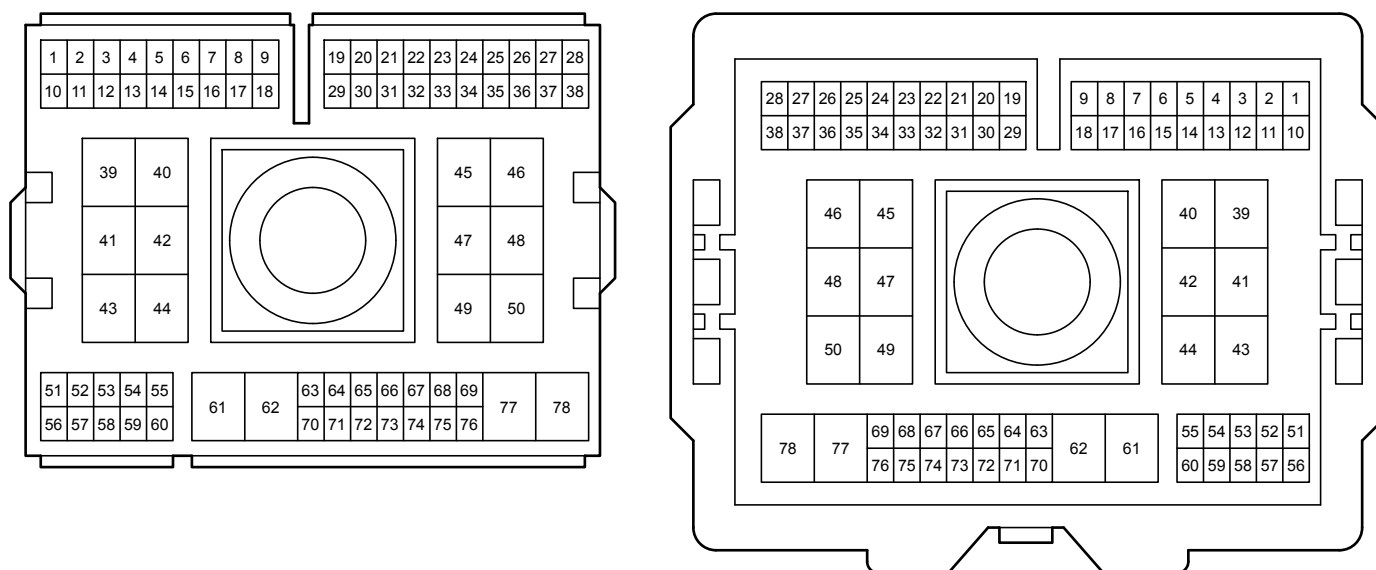


EA4
White

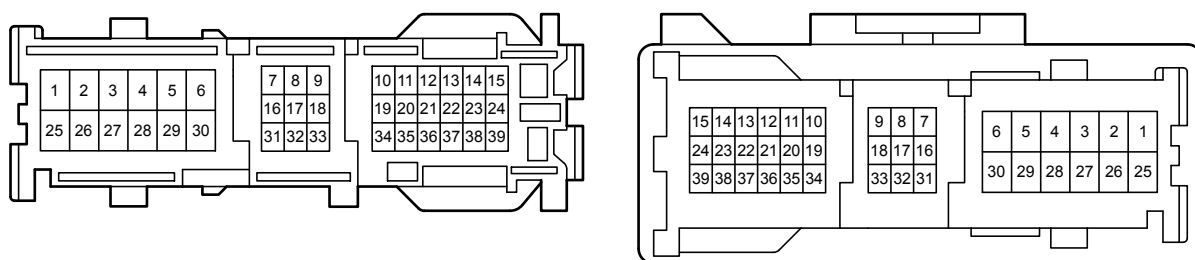

EE1
White

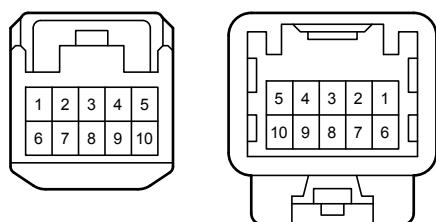

EV1
Black

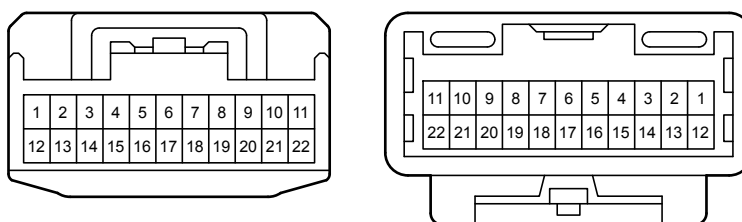

EV2
White

