

INSTALLATION

1. CLEAN BODY MOULDING SURFACE

- (a) Using a heat light, the body moulding surface to 40 – 60 °C (104 – 140 °F).
- (b) Remove the adhesive tape from the body.
- (c) Wiper off stains with cleaner.

2. CLEAN OUTSIDE MOULDING


If reusing the moulding:

- (a) Using a heat light, heat the moulding to 20 – 30 °C (68 – 86 °F).

NOTICE:

Do not heat moulding excessively.

- (b) Remove the adhesive tape from the moulding.
- (c) Wipe off stains with cleaner.
- (d) Apply a new adhesive tape to the moulding as shown in the illustration.

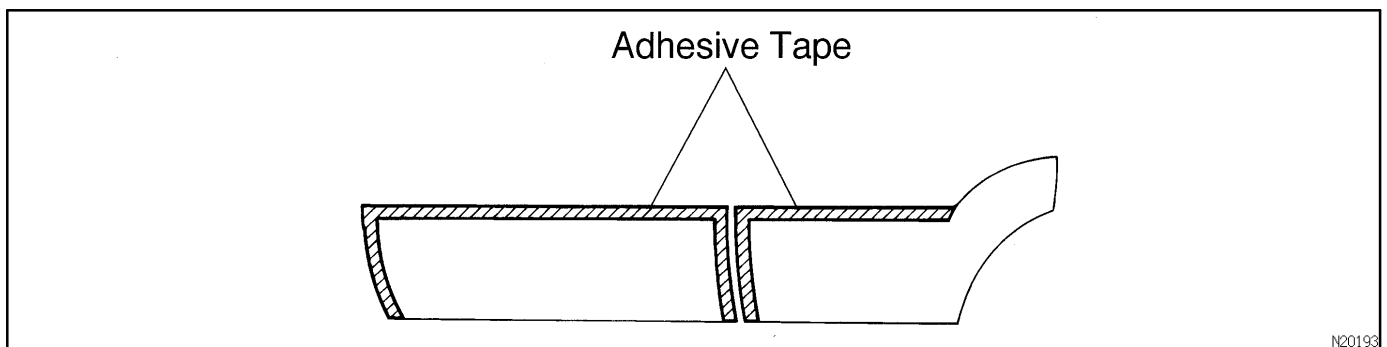

3. INSTALL DOOR OUTSIDE MOULDING

- (a) Using a heat light, heat the body and moulding.
Body: 40 – 60 °C (104 – 140 °F)
Moulding: 20 – 30 °C (68 – 86 °F)


NOTICE:

Do not heat moulding excessively.

- (b) Left the moulding release sheet from face of moulding.

NOTICE:

When the moulding release sheet it removed, make sure that no dirt or dust can get onto the uncoated area.

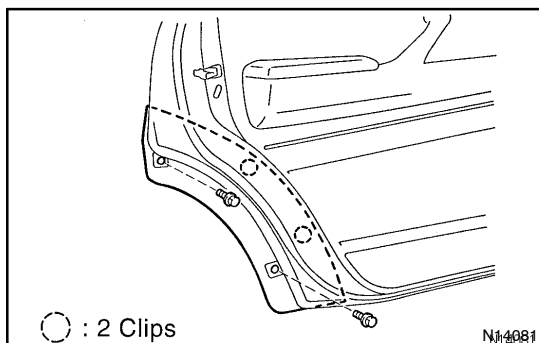

- (c) Align the bosses with their corresponding holes in the body, and press firmly on the moulding.

NOTICE:

Do not apply excessive force onto the moulding, but steady pressure with your thumbs.

- (d) Rear door Outside Moulding:
Tighten the 2 screws.