


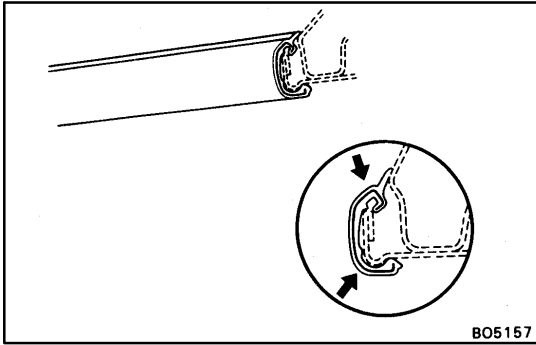

INSTALLATION

INSTALL ROOF DRIP SIDE FINISH MOULDING

- (a) Attach the upper edge of the moulding to the body flange.
- (b) Tap on the moulding by hand.