


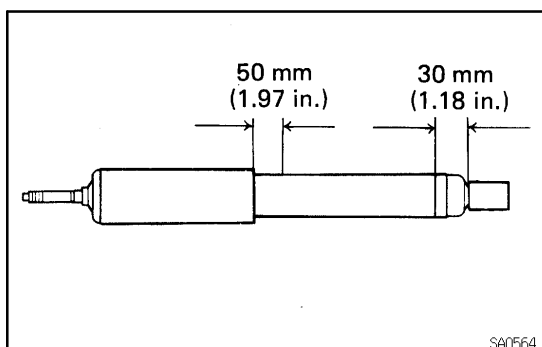

## DISPOSAL

### DISCARD SHOCK ABSORBER

Before discarding the shock absorber, drill a hole 2 – 3 mm (0.079 – 0.118 in.) in diameter at the location shown in the illustration to release the gas inside.

#### NOTICE:

**When drilling, chips may fly out, work carefully. The gas is colorless, odorless and non-poisonous.**