



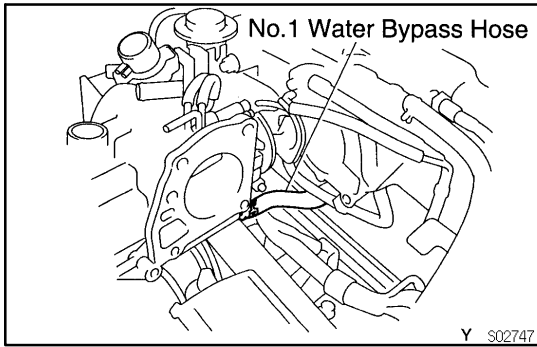


INSTALLATION

1. INSTALL THROTTLE BODY

- (a) Install the No.2 water bypass hose to the throttle body.
- (b) Install a new gasket on the air intake chamber.
- (c) Connect the No.1 water bypass hose to the throttle body.

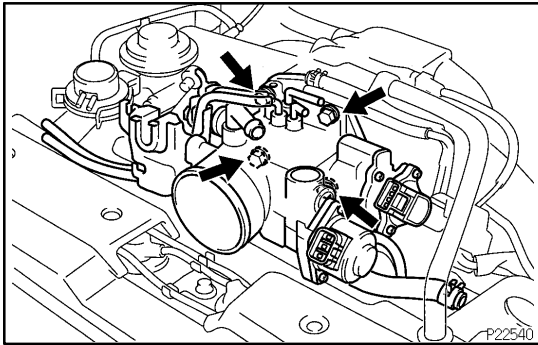

- (d) Install the throttle body with the 4 bolts.
Torque: 21 N·m (210 kgf·cm, 15 ft·lbf)

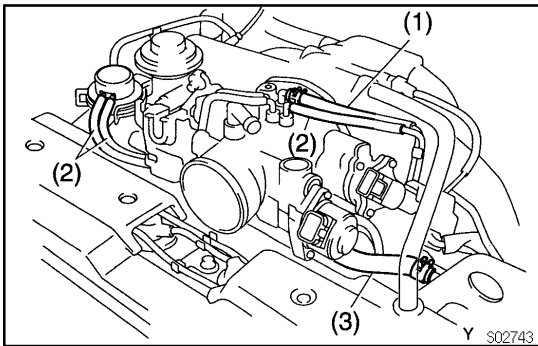

- (e) Connect these hoses:
 - EVAP hose
 - 3 vacuum hoses
 - No.2 water bypass hose

2. CONNECT CONNECTOR

Connect these hoses:

- throttle position sensor connector
- IAC valve connector

3. CONNECT CABLES

Connect these cables to the throttle body:

- Cruise control actuator cable
- Accelerator cable
- Throttle cable

4. INSTALL AIR CLEANER HOSE

5. CONNECT NO.2 PCV HOSE TO THROTTLE BODY

6. FILL WITH ENGINE COOLANT