
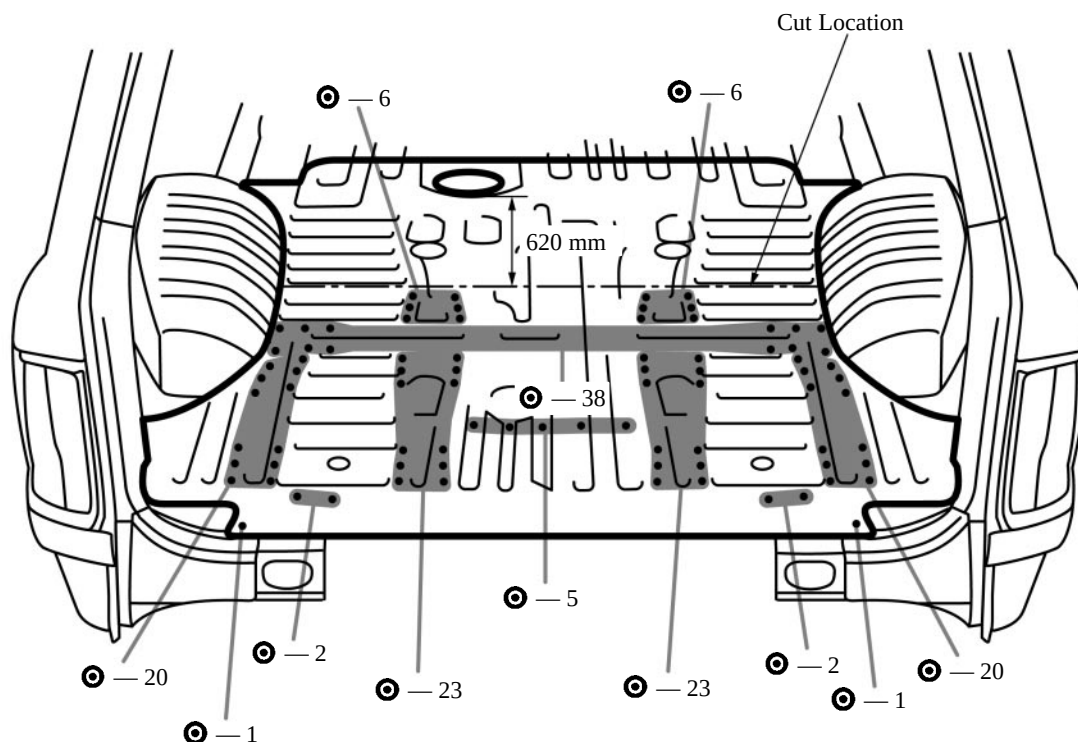






REAR FLOOR PAN (CUT)


REMOVAL (With the body lower back panel, lower back upper gusset removed.)

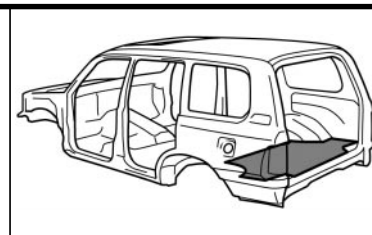


mm	in.
620	24.41

1. Cut the parts at the location as shown above.

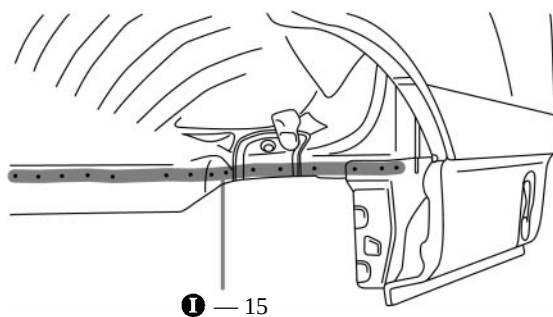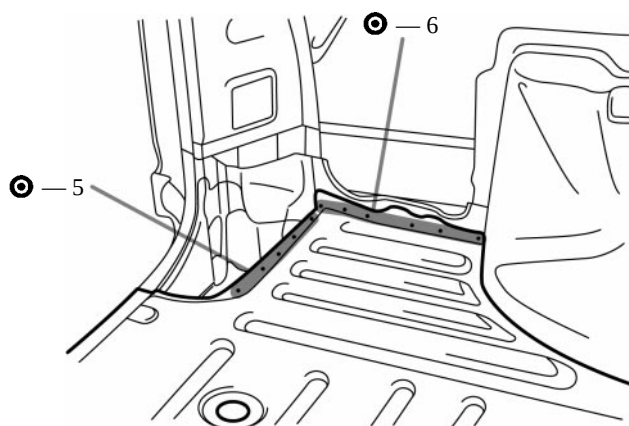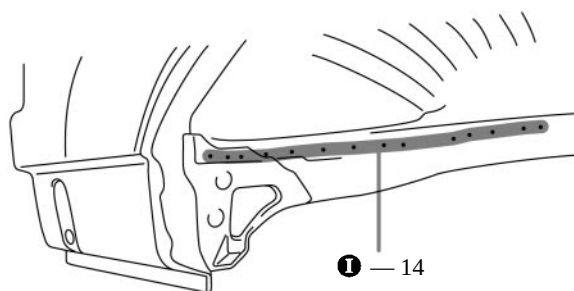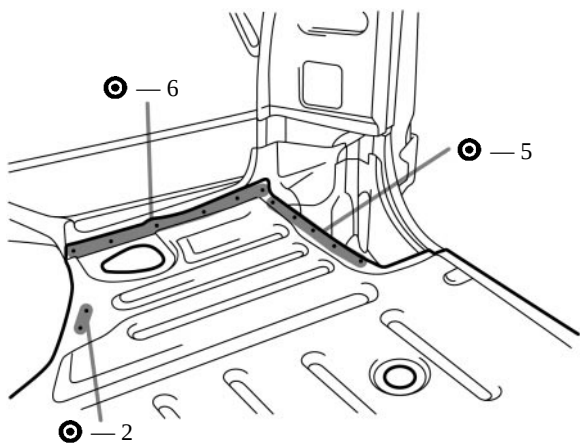

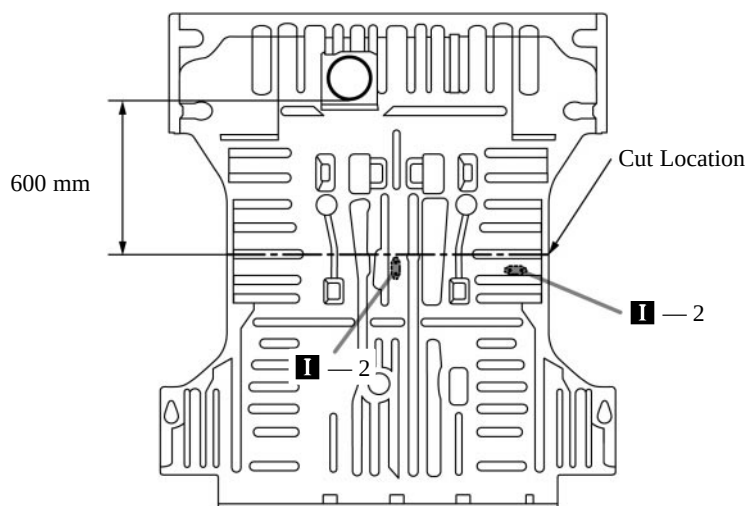INSTALLATION

mm	in.
600	23.62

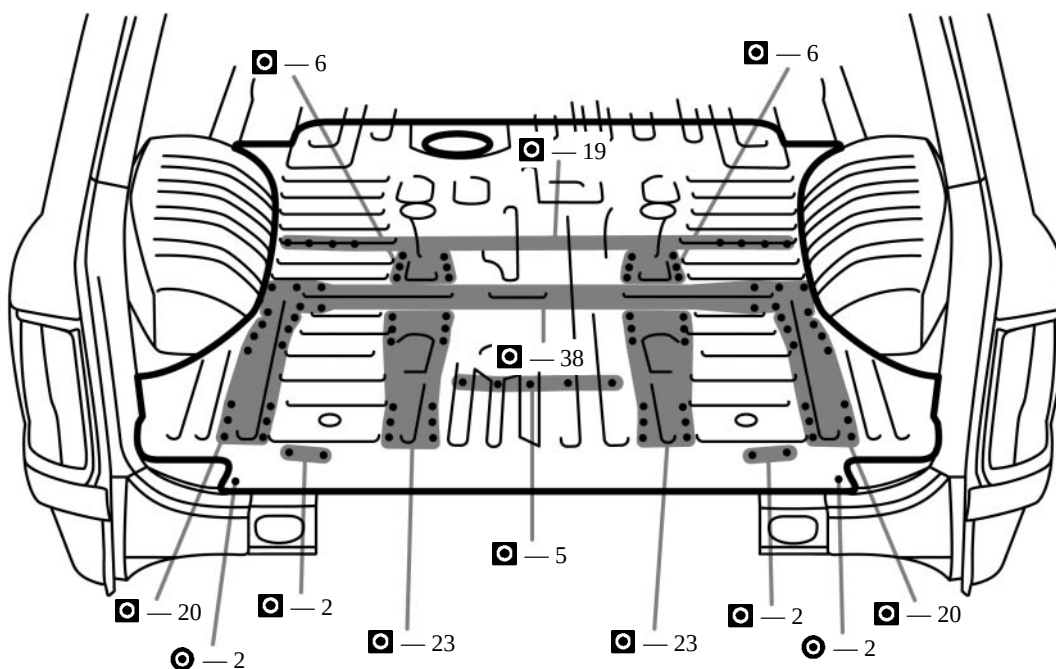

1. Cut the new parts at the location as shown above.
2. Plug weld the overlapping portion of the new parts.
3. Coat the overlapping opening portion from the both sides with body sealer.

HINT: Be sure the portion to be welded are align and not loose.

