




Combination Meter

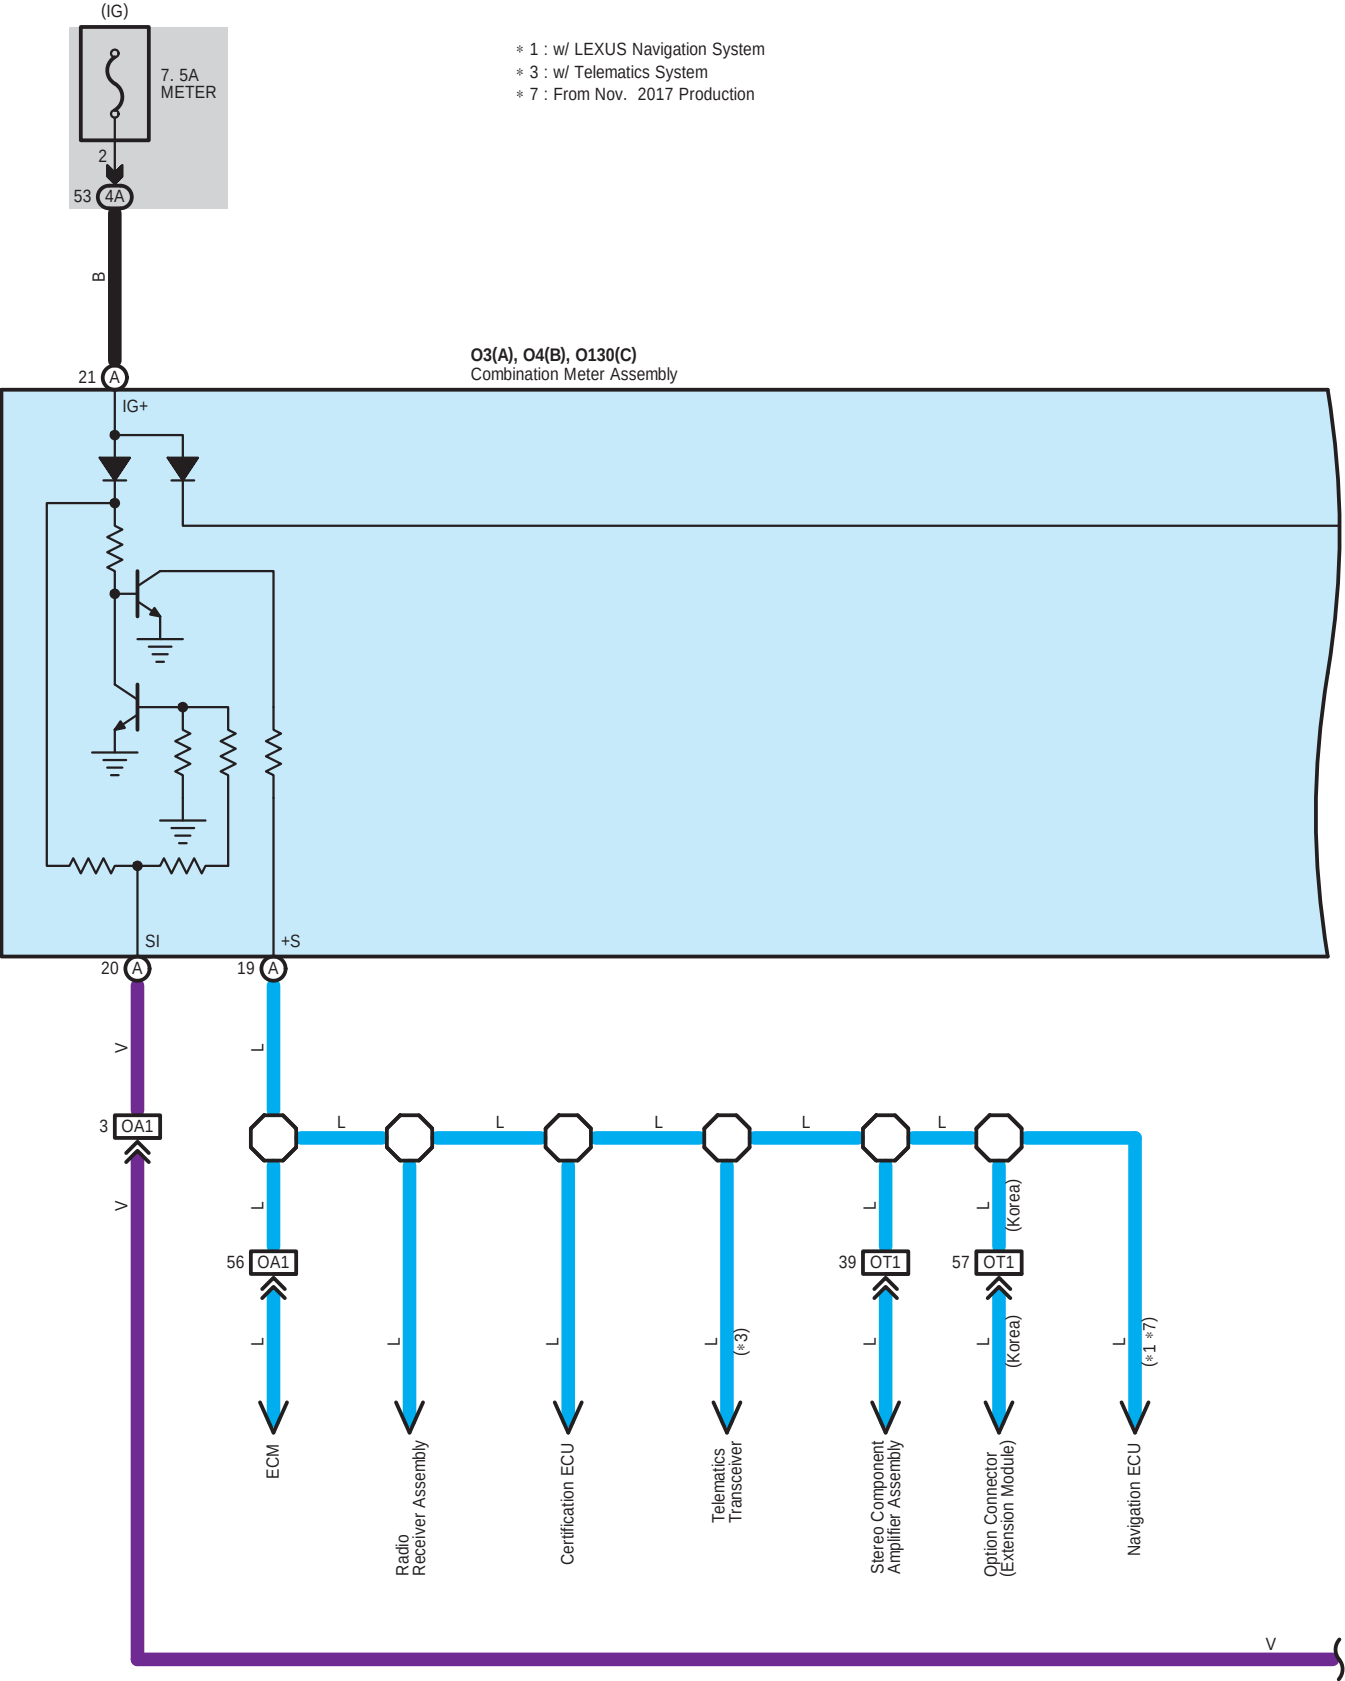

Combination Meter

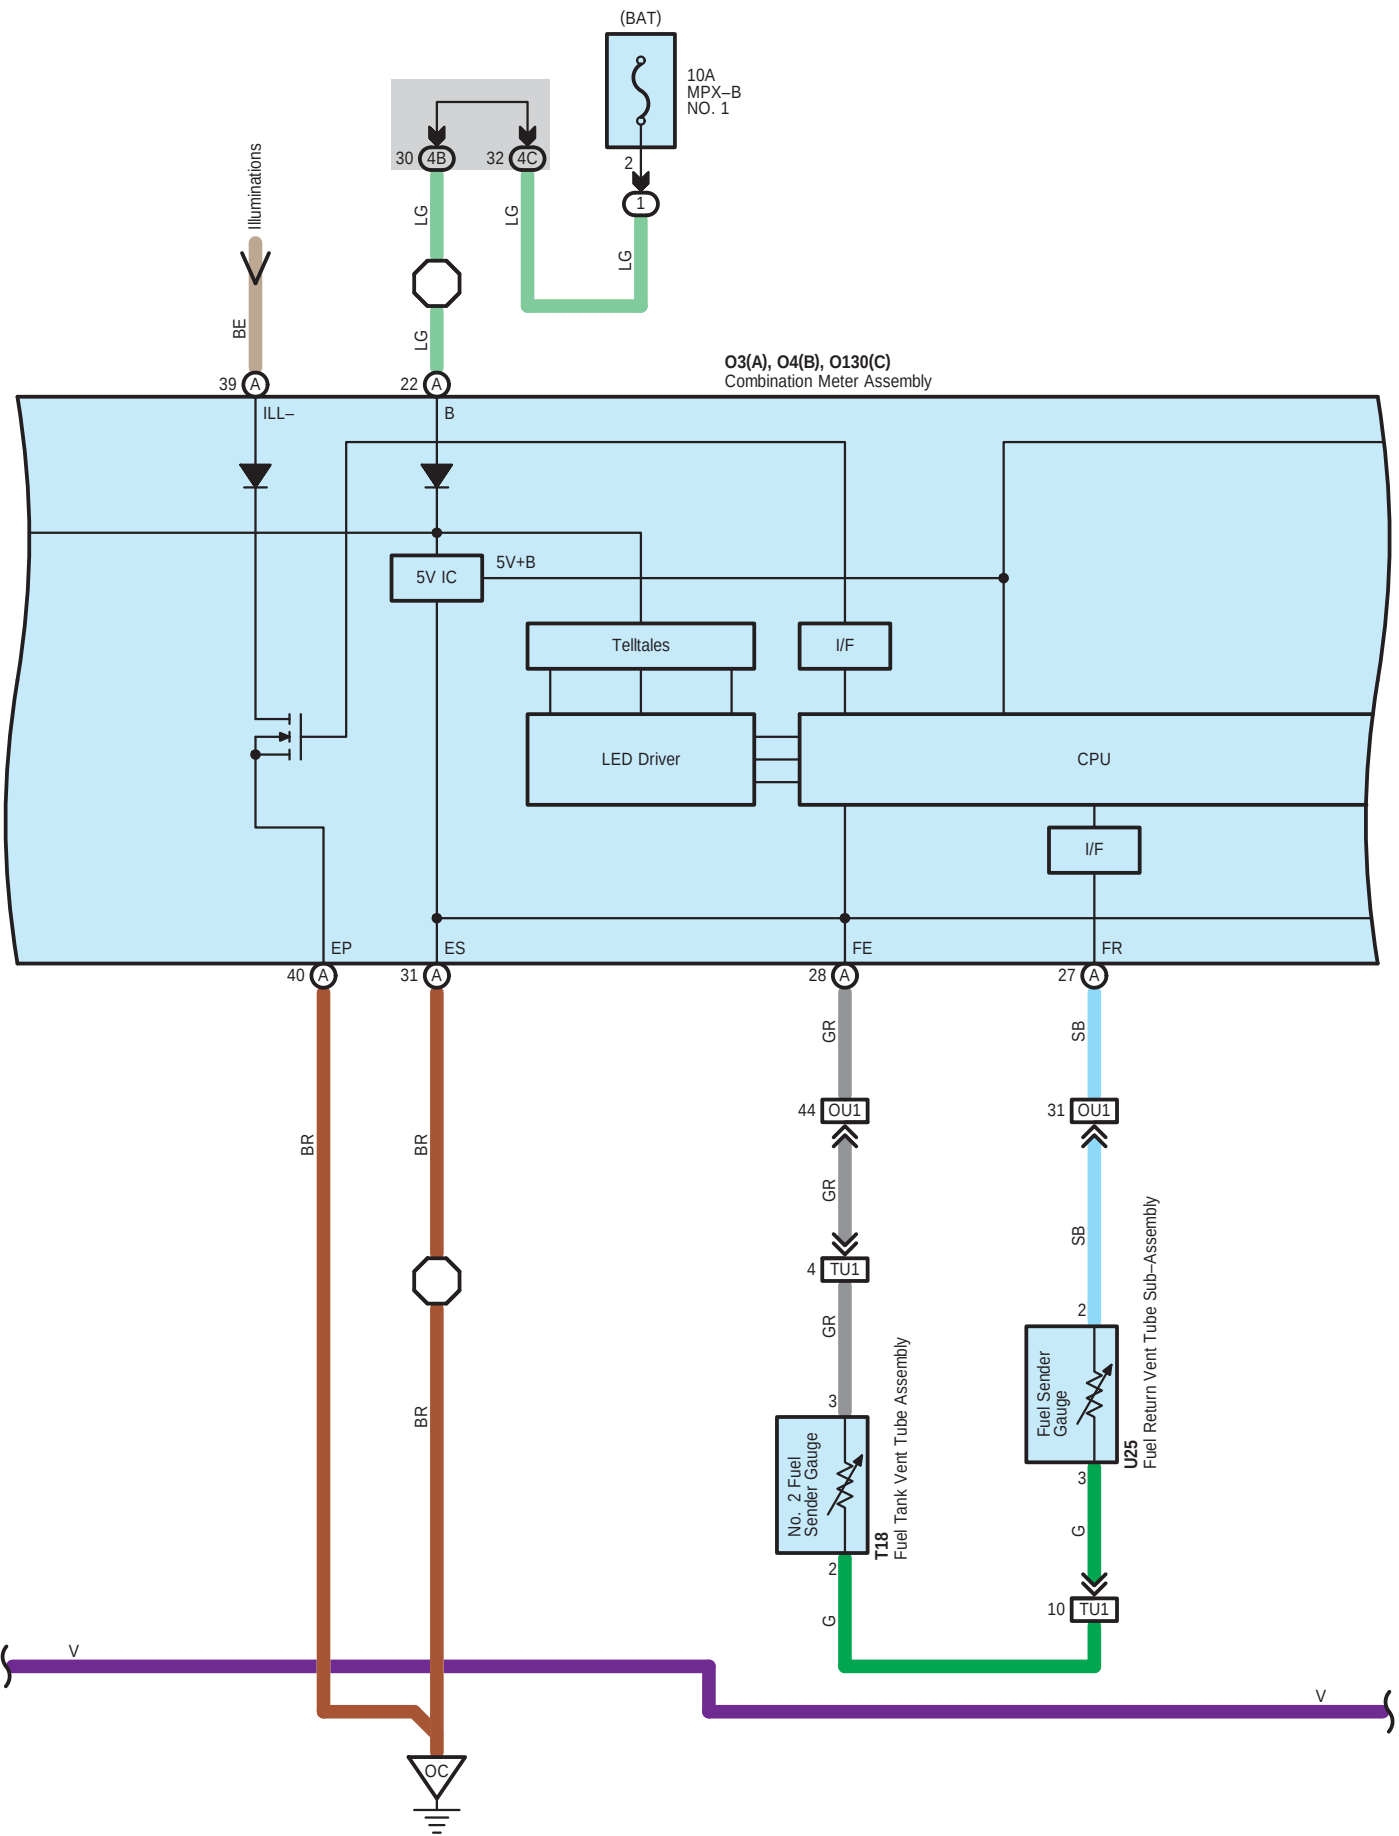


O3(A), O4(B), O130(C)
Combination Meter Assembly

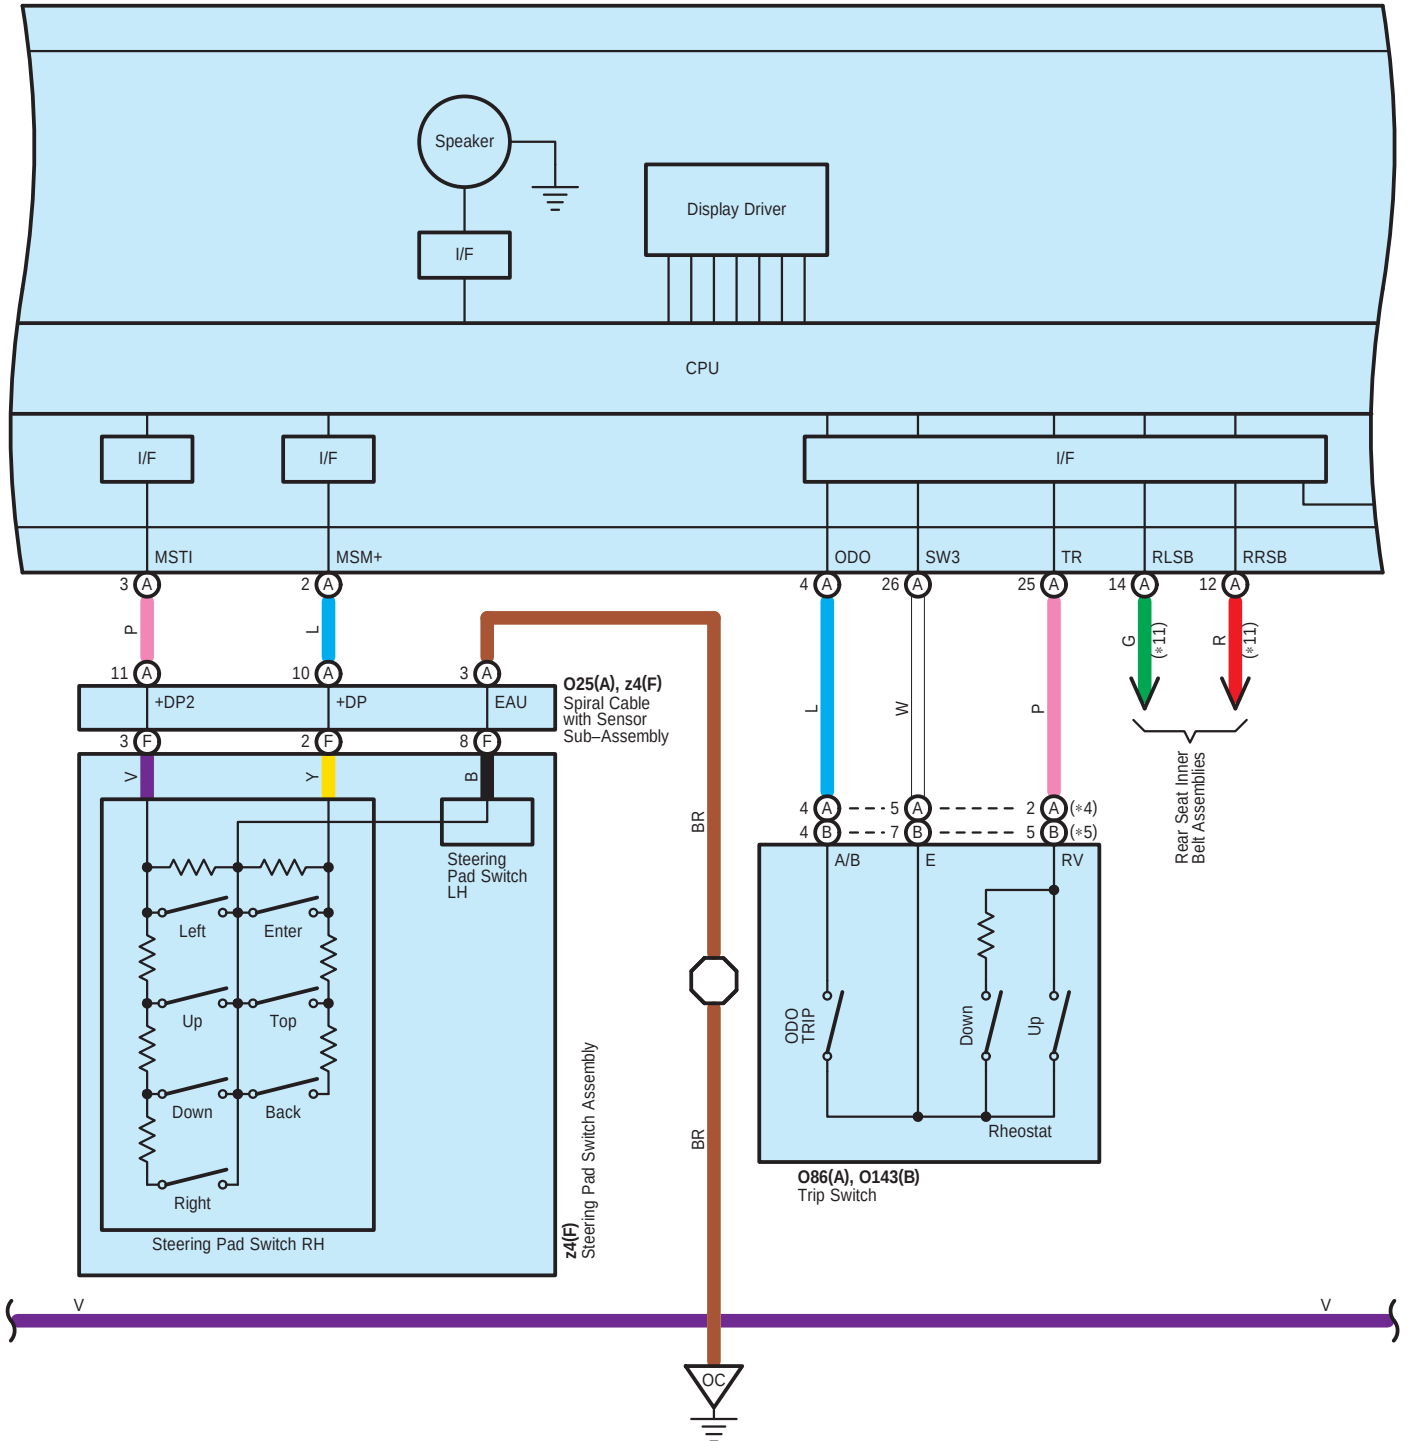


Combination Meter


- * 4 : Before Oct. 2015 Production
- * 5 : From Oct. 2015 Production
- *11 : w/ Rear Passenger' s Seat Belt Warning

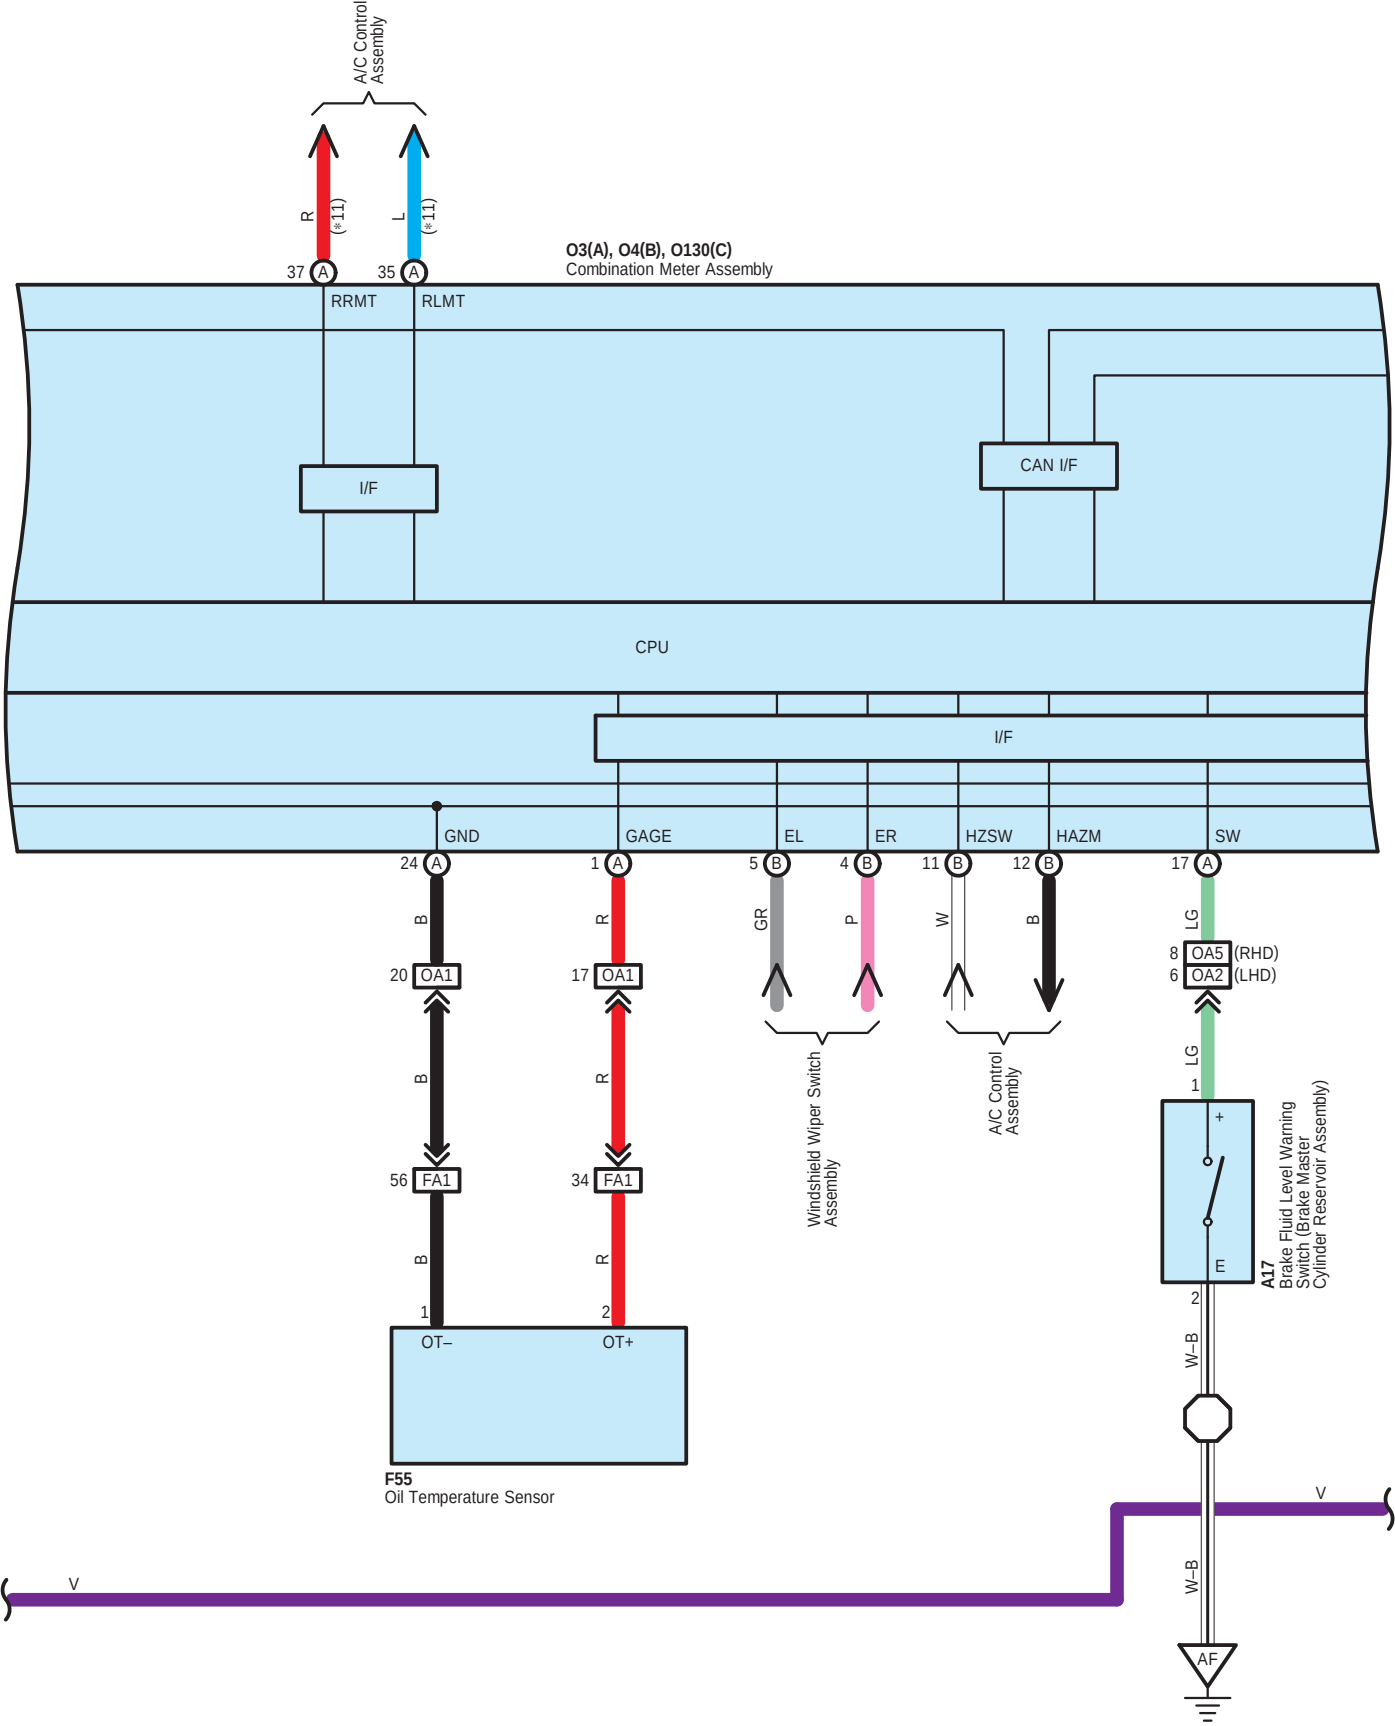


Combination Meter

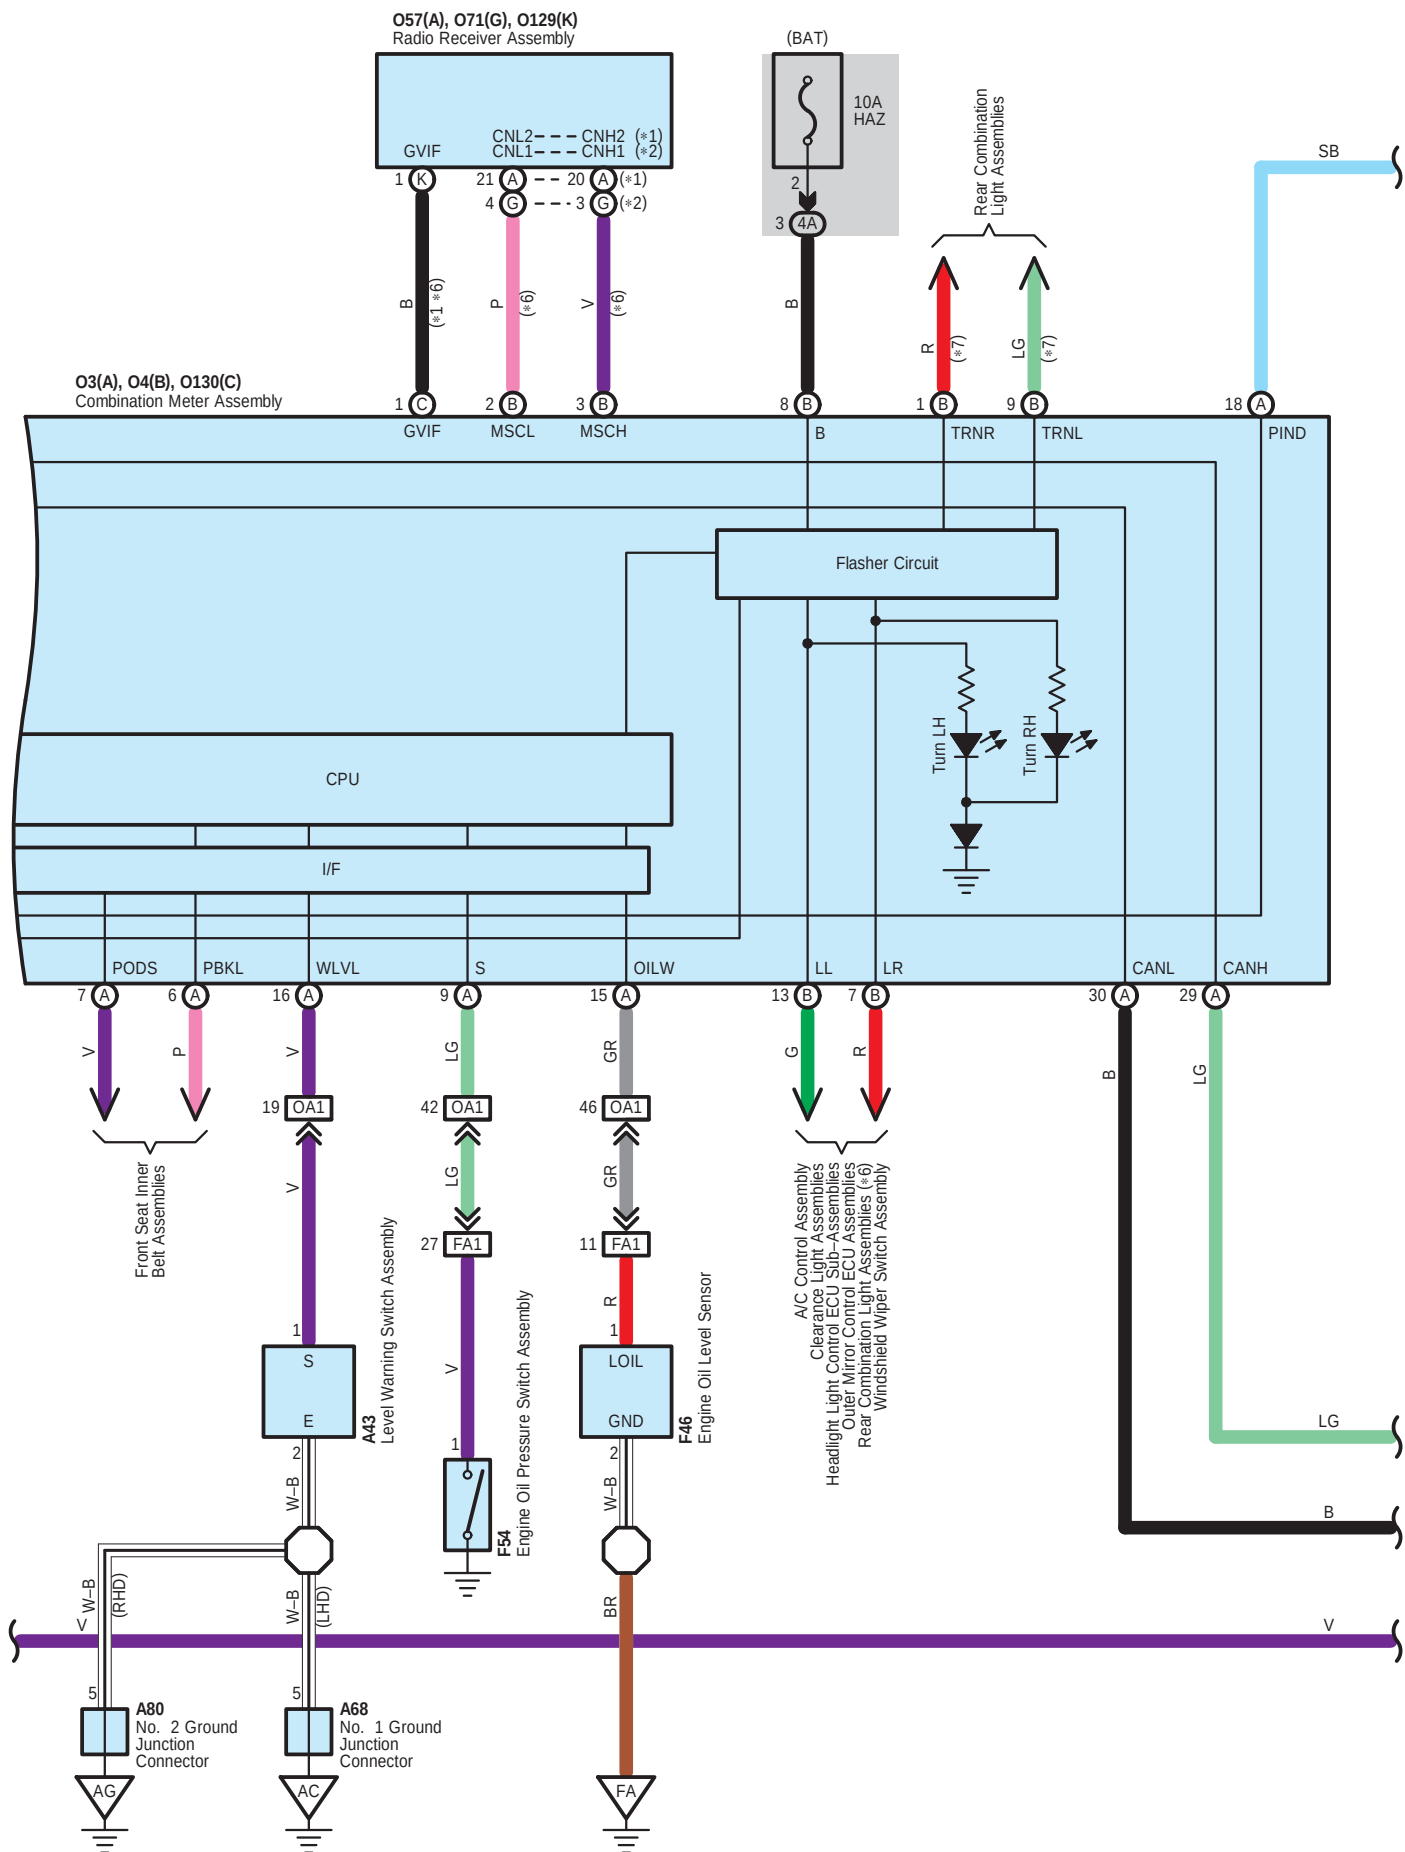


Combination Meter

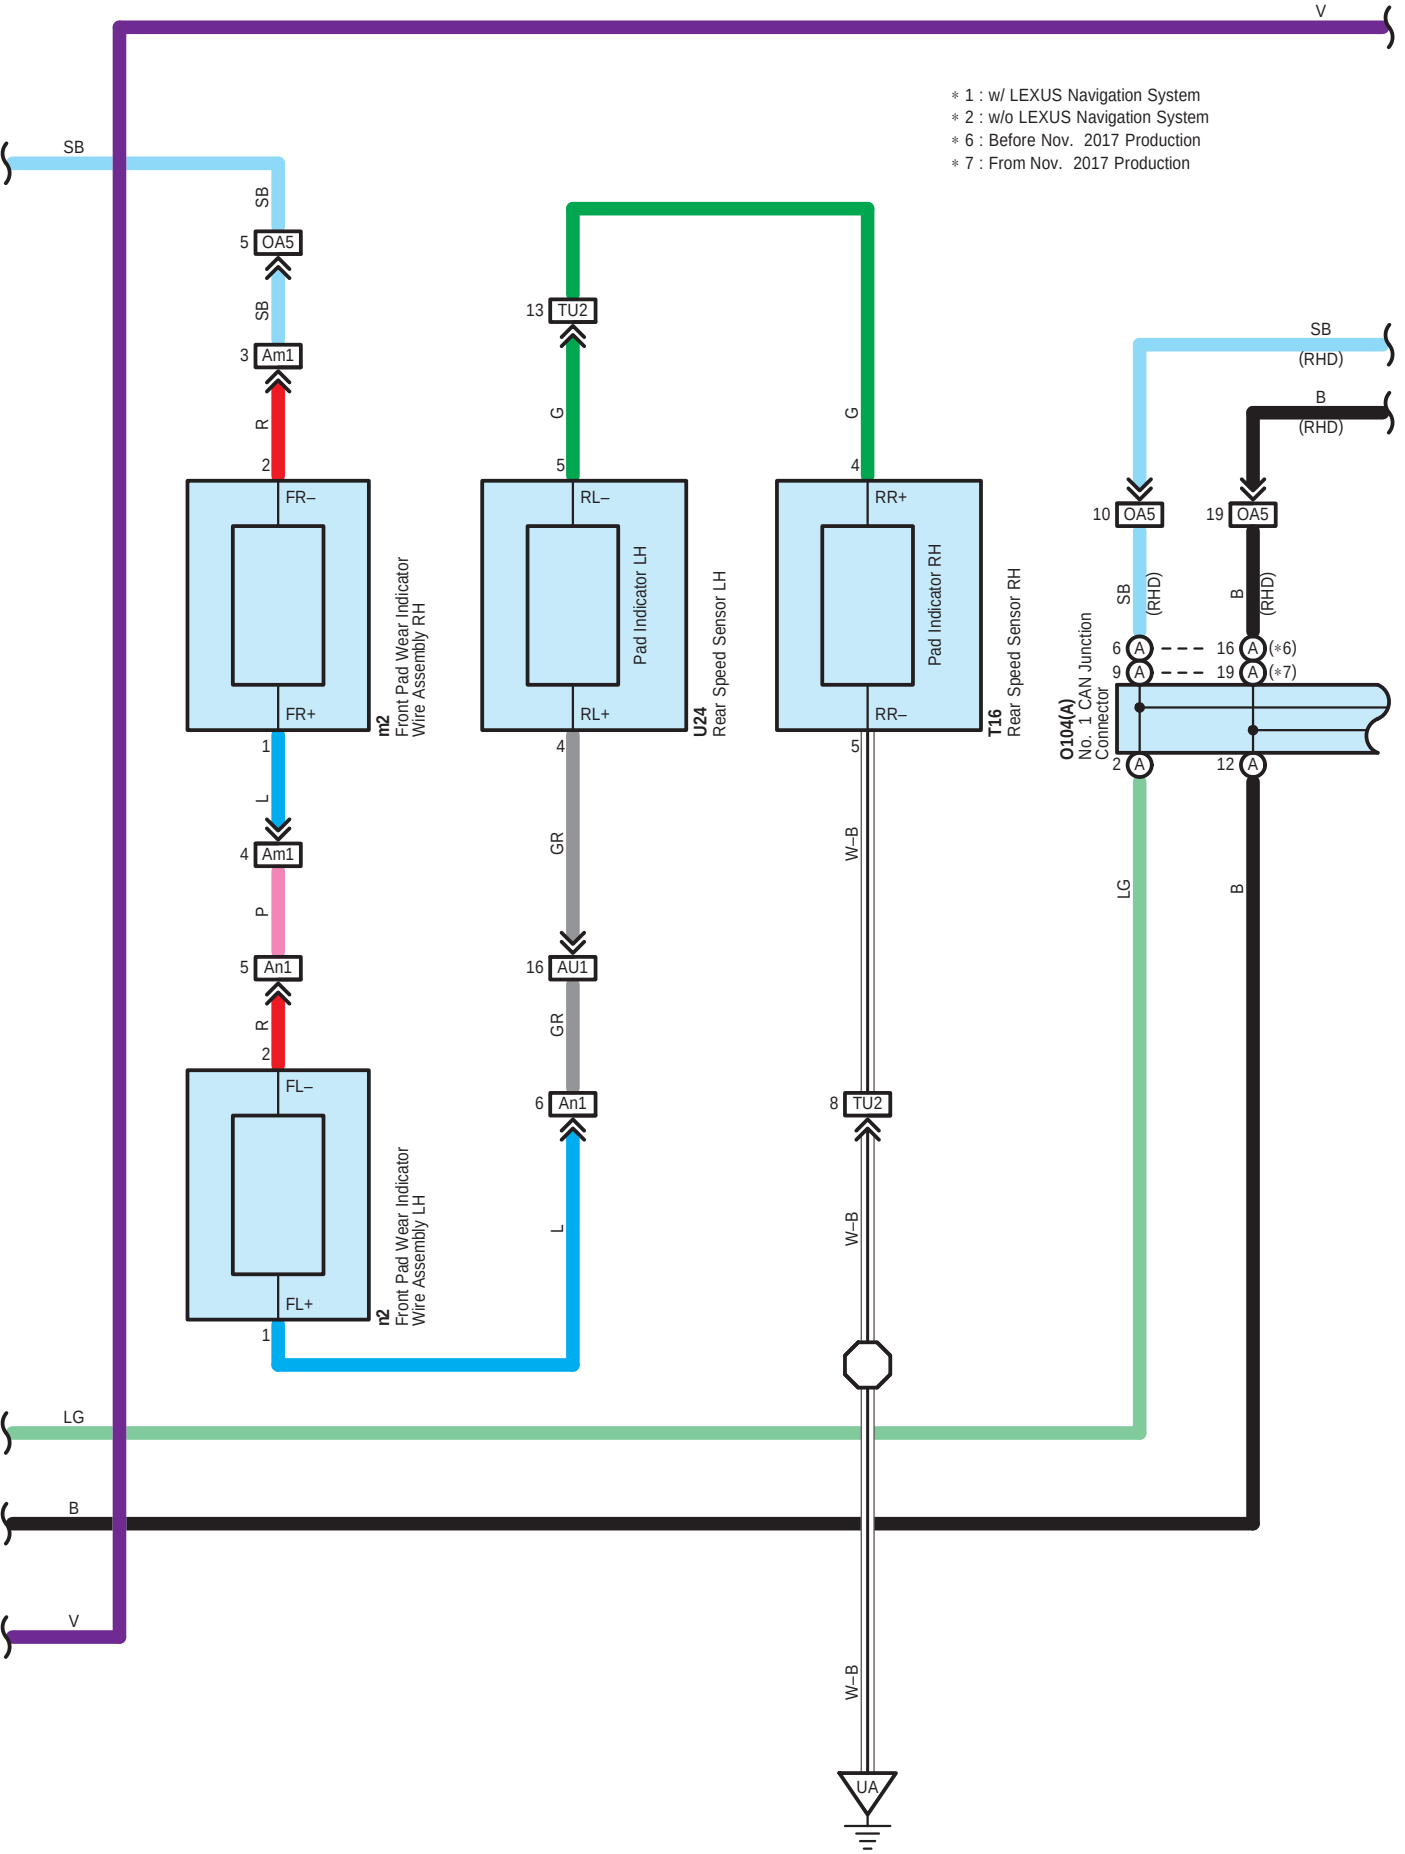

Combination Meter

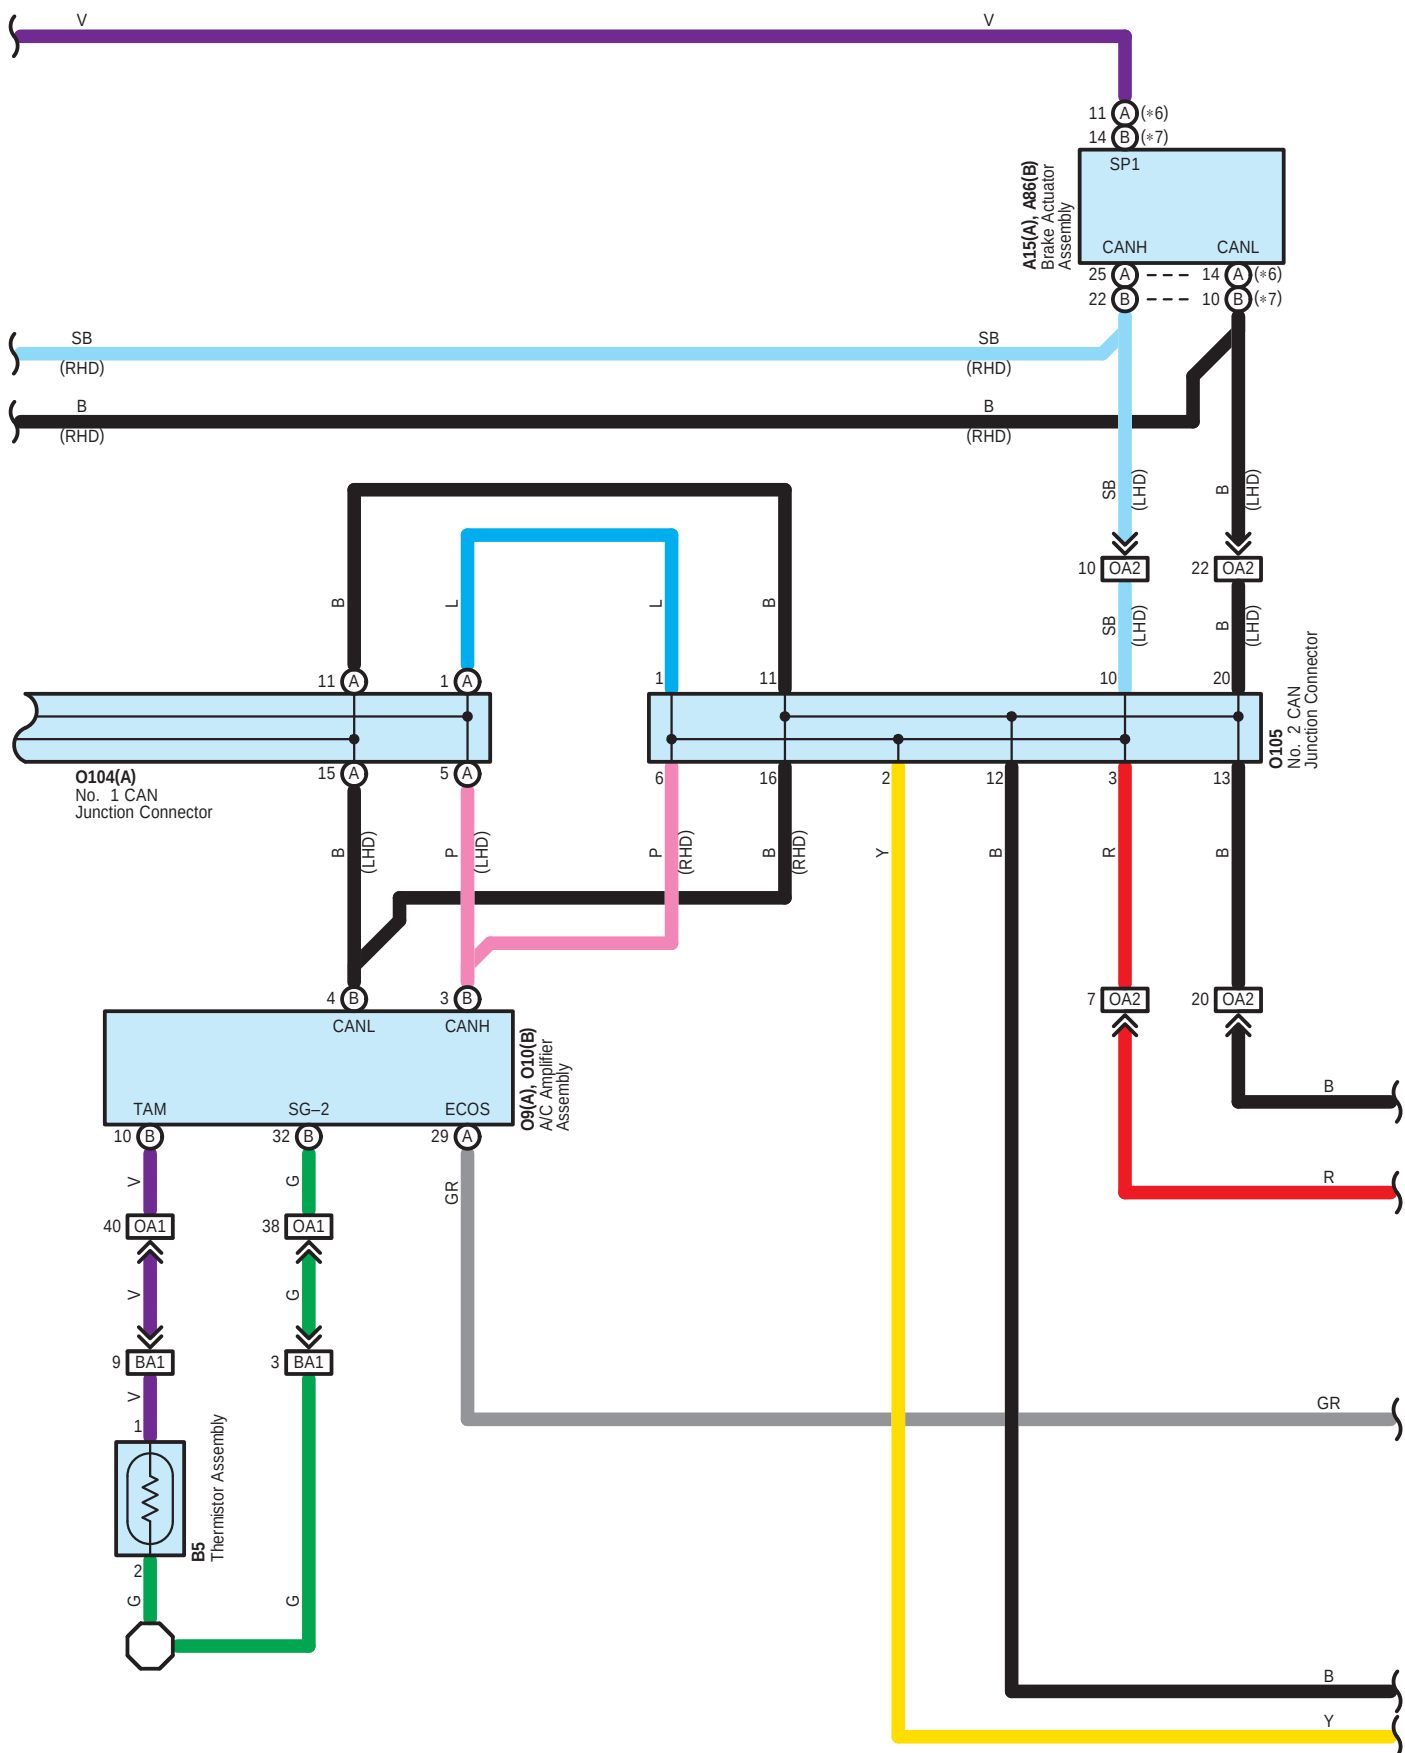



A77(A), A78(B), F1(C), F2(D), F4(E), F7(F)
ECM

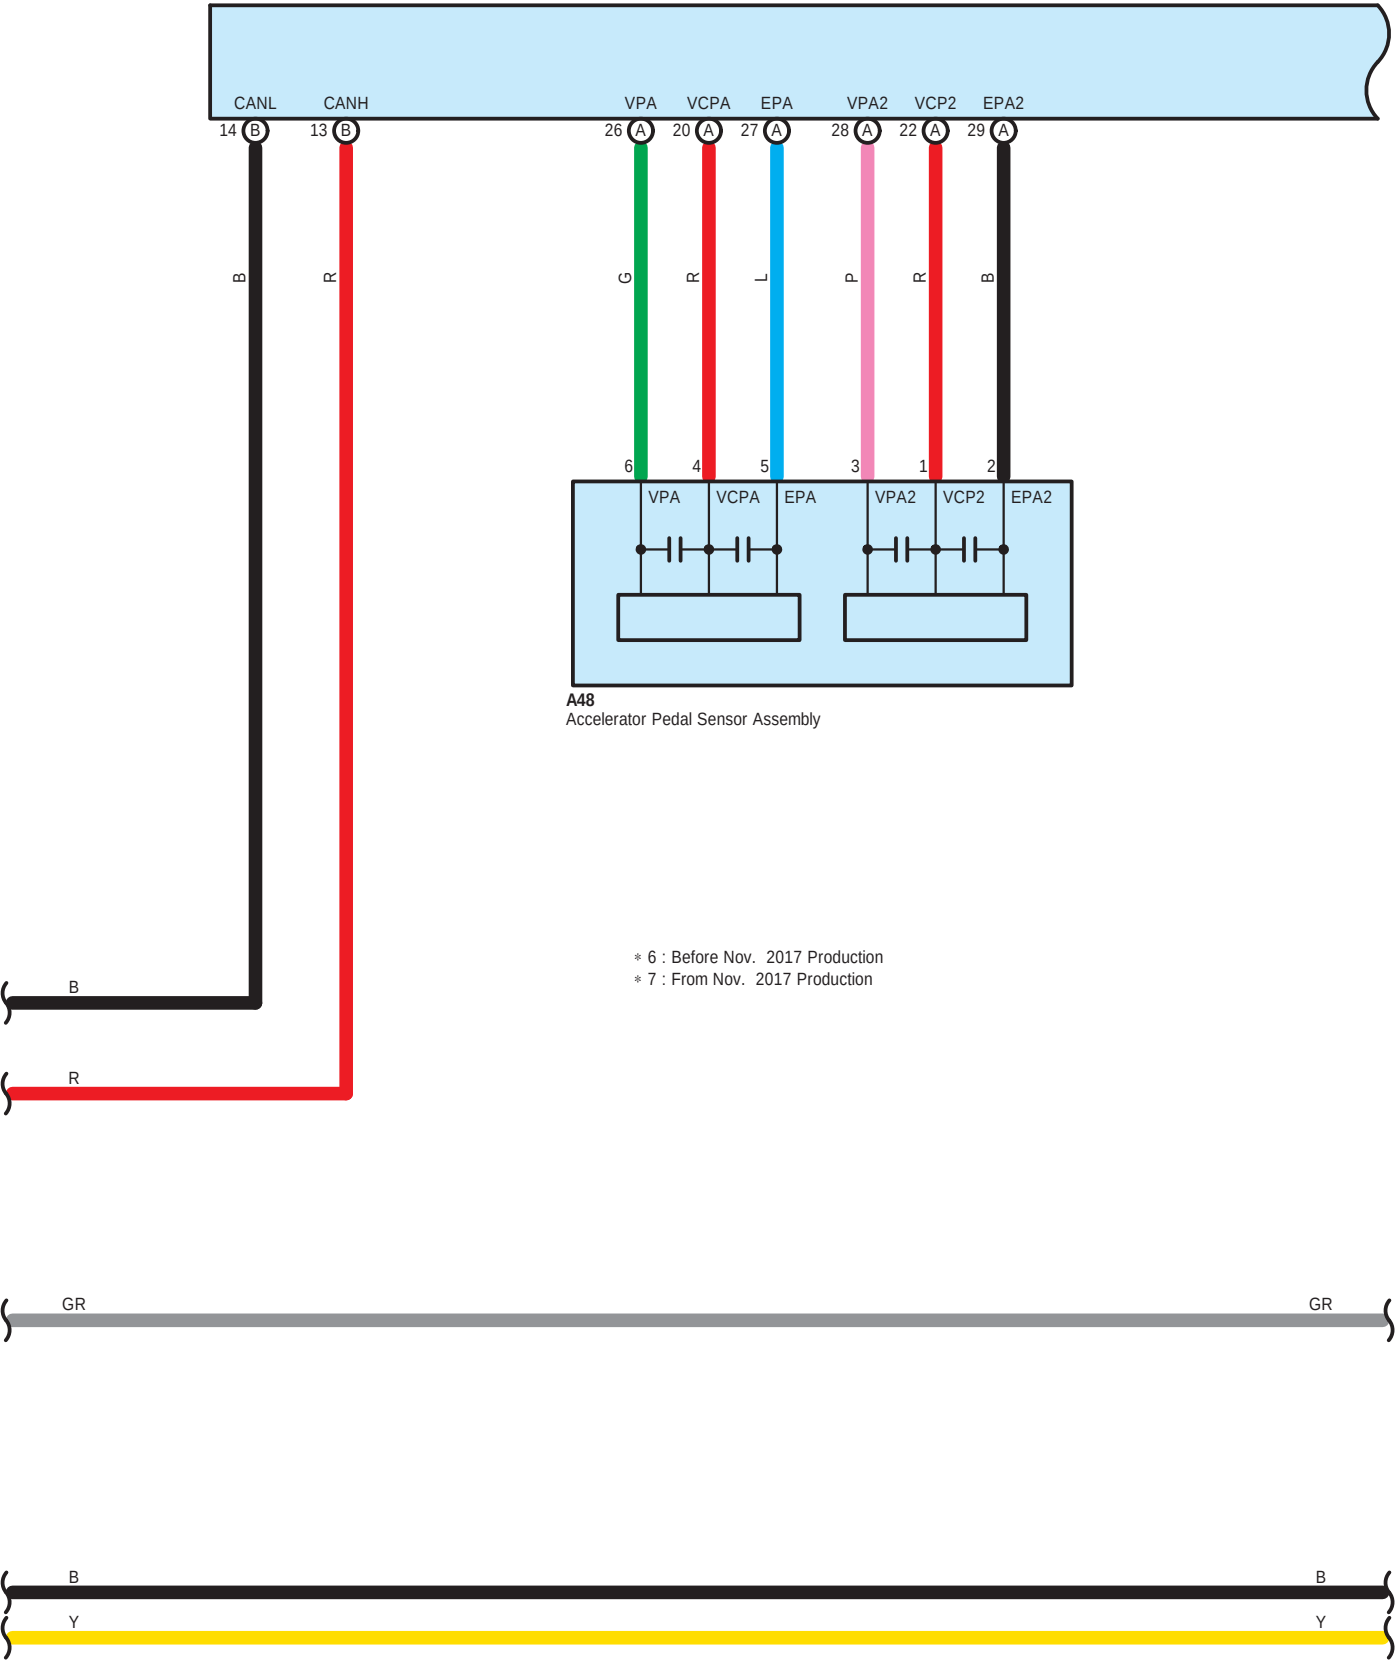



Combination Meter


A77(A), A78(B), F1(C), F2(D), F4(E), F7(F)
ECM

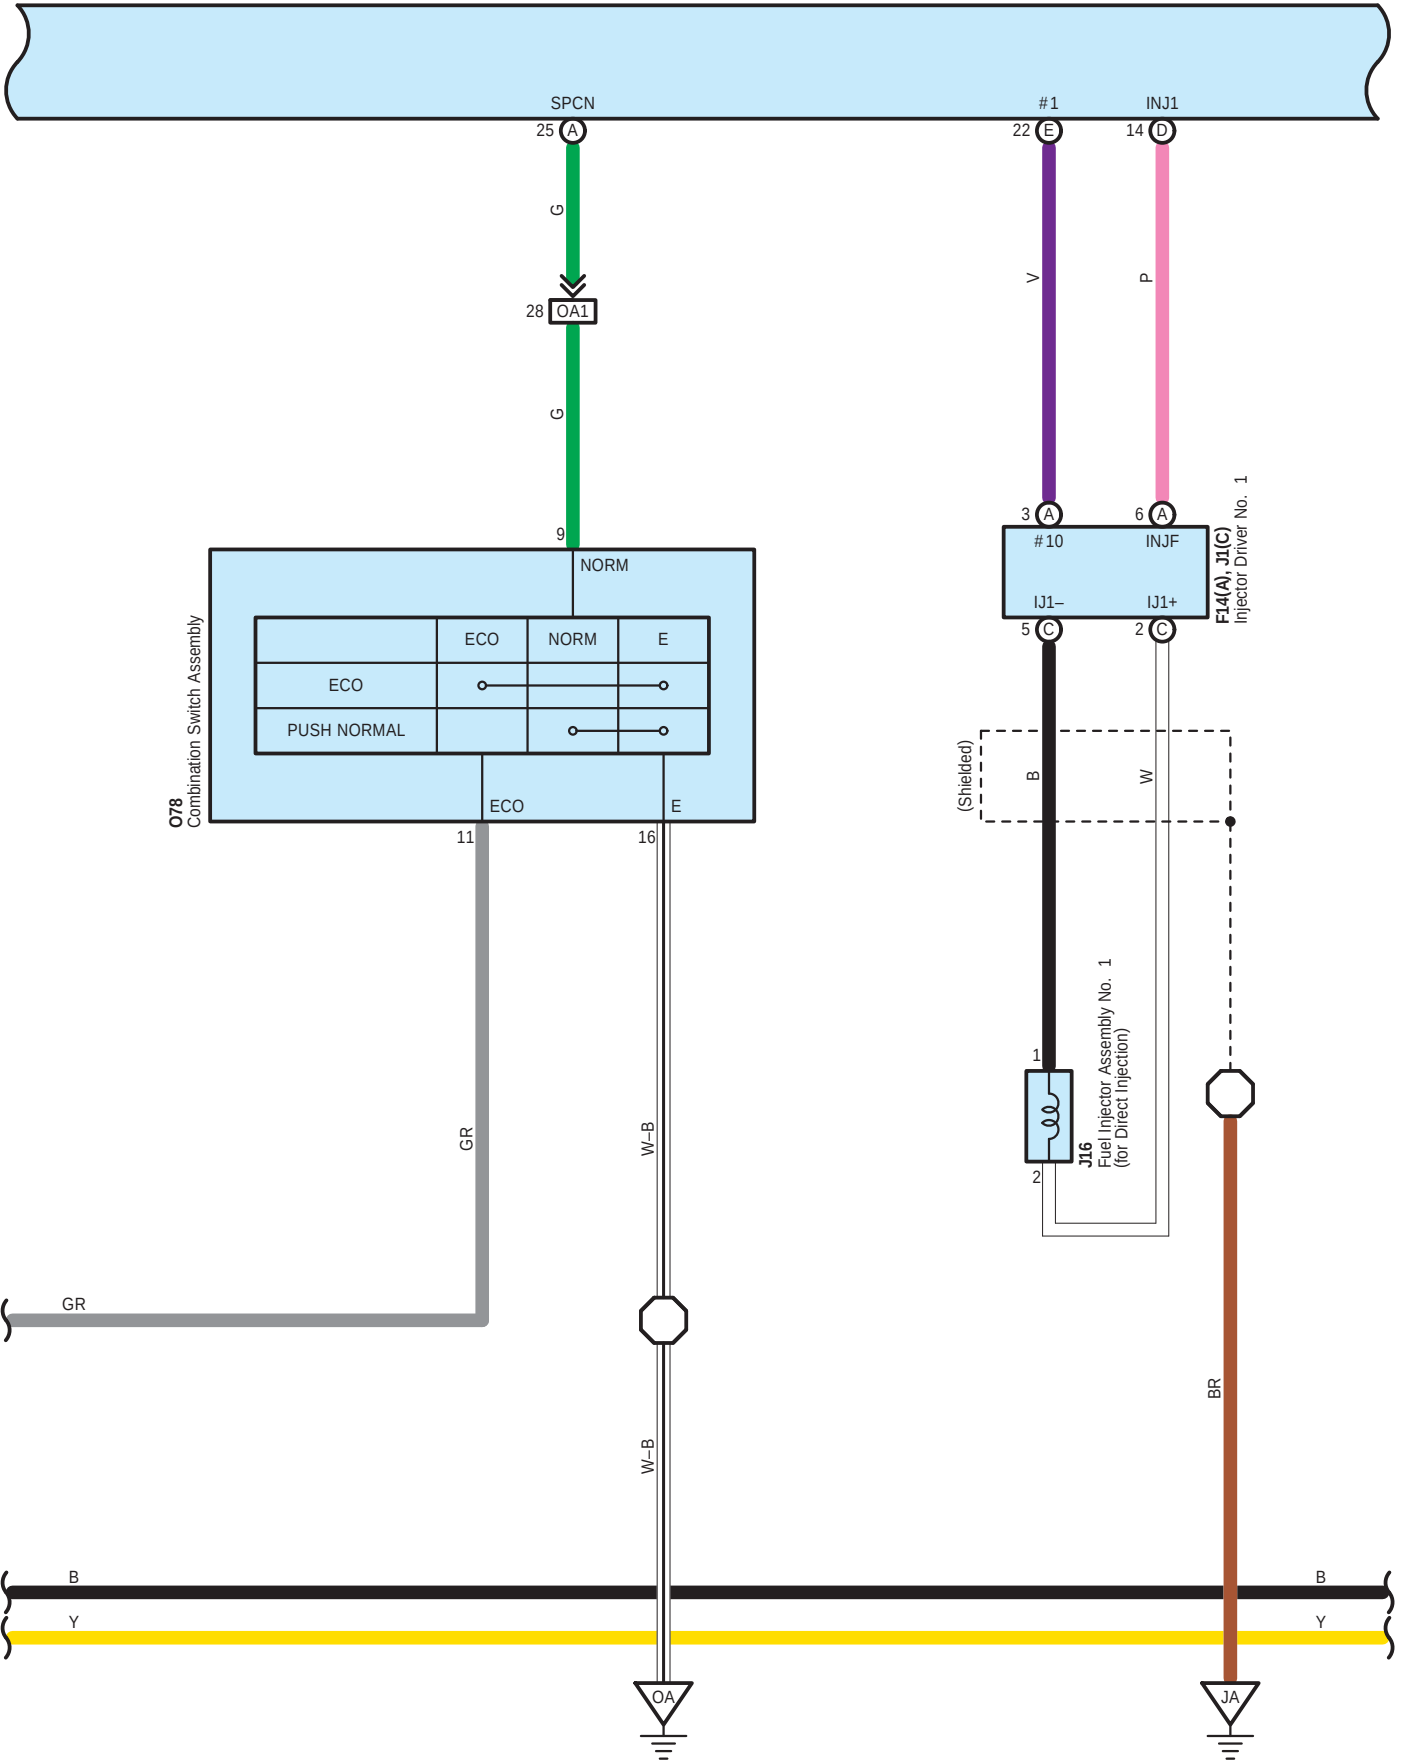


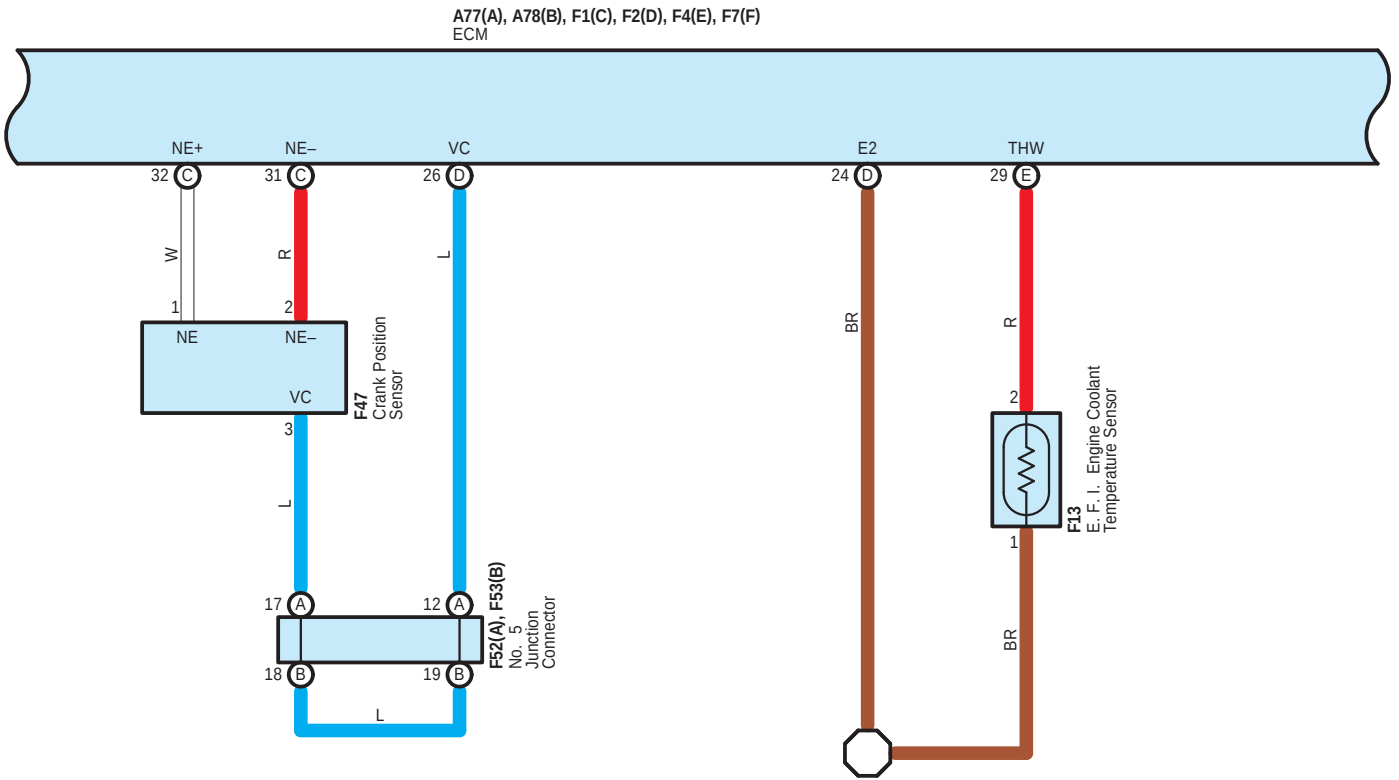

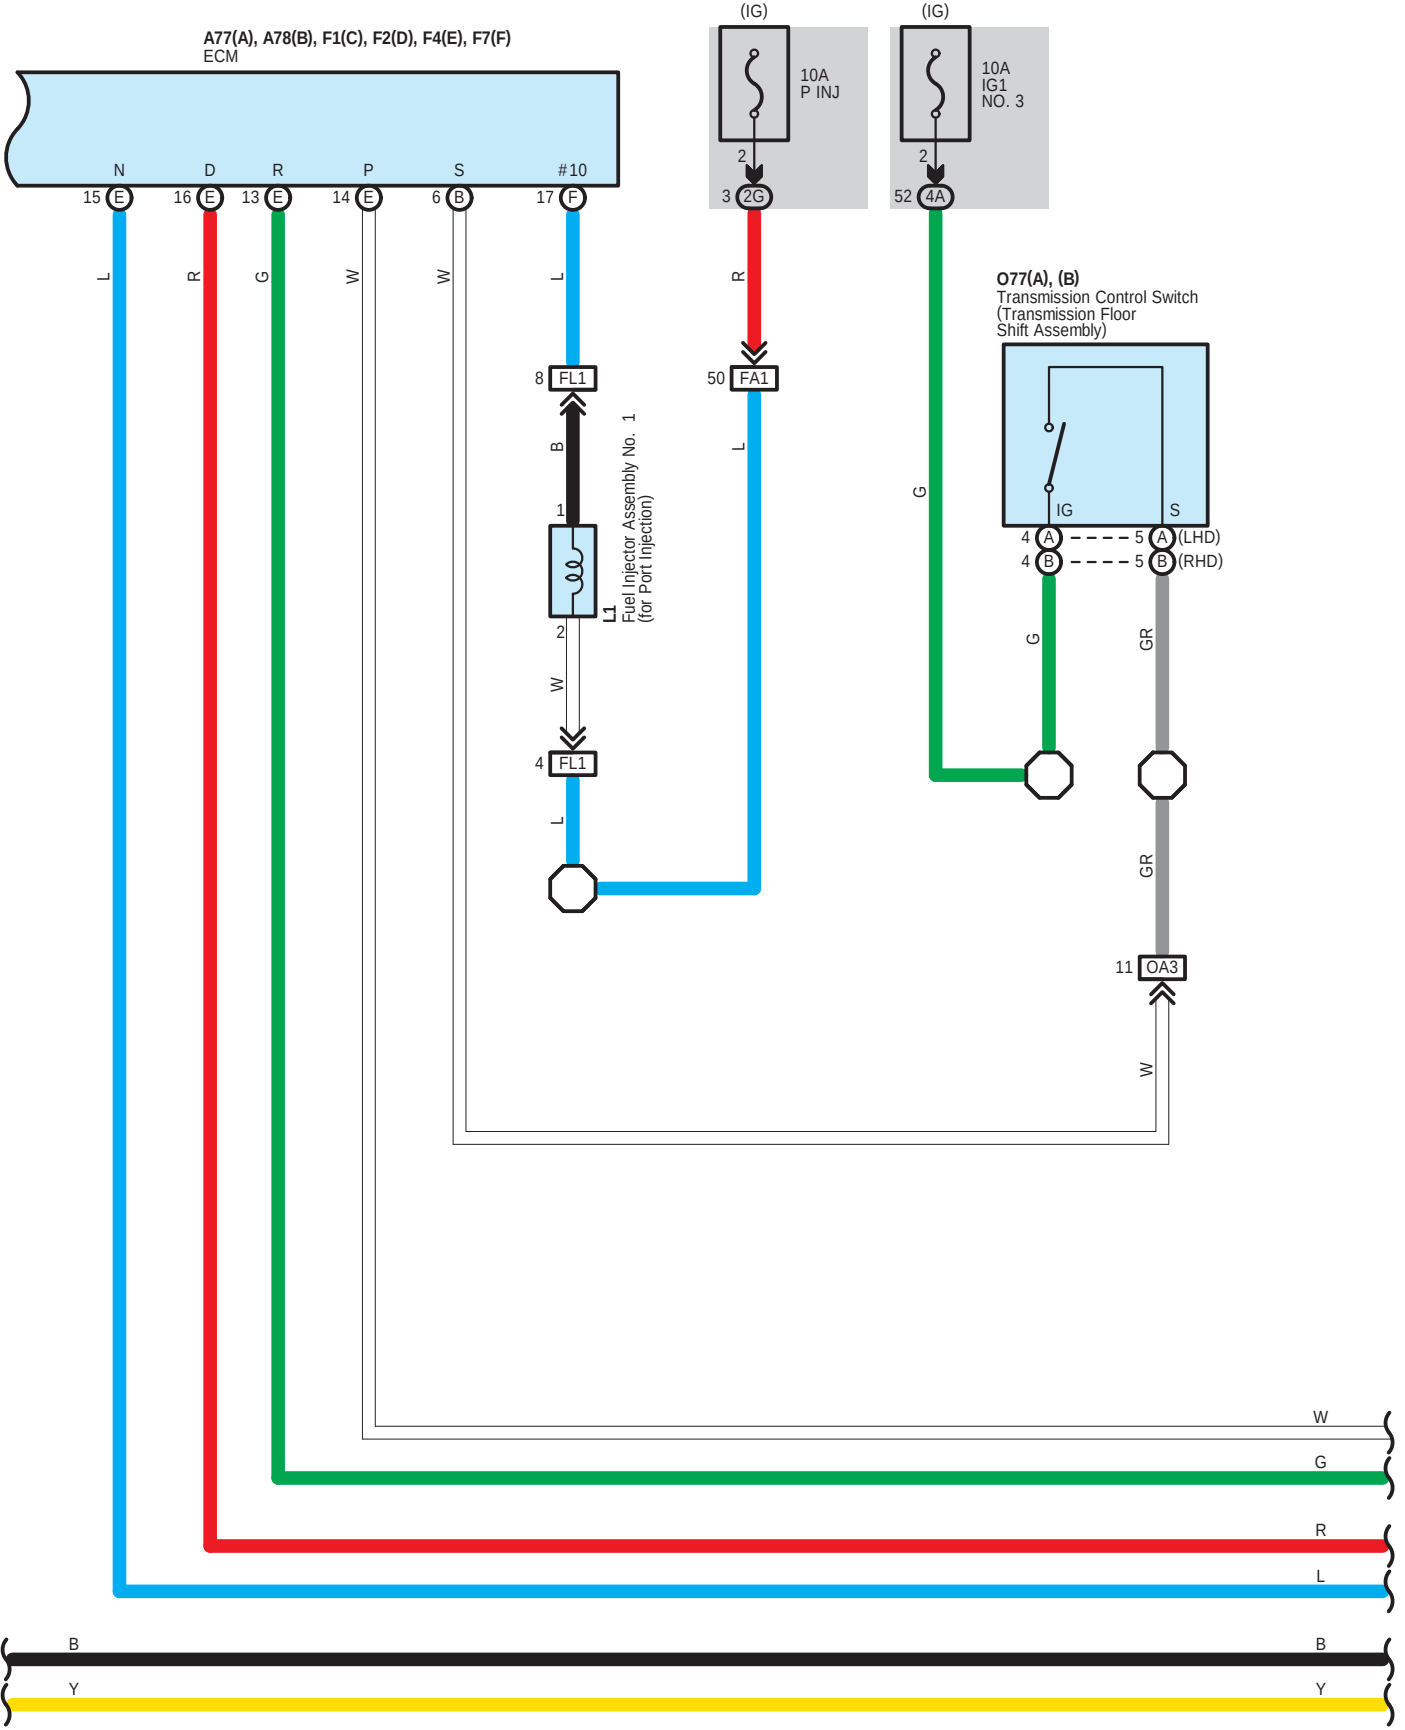


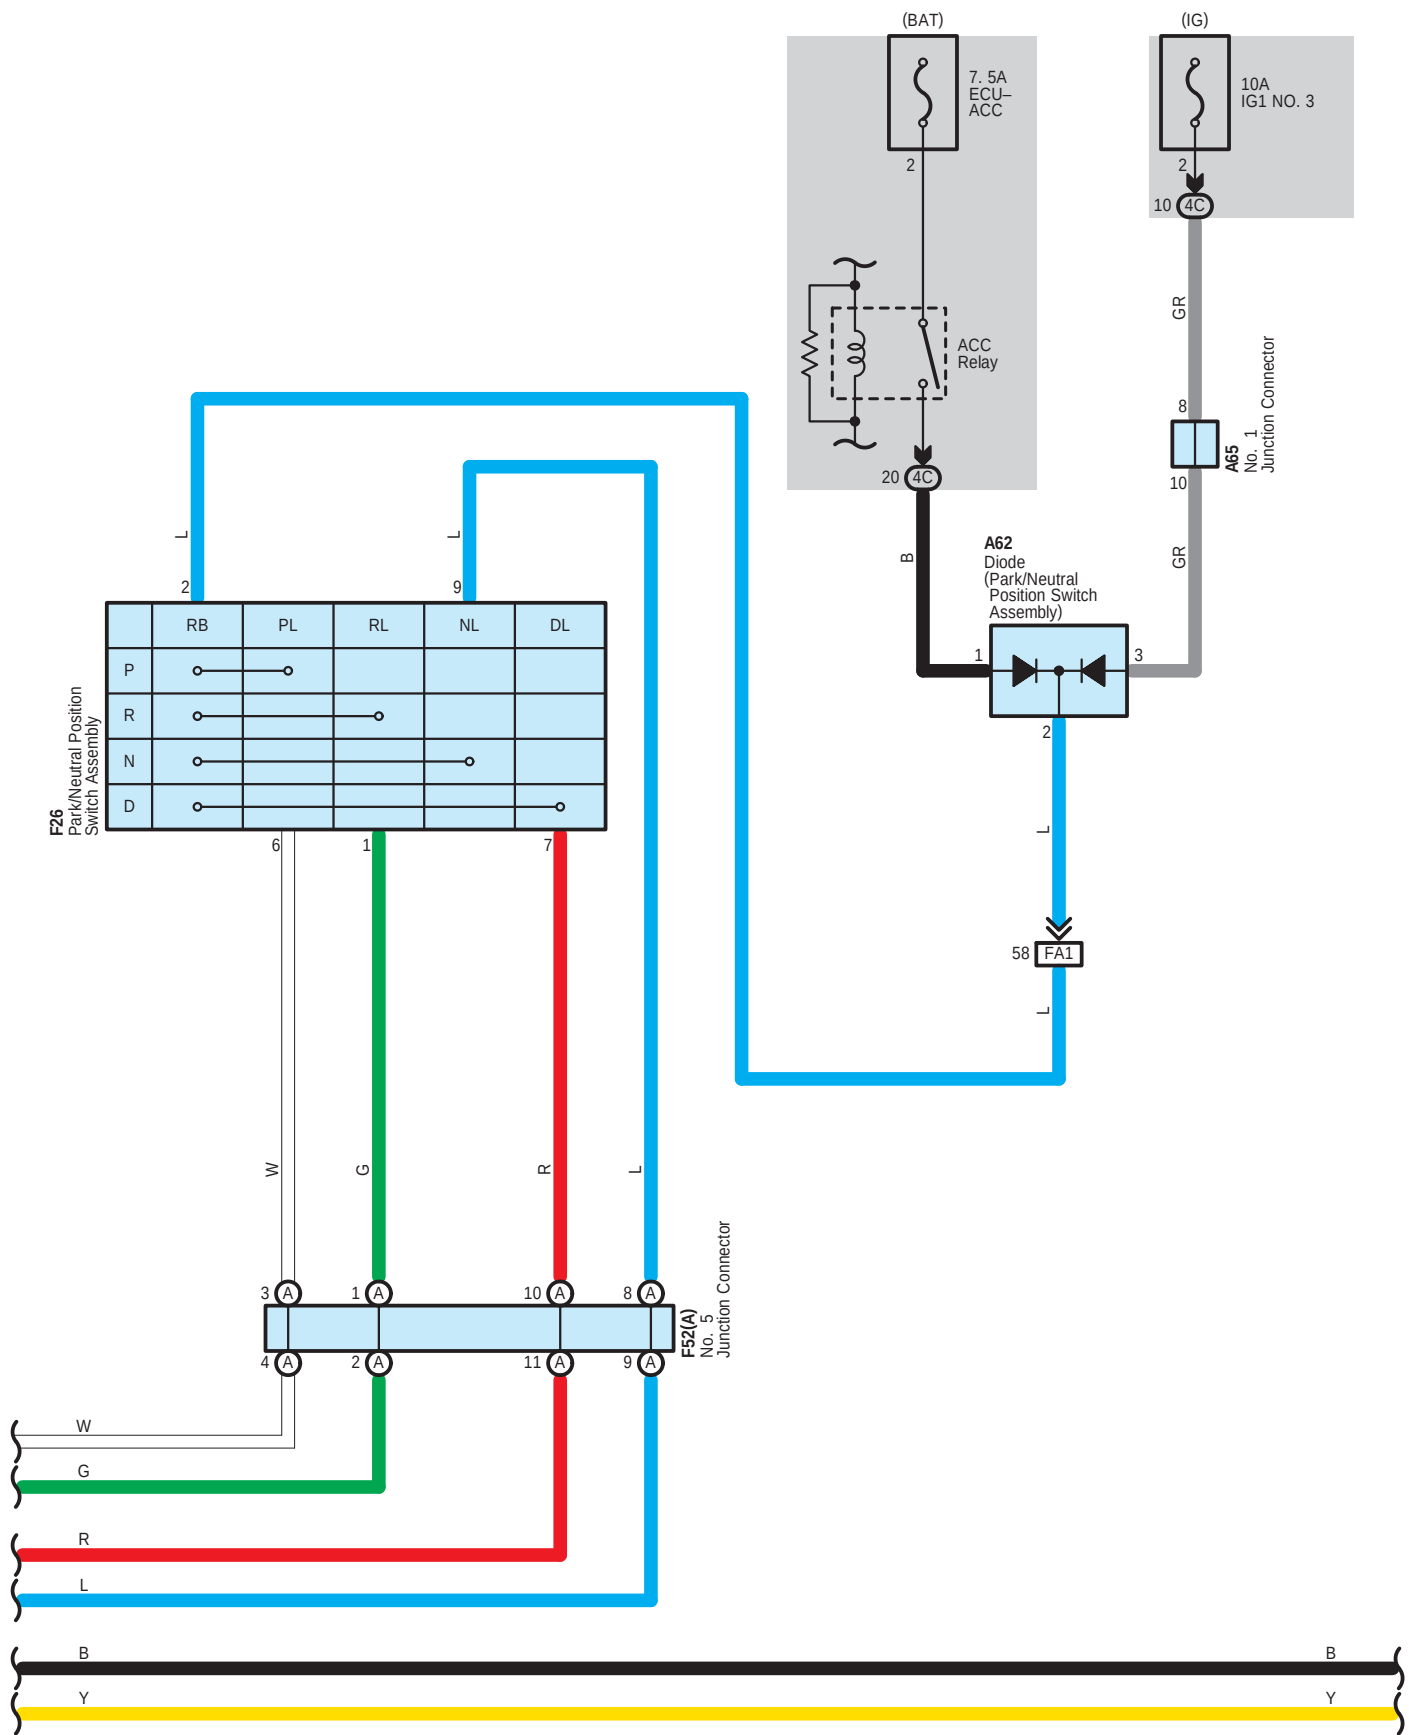

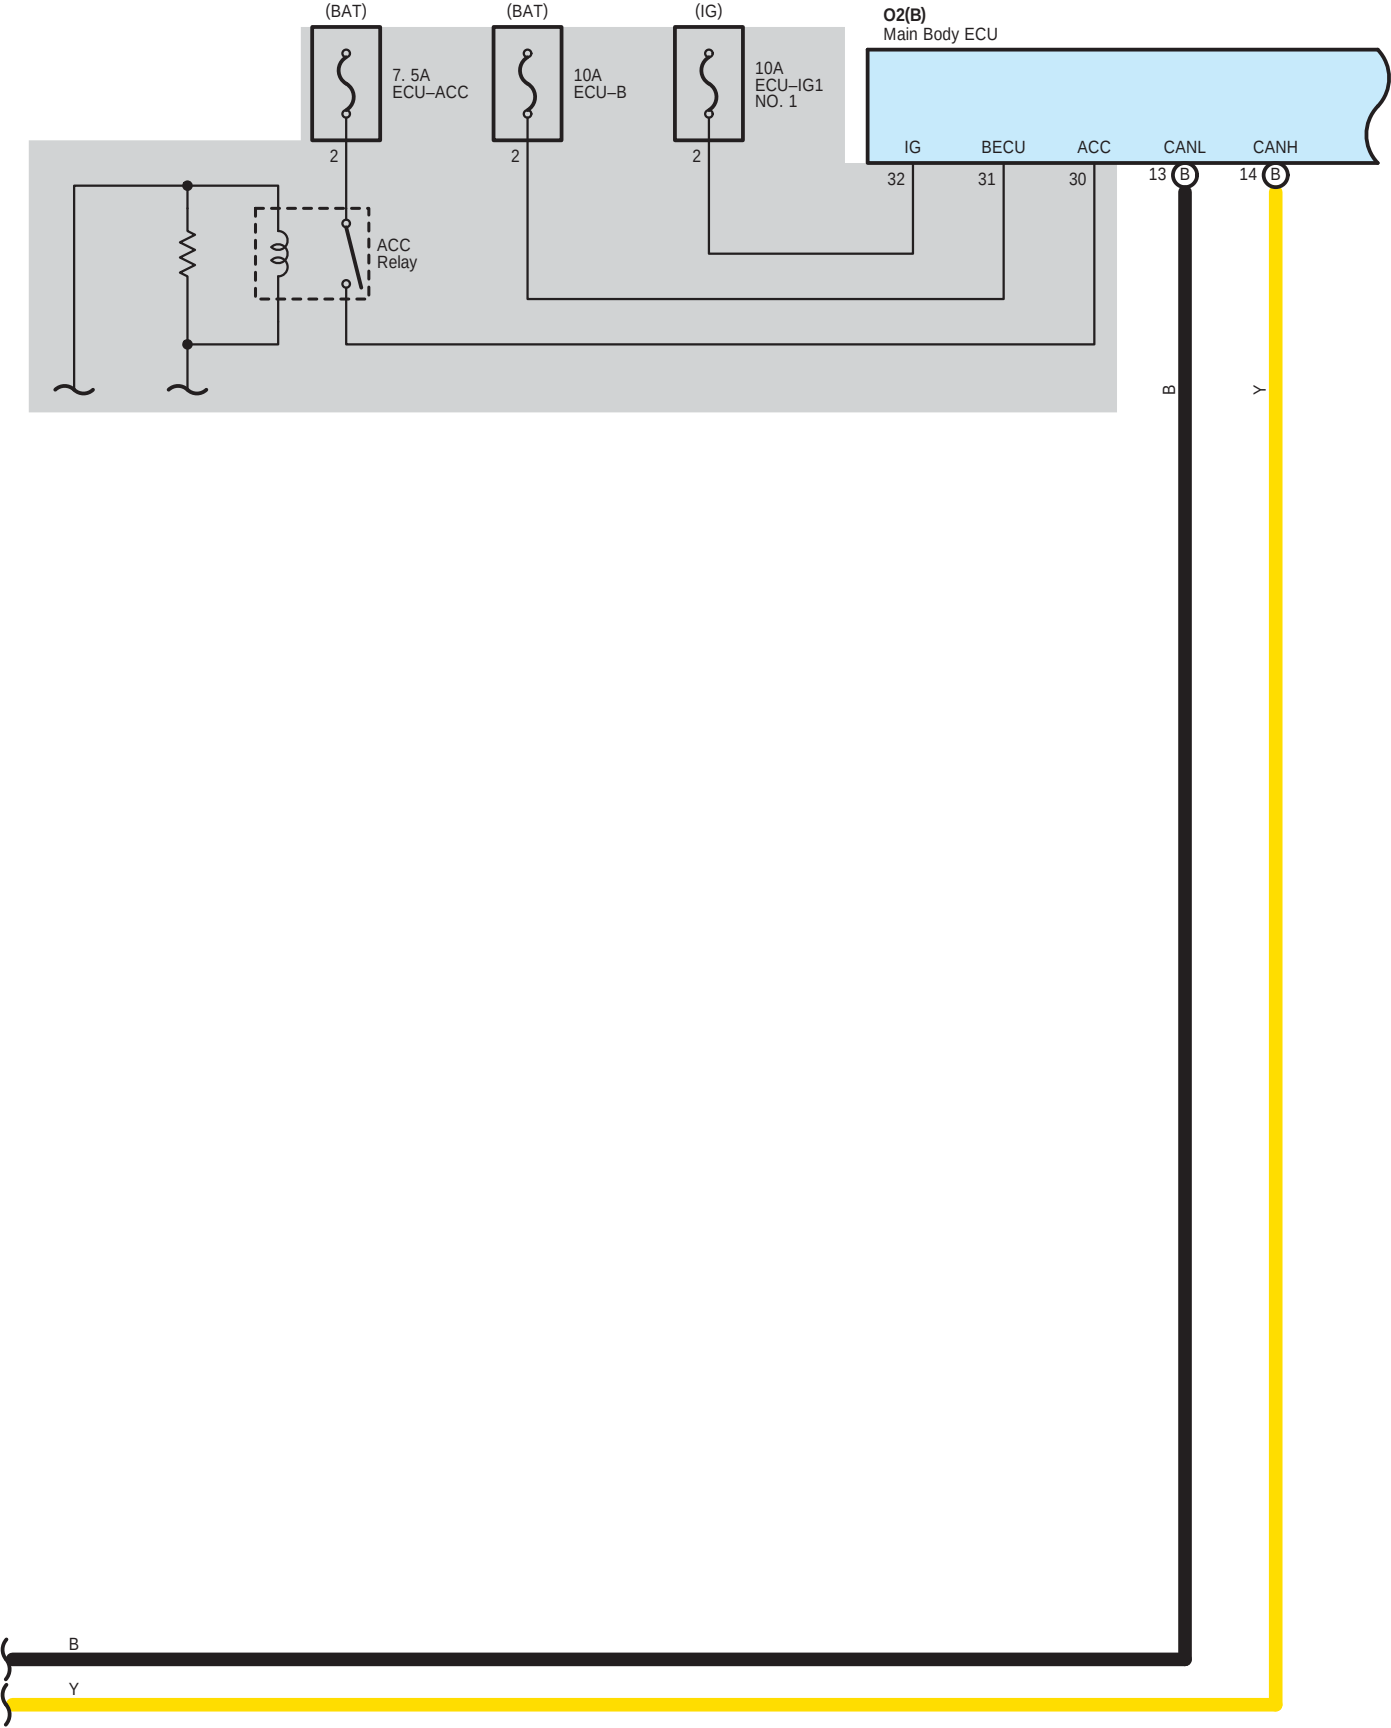

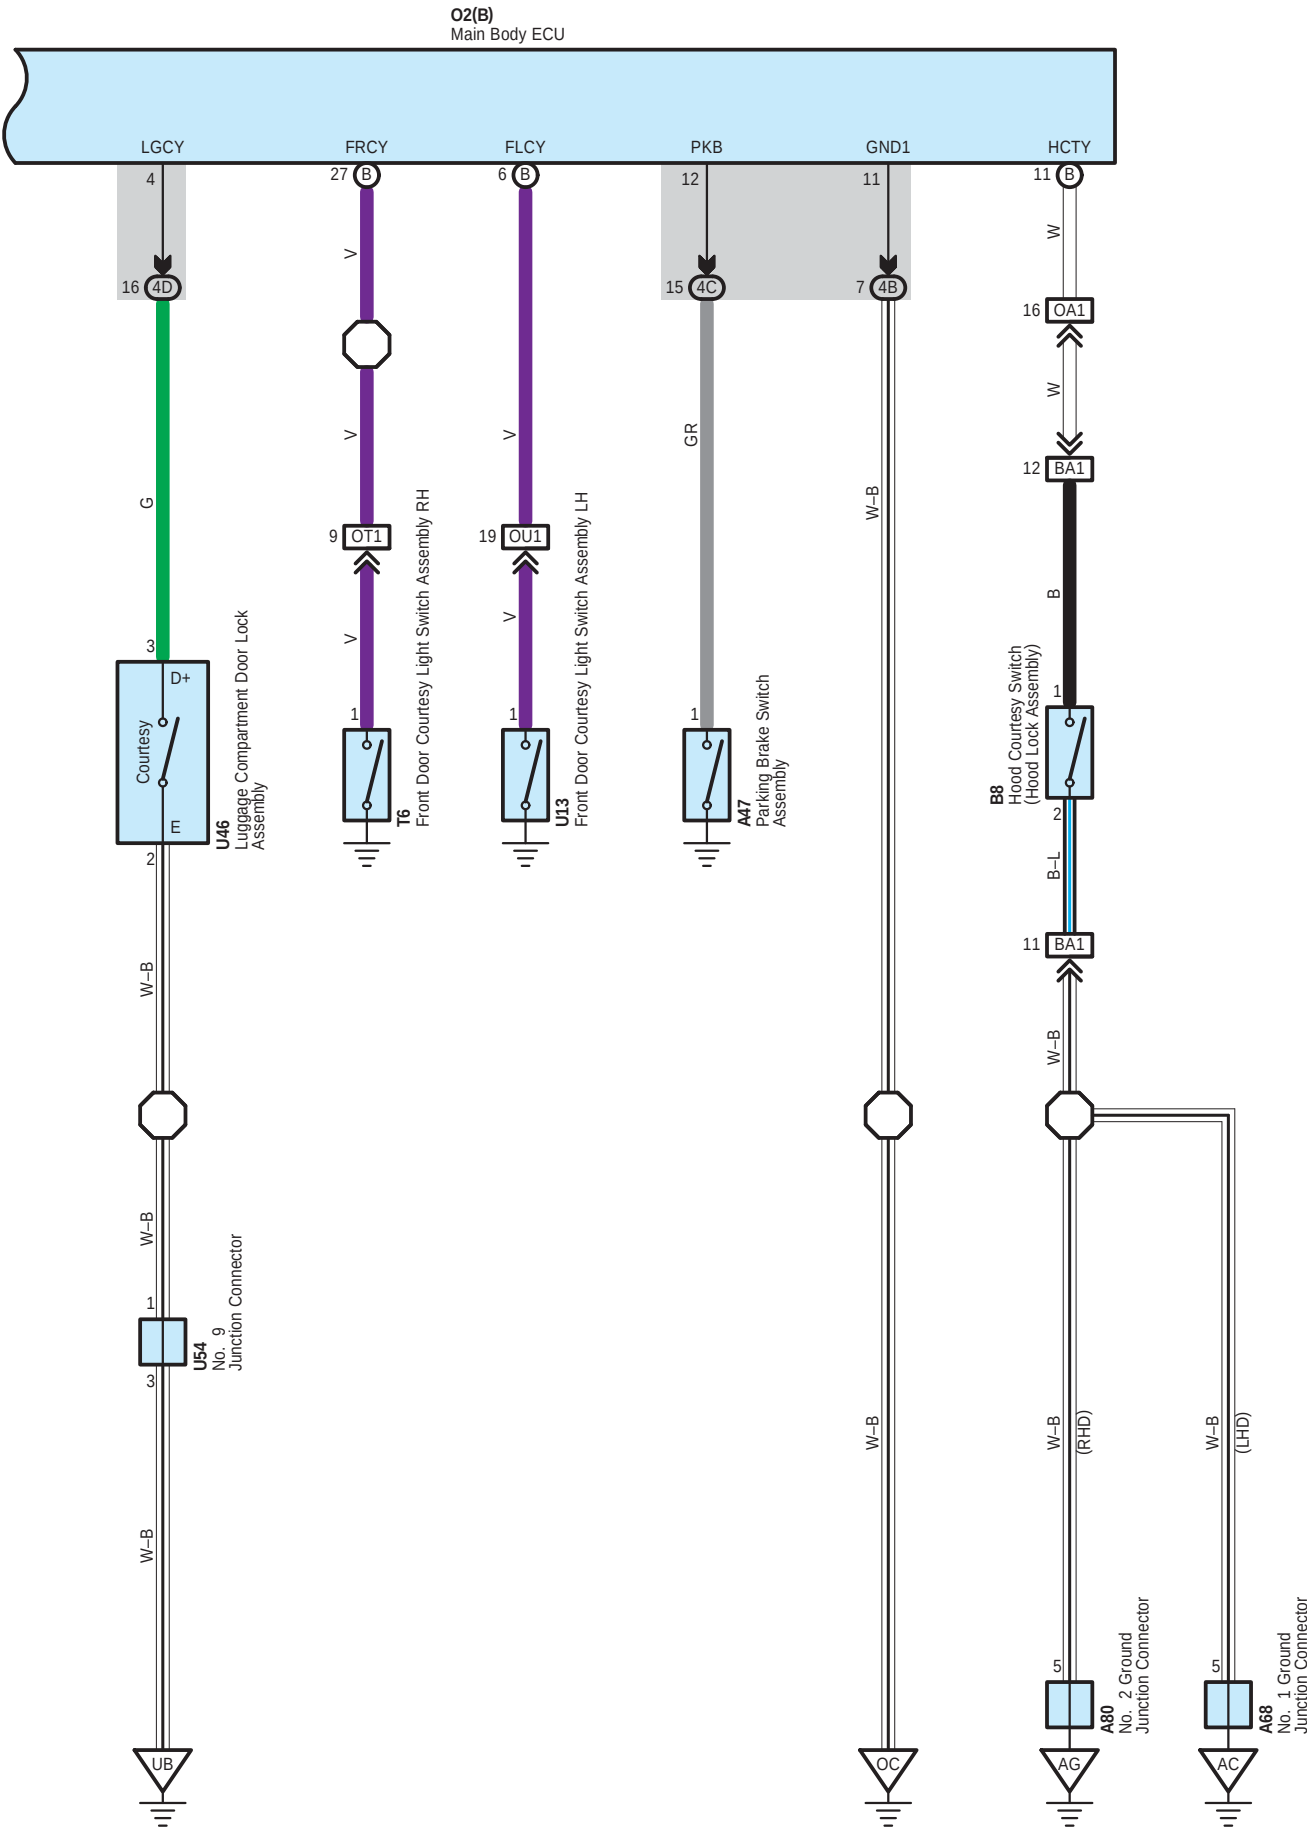


Combination Meter

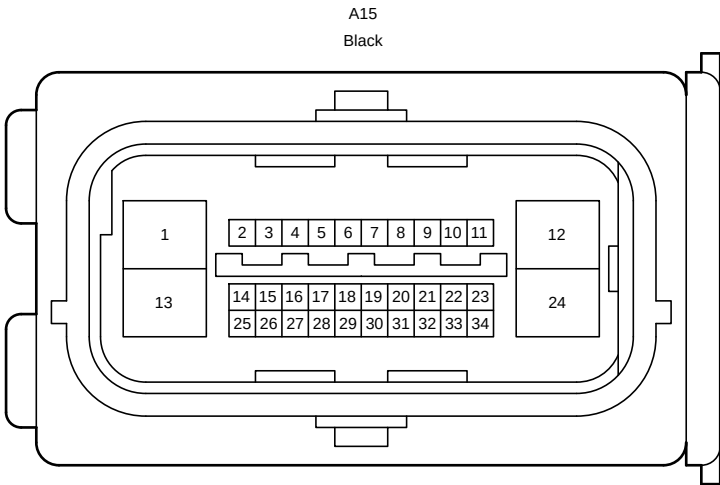


90980-12686




90980-11207

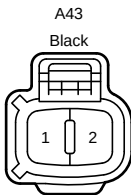


90980-11068




90980-10871

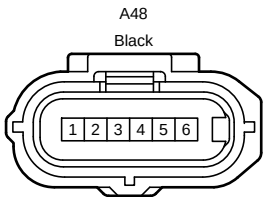


90980-12831

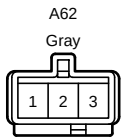


90980-11071

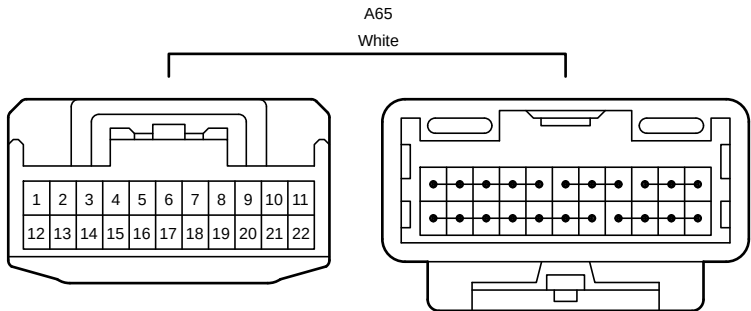


90980-12372

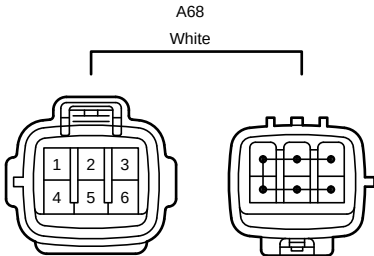


90980-11194

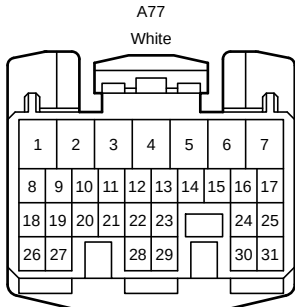


90980-12525

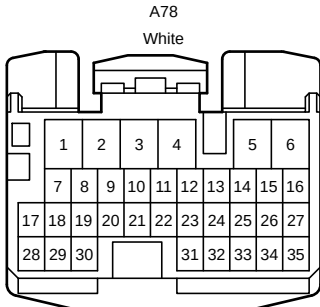


90980-12529

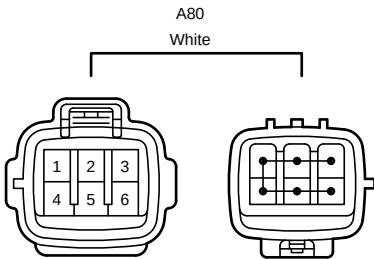

90980-11194













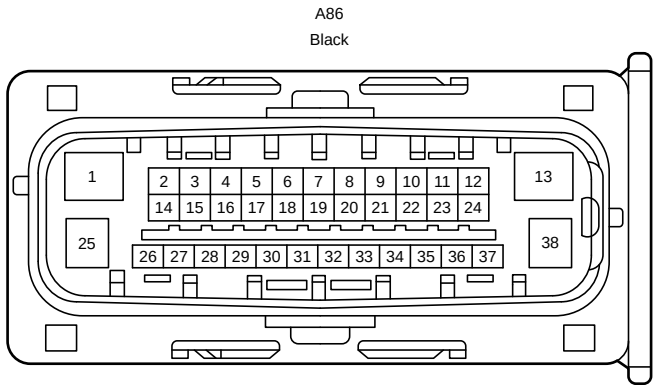


90980-12B01










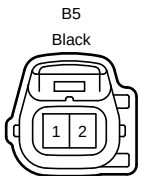


90980-11070


Combination Meter

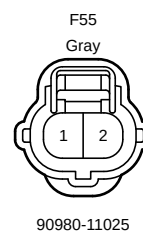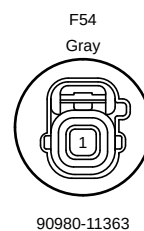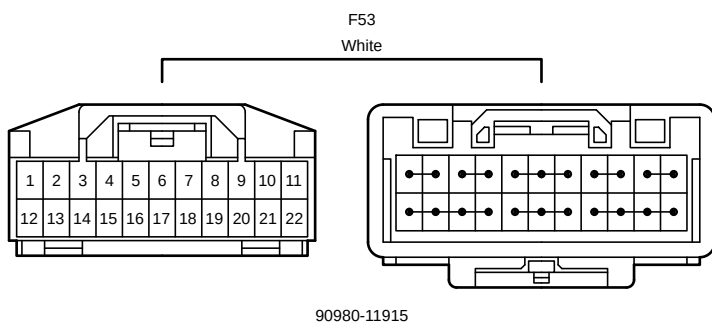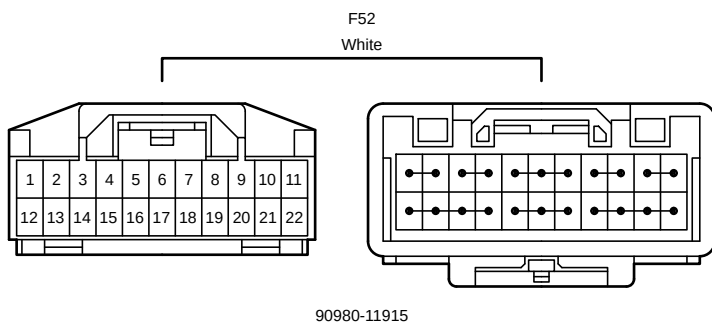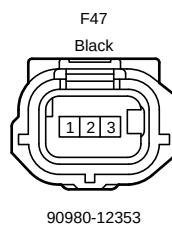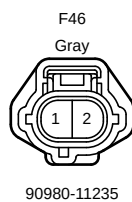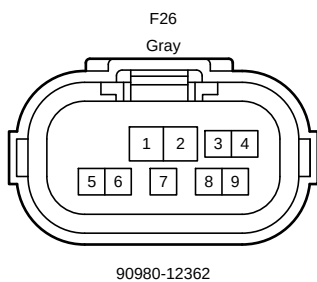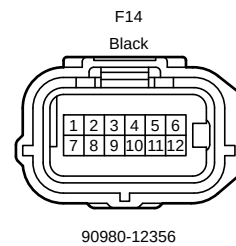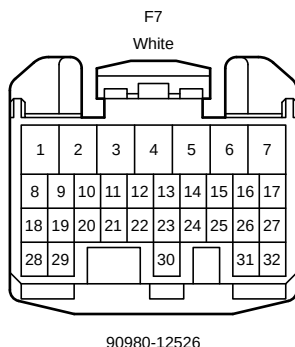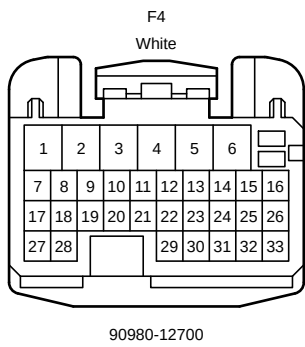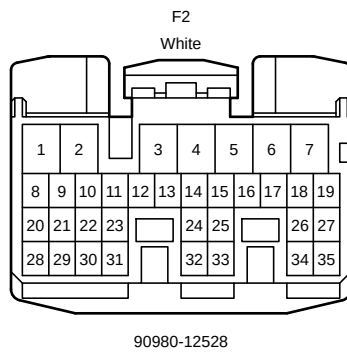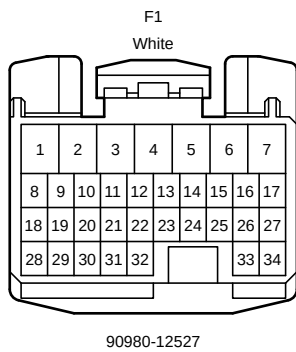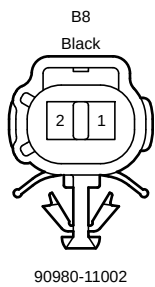


Combination Meter

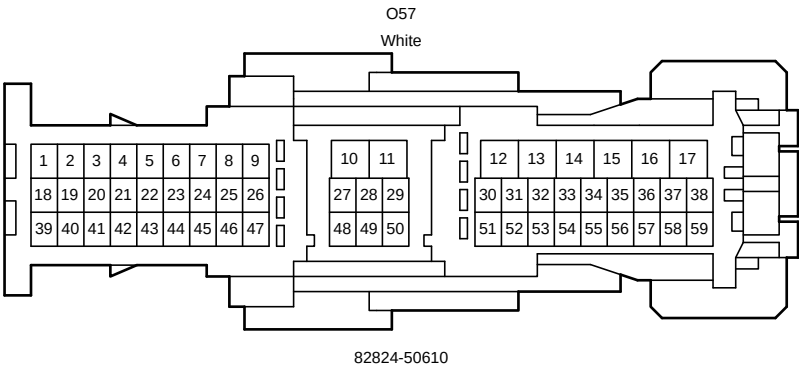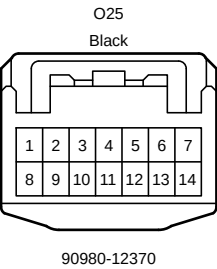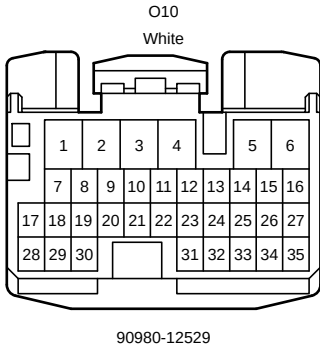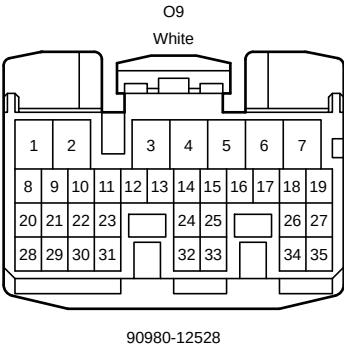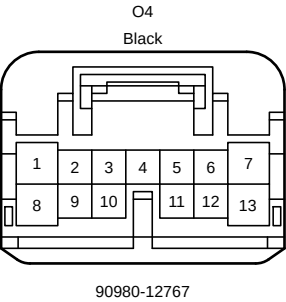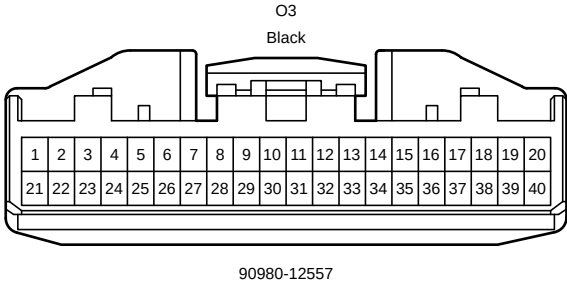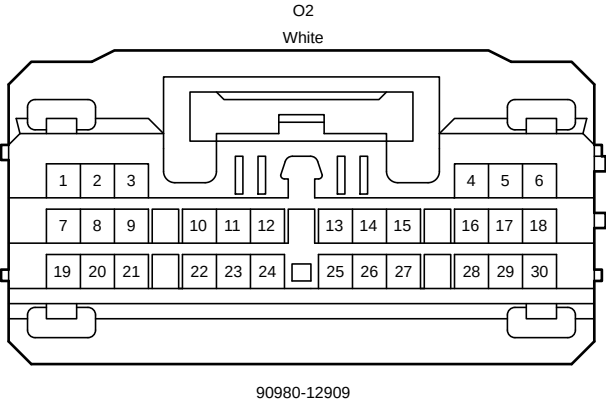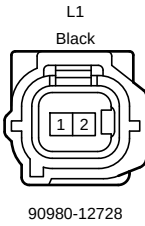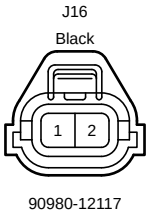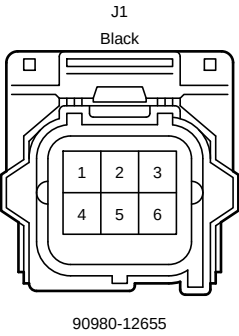


Combination Meter

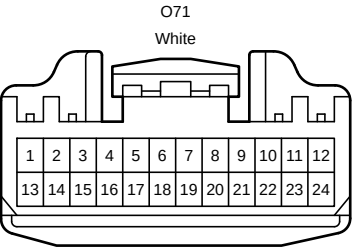


90980-12905

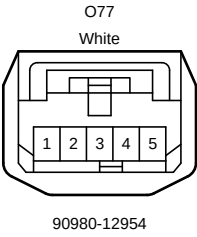


90980-12954

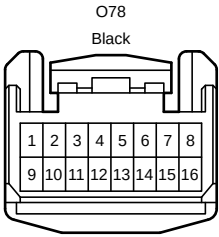



90980-12553

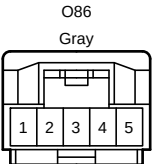



90980-11909

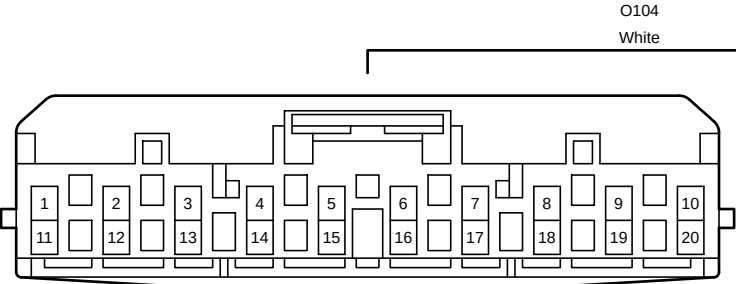


90980-12A58

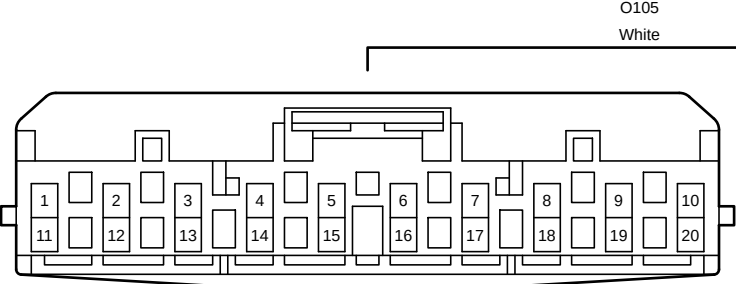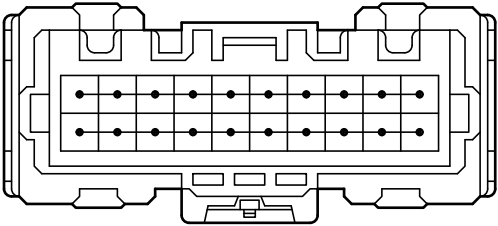


90980-12A58

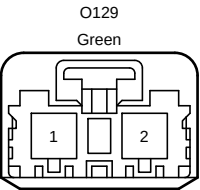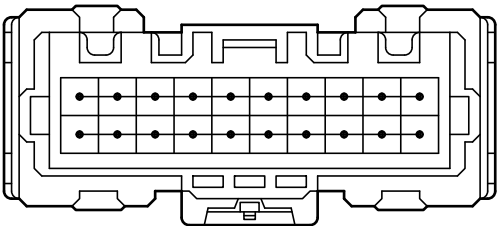

90980-12A73




90980-12593

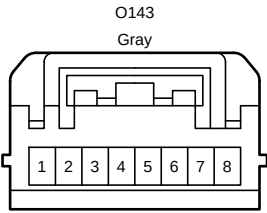


90980-12550




90980-10871

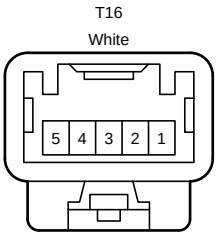


90980-12365

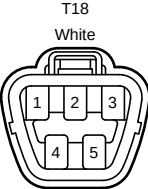


90980-11077




90980-10871

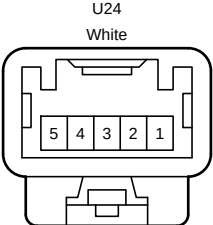

90980-12365








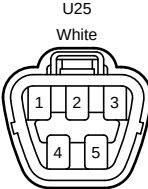


90980-11077




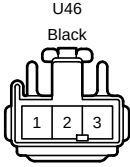


90980-10908





Combination Meter

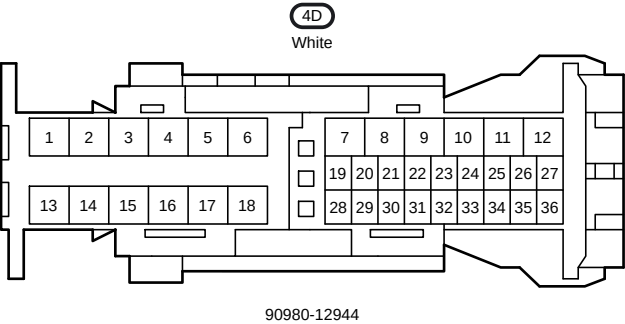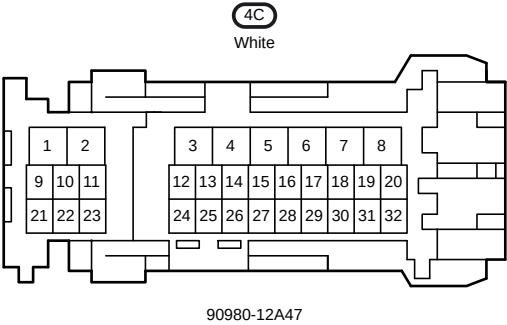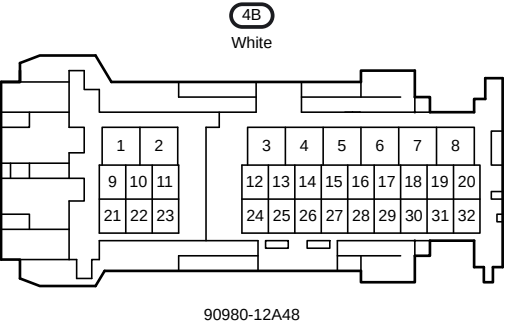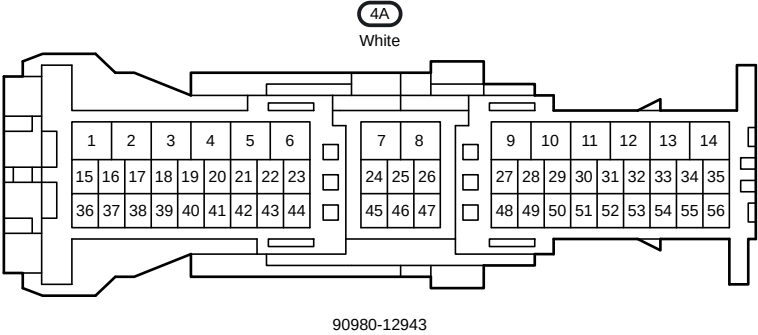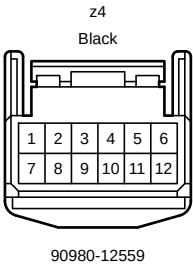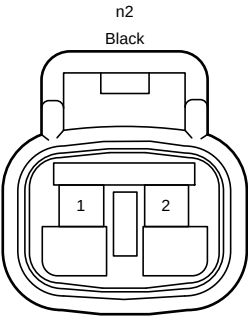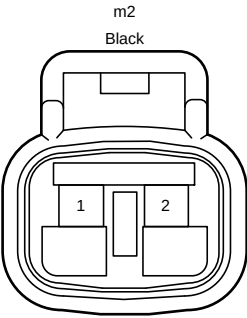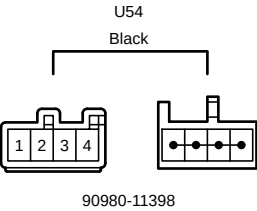

Combination Meter

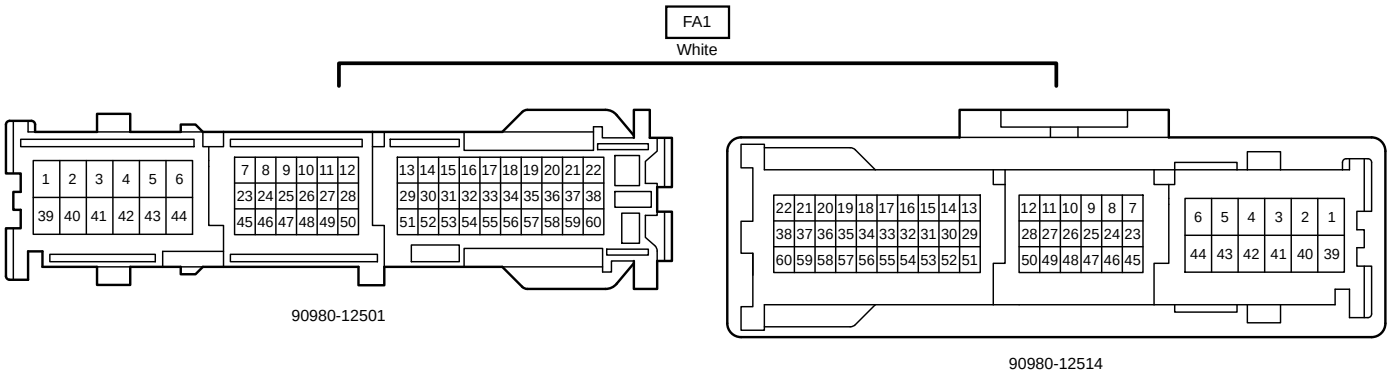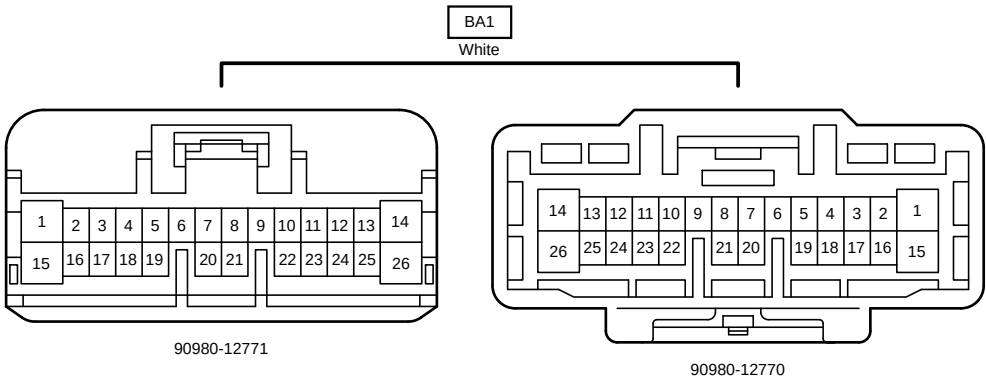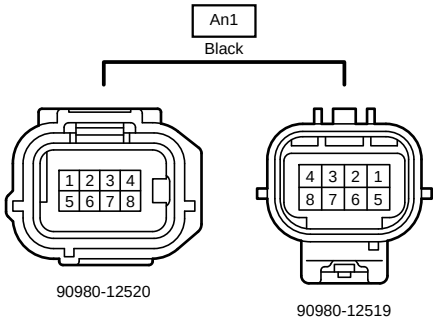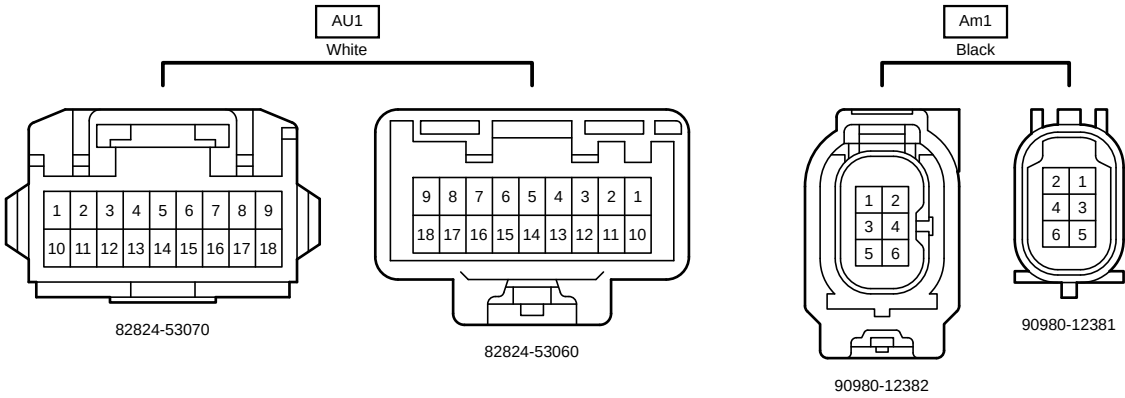


Combination Meter

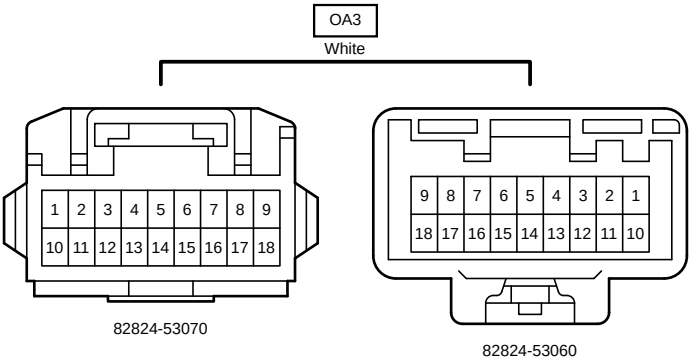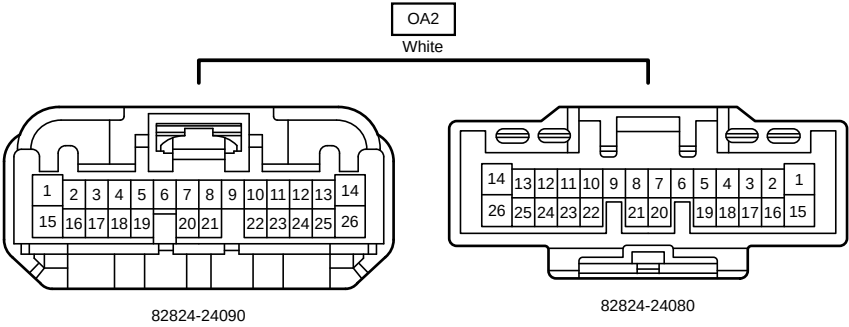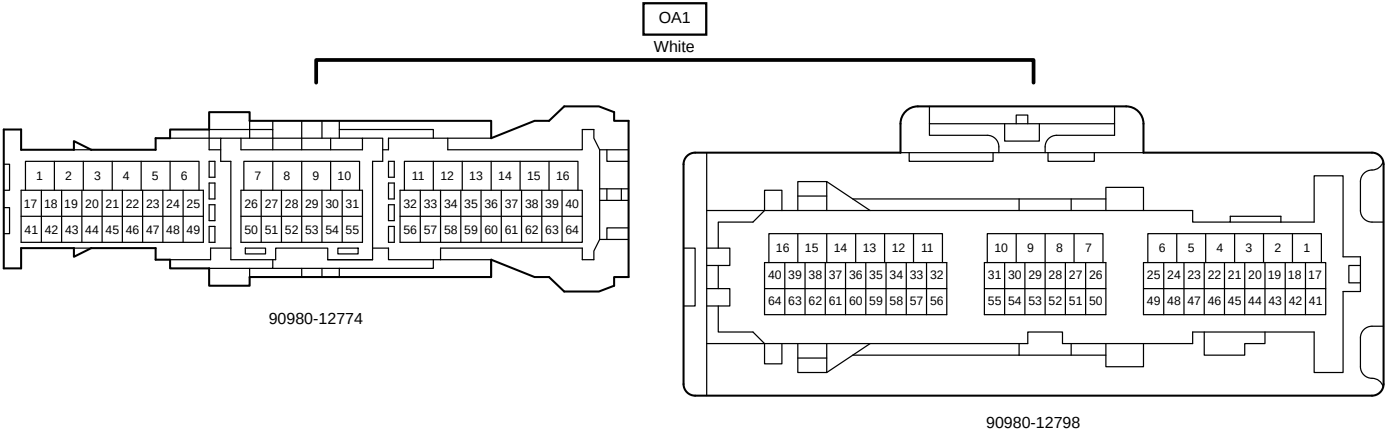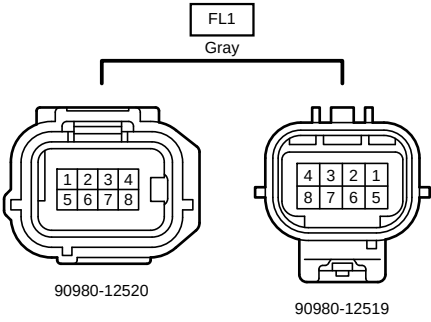


Combination Meter

OA5
White

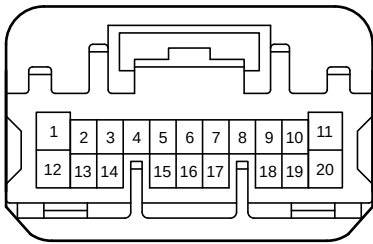


90980-12741

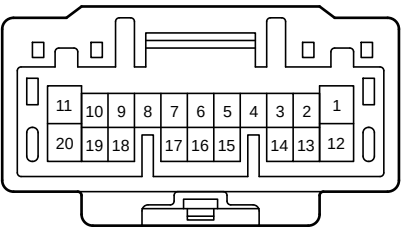


90980-12740

OT1
White

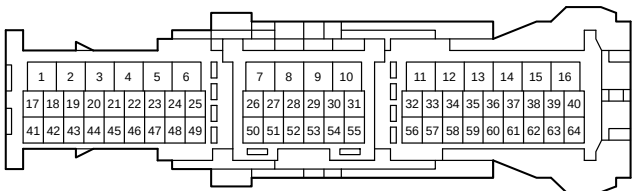


90980-12774

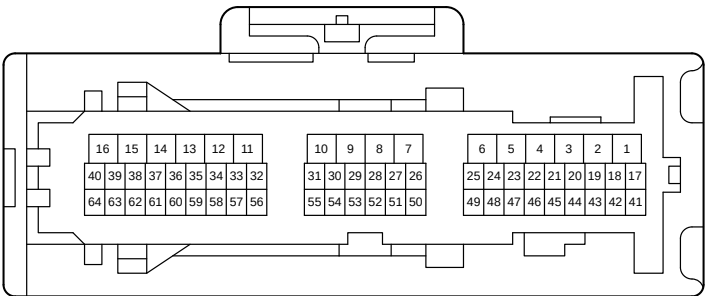


90980-12798

OU1
White

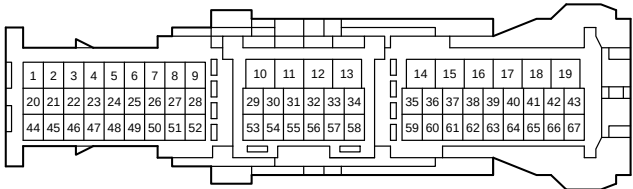


90980-12783

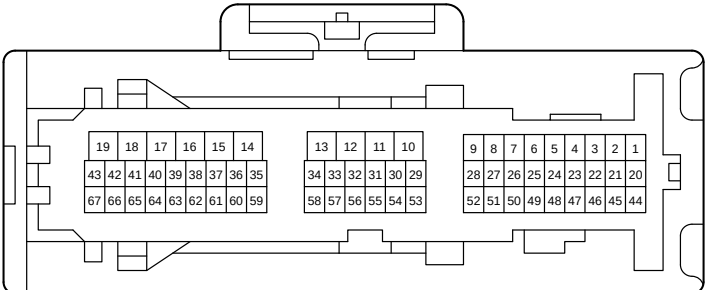


90980-12800

TU1
Black

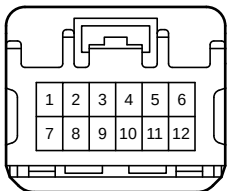


90980-12737

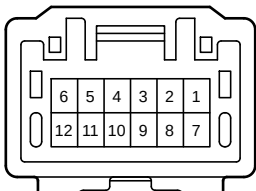


90980-12736

TU2
White

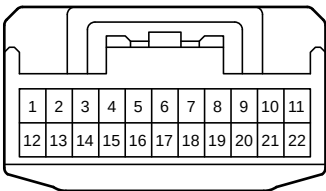

90980-12372

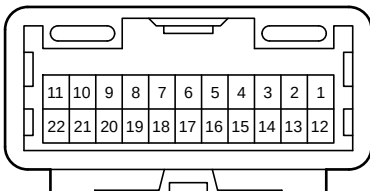

90980-12371