






RADIATOR SUPPORT (ASSY)

REPLACEMENT

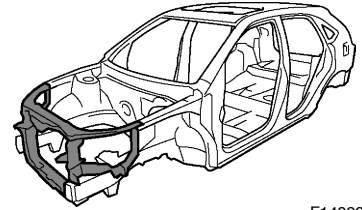

F14829-A


REMOVAL

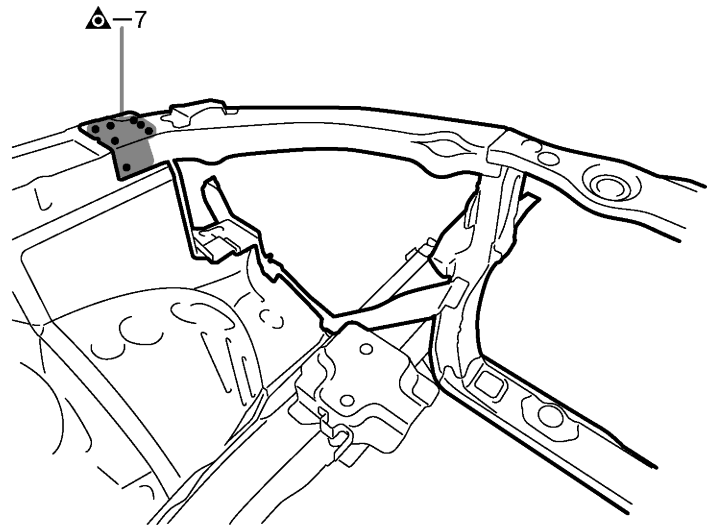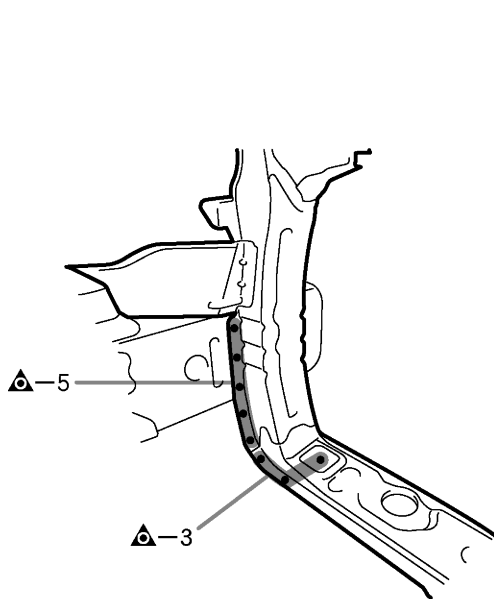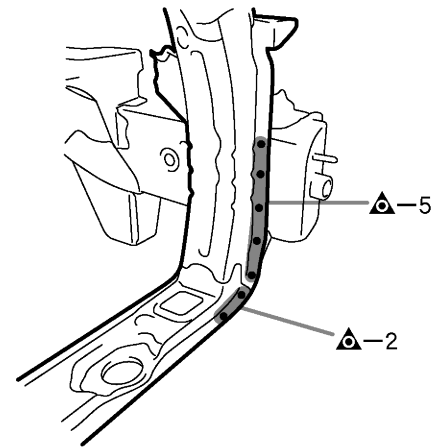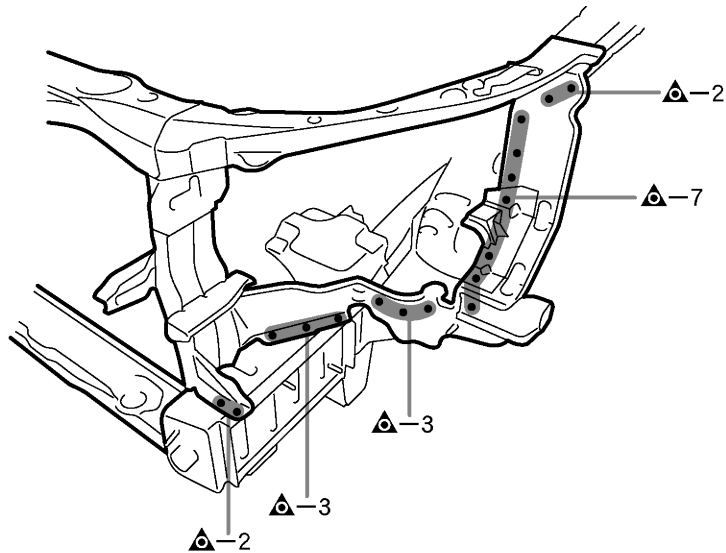

F20655

INSTALLATION



- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

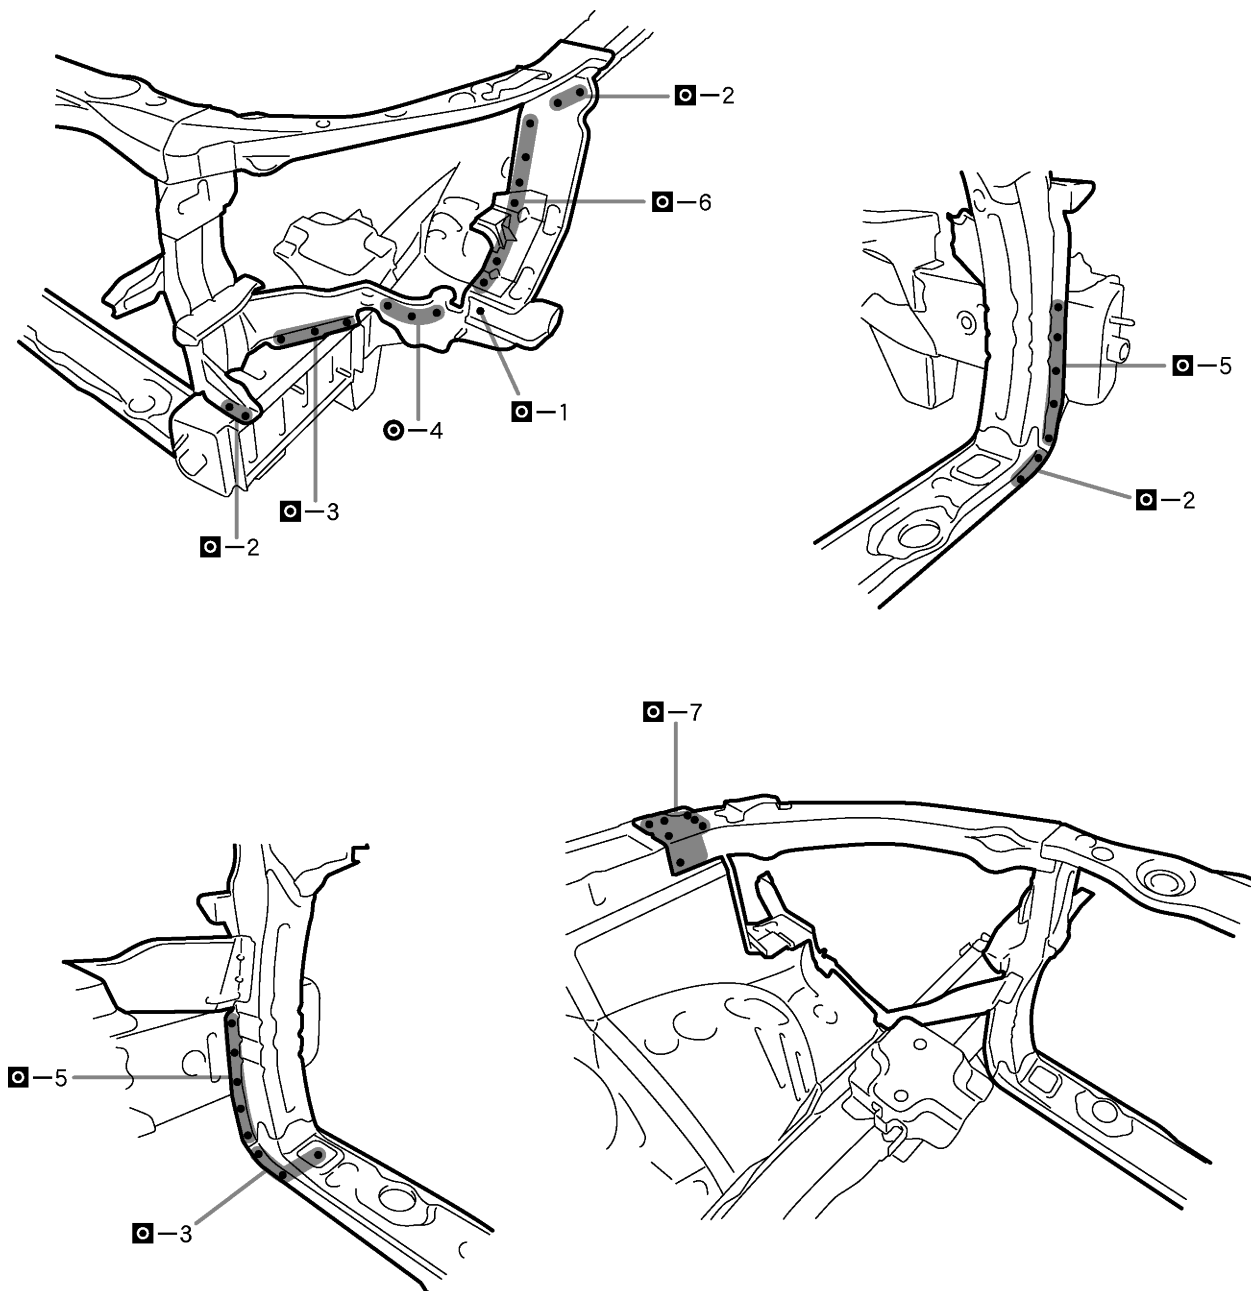

F20656

POINT

- 1 Inspect the fitting of the front fender and hood, etc., before welding, since this affects the appearance of the finish.

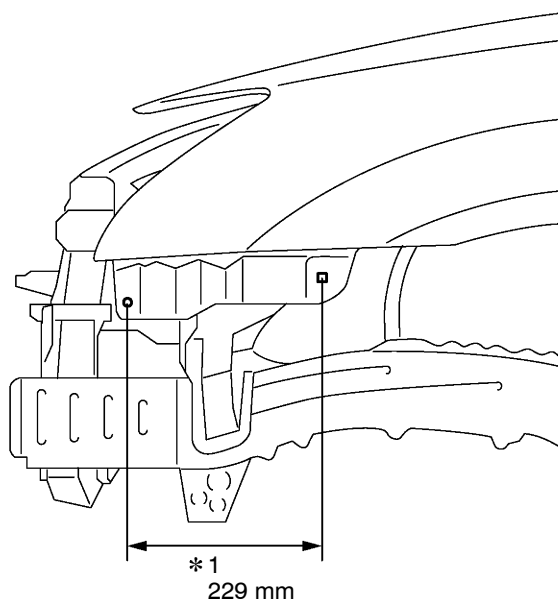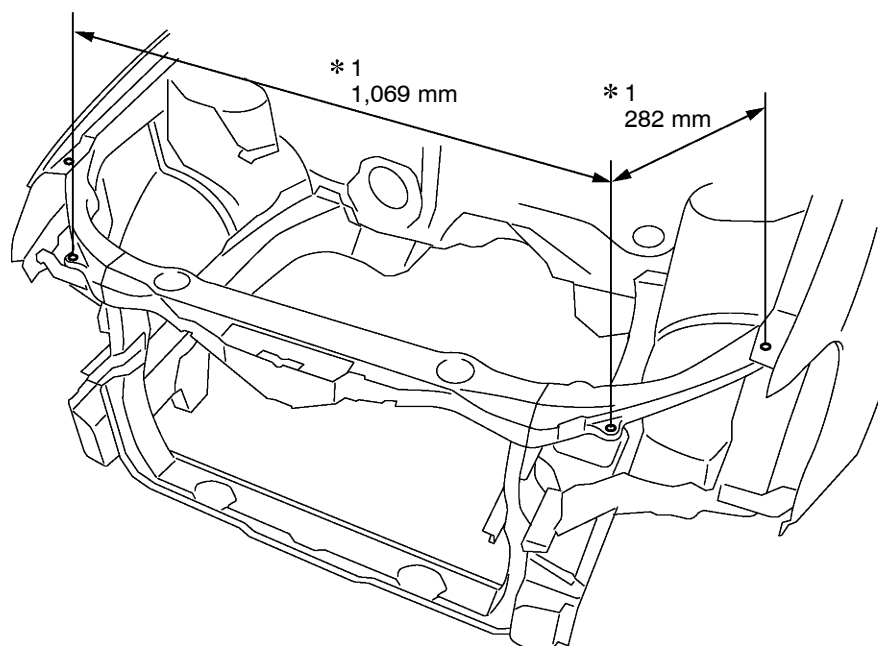

F14831

POINT

- 1 Measure the dimensions before installing the headlights.
- 2 *1: Reference value

229 mm (9.02 in.)

282 mm (11.10 in.)

1,069 mm (42.09 in.)