


## FRONT APRON TO COWL SIDE UPPER MEMBER (ASSY)



### REPLACEMENT

With the radiator side support and front body pillar lower gusset removed.

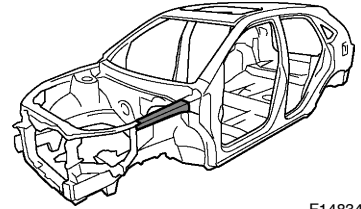

F14834-A

### REMOVAL

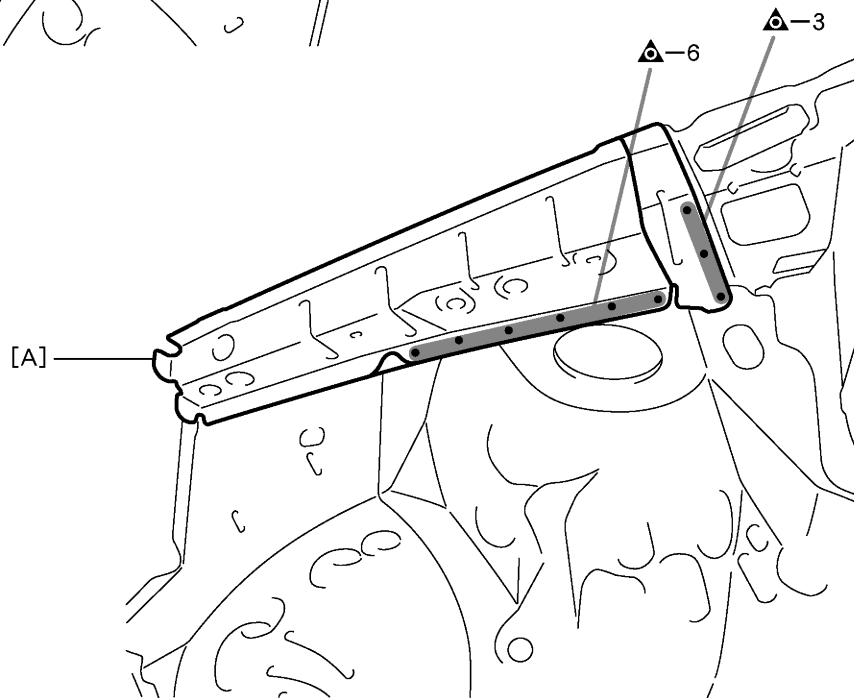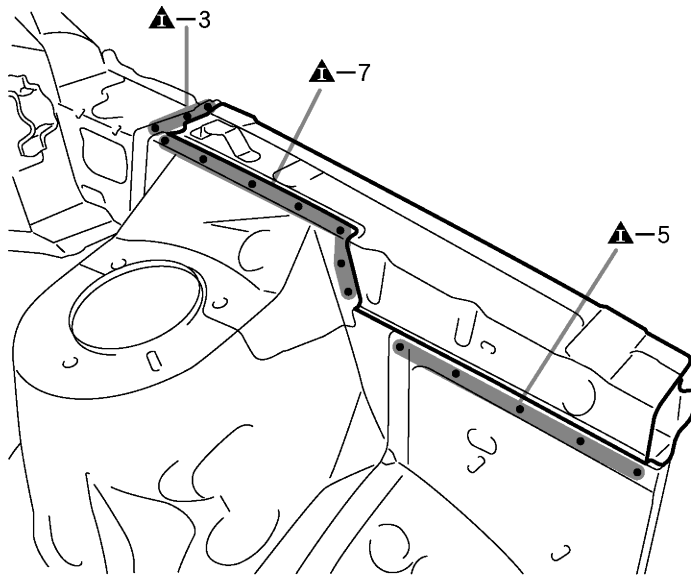

F14834

### POINT


- 1 Remove the [A] at the same time.

### PART NAME

[A] Front Apron To Cowl Side Lower Member

**INSTALLATION**

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

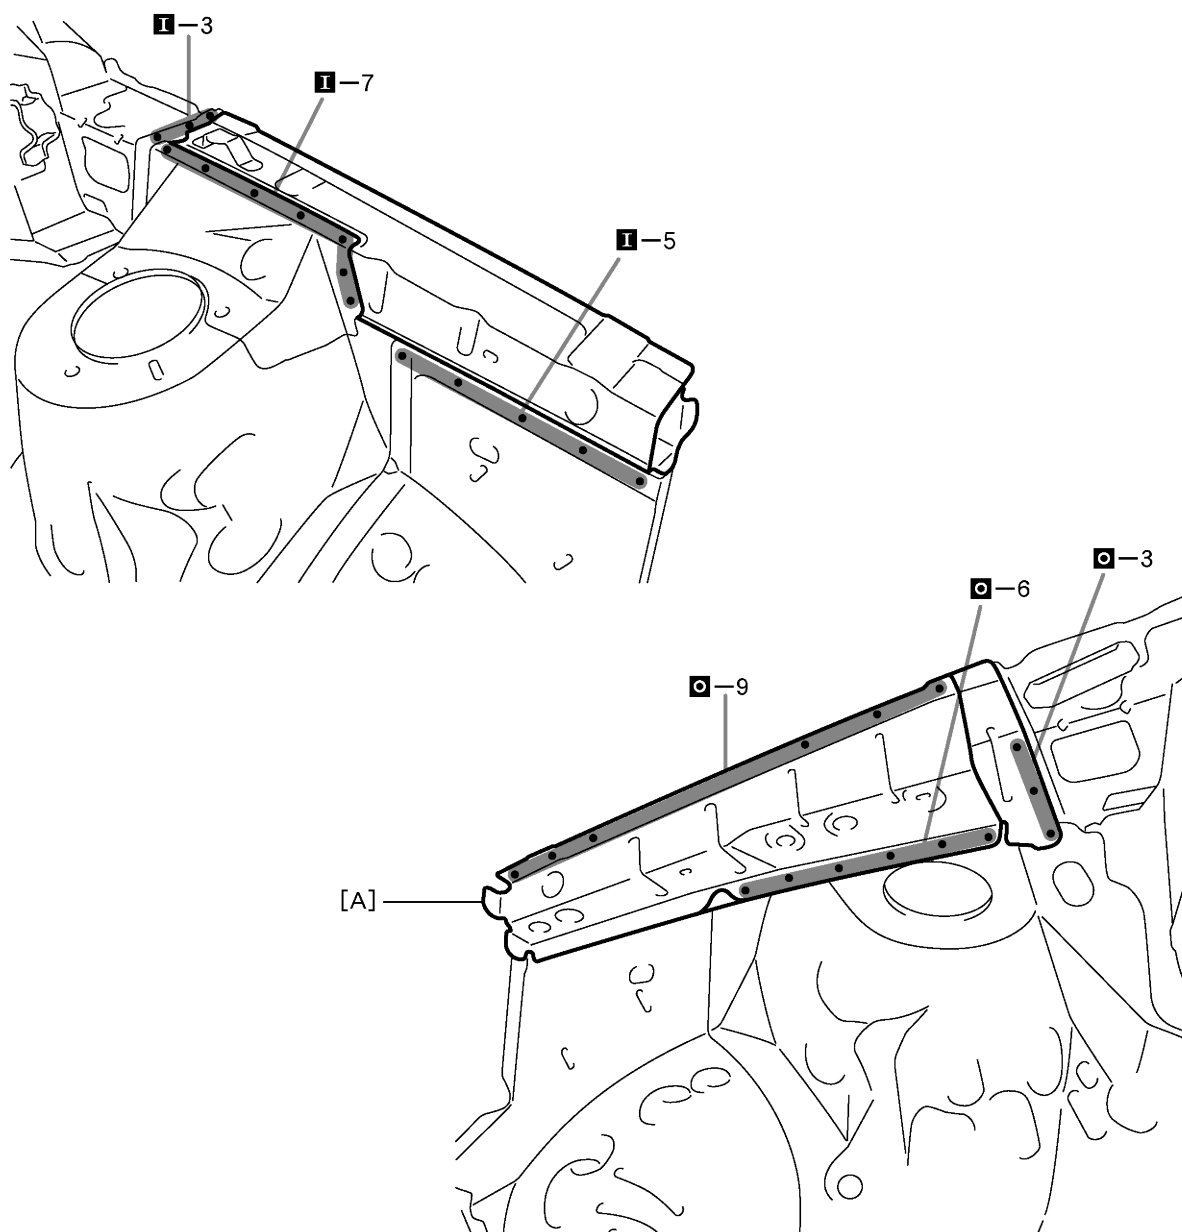

F14835

**POINT**

- 1 Inspect the fitting of the front fender and hood, etc., before welding, since this affects the appearance of the finish.

**PART NAME**

[A] Front Apron To Cowl Side Lower Member