
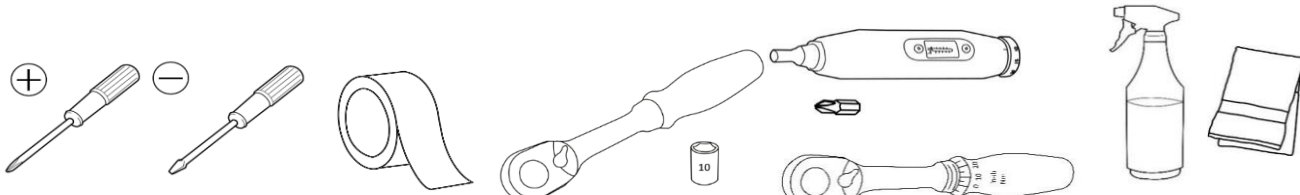
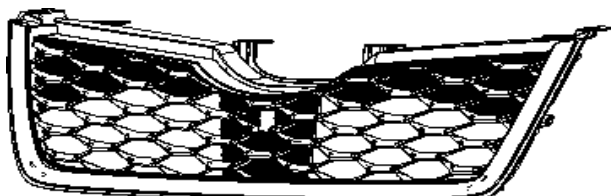

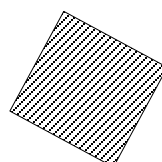

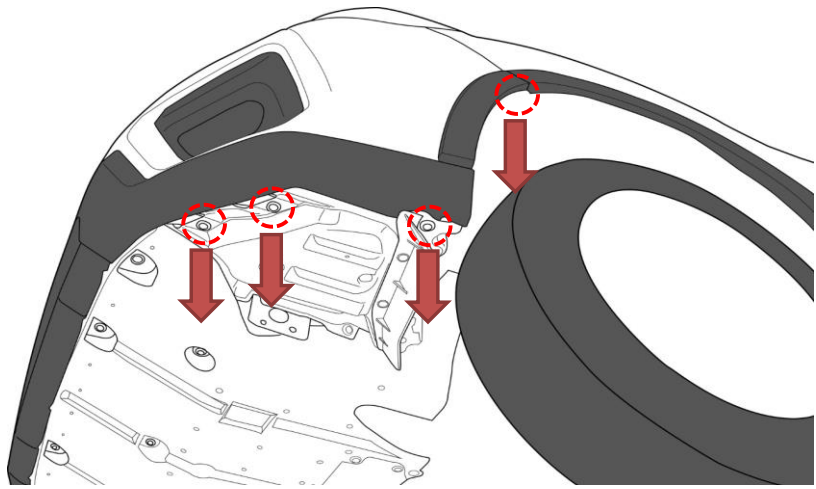
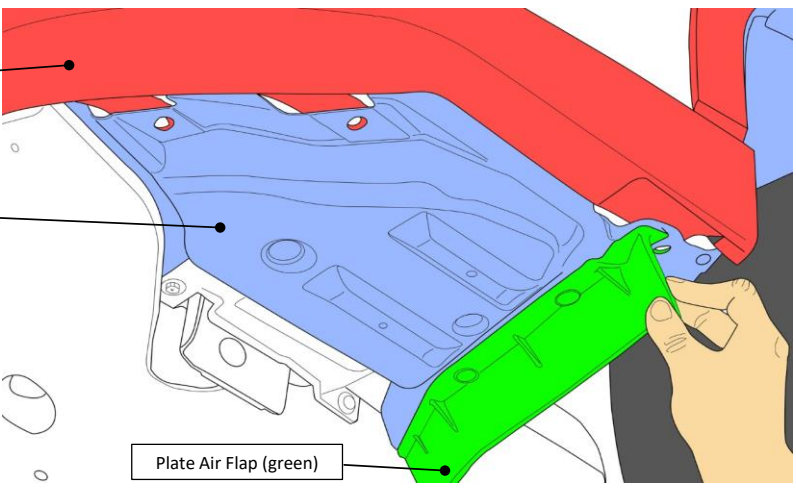
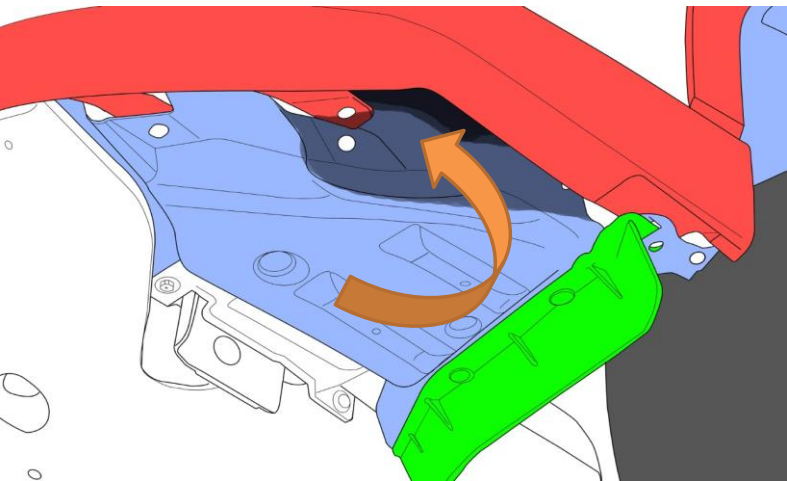
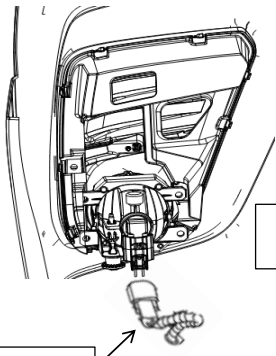

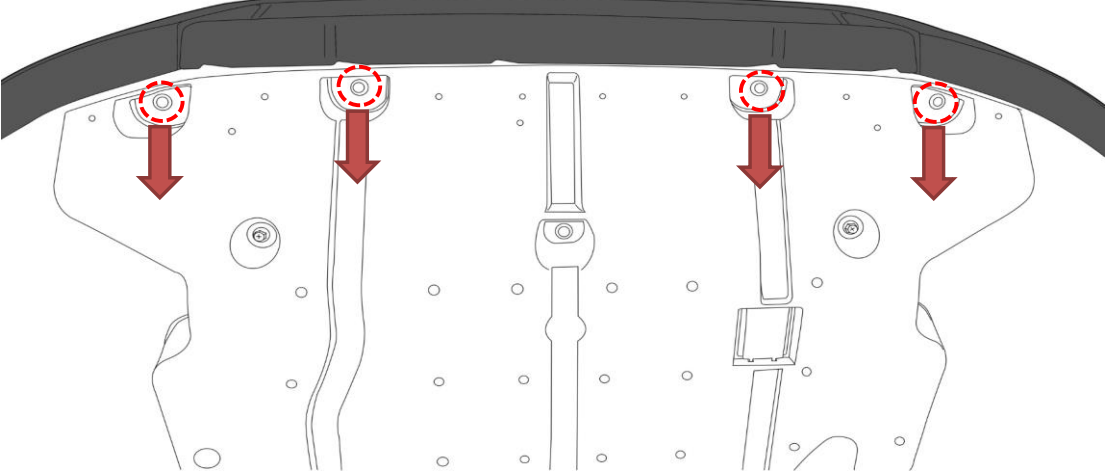
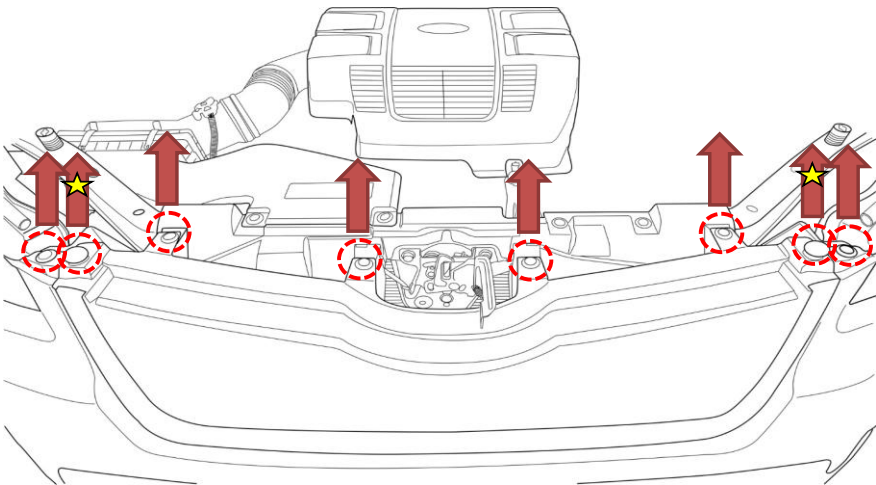

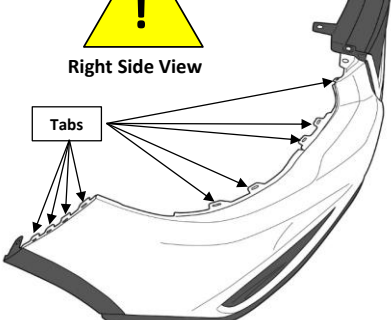
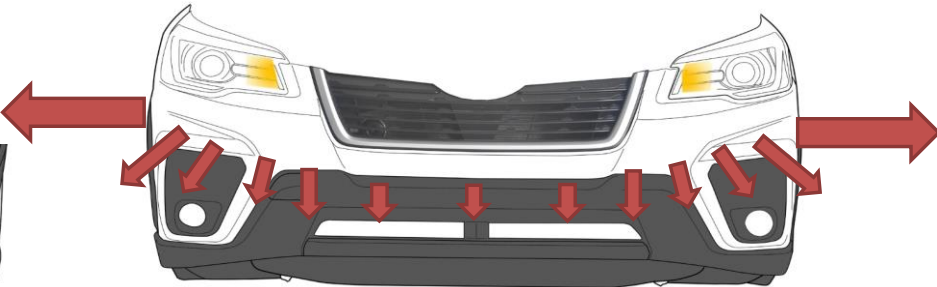

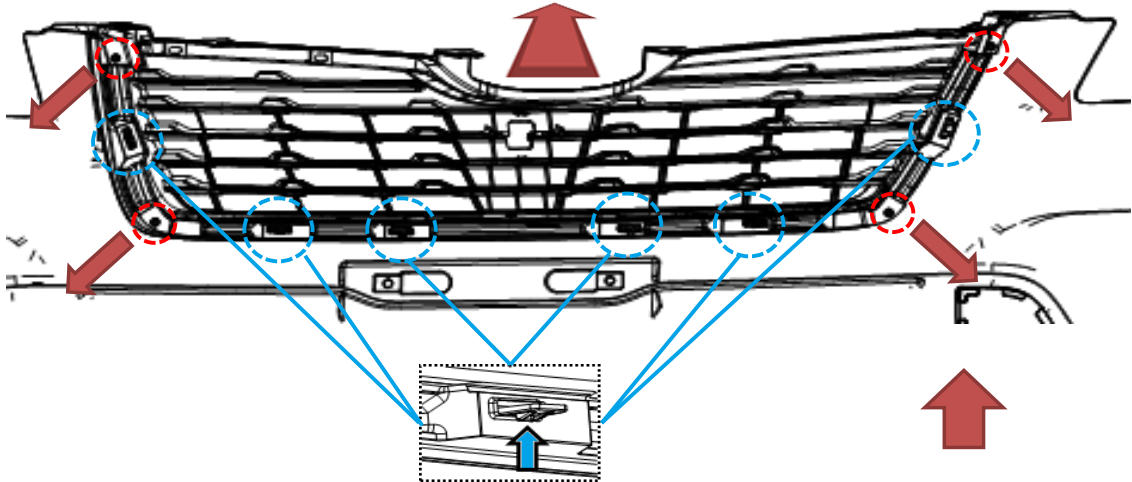
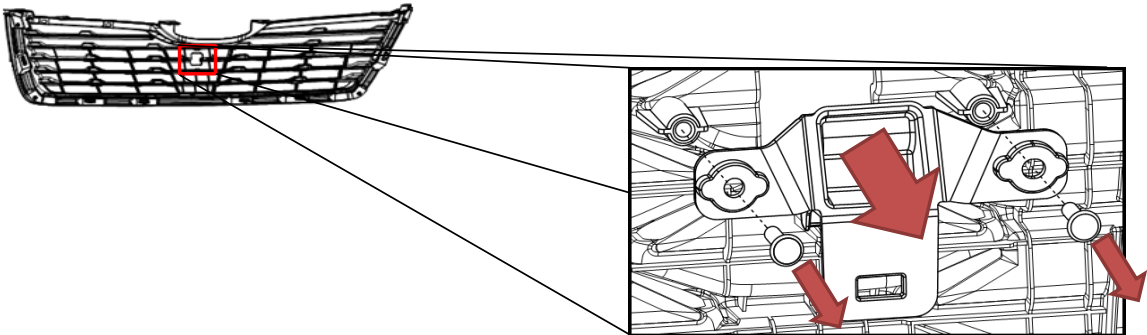
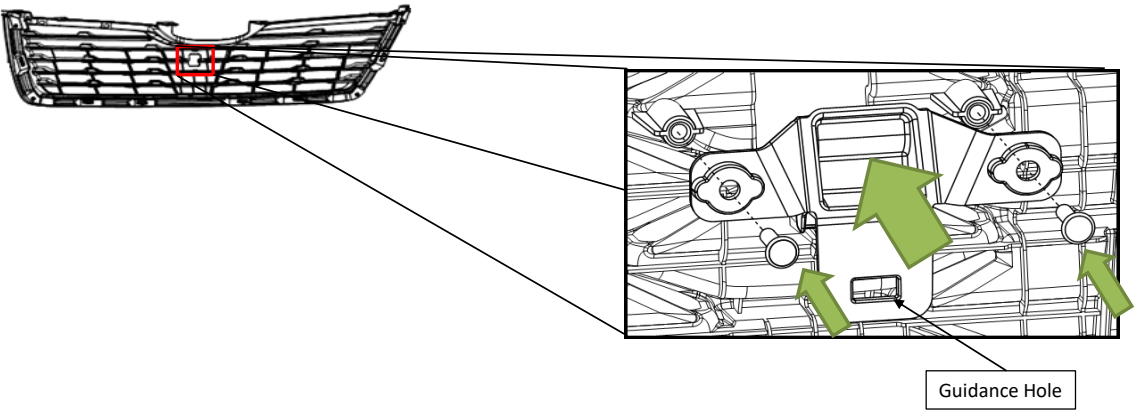

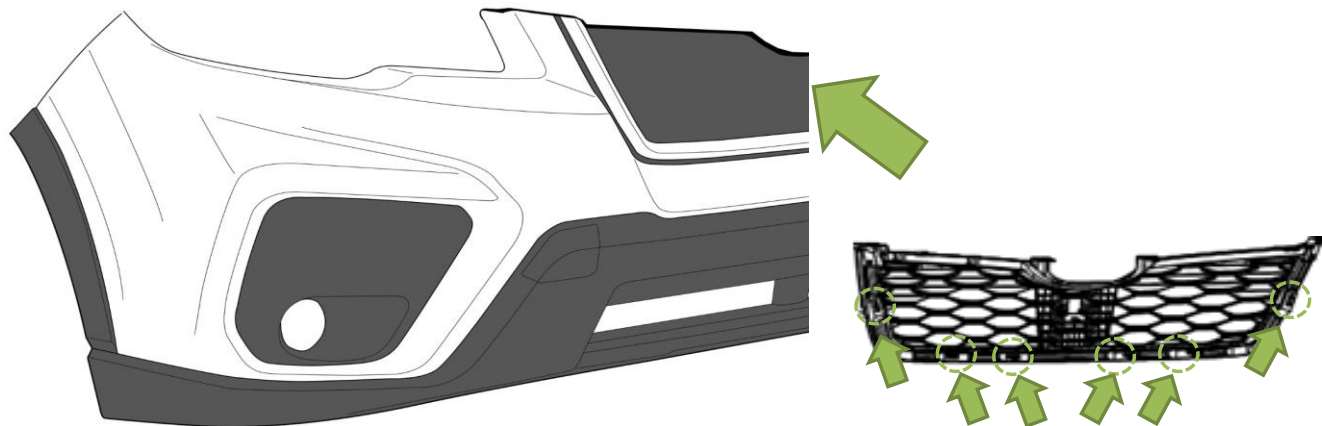
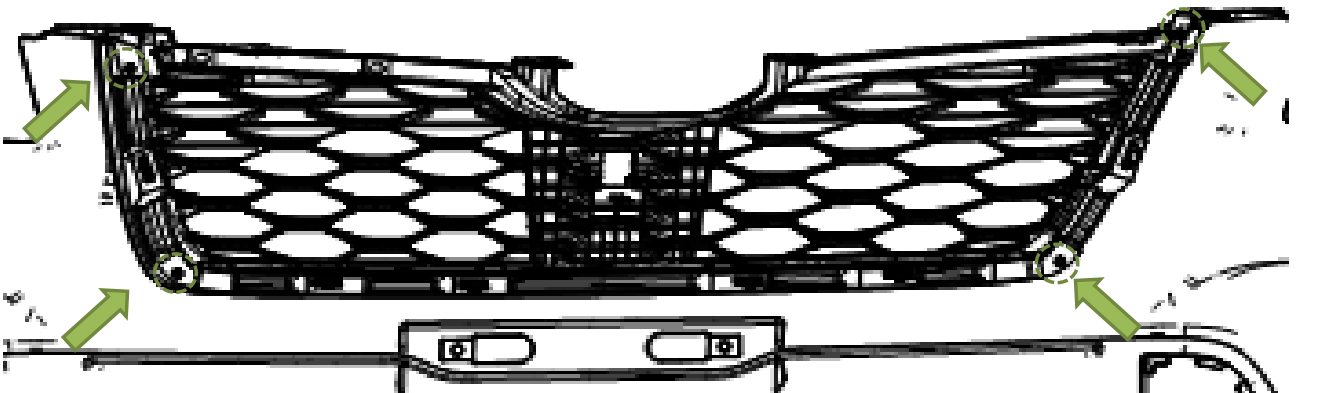
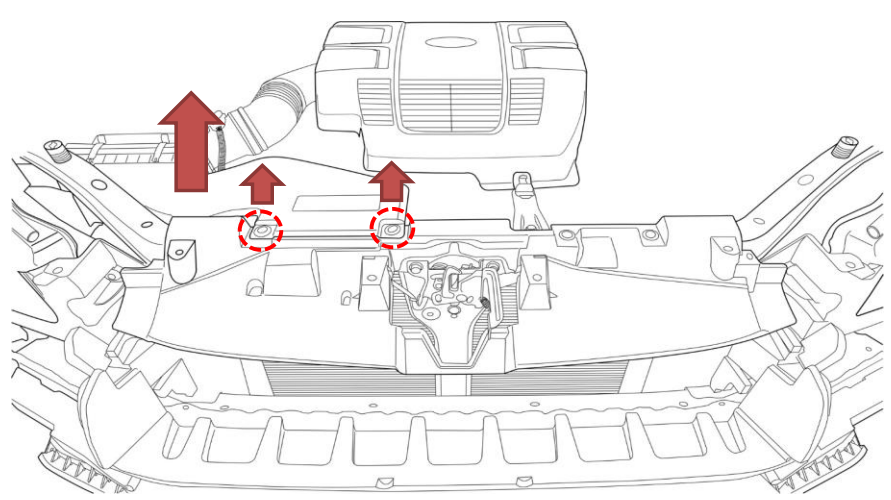
 SUBARU		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE	
			
TOOLS REQUIRED:			
 <div>50/50 Mixture Isopropyl Alcohol / Water</div>			
PRECAUTIONS:			
<ol style="list-style-type: none">1. When installing this product, park the car on a level ground and apply the parking brake.2. All vehicle clips and screws will be re-used. Please store in a safe location.3. Find a helper to assist with maneuvering the front bumper.4. Be careful around painted surfaces to prevent any vehicle damage.5. Be careful handling the grille. Only place on clean soft surfaces to prevent scratches.6. Do not use excessive force during any parts removal or installation.7. After installing this product, check all parts are securely attached.			
KIT CONTENTS:			
   <div>Sport GrilleCover BracketFoam Cushion</div>			
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	ISSUE 00	06/20/19	SUBARU OF AMERICA
			PAGE 1 / 10


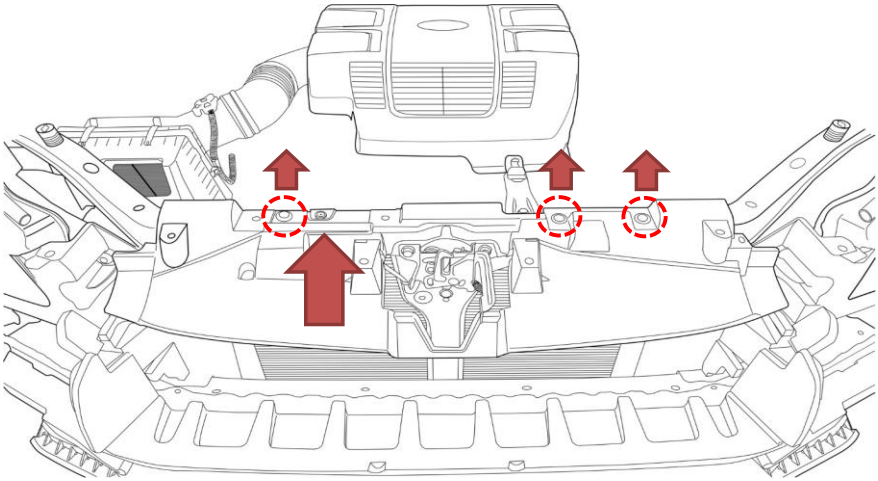
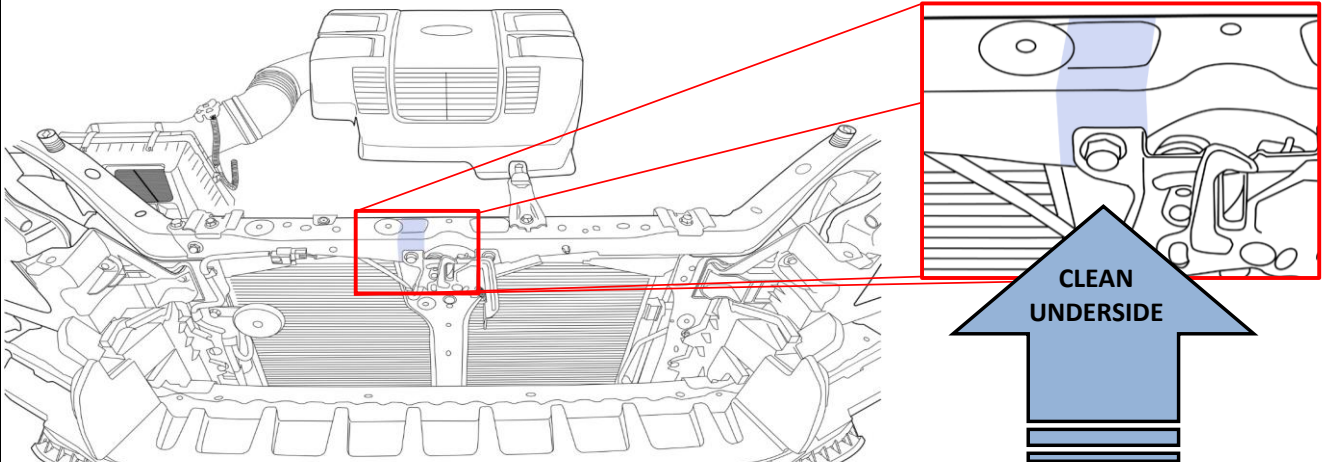
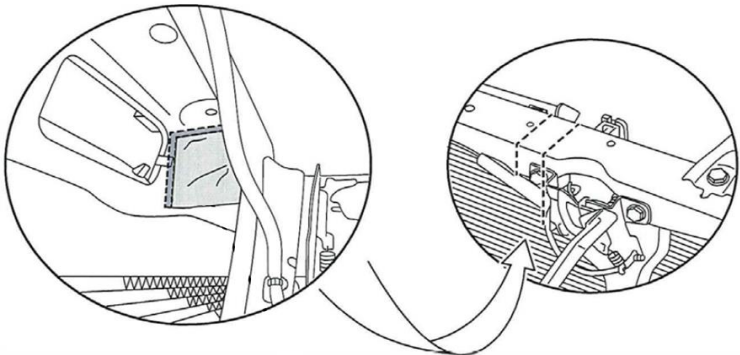
<div data-bbox="131 136 581 189" data-label="Image"> </div> <div data-bbox="131 189 581 241" data-label="Section-Header"> <h1> INSTALLATION INSTRUCTIONS </h1> </div>		<div data-bbox="581 136 1471 189" data-label="Text"> <p>PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210</p> </div> <div data-bbox="581 189 1471 241" data-label="Text"> <p>DESCRIPTION: SPORT GRILLE</p> </div>		
<div data-bbox="131 241 581 262" data-label="Text"> <p>STEP 1: Disconnect negative battery cable but do not disconnect at battery terminal.</p> </div>		<div data-bbox="581 241 1471 766" data-label="Image"> </div>		
<div data-bbox="131 766 581 787" data-label="Text"> <p>STEP 2: Wash front bumper in areas shown.</p> </div>		<div data-bbox="581 766 1471 1291" data-label="Image"> </div>		
<div data-bbox="131 1291 581 1312" data-label="Text"> <p>STEP 3: Tape both headlights and fenders, hood latch lever and areas around the grille as shown.</p> </div>		<div data-bbox="581 1291 1471 1837" data-label="Image"> </div>		
<div data-bbox="131 1837 402 1900" data-label="Text"> <p>PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210</p> </div>	<div data-bbox="402 1837 669 1900" data-label="Text"> <p>ISSUE 00</p> </div>	<div data-bbox="669 1837 935 1900" data-label="Text"> <p>06/20/19</p> </div>	<div data-bbox="935 1837 1292 1900" data-label="Text"> <p>SUBARU OF AMERICA</p> </div>	<div data-bbox="1292 1837 1471 1900" data-label="Text"> <p>PAGE 2 / 10</p> </div>


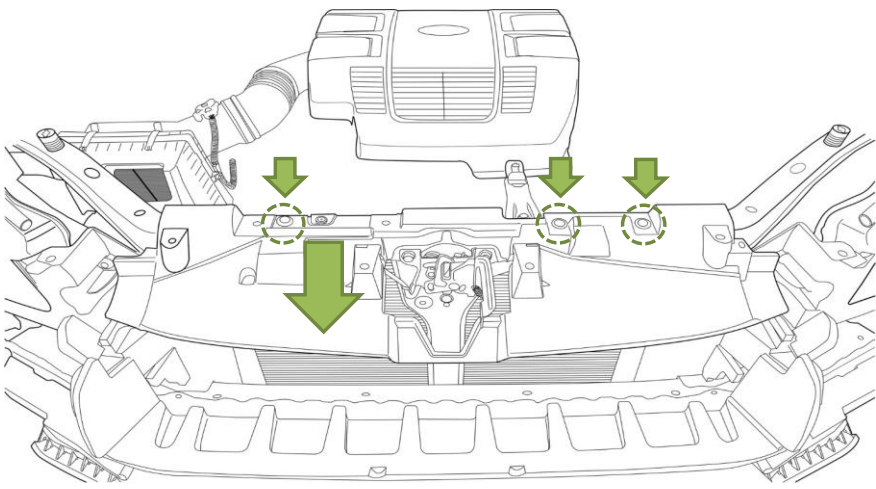
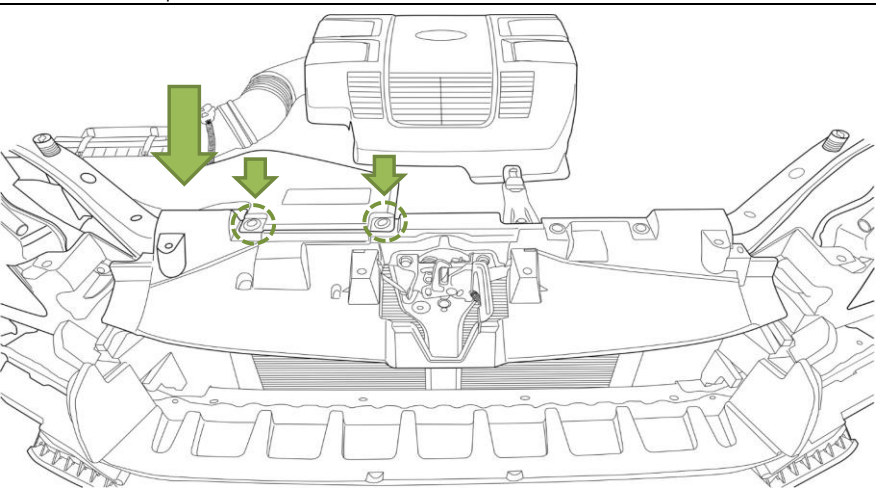

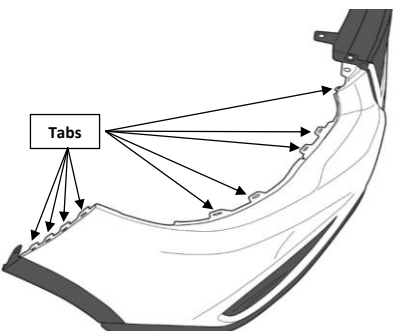
<div> SUBARU</div>		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE	
STEP 4: Remove body clip in inner wheel well and then 3 clips on the underside. Repeat on other side.			
			
STEP 5: Take a picture or study how the front bumper, mud flap, plate air flap assemble together. Note the overlap sequence.			
<div><div>Front Bumper (red)</div><div>Mud Flap (blue)</div><div>Plate Air Flap (green)</div></div>			
STEP 6: For vehicles with fog lights, fold mudguard inward, reach in, disconnect fog light connector. Repeat on other side. For vehicles without fog lights, skip to Step 7.			
<div><div><div>Backside of Front Bumper</div><div>Fog Light Connector</div></div></div>			
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	ISSUE 00	06/20/19	<div>SUBARU OF AMERICA</div> <div>PAGE 3 / 10</div>


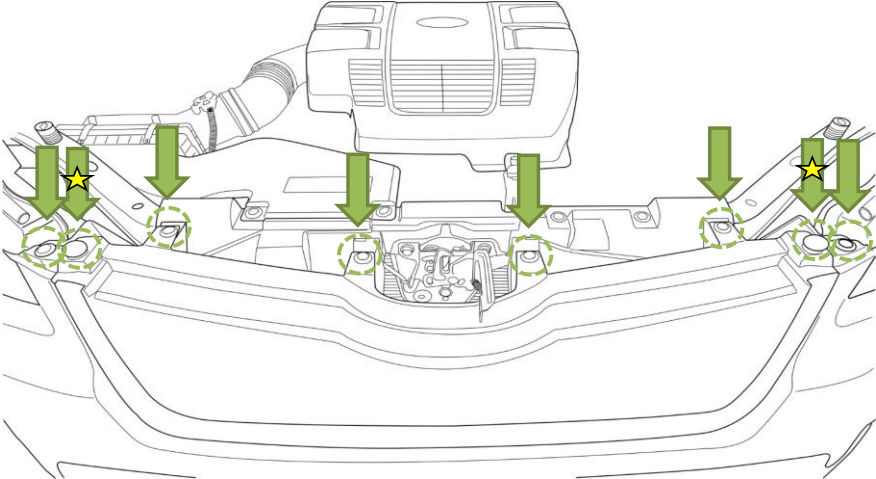
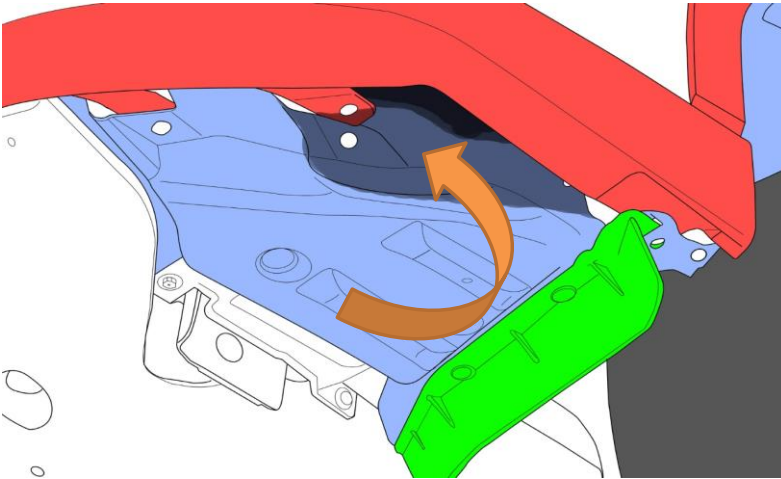
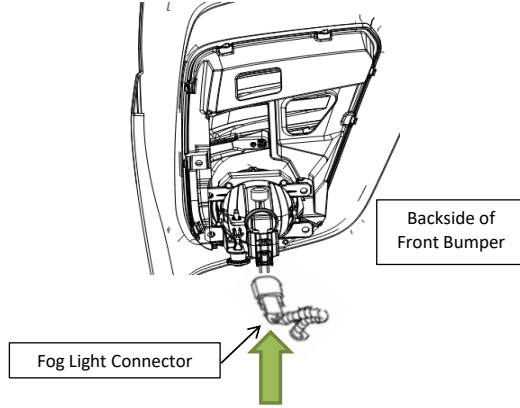
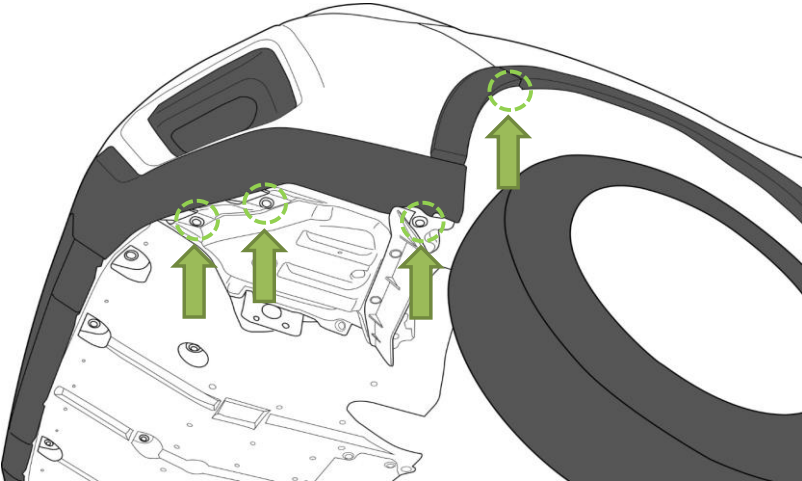
<div> SUBARU</div>		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE	
STEP 7: While under the vehicle, remove 4 clips from the underguard panel.			
			
STEP 8: Open hood, and remove 8 clips from upper surface of the front bumper. Note that 2 of the 8 clips are unique. Remember their positions.			
			
STEP 9: Note the location of the tabs in the image on the left. Carefully start removing the front bumper by pulling outward from the sides and then forward. Disengage each tab carefully and slowly. Excessive force can break a tab. Fully remove front bumper and gently place on a soft surface.			
<div><div><p>Right Side View</p><p>Tabs</p></div><div></div></div>			
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	ISSUE 00	06/20/19	<div>SUBARU OF AMERICA</div> <div>PAGE 4 / 10</div>


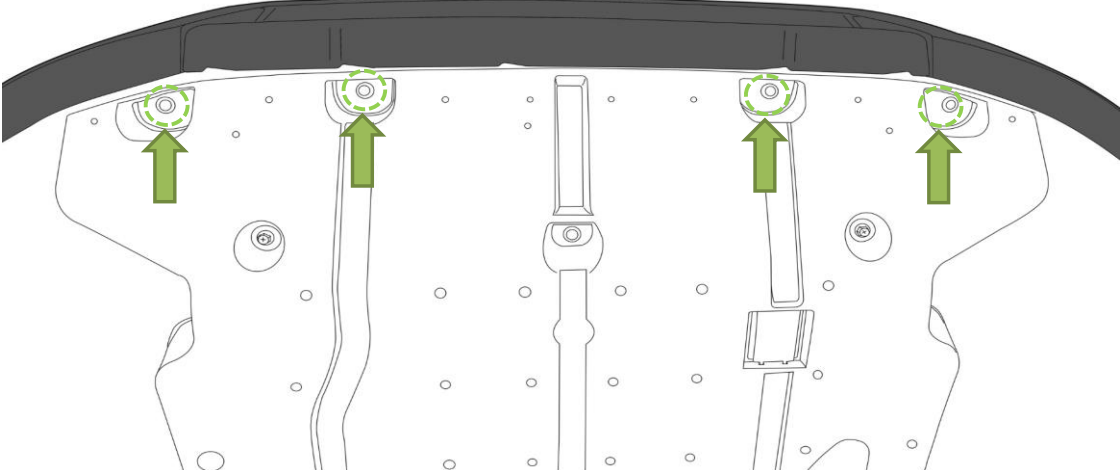

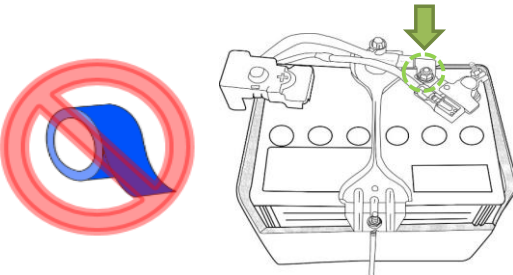

<div> SUBARU</div>		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE	
STEP 10: Remove 4 screws from the back of the grille. Carefully disengage 6 tabs and press forward to release the grille. Excessive force can break the tab.			
			
STEP 11: Place original grille on soft surface. Remove the 2 screws from the back of the grille and discard original cover bracket.			
			
STEP 12: Unpack new sport grille onto a soft surface. Reuse the 2 screws from the previous step and install the new cover bracket onto the sport grille. Be sure to use the rectangular guidance hole to help with installing new cover bracket. Torque screws to 13 in-lbs ± 4 in-lbs (1.5 N-m ± 0.5 N-m).			
			
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	ISSUE 00	06/20/19	SUBARU OF AMERICA
			PAGE 5 / 10

<div> SUBARU</div>		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE	
<p>STEP 13: Carefully insert the new sport grille from the front and gently press in to seat. Then apply firm pressure to engage each of the 6 clips. There should be an audible snap when it is properly engaged.</p>			
<div></div>			
<p>STEP 14: Re-install the 4 screws to secure the sport grille to the front bumper. Torque all screws to 13 in-lbs ± 4 in-lbs (1.5 N·m ± 0.5 N·m). Set aside front bumper with sport grille on a soft surface.</p>			
<div></div>			
<p>STEP 15: Use a phillips screw driver to disengage the 2 clips holding down the air intake duct. Lift duct directly upward to remove.</p>			
<div></div>			
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210		ISSUE 00	06/20/19
SUBARU OF AMERICA		PAGE 6 / 10	

<div> SUBARU</div>		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210		
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE		
STEP 16: Use flathead screwdriver to remove 3 clips and then remove bracket grille.				
				
STEP 17: Use isopropyl alcohol to clean UNDER the area indicated in the image below.				
				
STEP 18: Attach the foam cushion so that the sticky sides attach to the underside of the vehicle's frame. Pay attention to the diagram that shows the front of the vehicle in relation to the sticky sides of the foam cushion. Press down firmly to bond both surfaces.				
<div><div><p>NOTE</p><p>FRONT OF VEHICLE</p><p>Sticky Sides of Foam Cushion</p><p>This sticky side faces rear of vehicle.</p></div></div>				
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210		ISSUE 00	06/20/19	<div>SUBARU OF AMERICA</div> <div>PAGE 7 / 10</div>

<div>SUBARU</div>		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210		
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE		
STEP 19: Re-install the bracket grille and 3 clips.				
				
STEP 20: Re-install the air intake duct and the 2 clips.				
				
STEP 21: Double check that the hood latch lever is generously taped. Carefully, re-install front bumper onto vehicle. Tip: Hang the center of the front bumper first and then work towards the sides. Ask a helper to hold the front bumper in place while you carefully engage each tab. Refer to Step 5's diagram to check the overlap sequence of the various panels on the bottom of the front bumper.				
<div><div><div>Confirm hood latch lever is taped before hanging bumper.</div><div>See Step 5 for overlap sequence for bottom of bumper.</div></div><div><div>Tabs</div></div></div>				
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	ISSUE 00	06/20/19	<div>SUBARU OF AMERICA</div>	PAGE 8 / 10

 SUBARU		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE	
STEP 22: Re-install 8 clips from the top surface of the front bumper and sport grille. Note the 2 unique clips and their respective locations.			
			
STEP 23: Reconnect fog light connector on both sides. Skip to Step 24 for vehicles without fog lights.			
			
STEP 24: Re-install 3 clips and the inner wheel well clip on each side.			
			
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210		ISSUE 00	06/20/19
		SUBARU OF AMERICA	
		PAGE 9 / 10	

<div> SUBARU</div>		PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	
INSTALLATION INSTRUCTIONS		DESCRIPTION: SPORT GRILLE	
STEP 25: Re-install 4 clips from the underguard panel.			
			
STEP 26: Remove protective tape, reconnect negative battery cable and torque to 7.5 N·m (5.5 ft-lbs), and if applicable, check that fog lamps turn on properly. Clean front bumper.			
			
STEP 27: Finished.			
			
PART NUMBER: J1010SJ200, J1010SJ201, J1010SJ210	ISSUE 00	06/20/19	SUBARU OF AMERICA
			PAGE 10 / 10