


**16.Ornament**

**A: INSTALLATION**

**1. LETTER MARK**

Align the end of application tape with the end of panel, then adhere the letter mark.

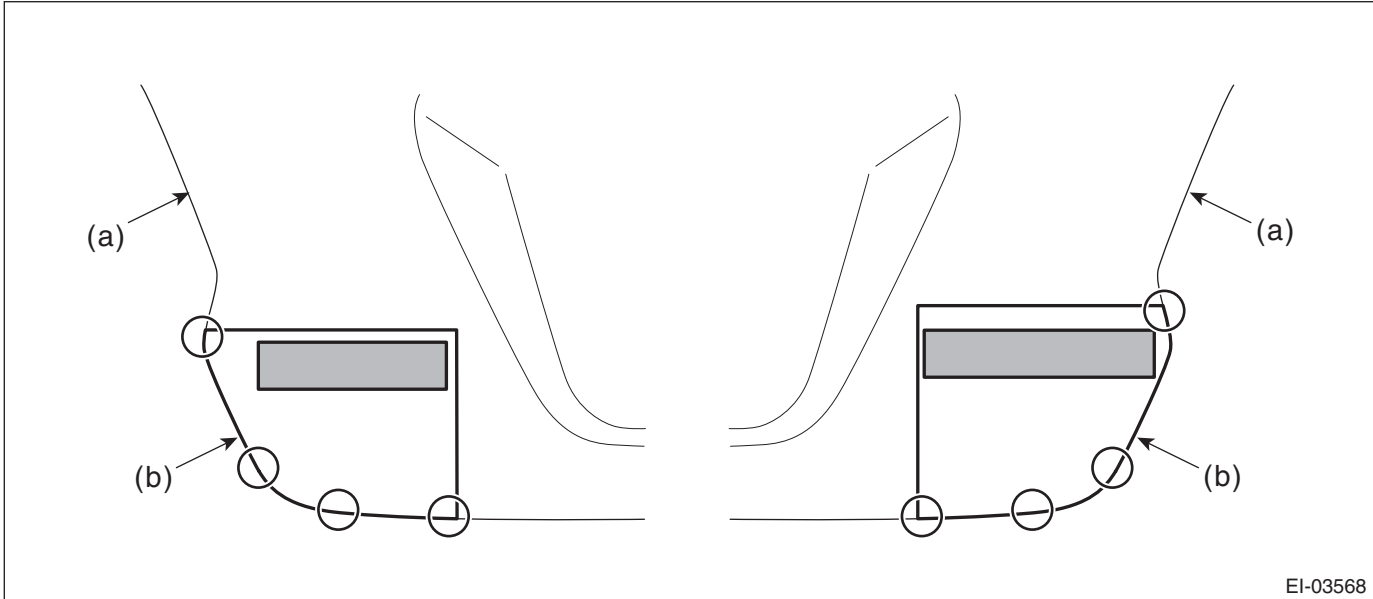

(a) Trunk lid COMPL end

(b) Application tape end