
FRONT BODY PILLAR (CUT)

REMOVAL

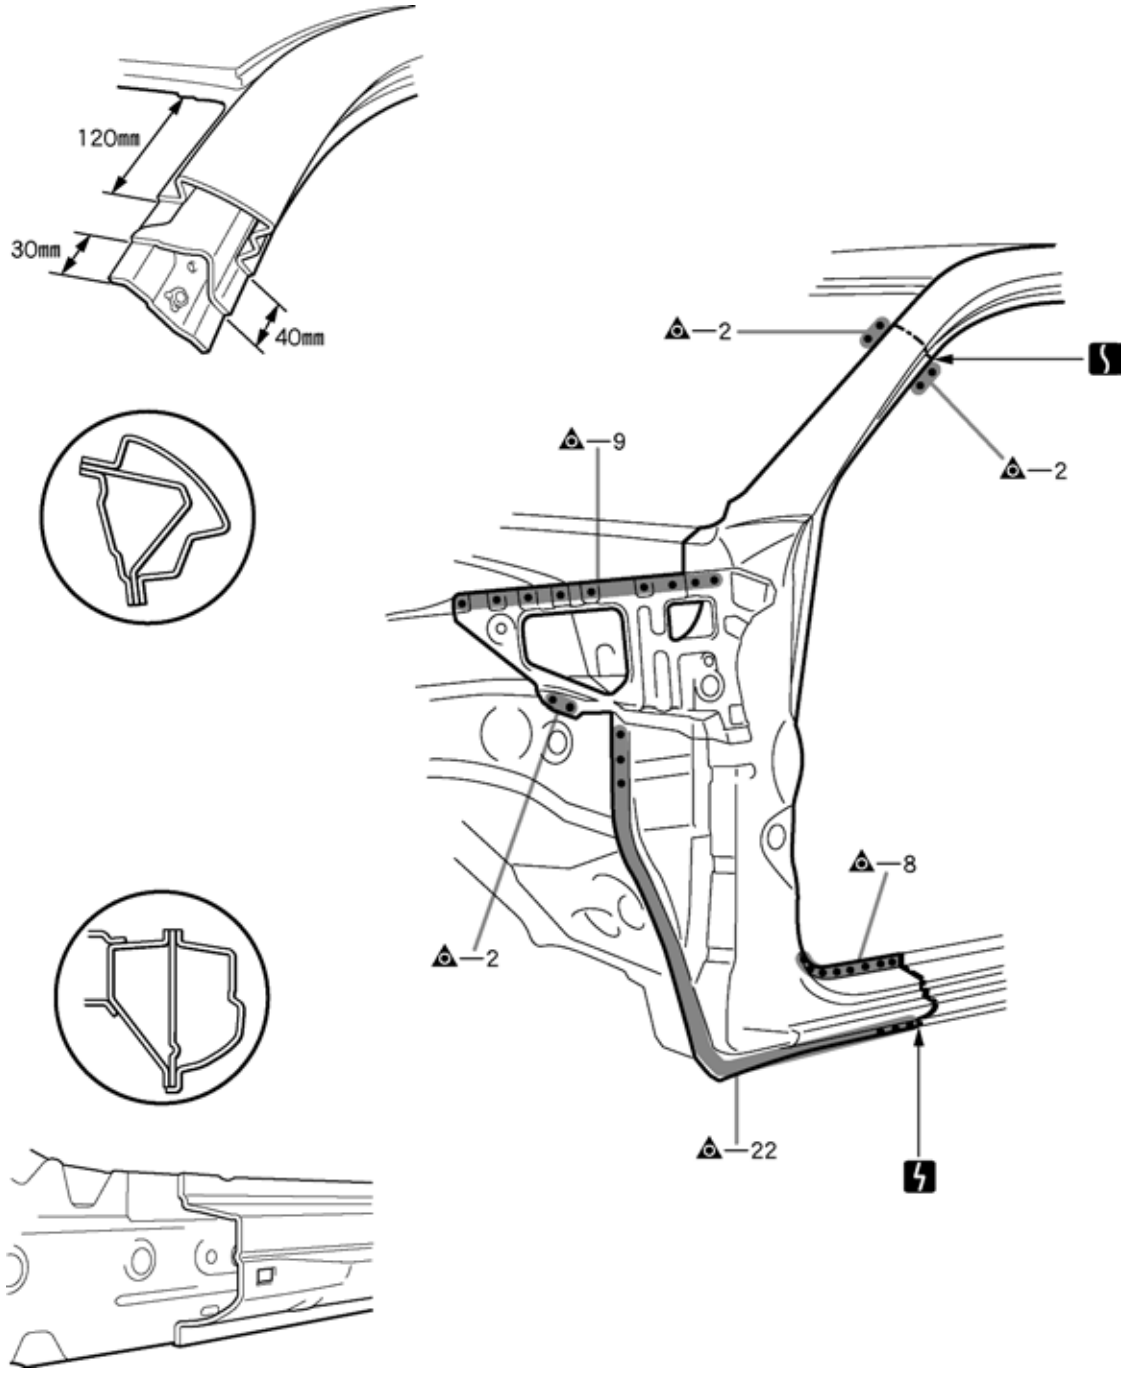


F14015-A



F14015

30mm (1.18in.) 40mm (1.57in.) 120mm (4.72in.)

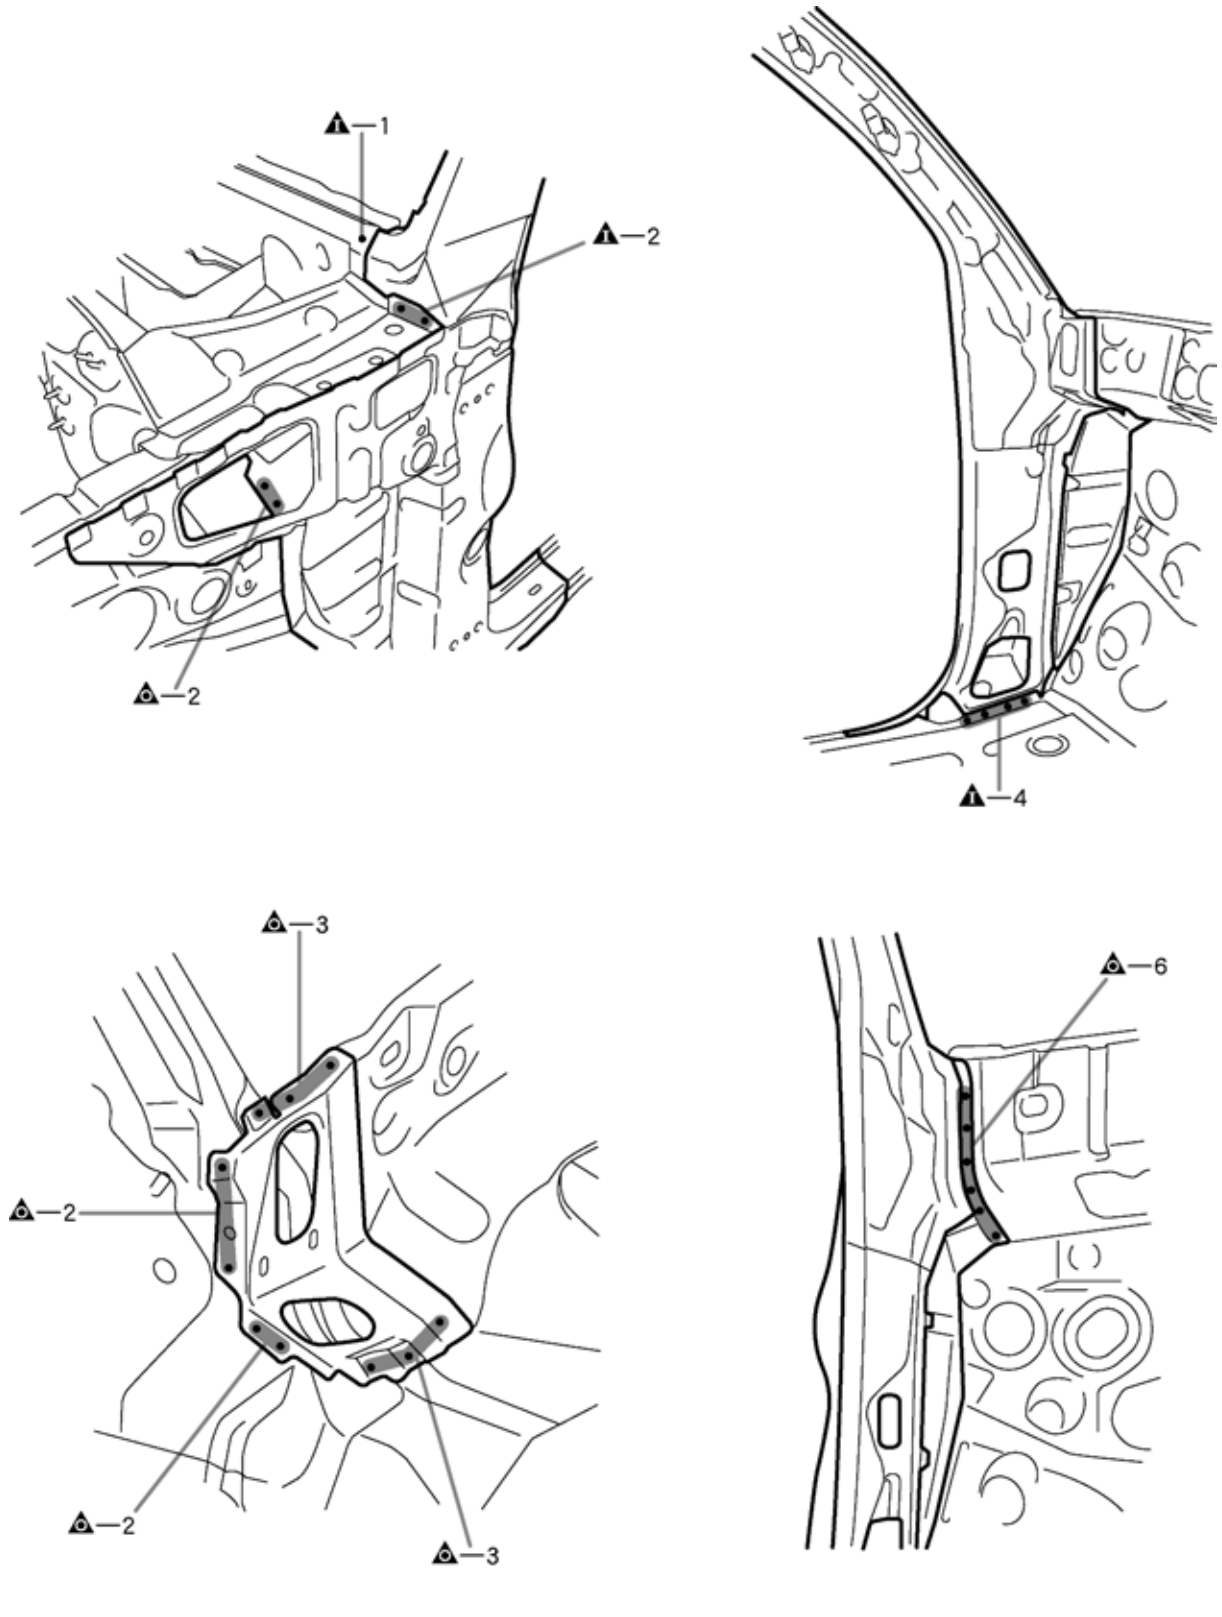


POINT

1 Remove the remaining foamed from the vehicles side.

INSTALLATION

- Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
- Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
- After welding, apply the polyurethane foam to the corresponding parts.
- After welding, apply body sealer and under-coating to the corresponding parts.
- After applying the top coat layer, apply anti-rust agent to the inside of the necked section structural weld spots.

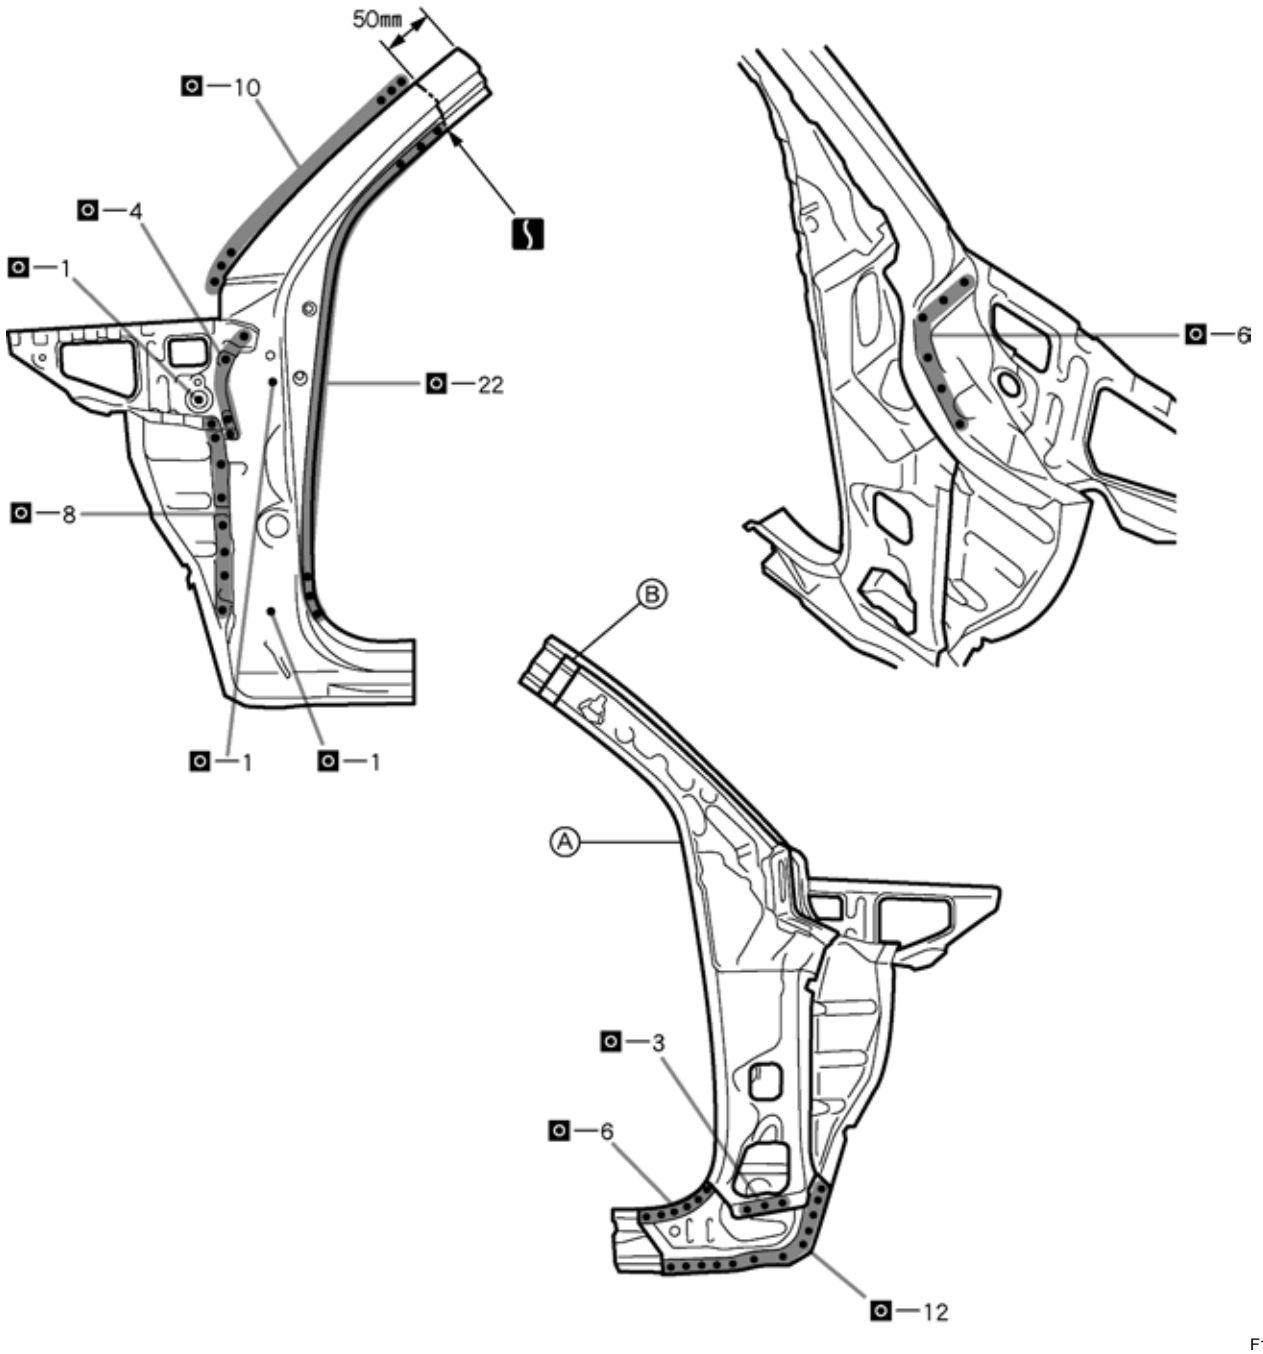

F14017


POINT

1 Before temporarily installing the new parts, weld the Ⓐ, Ⓑ and Ⓒ with standard points.

PART NAME

Ⓐ Side Inner Panel Ⓑ Front Body Pillar Lower Reinforce Ⓒ Outer Pillar

50mm (1.97in.)

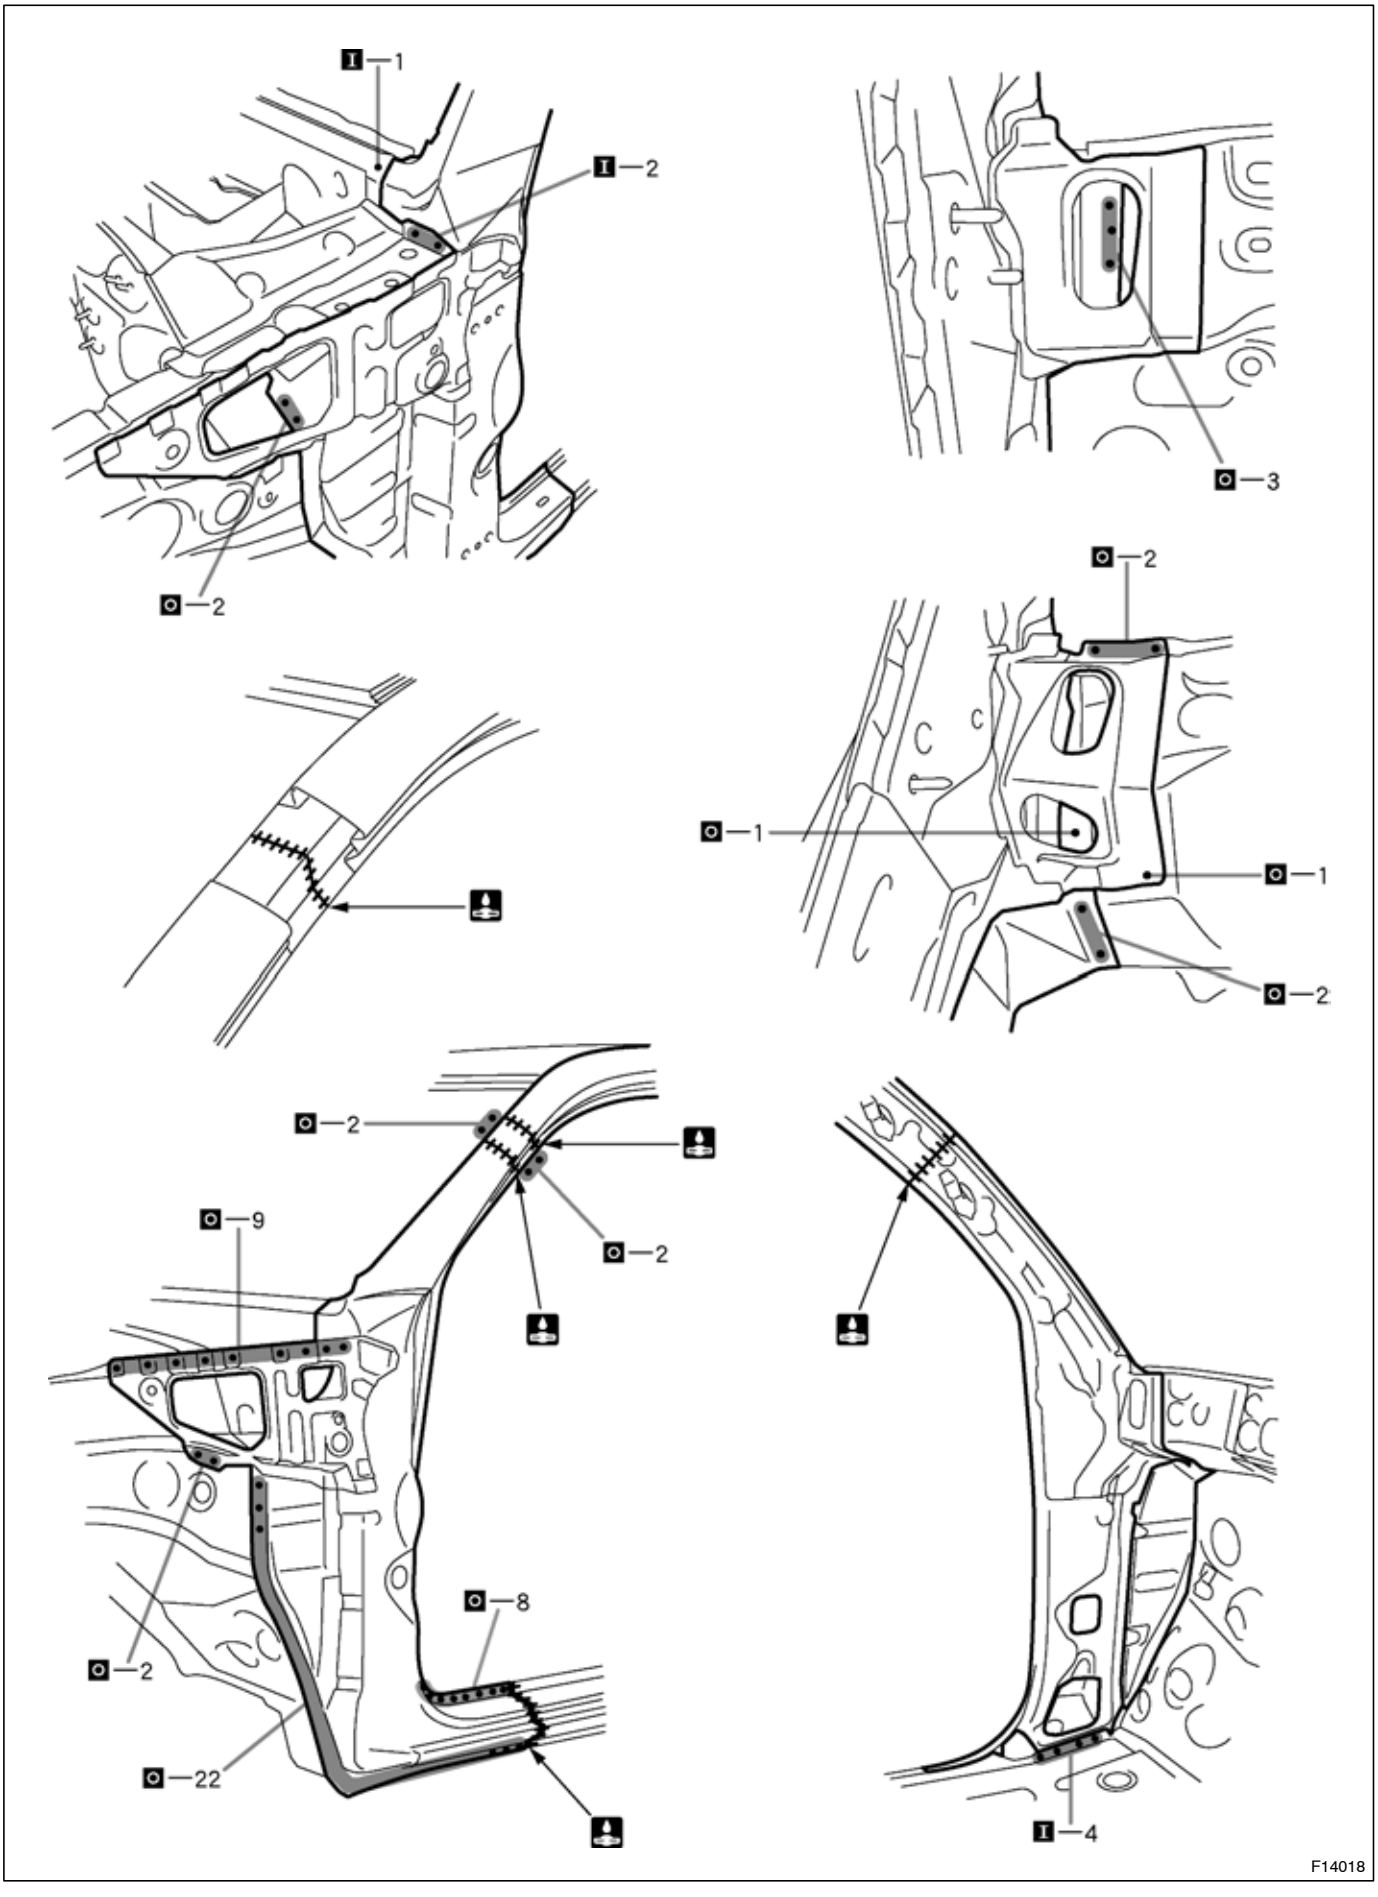
I—1
I—2
O—2
O—3
O—2
O—1
O—1
O—2
O—2
O—2
O—9
O—8
O—2
O—22
I—4
F14018