
NAME PLATE APPLICATION PROCEDURE

1 Heat the double-sided tape remaining on the body with an infrared lamp or equivalent.
HINT:
Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.

2 Wipe off the remaining double-sided tape using a clean cloth or equivalent.
HINT:
If a name plate is installed without thoroughly removing the remaining double-sided tape from the body, the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.


3 After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.
HINT:
The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.

[USA, Canada]

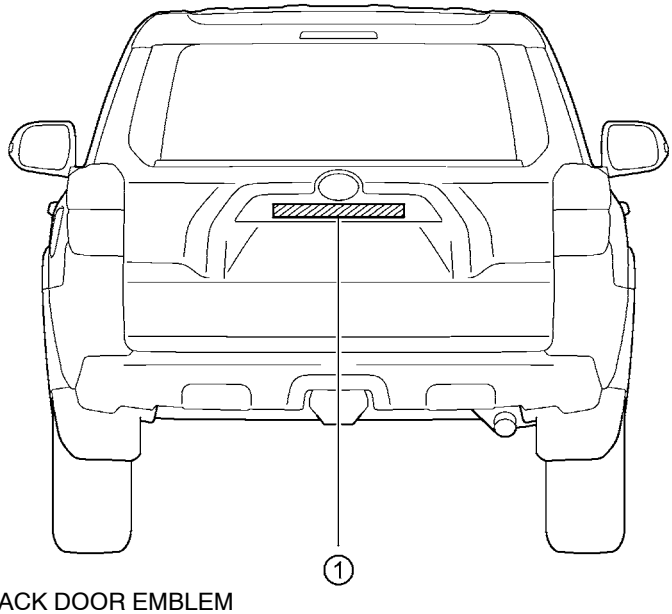

1 NO. 1 BACK DOOR EMBLEM


Reference Value

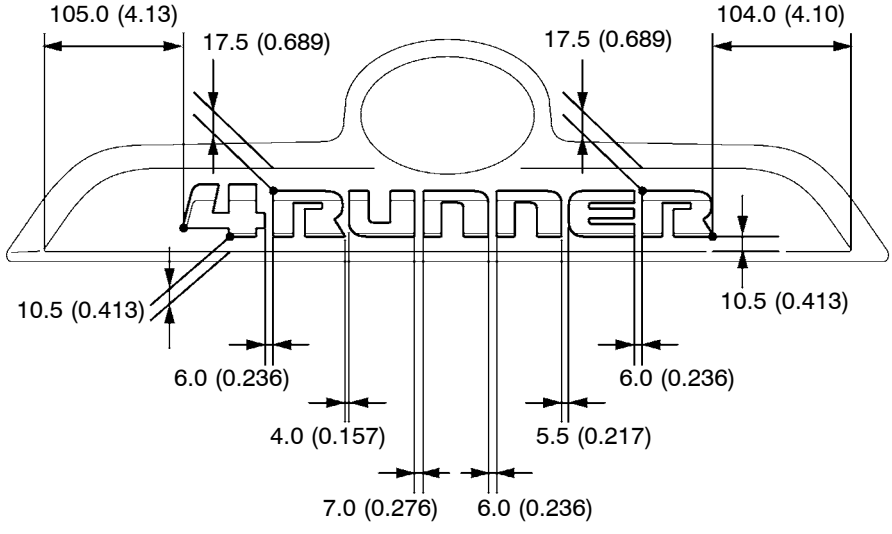

mm (in.)


F43015

[USA, Canada]

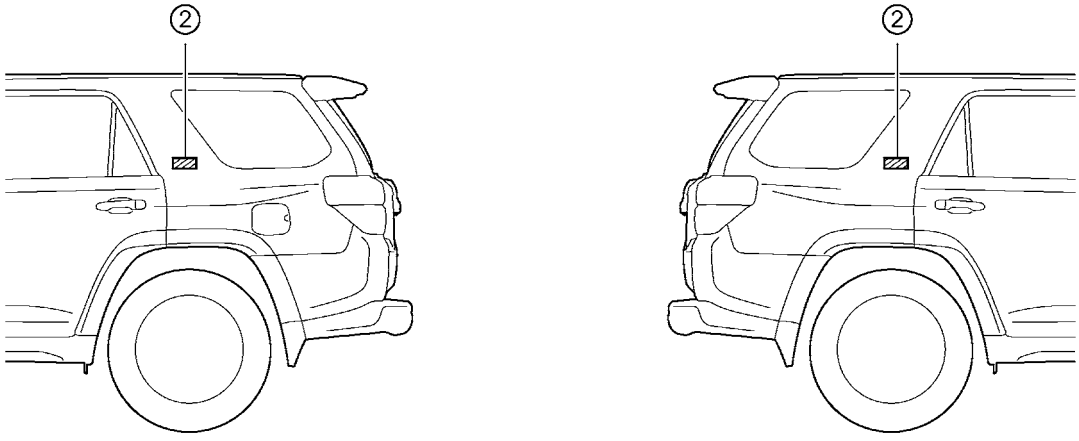

② NO. 1 ROOF SIDE MARK


Reference Value

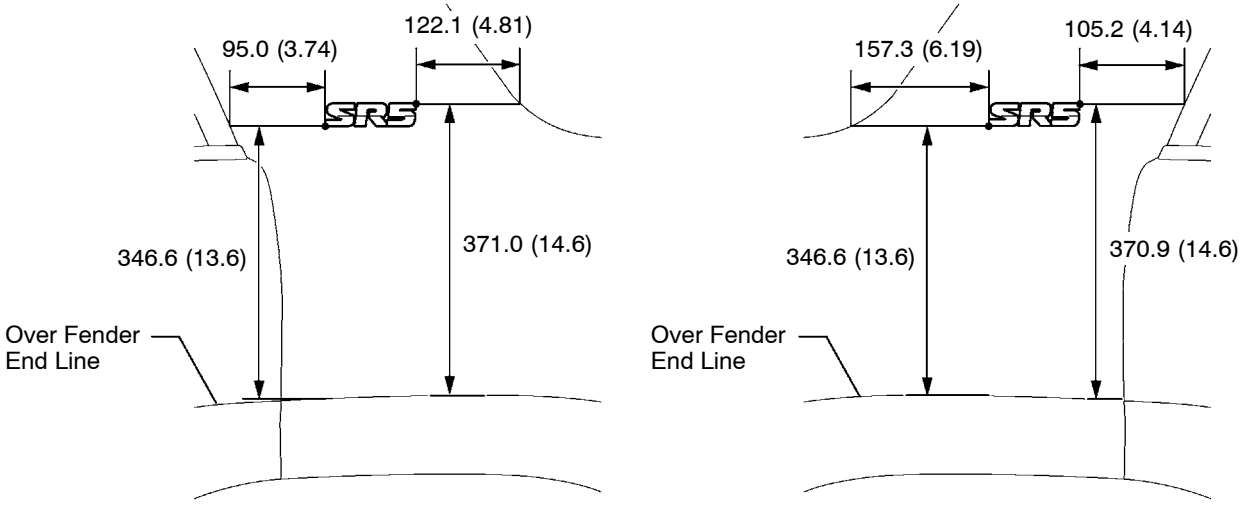

mm (in.)


F43016

[Except USA, Canada]

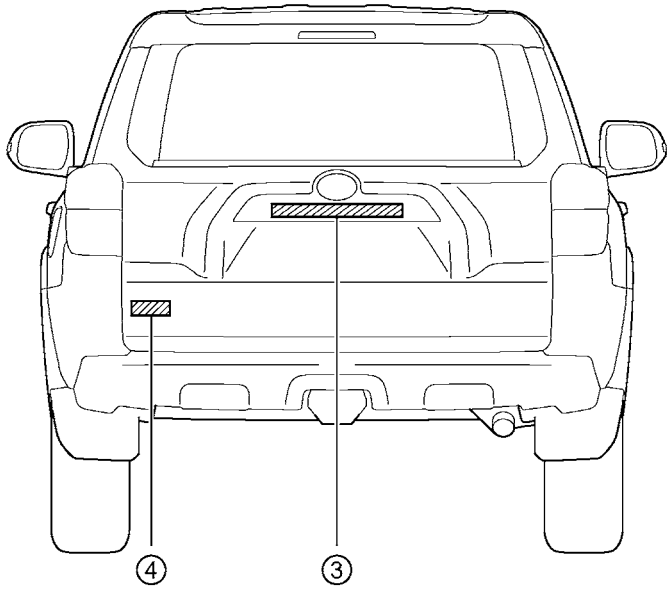


③ NO. 1 BACK DOOR EMBLEM

Reference Value

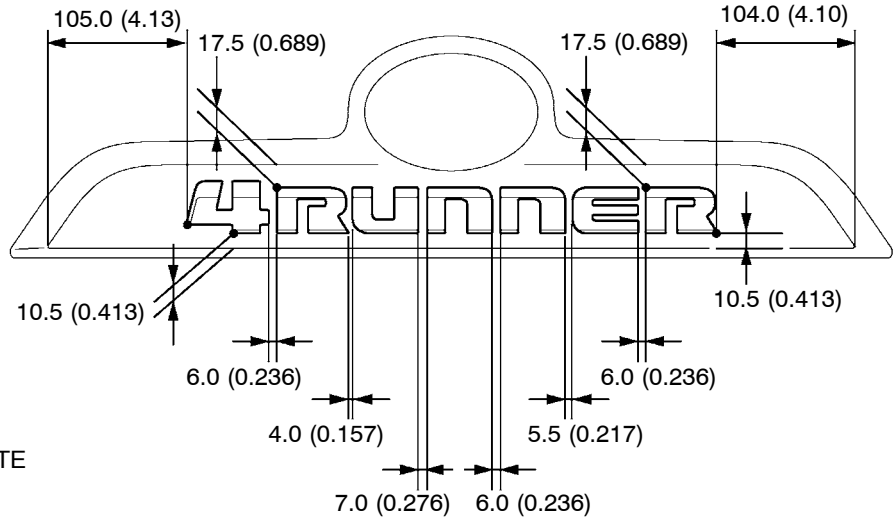


④ NO. 2 BACK DOOR NAME PLATE

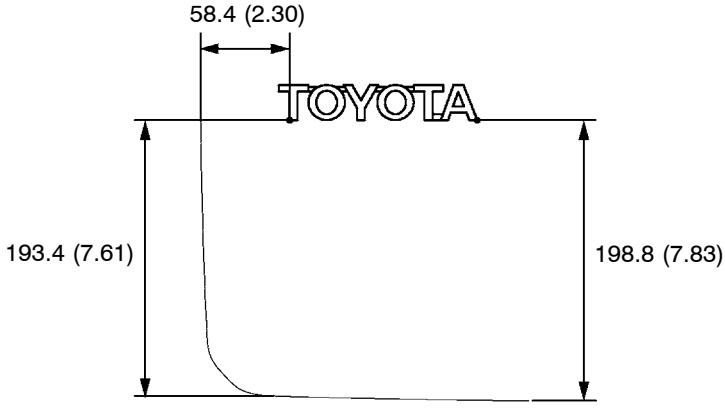

mm (in.)


F43017


[Except USA, Canada]

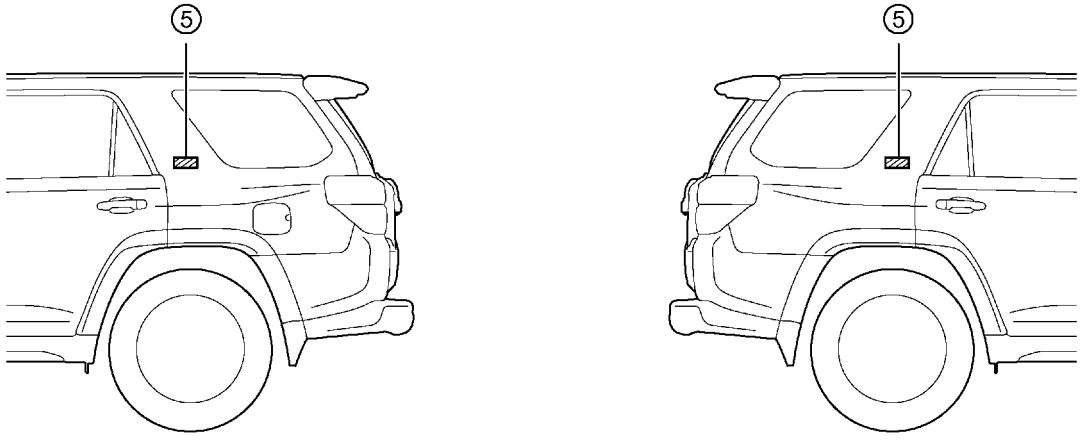

⑤ NO. 1 ROOF SIDE MARK

Reference Value

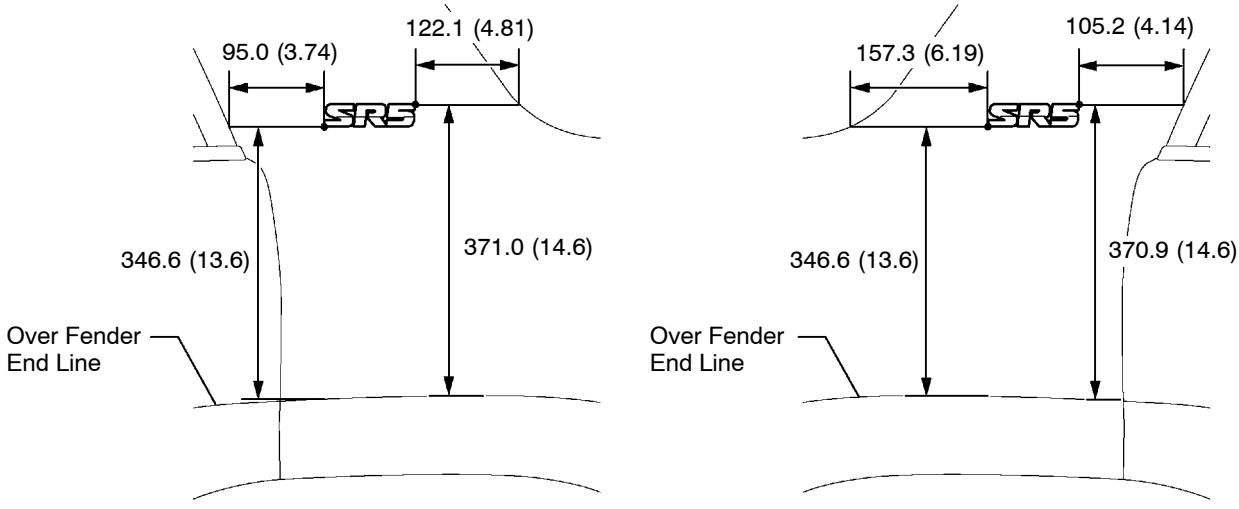

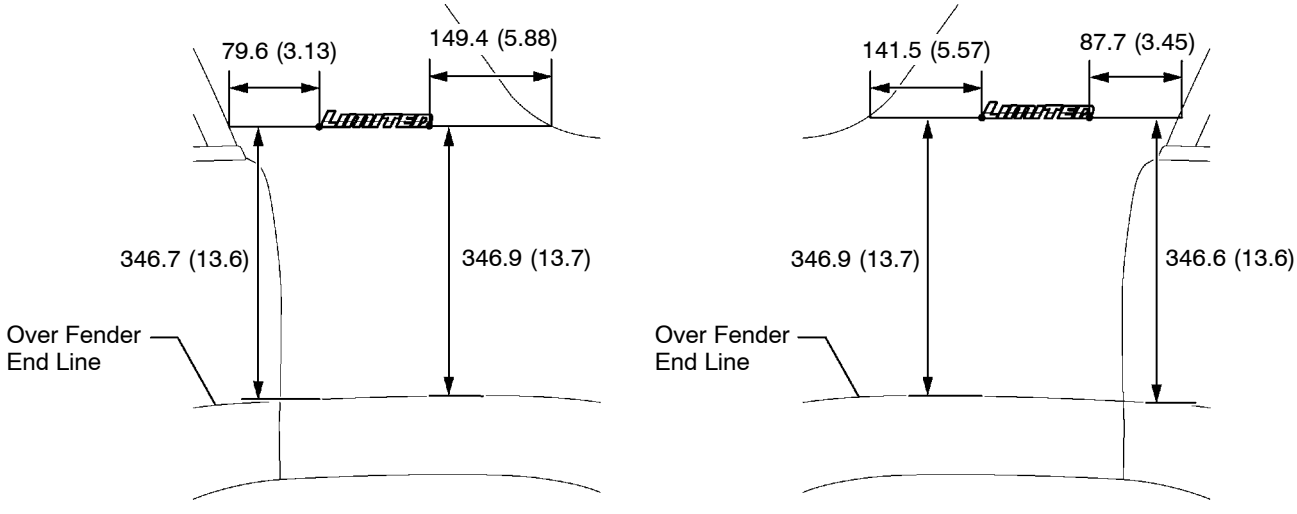

mm (in.)

F43018