





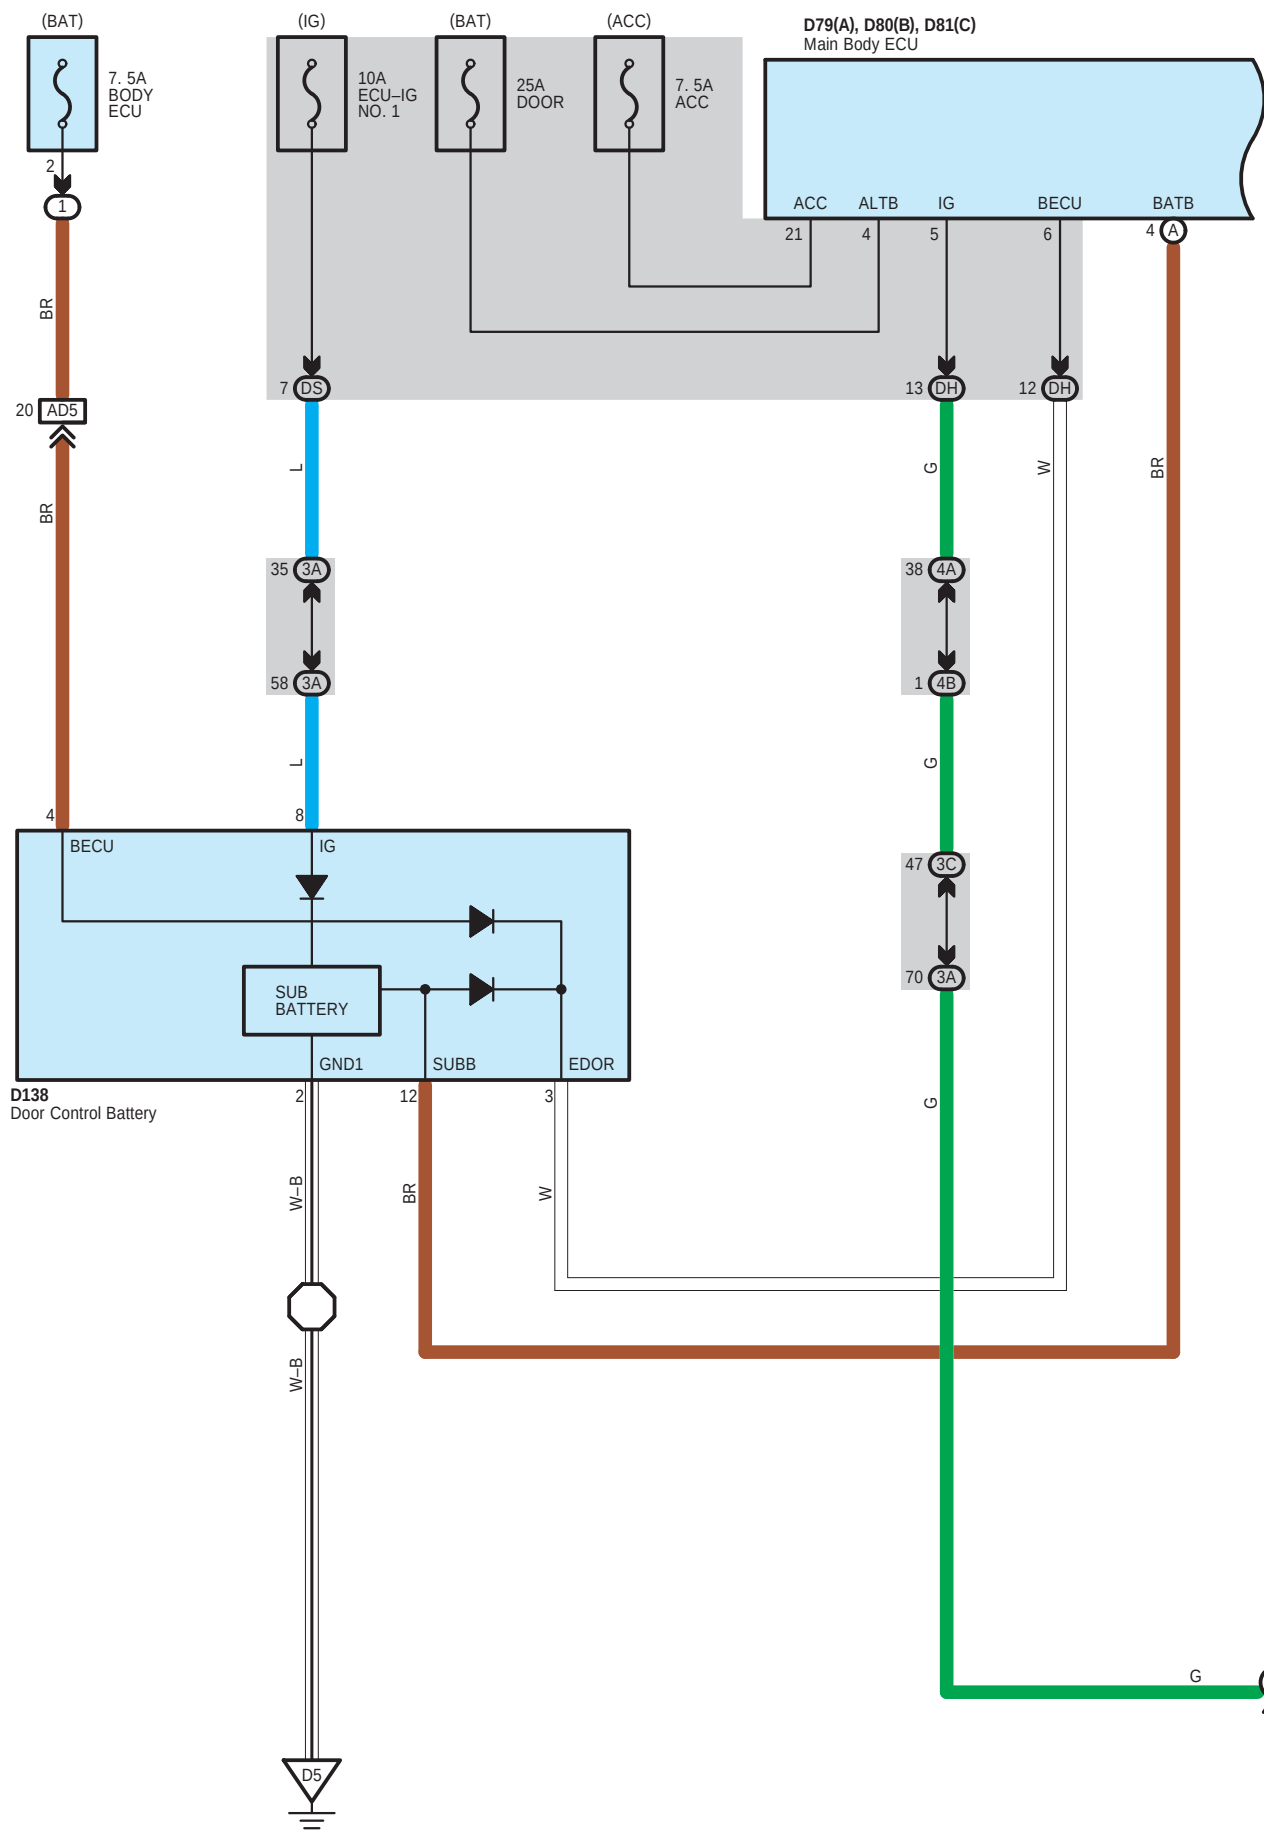


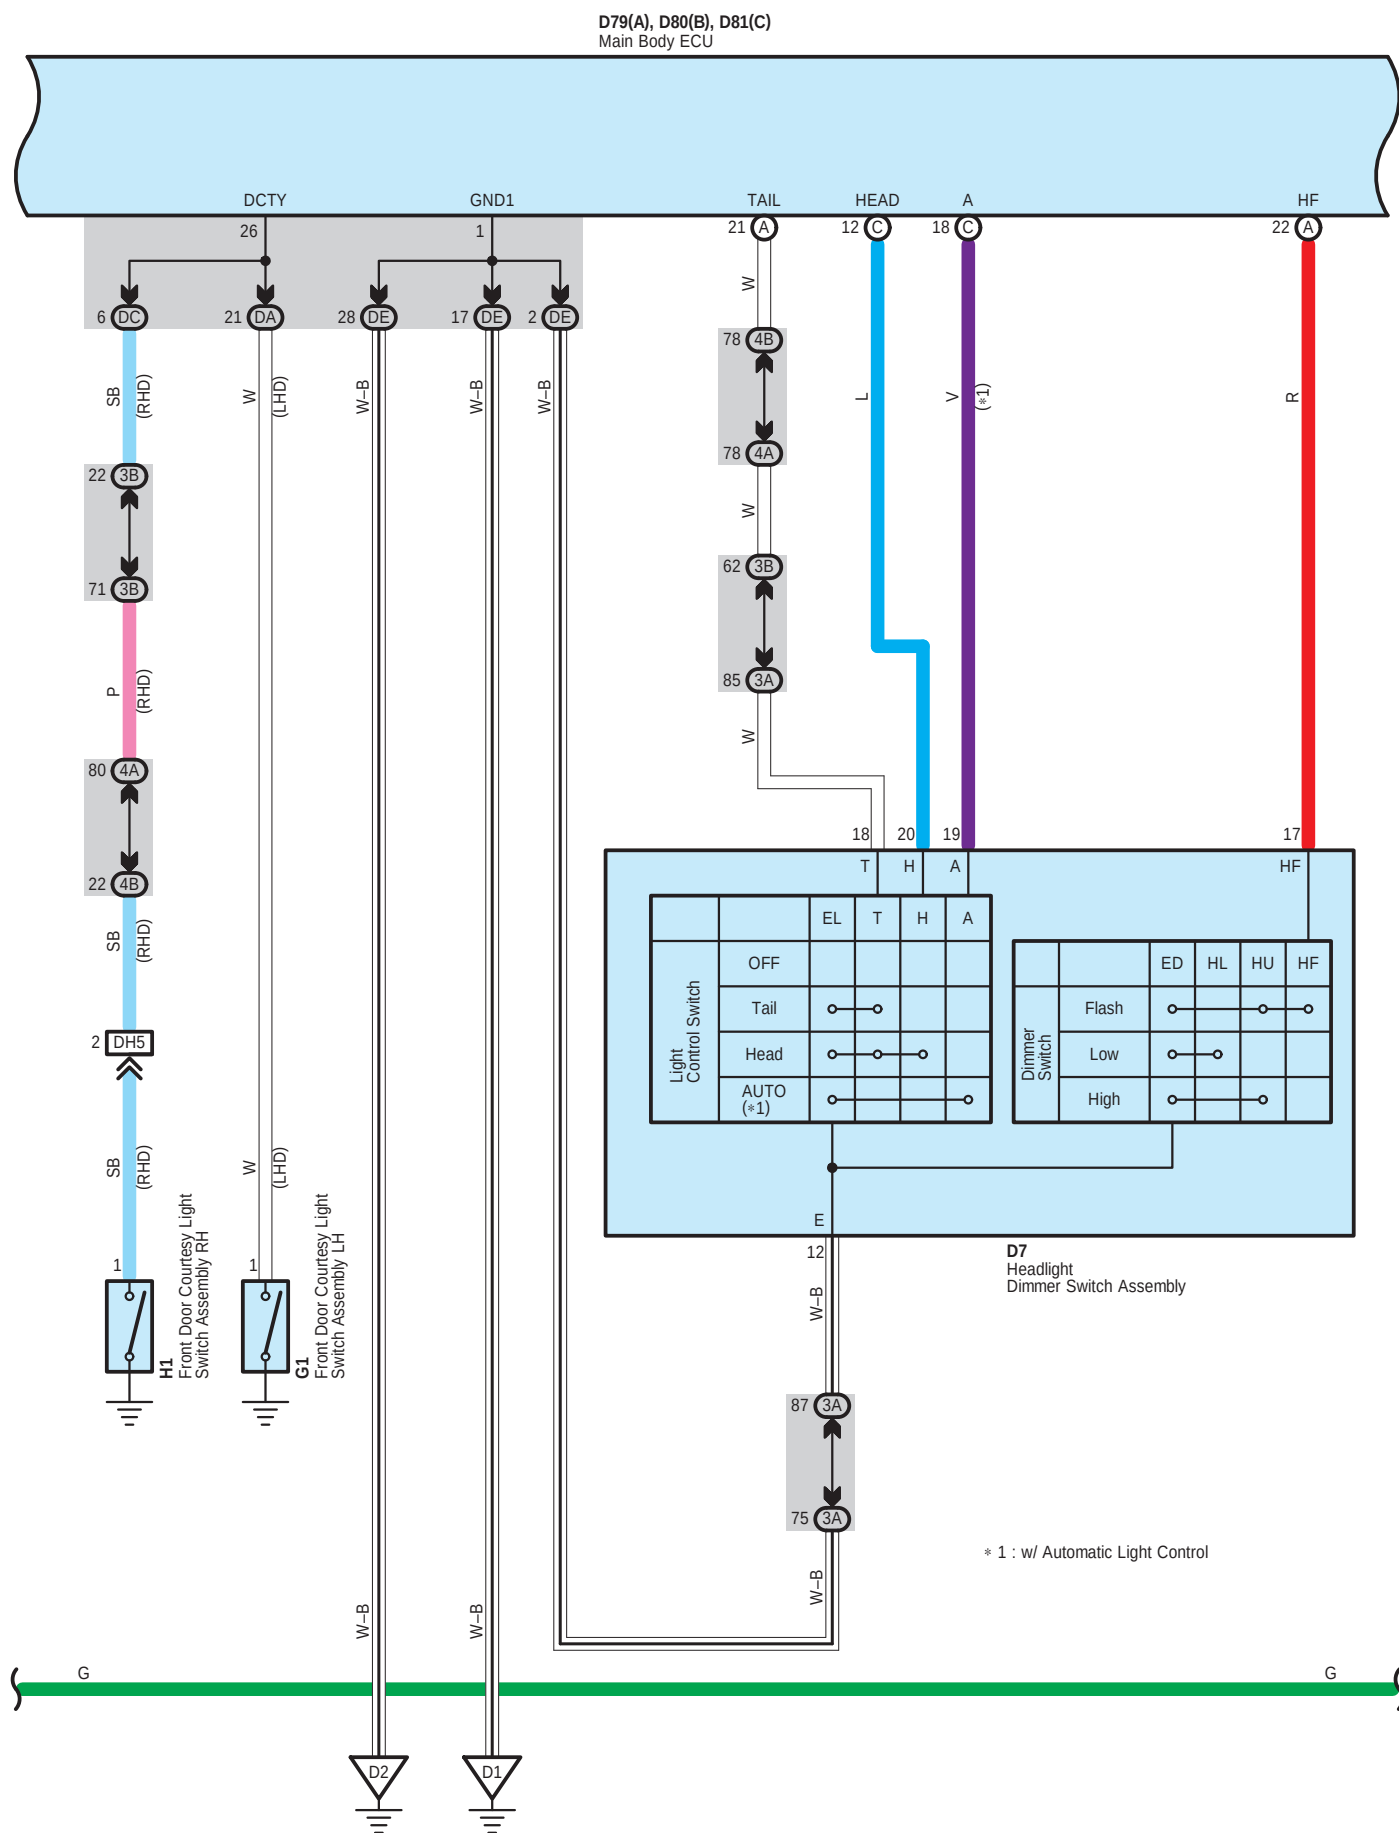

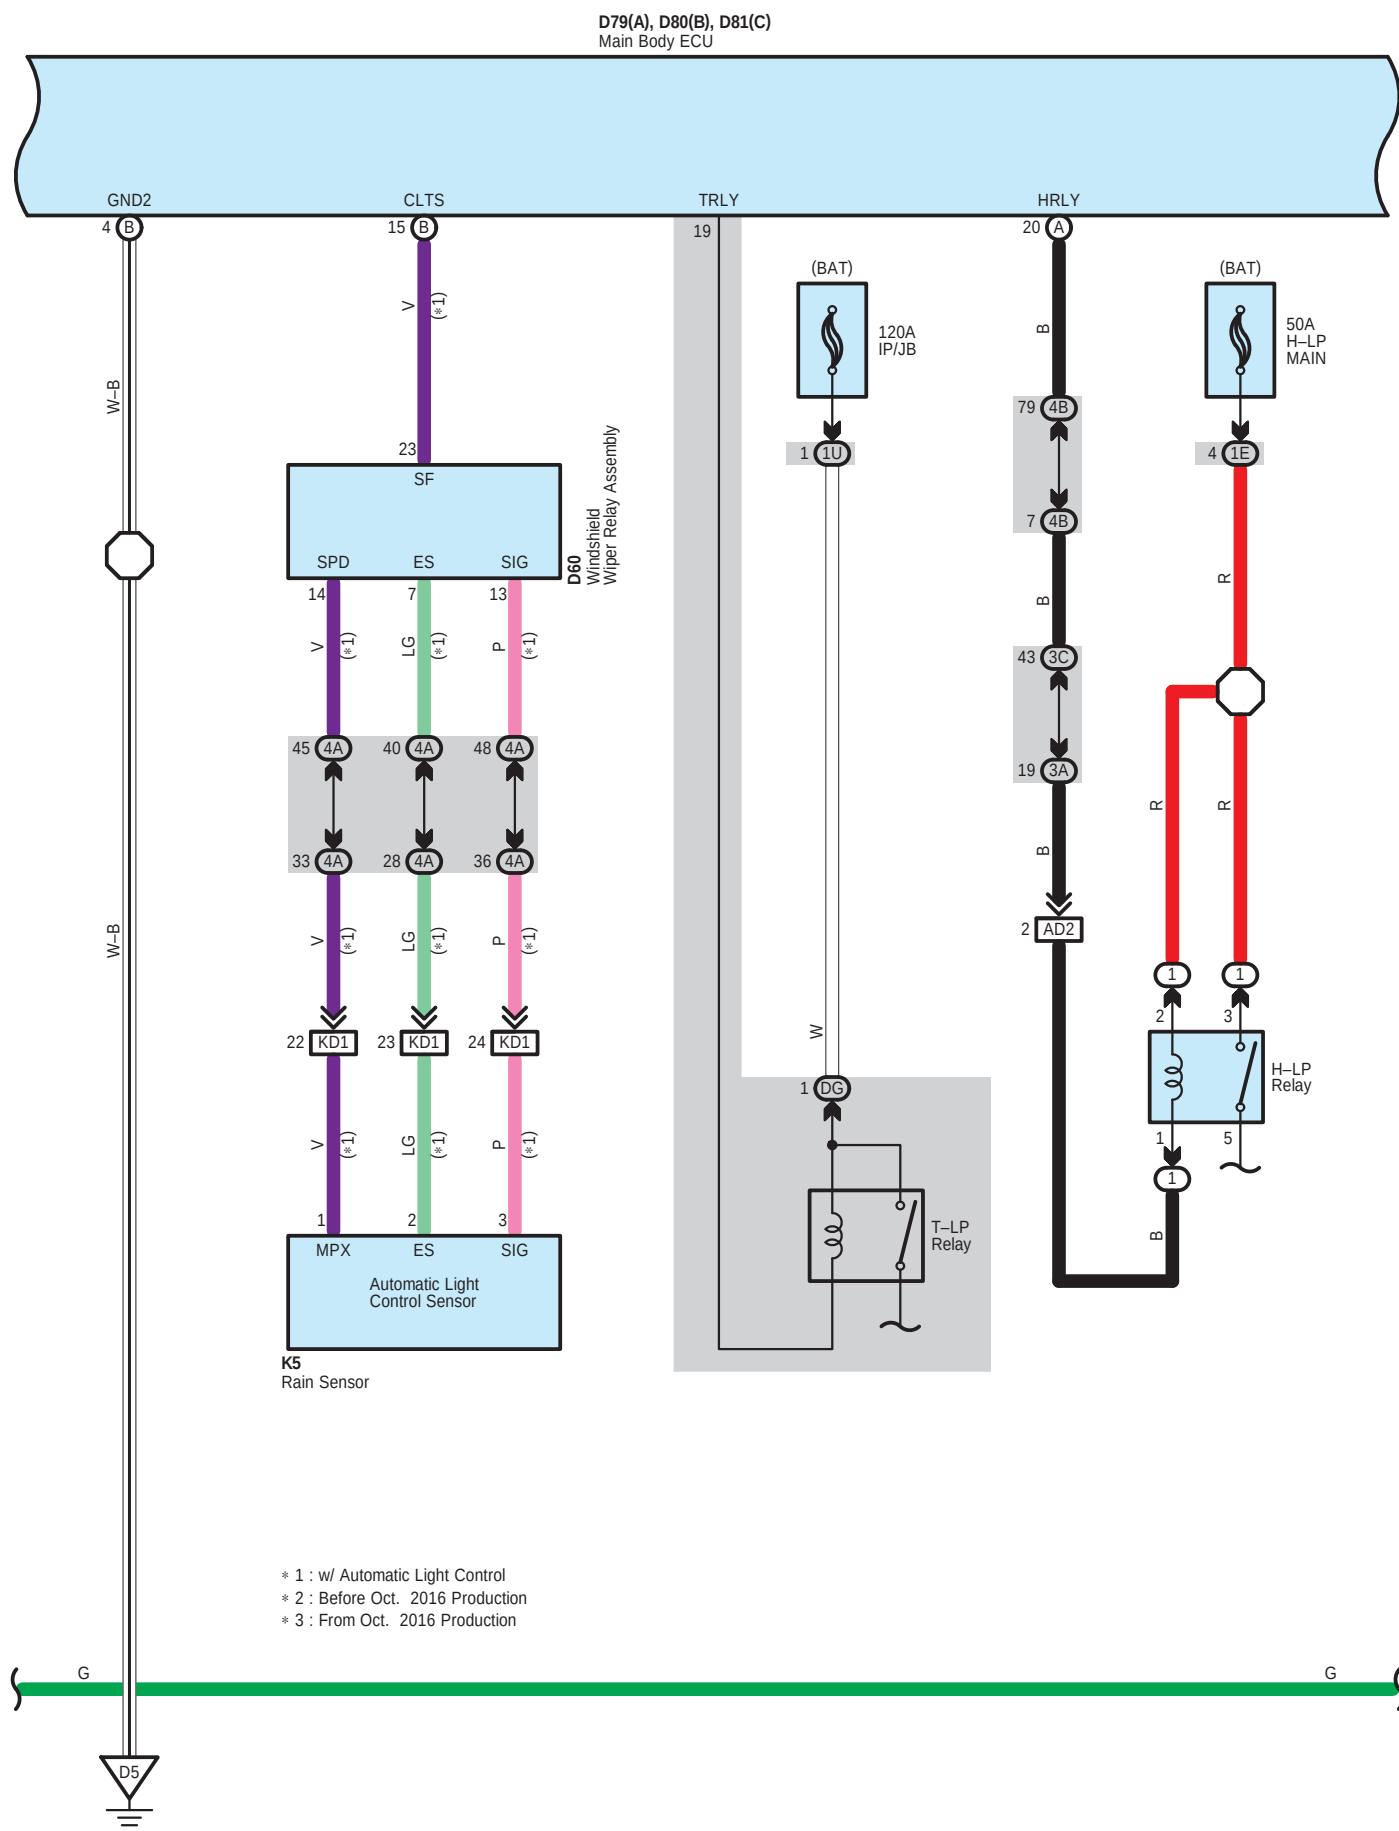


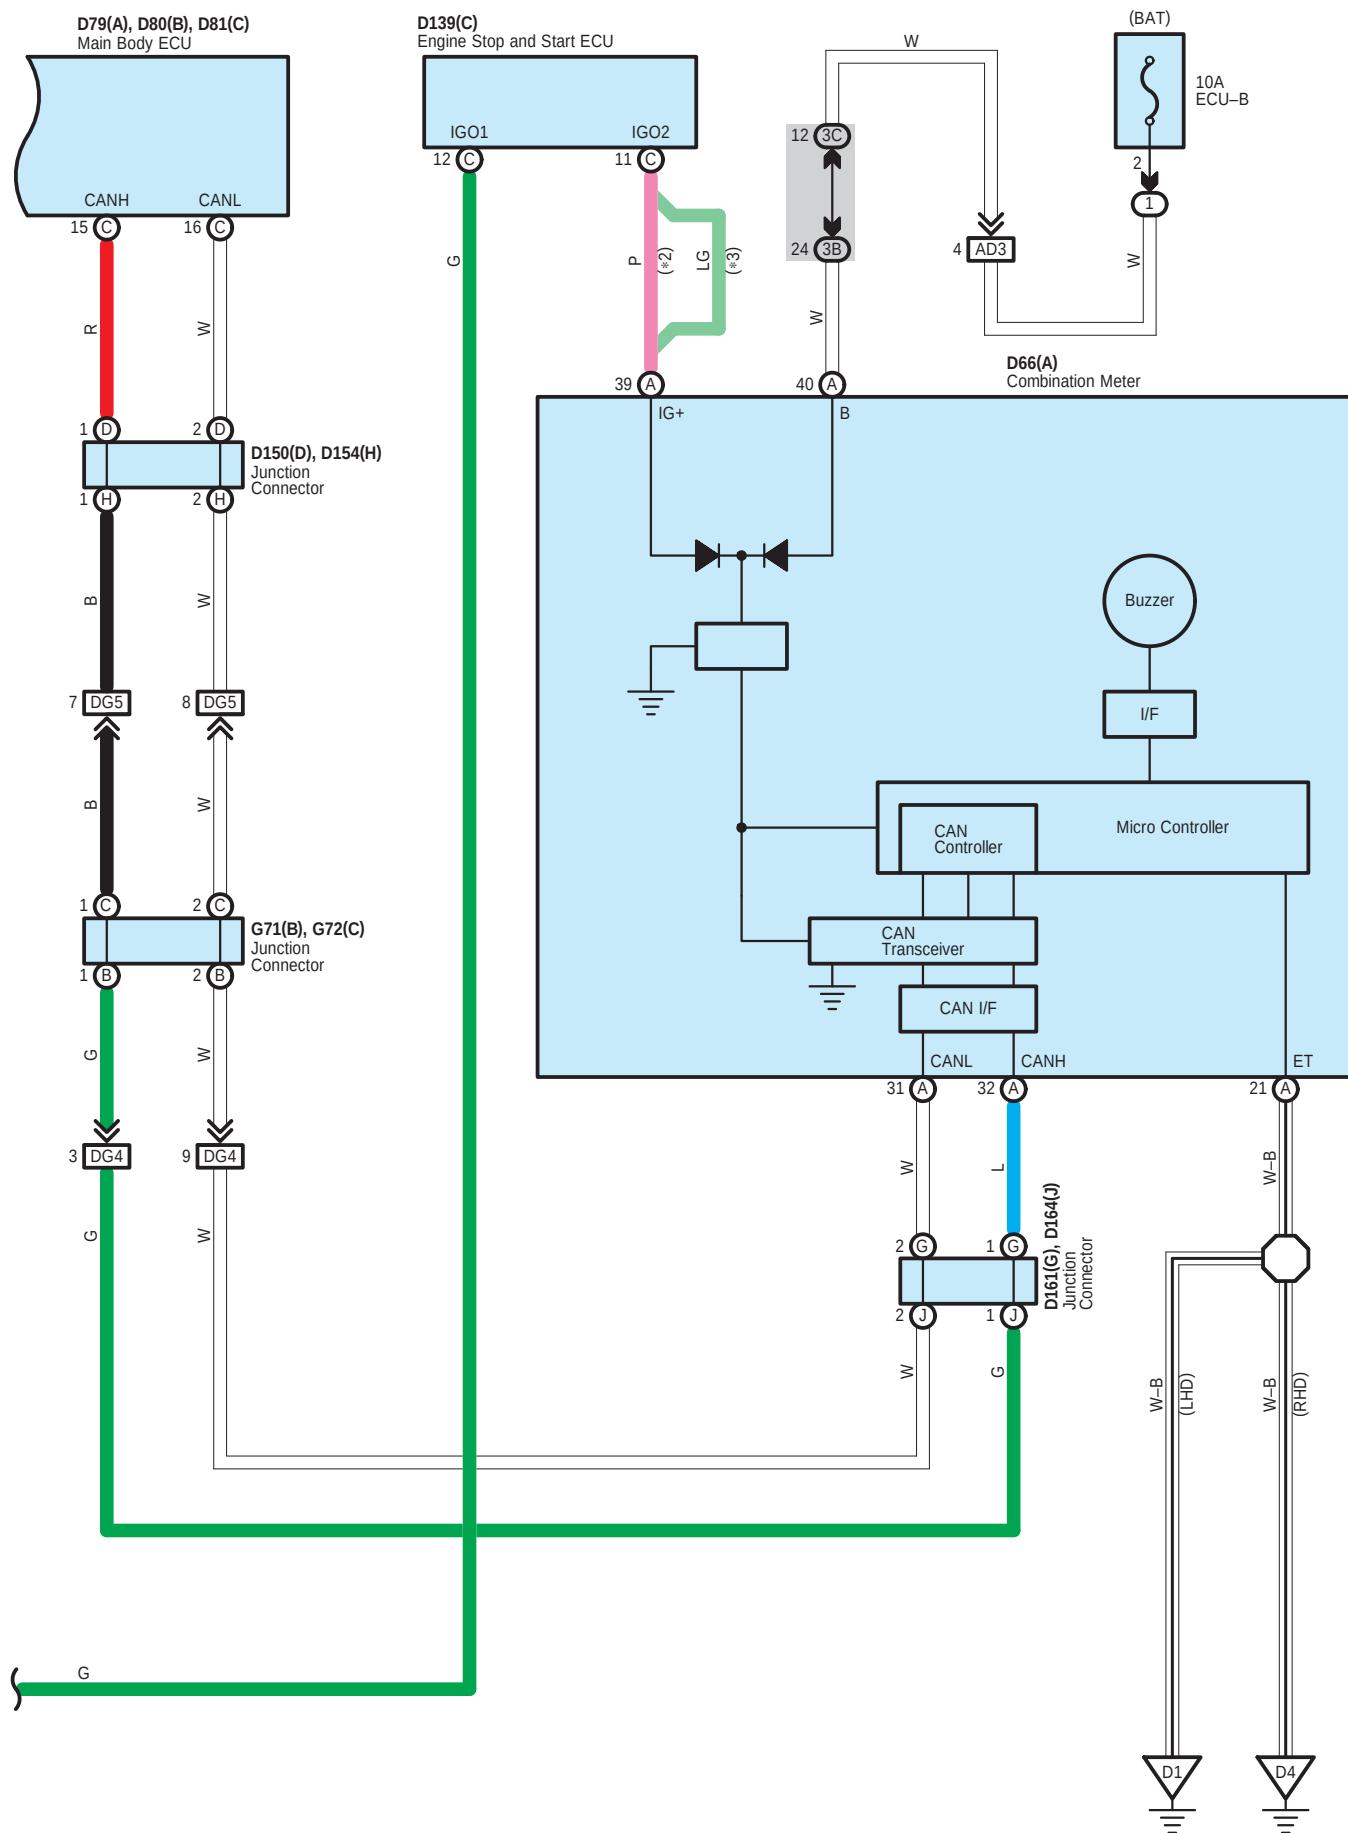


D 7
White

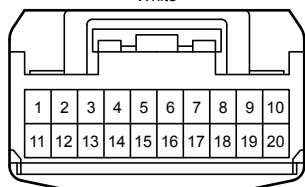


D 60
Black

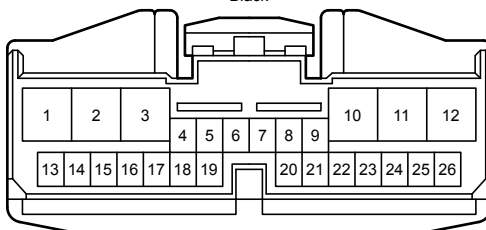


D 66
Black

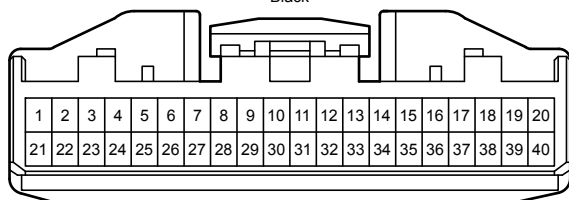


D 79
White

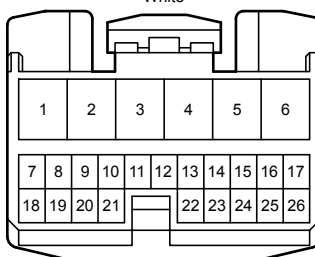


D 80
White

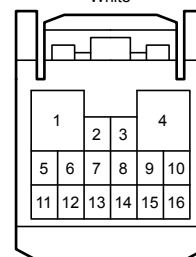


D 81
White

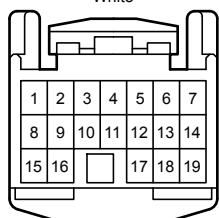


D138
Gray

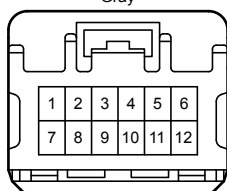


D139
Black

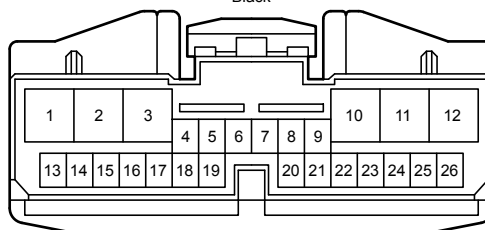


D150
White




D154
White



D161
White




D164
White



G 1
White



G 71
White




G 72
White




H 1
White



K 5
Black



1E
White

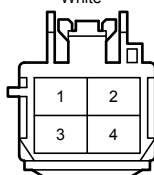


1U




3A

White

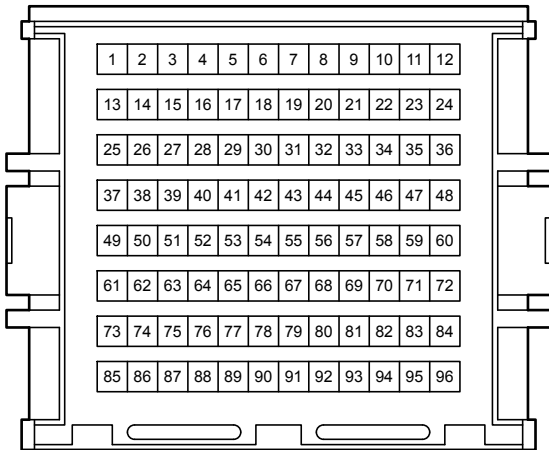


3B

White

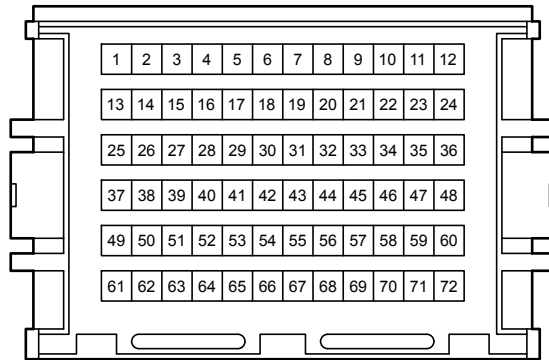


3C

White

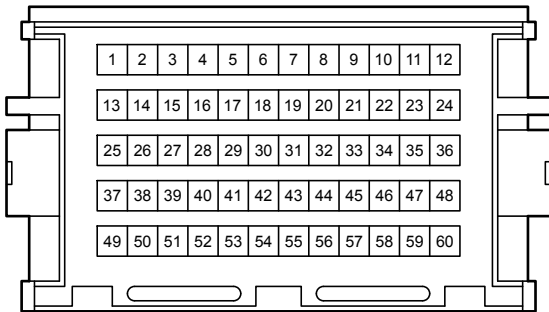


4A

White

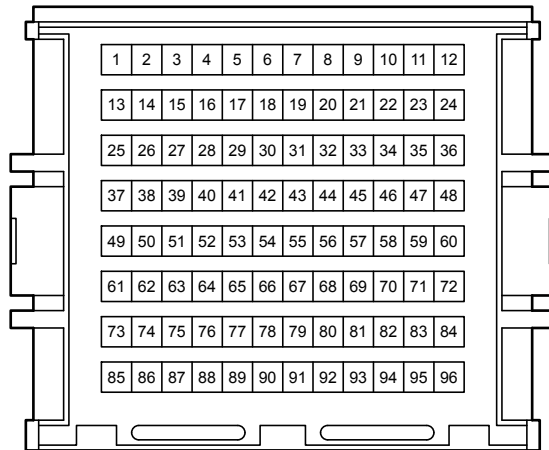


4B

White

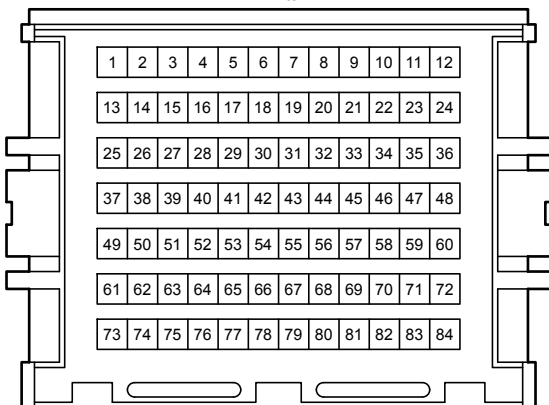


DA

White

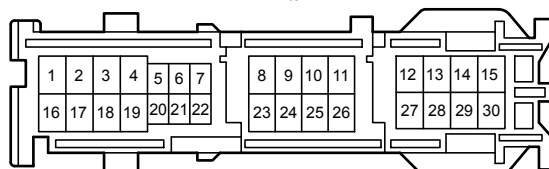


DC

White

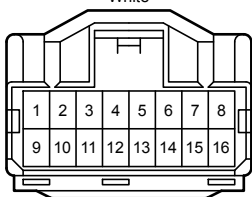


DE








White

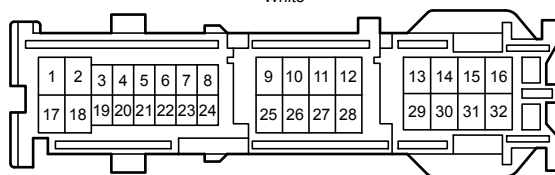


DG

White



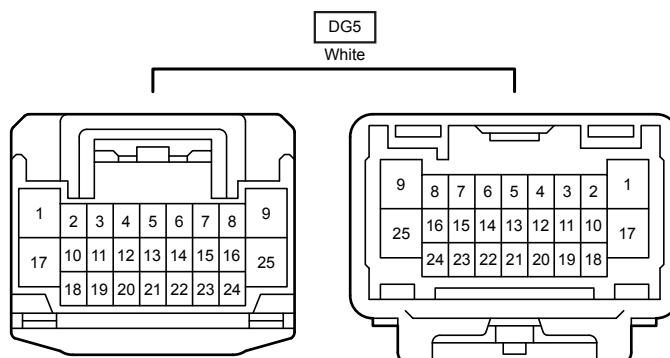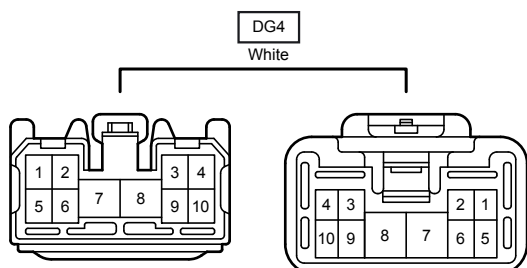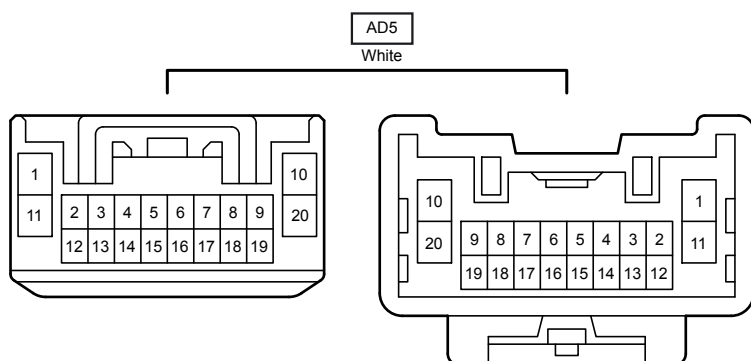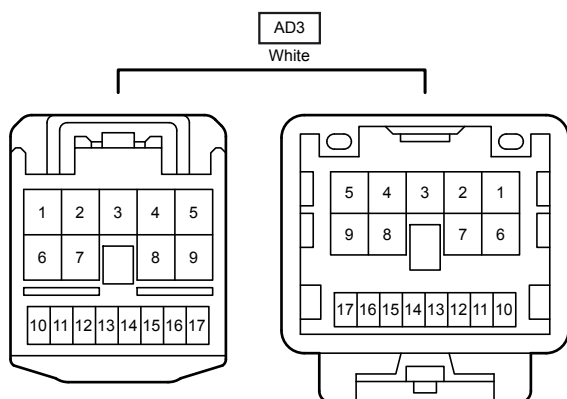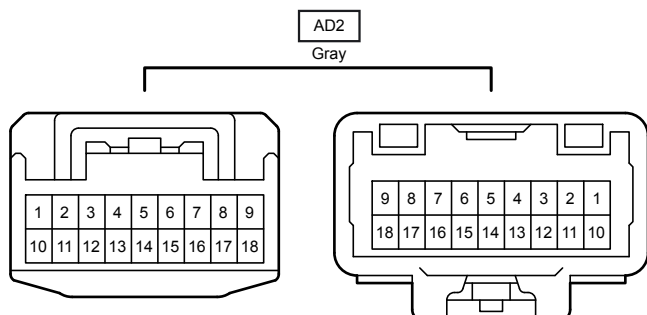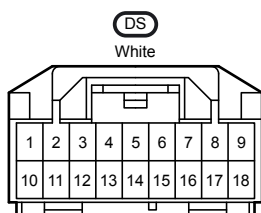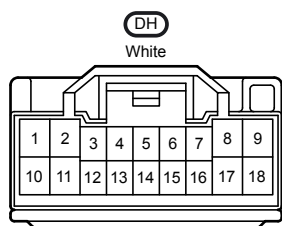

DH5
White

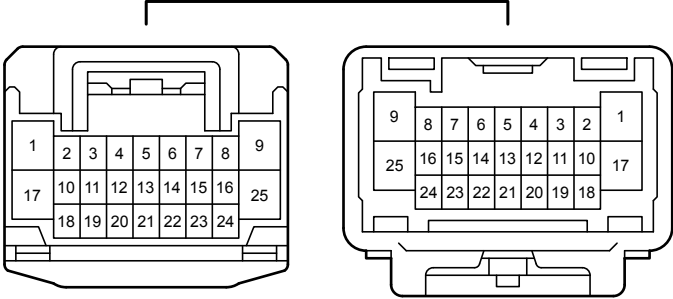

KD1
White

