






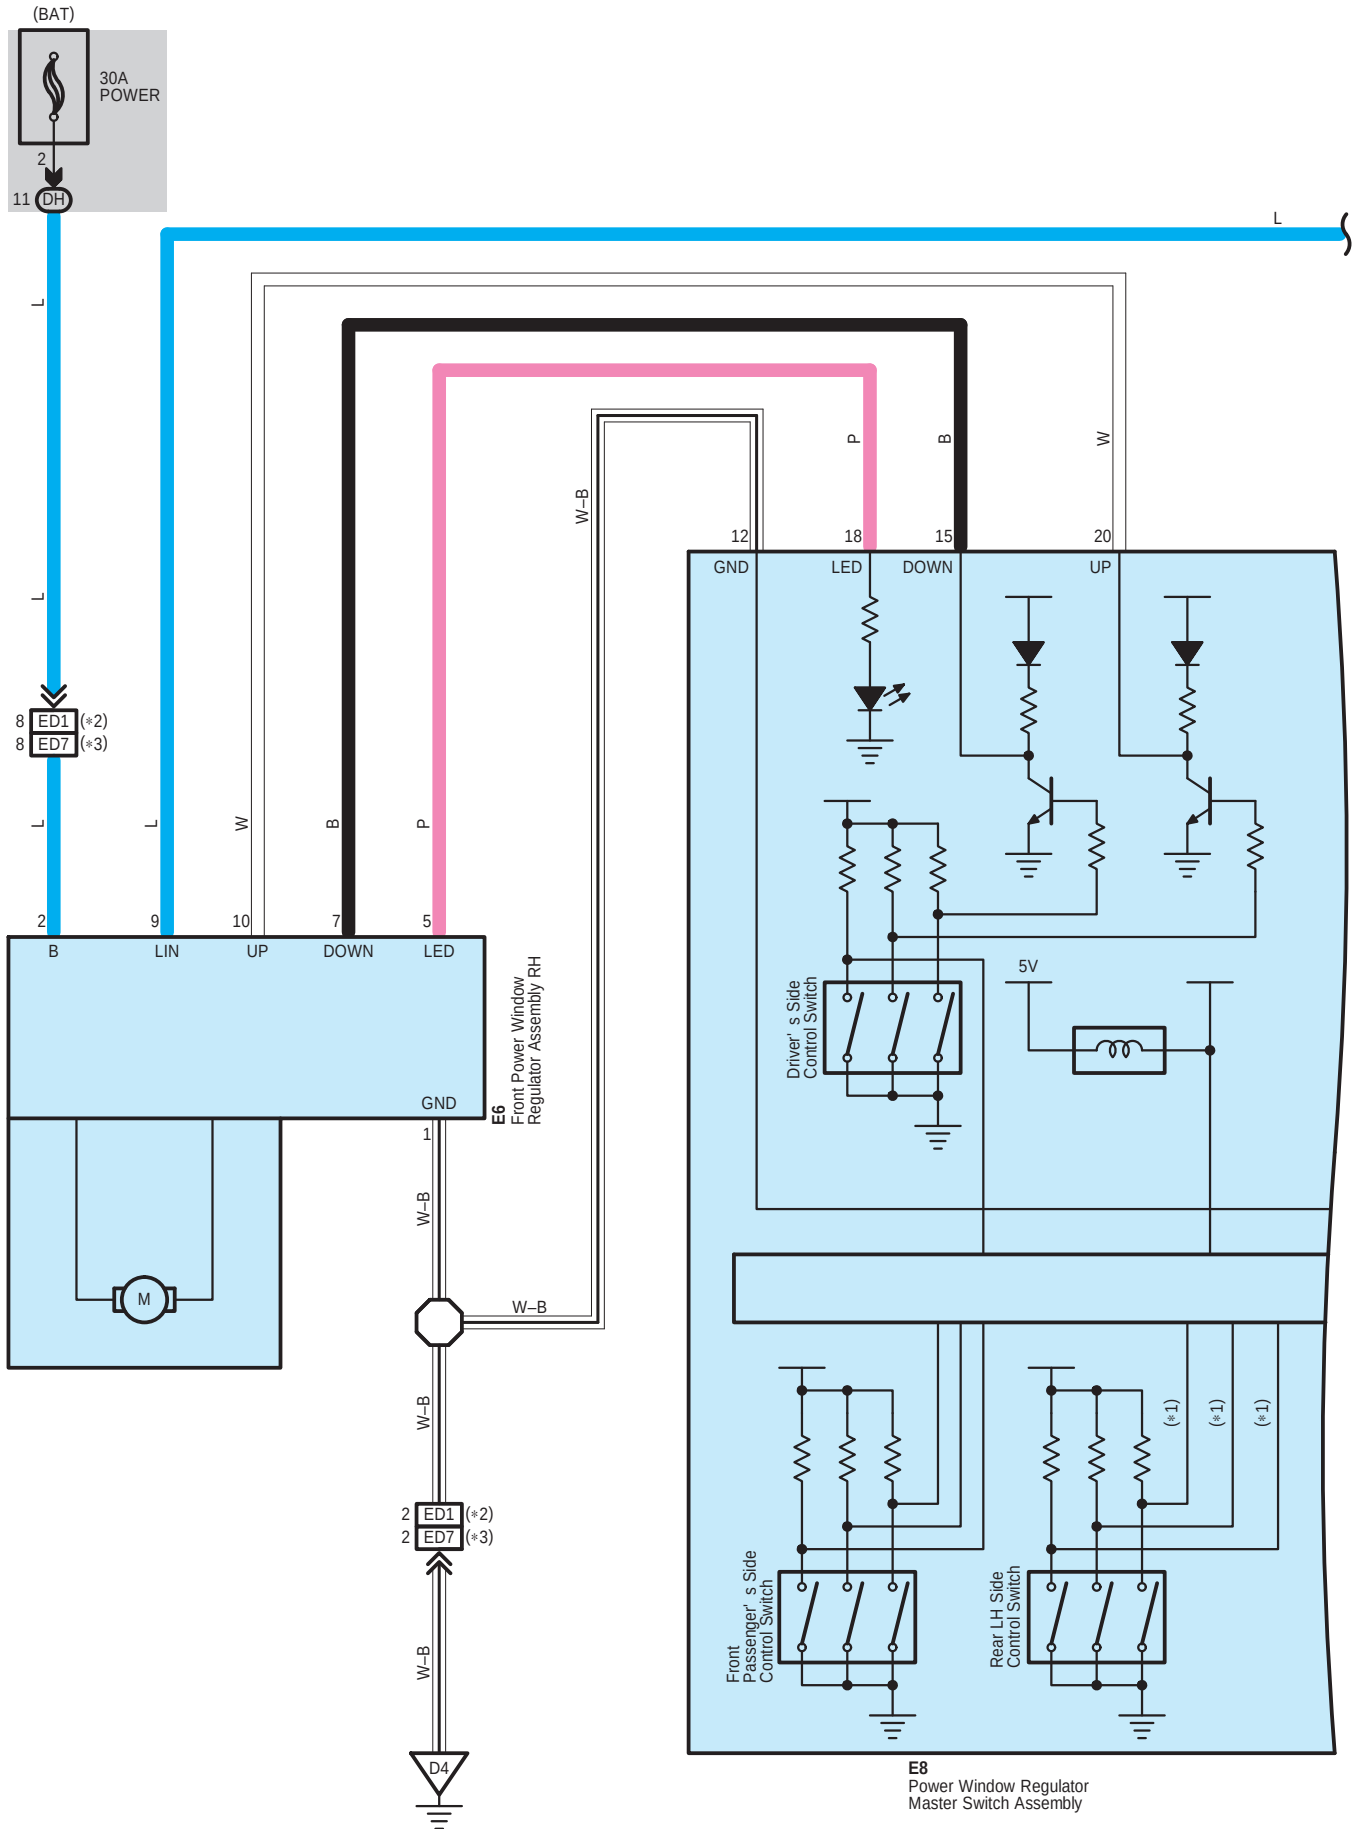





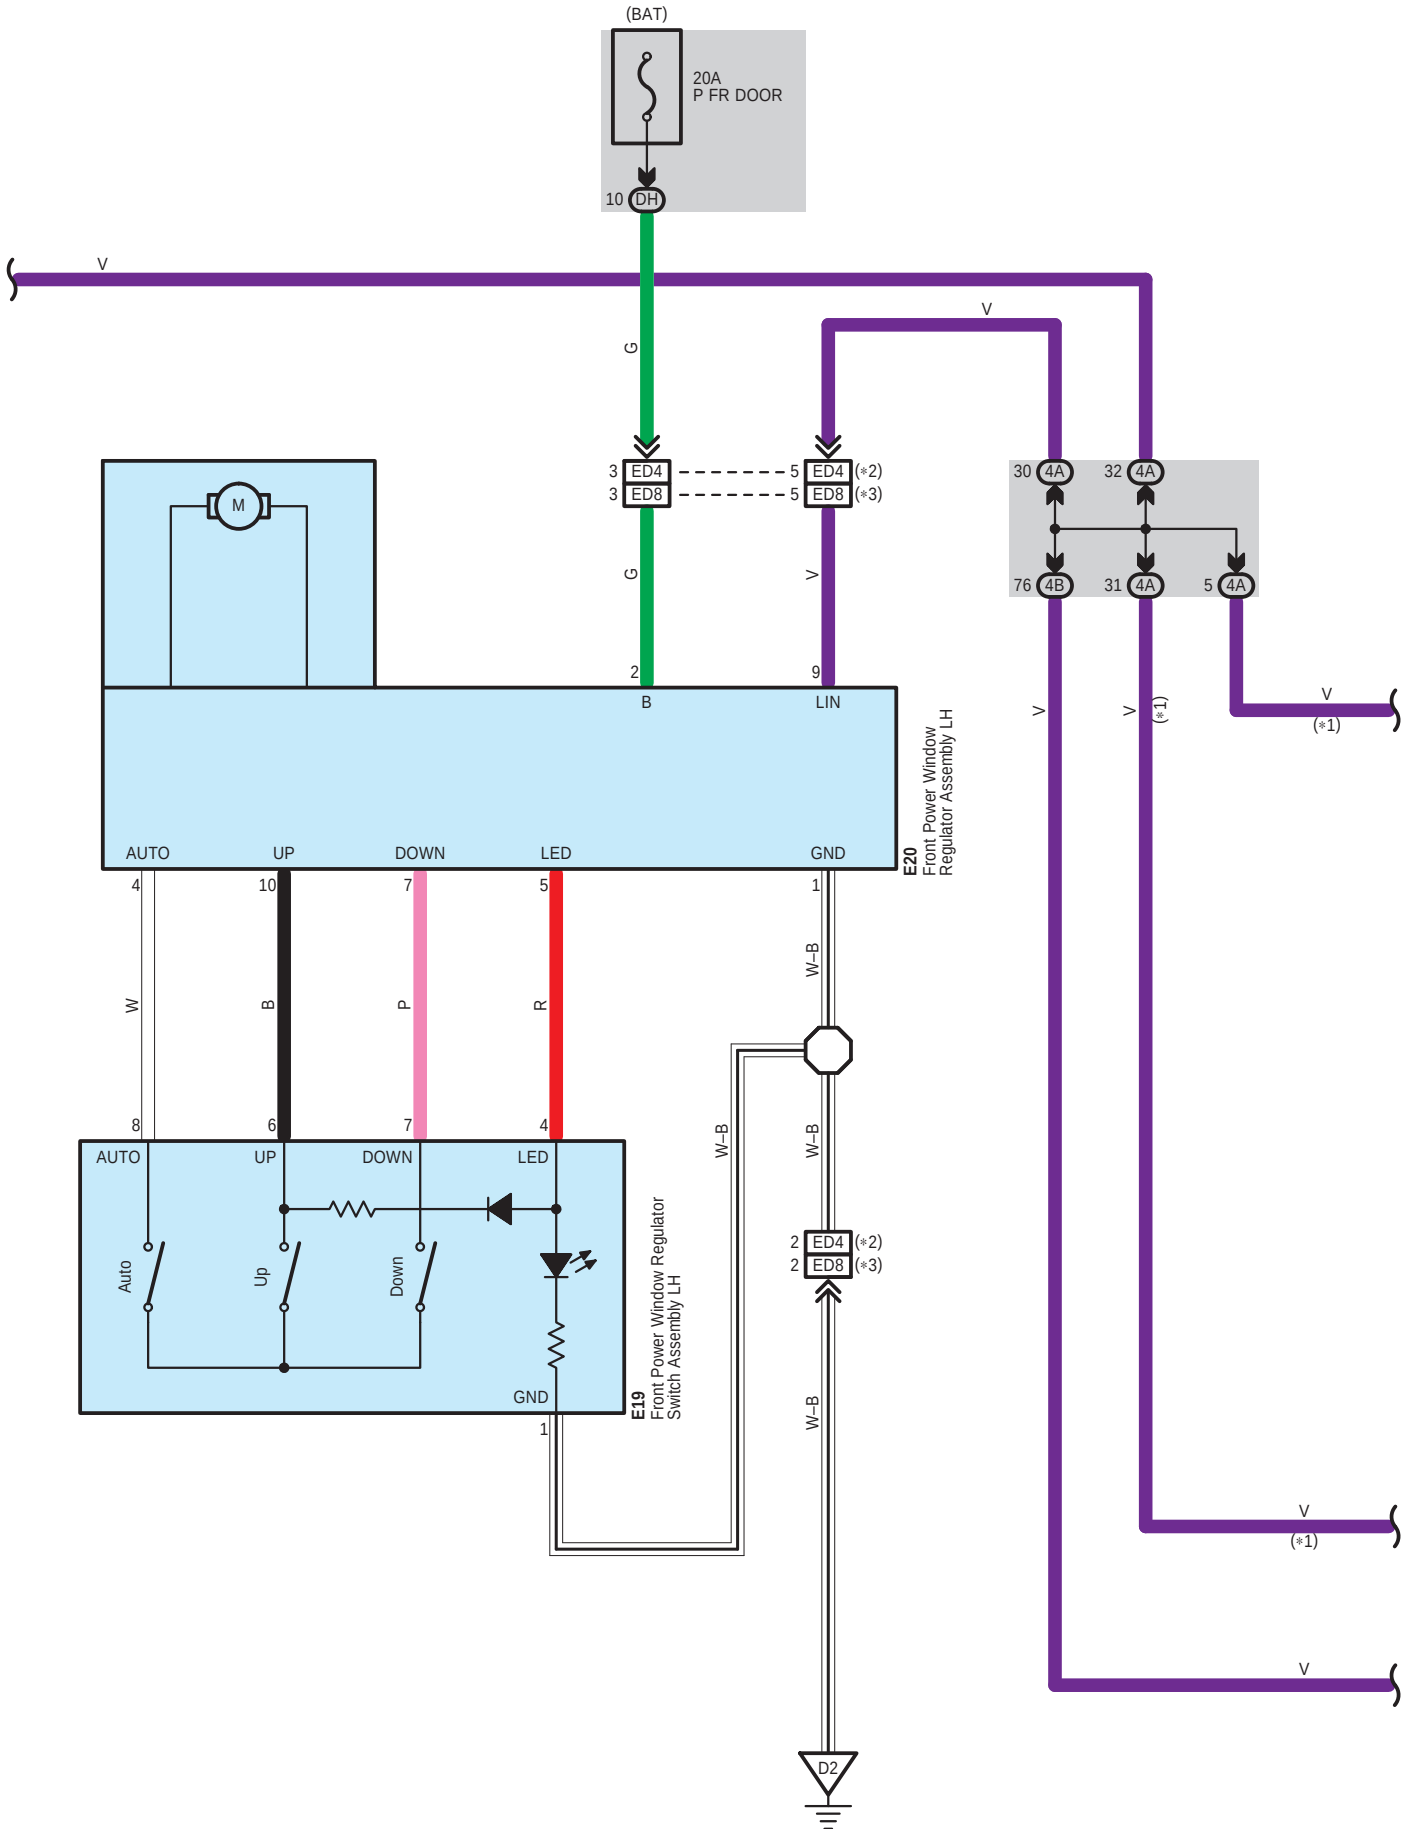

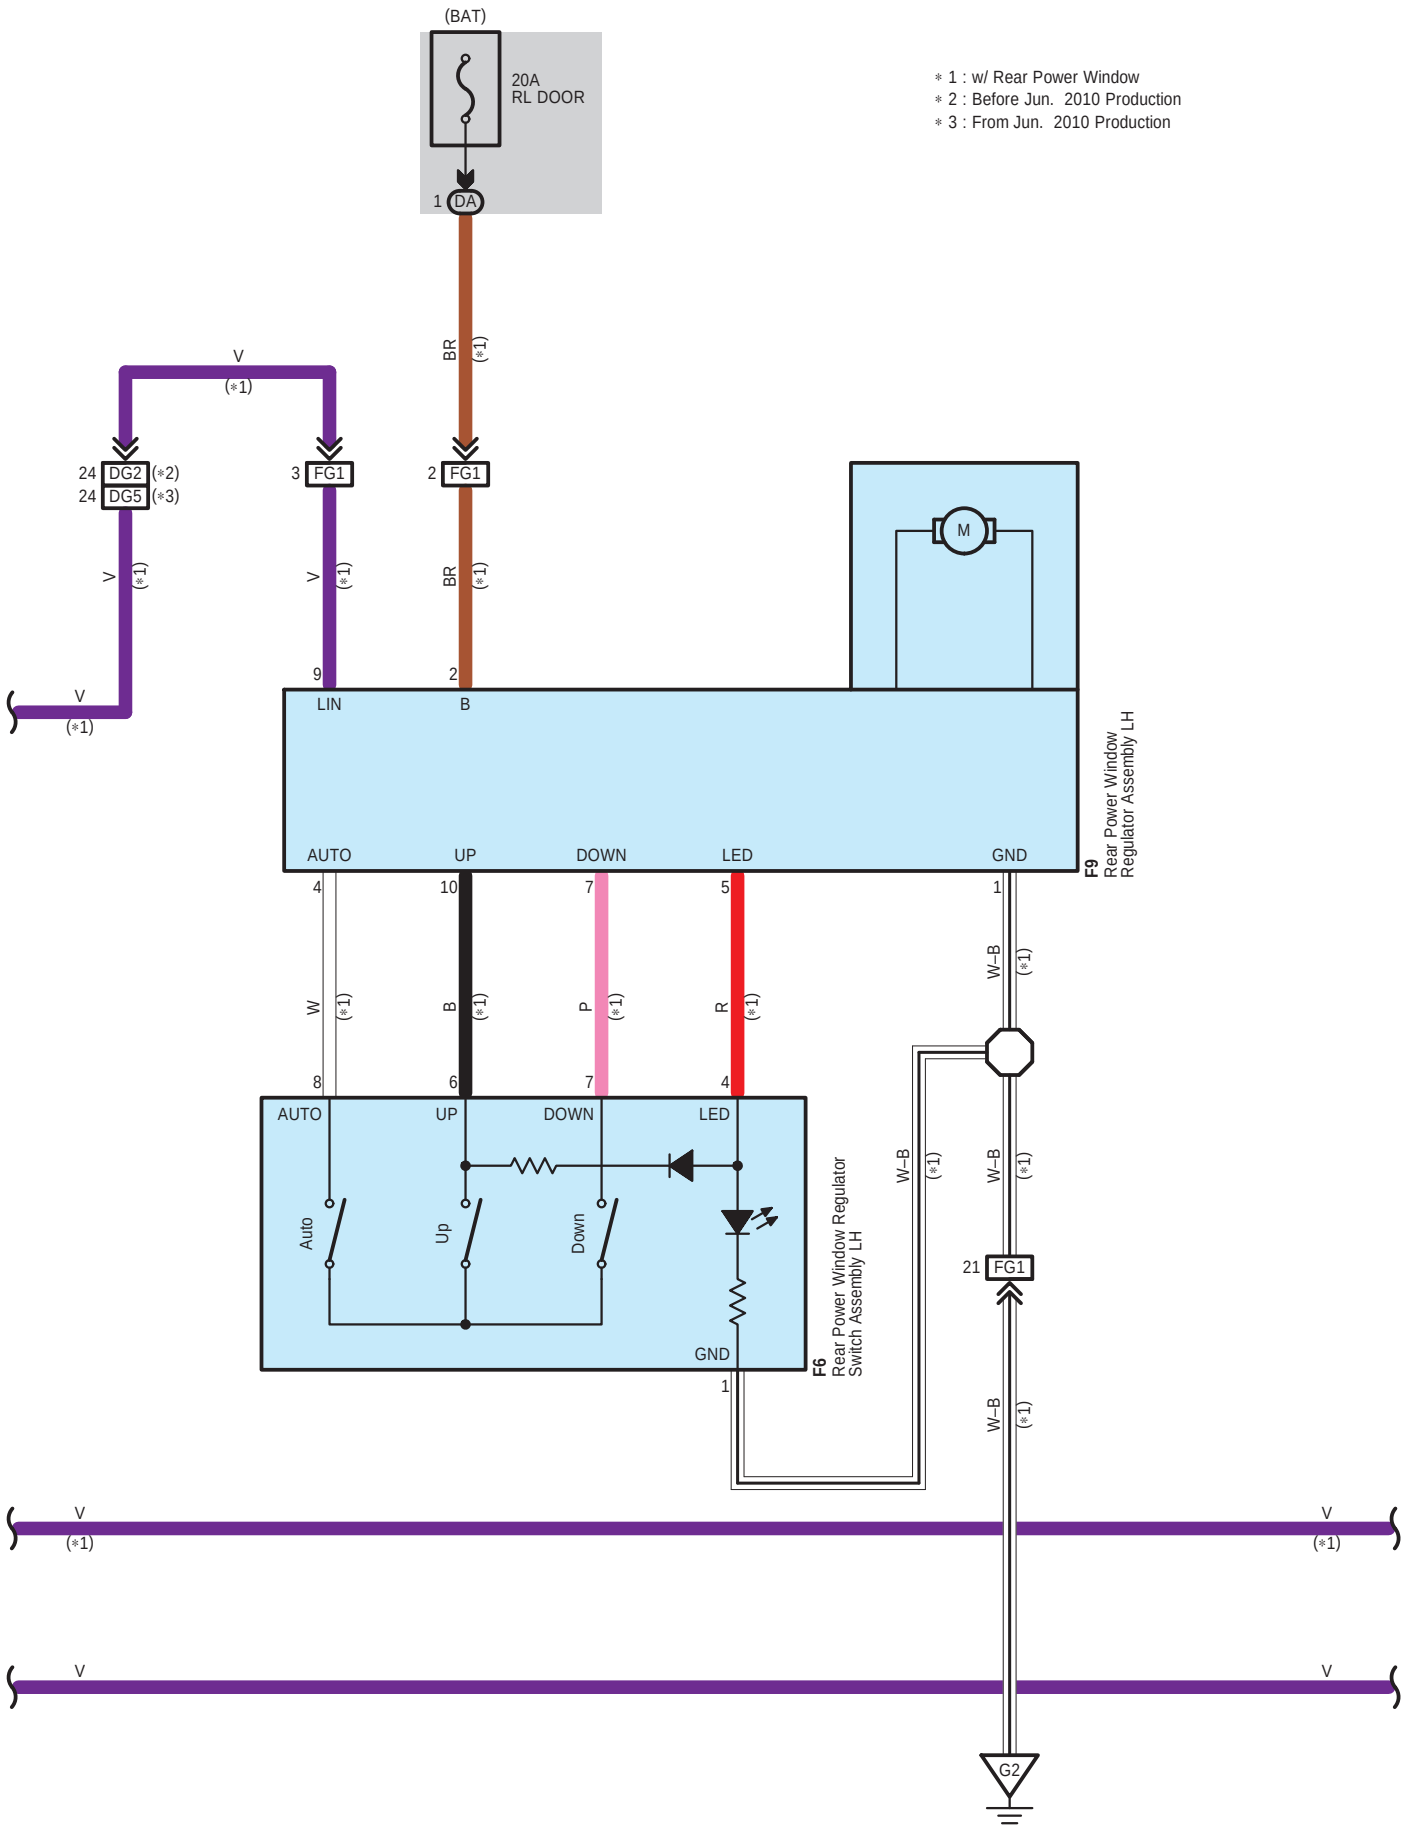


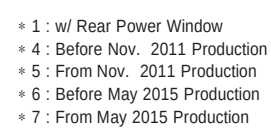

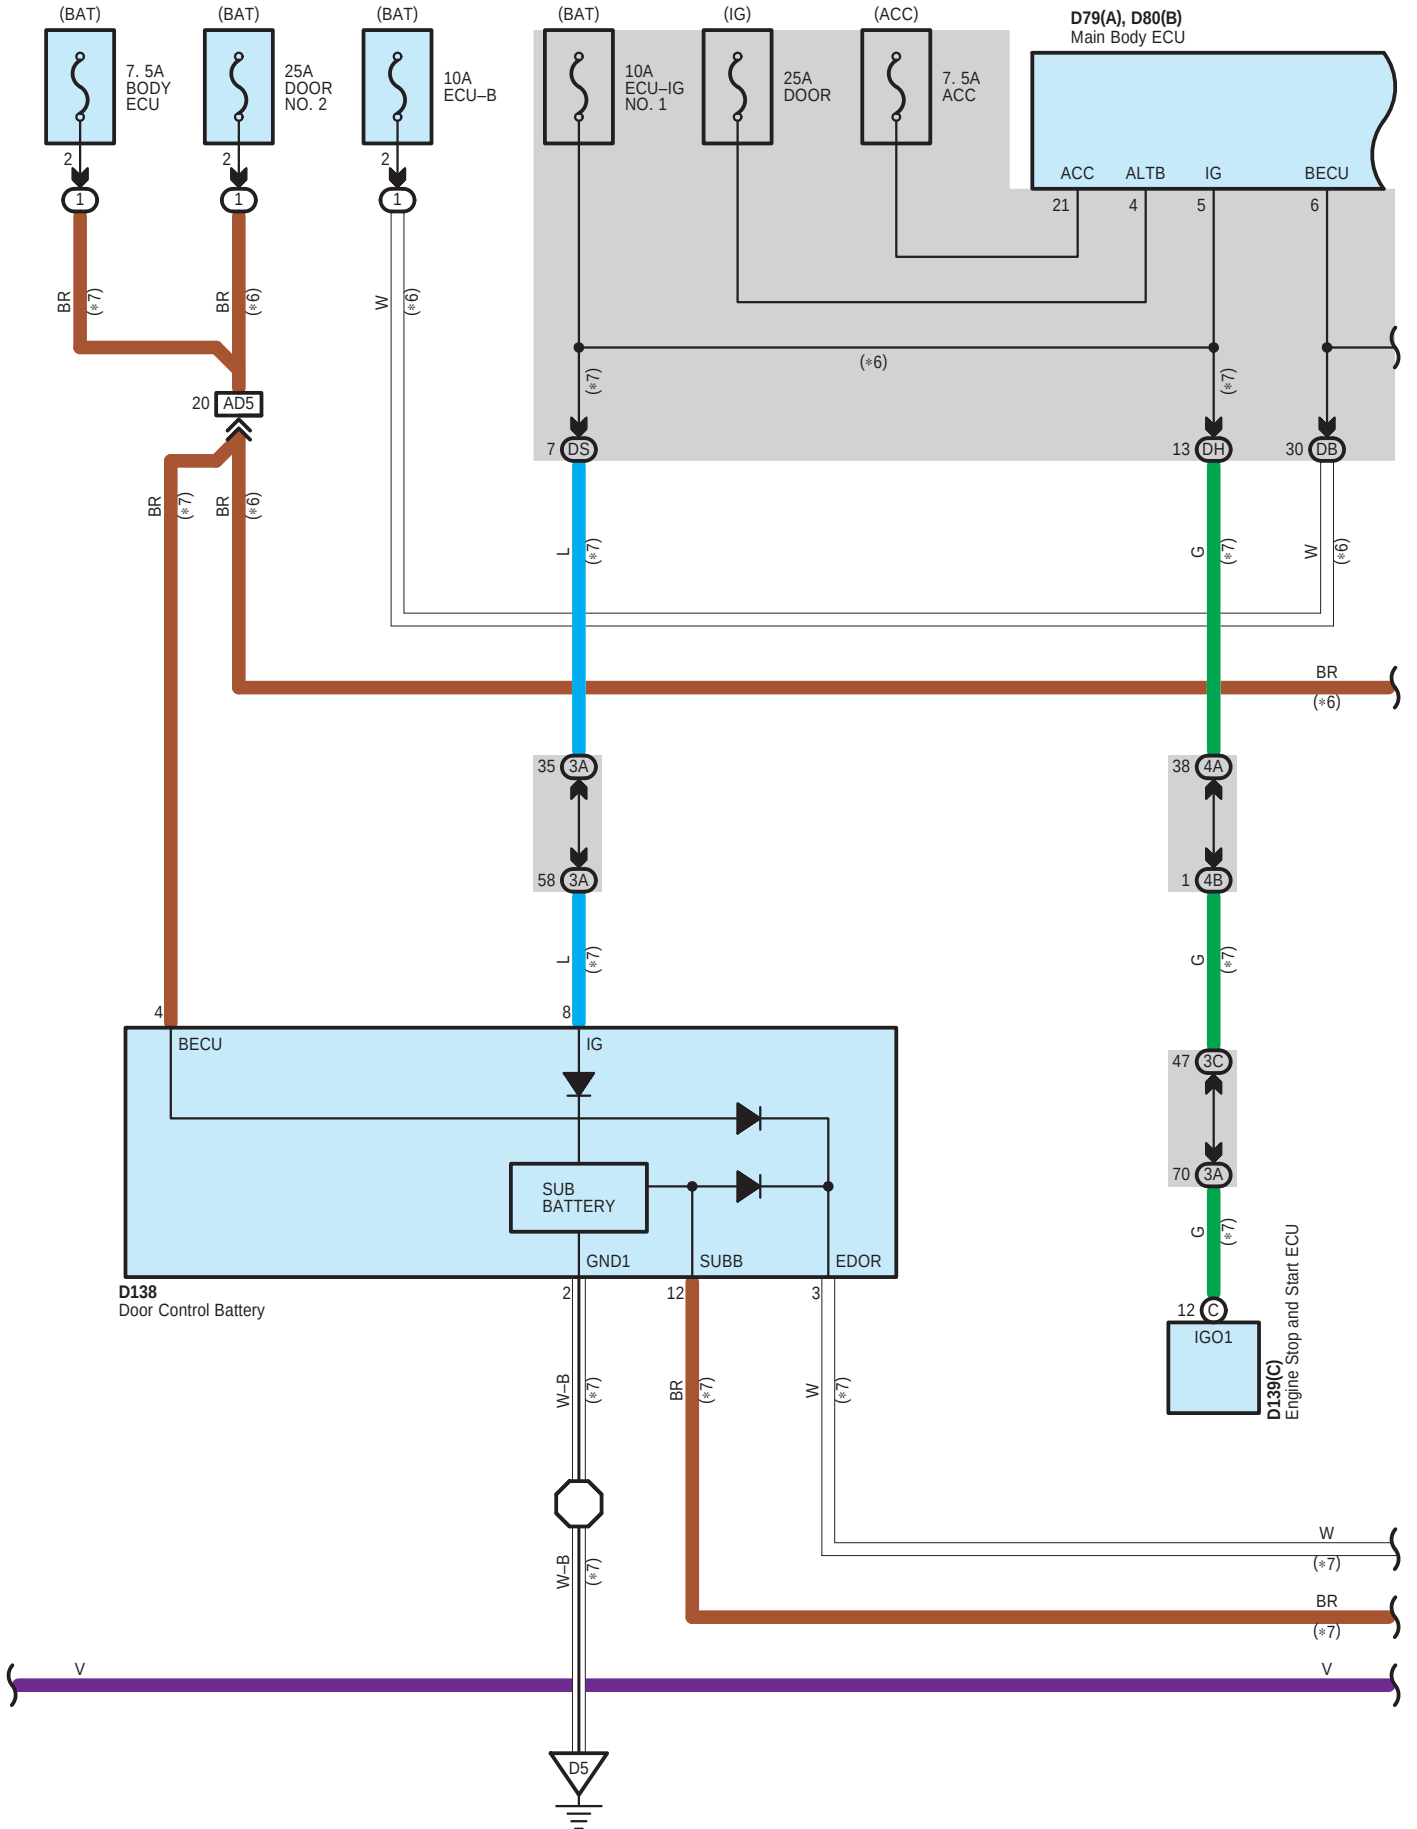


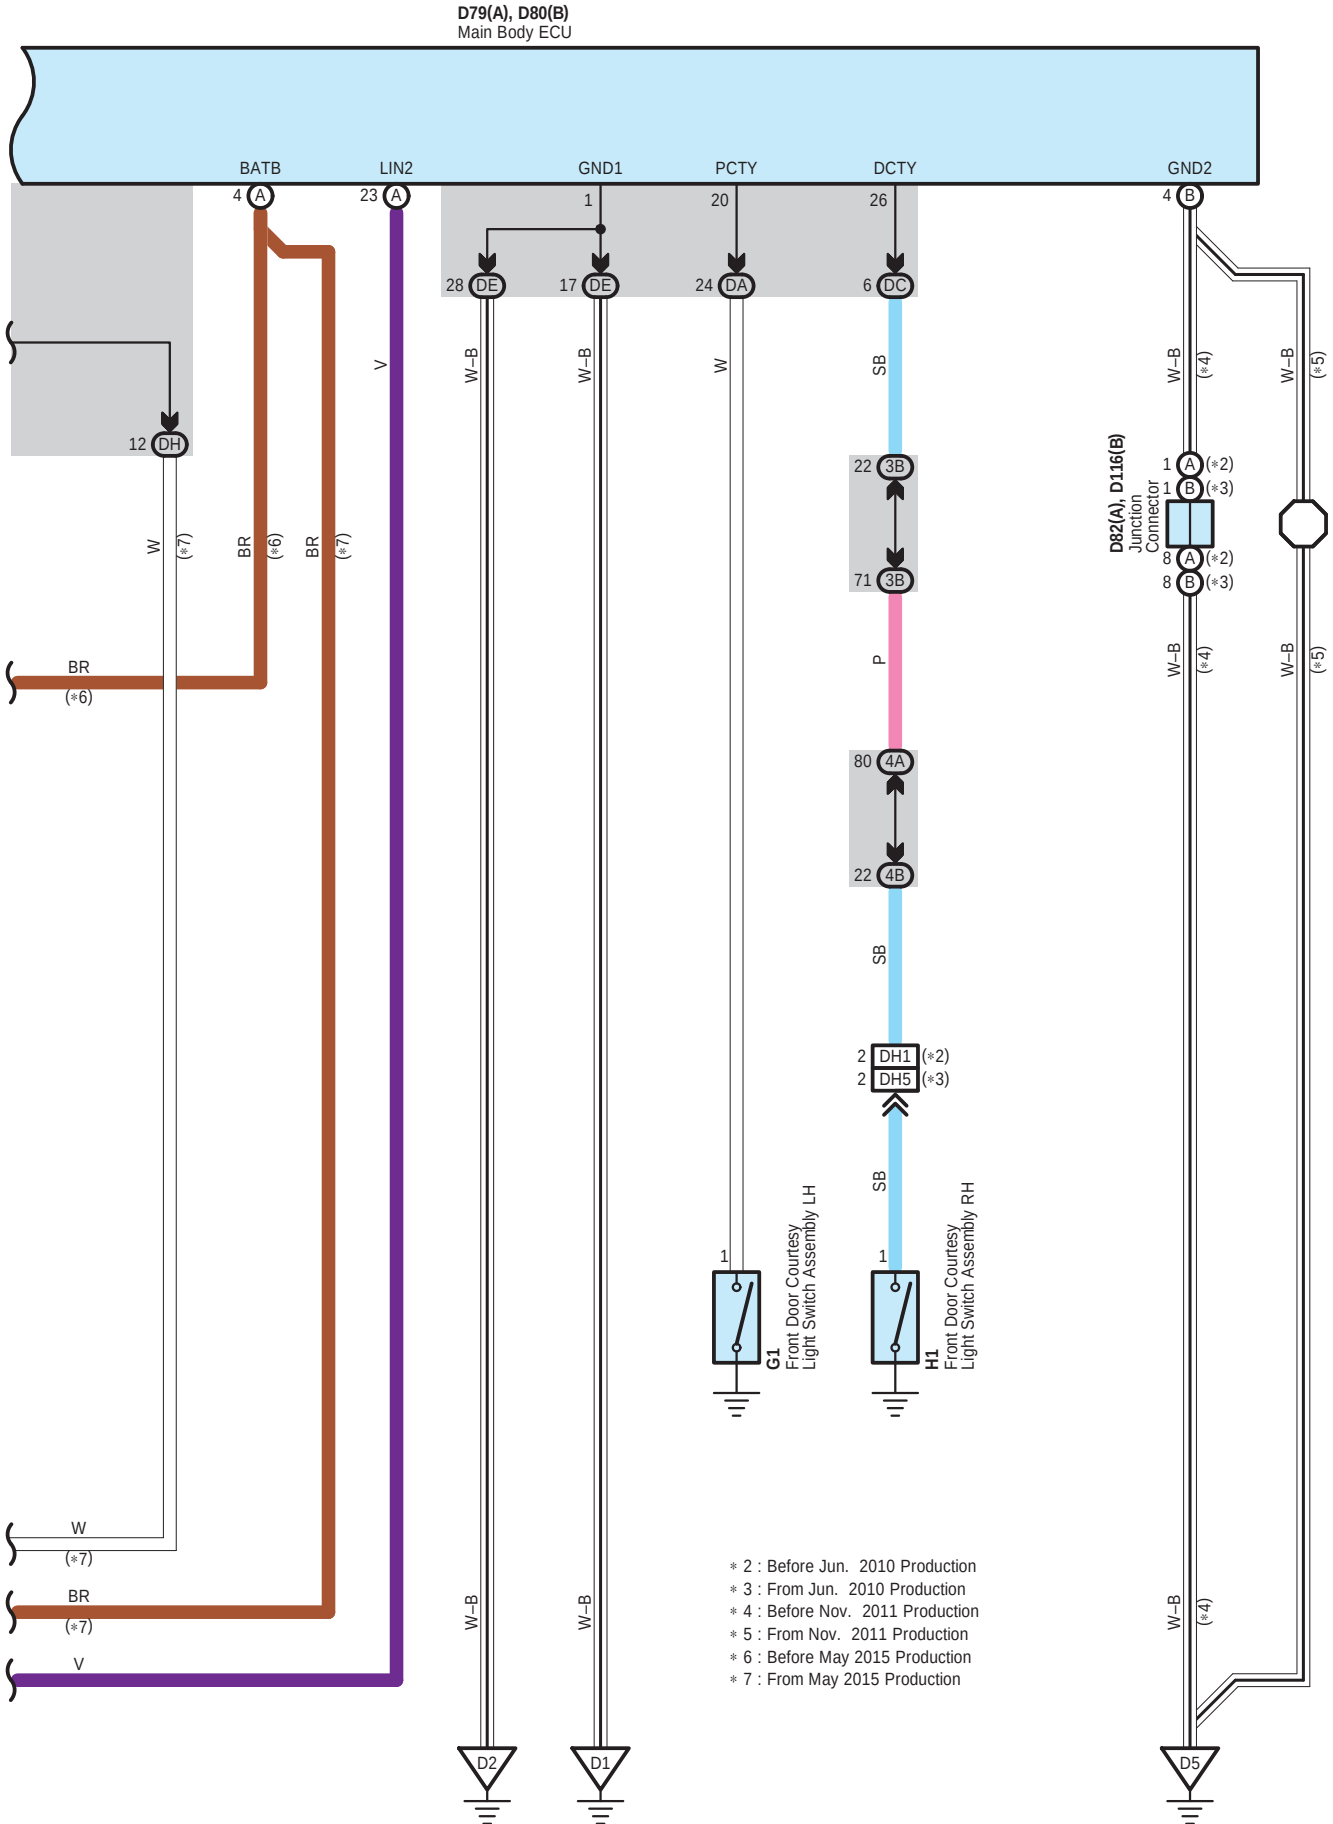


D 79
White

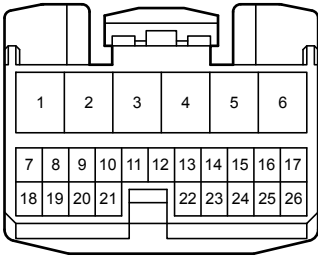


D 80
White

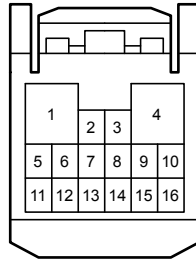


D 82
Black

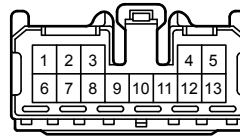


D116
White

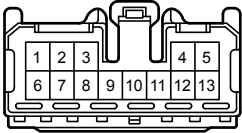


D138
Gray

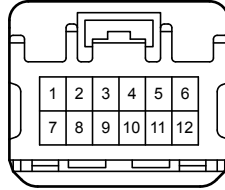


D139
Black

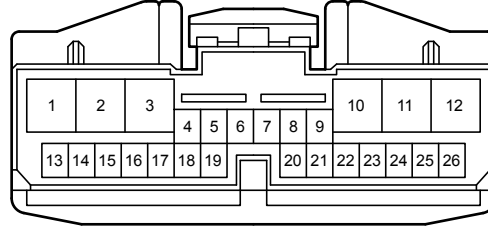


E 6
White

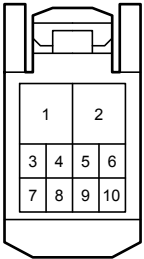


E 8
Black

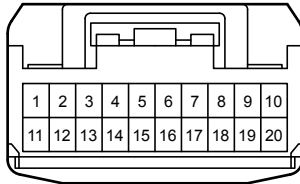


E 19
Black

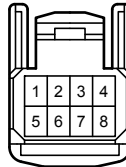


E 20
White

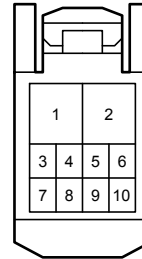


F 1
Black

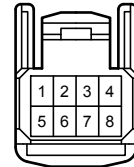


F 4
White

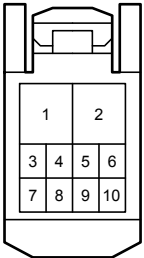

F 6
Black

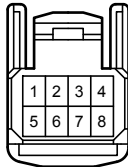

F 9
White

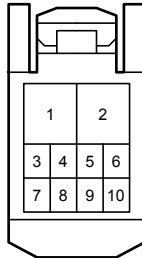


G 1
White




H 1
White




3A
White

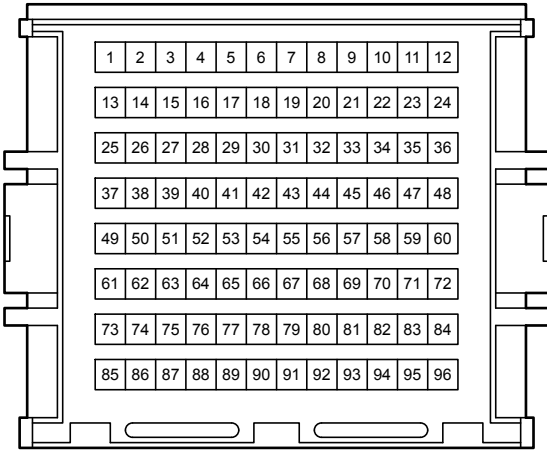


3B
White

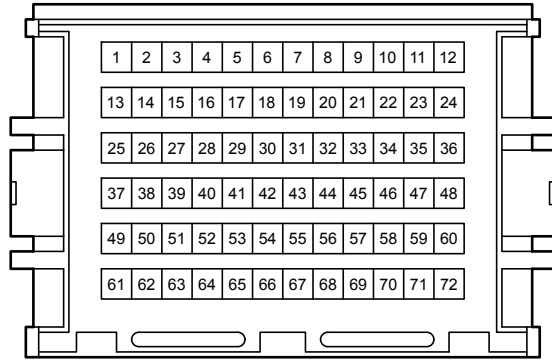


3C
White

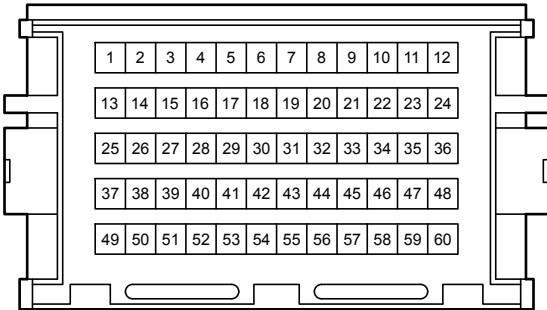


4A
White

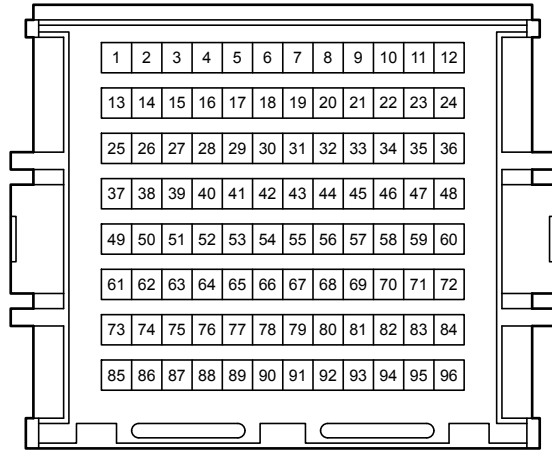


4B
White

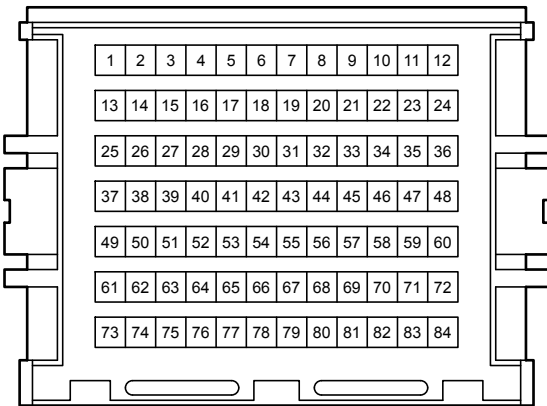


DA
White

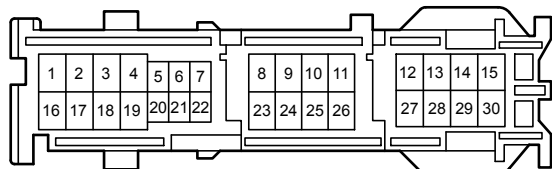


DB
White

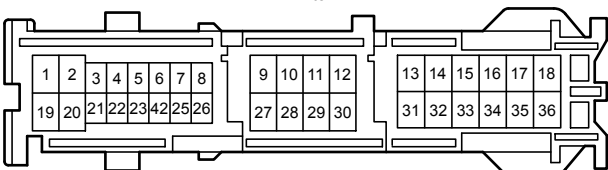


DC
White

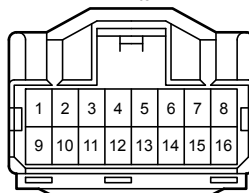


DE
White

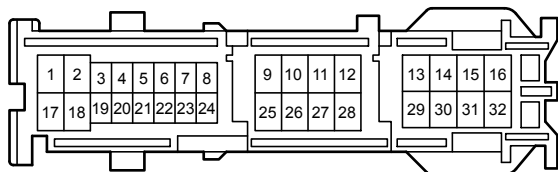


DH
White

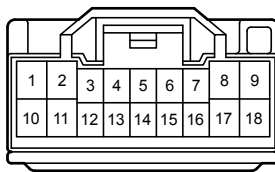


DS
White

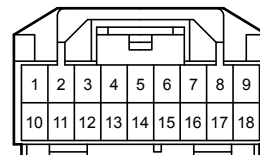


AD2
Gray

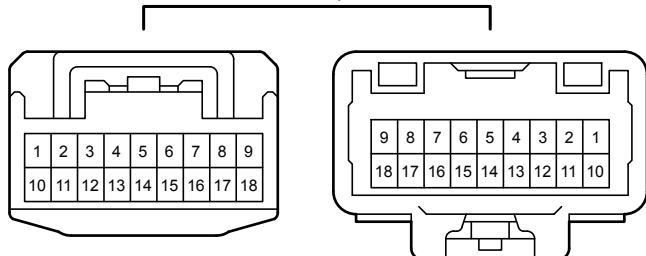


AD5
White

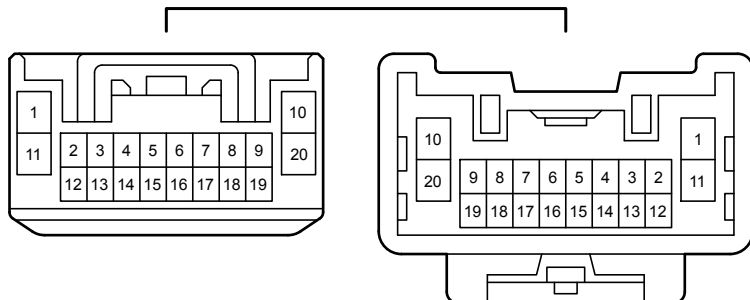


DG1
White

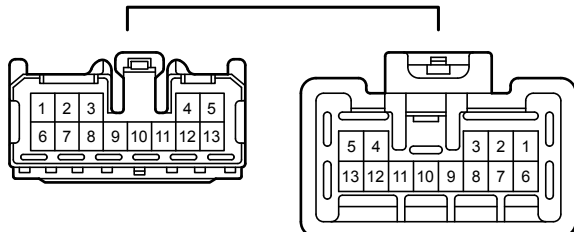

DG2
Gray

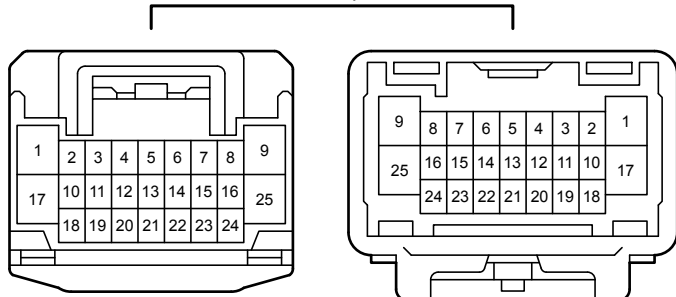


DG4
White

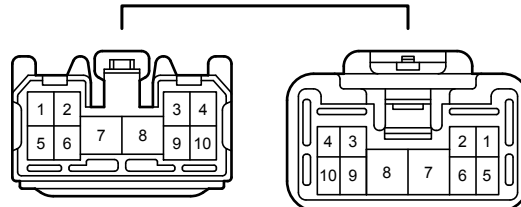


DG5

White

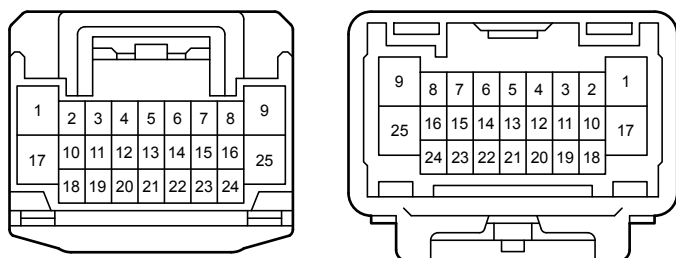


DH1

Gray

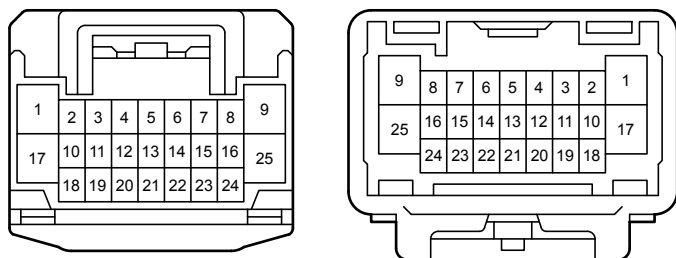


DH4

White

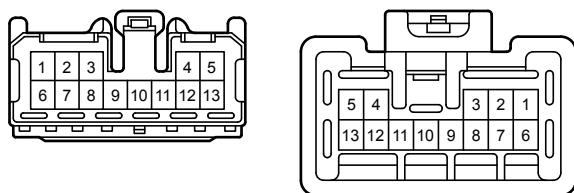


DH5

White

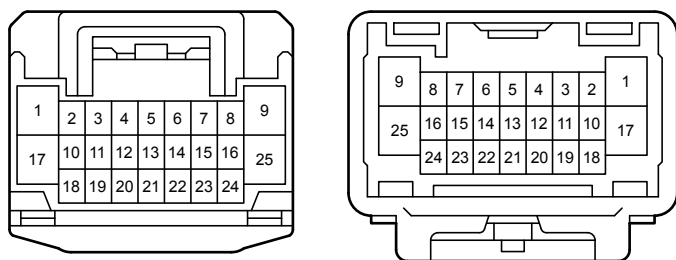


ED1

Blue

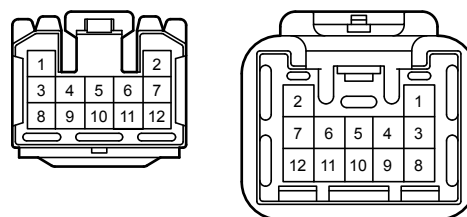


ED4

Blue

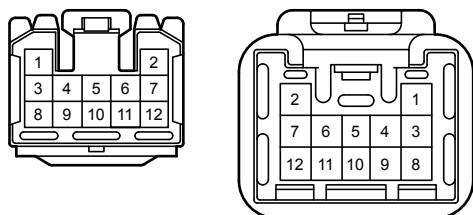


ED7


White

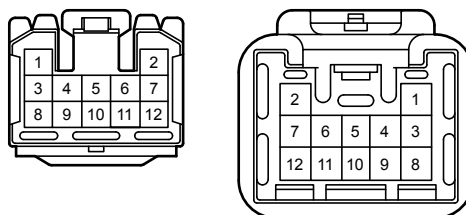

ED8
White

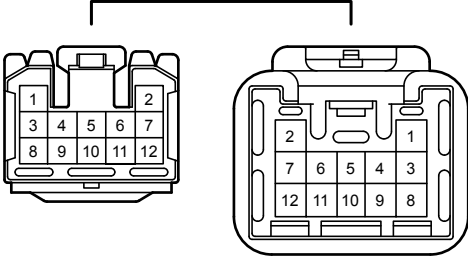

FG1
White

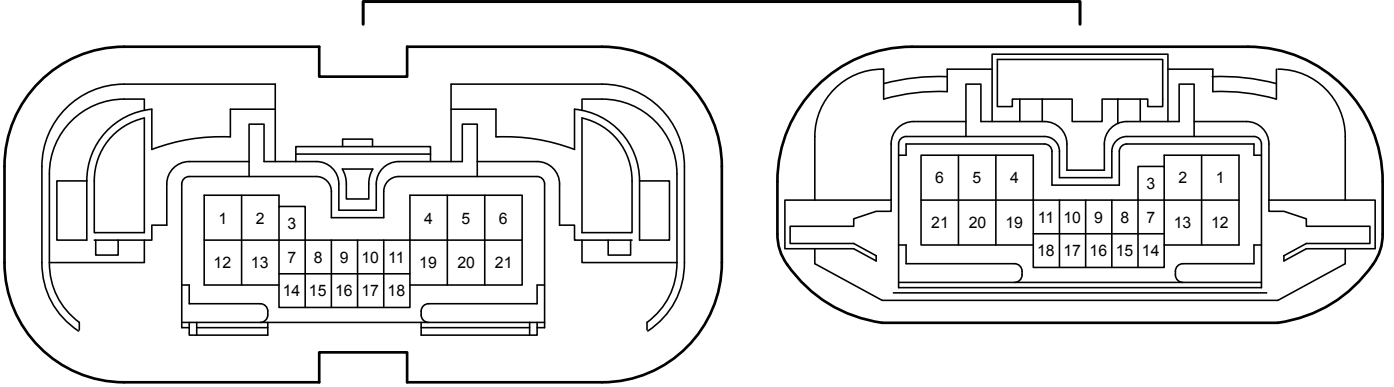

FH1
White

