





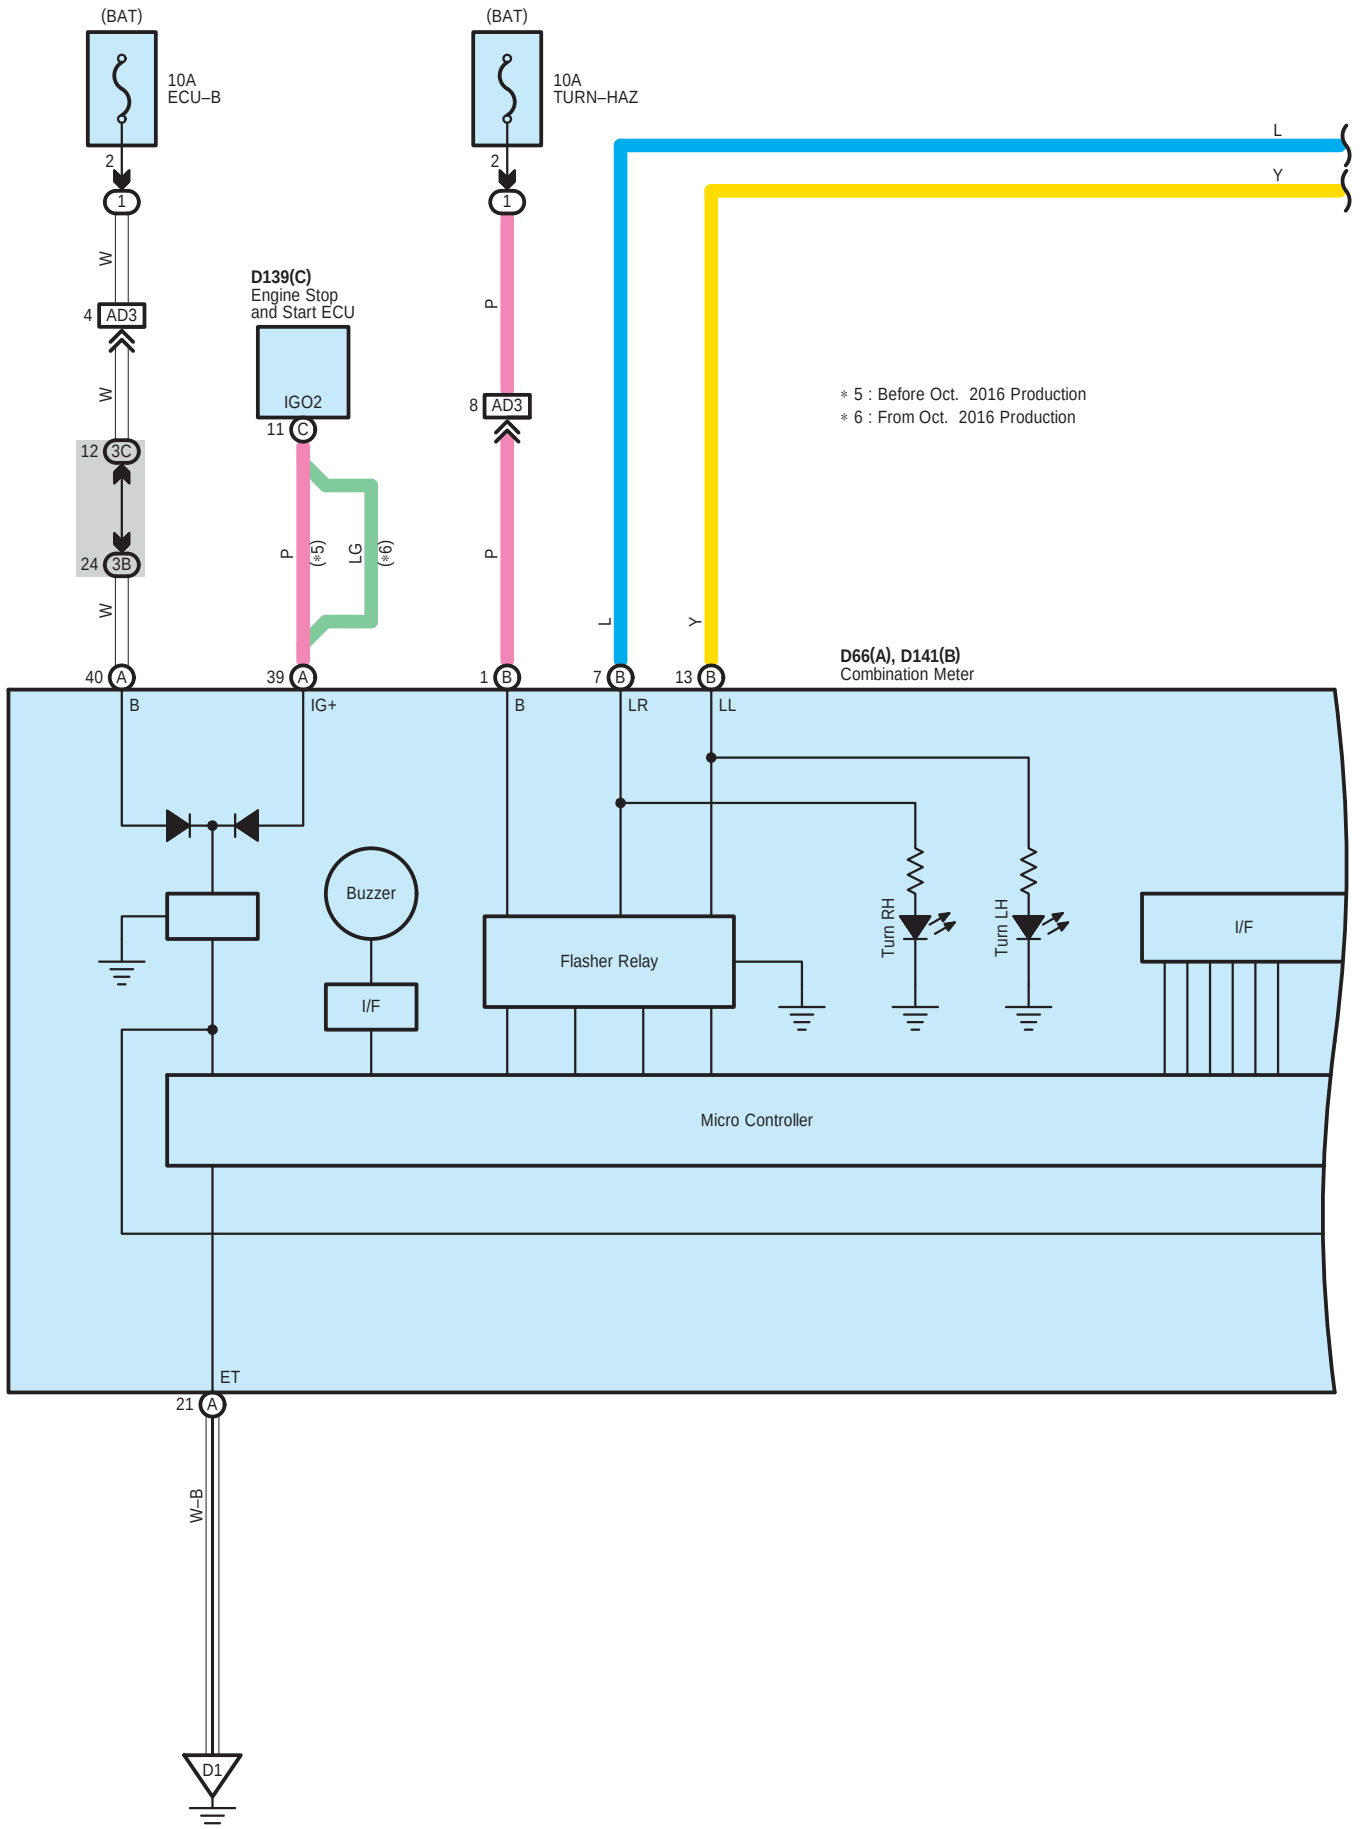

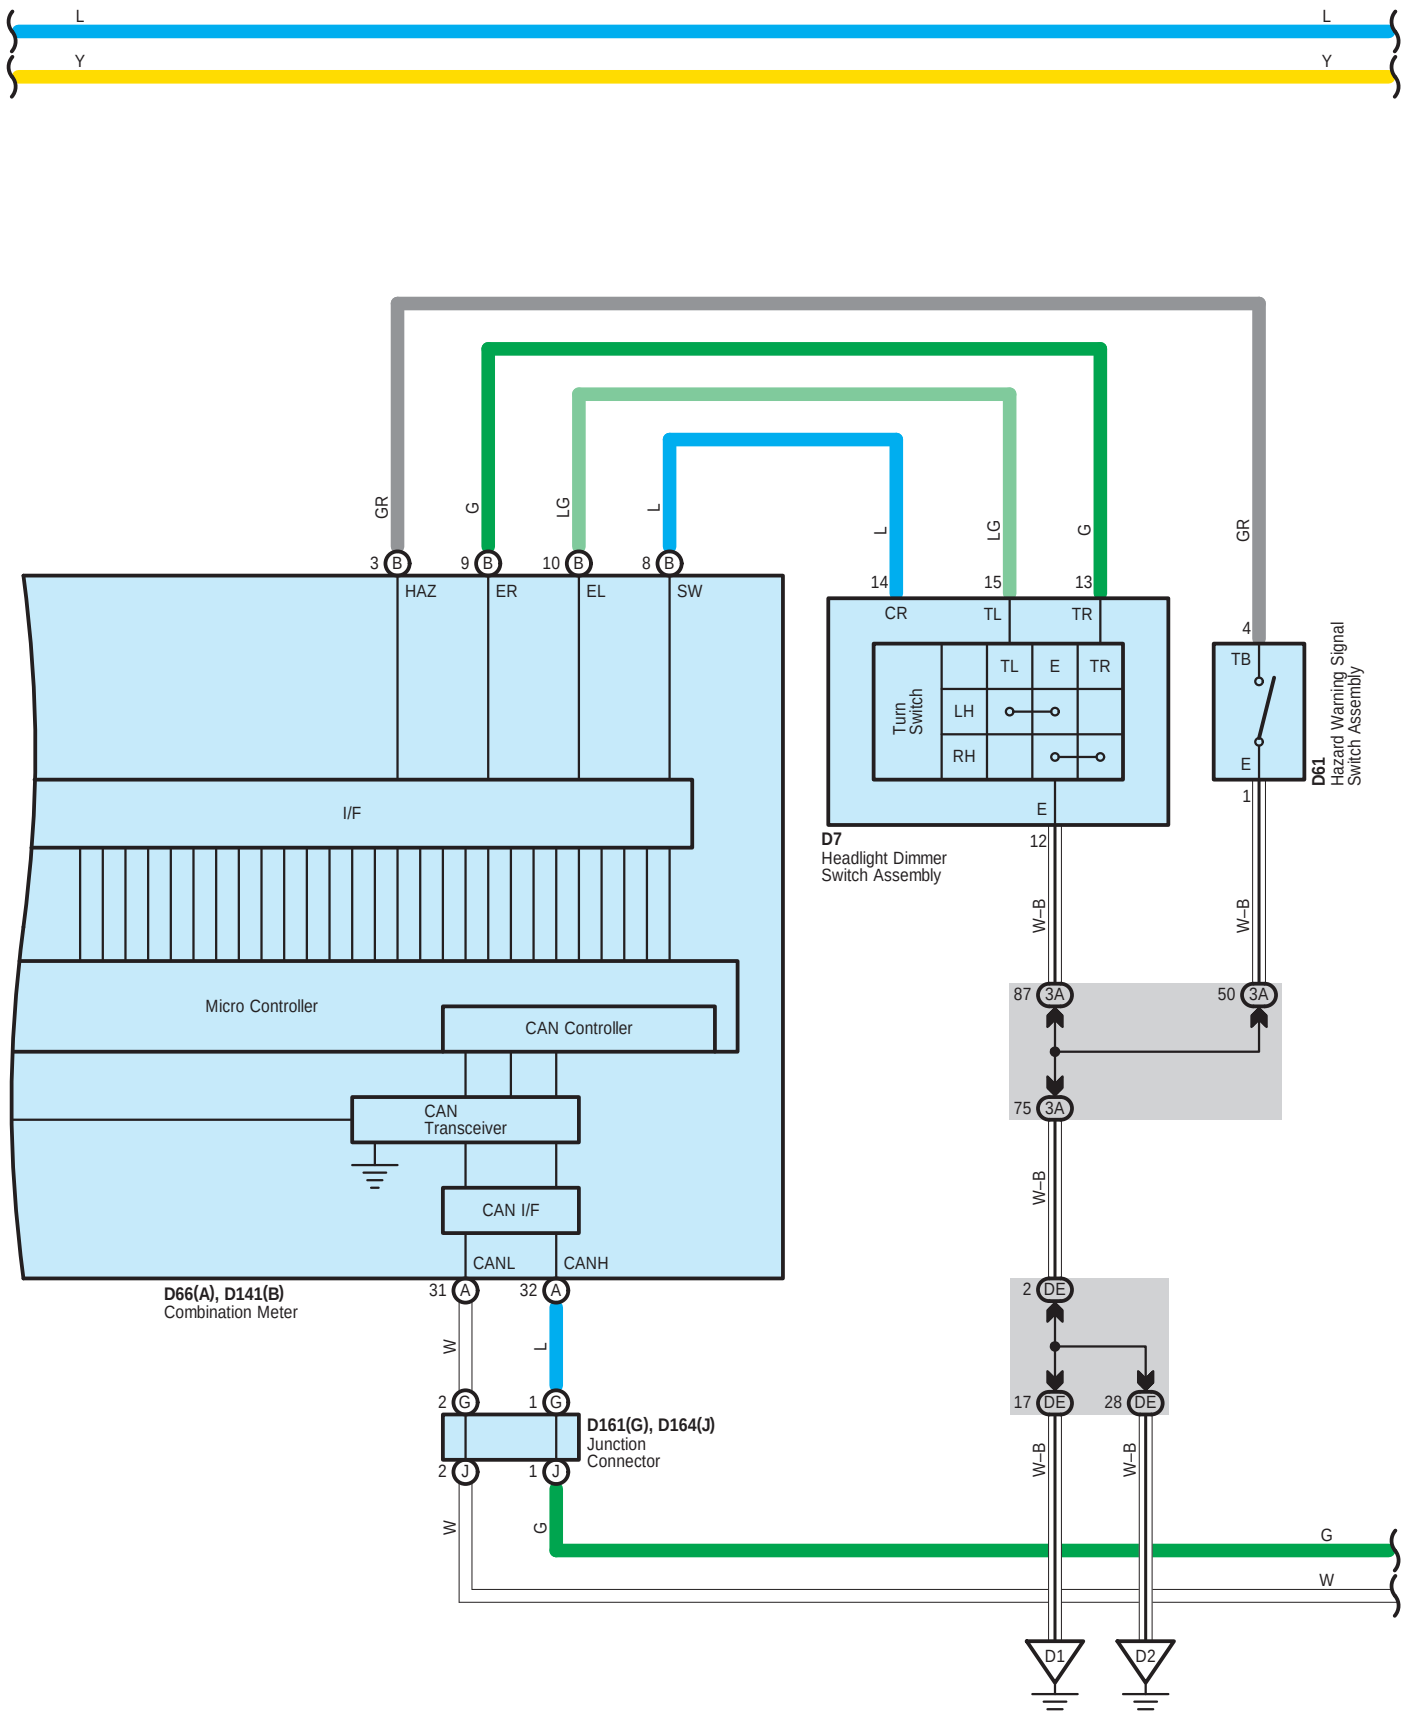


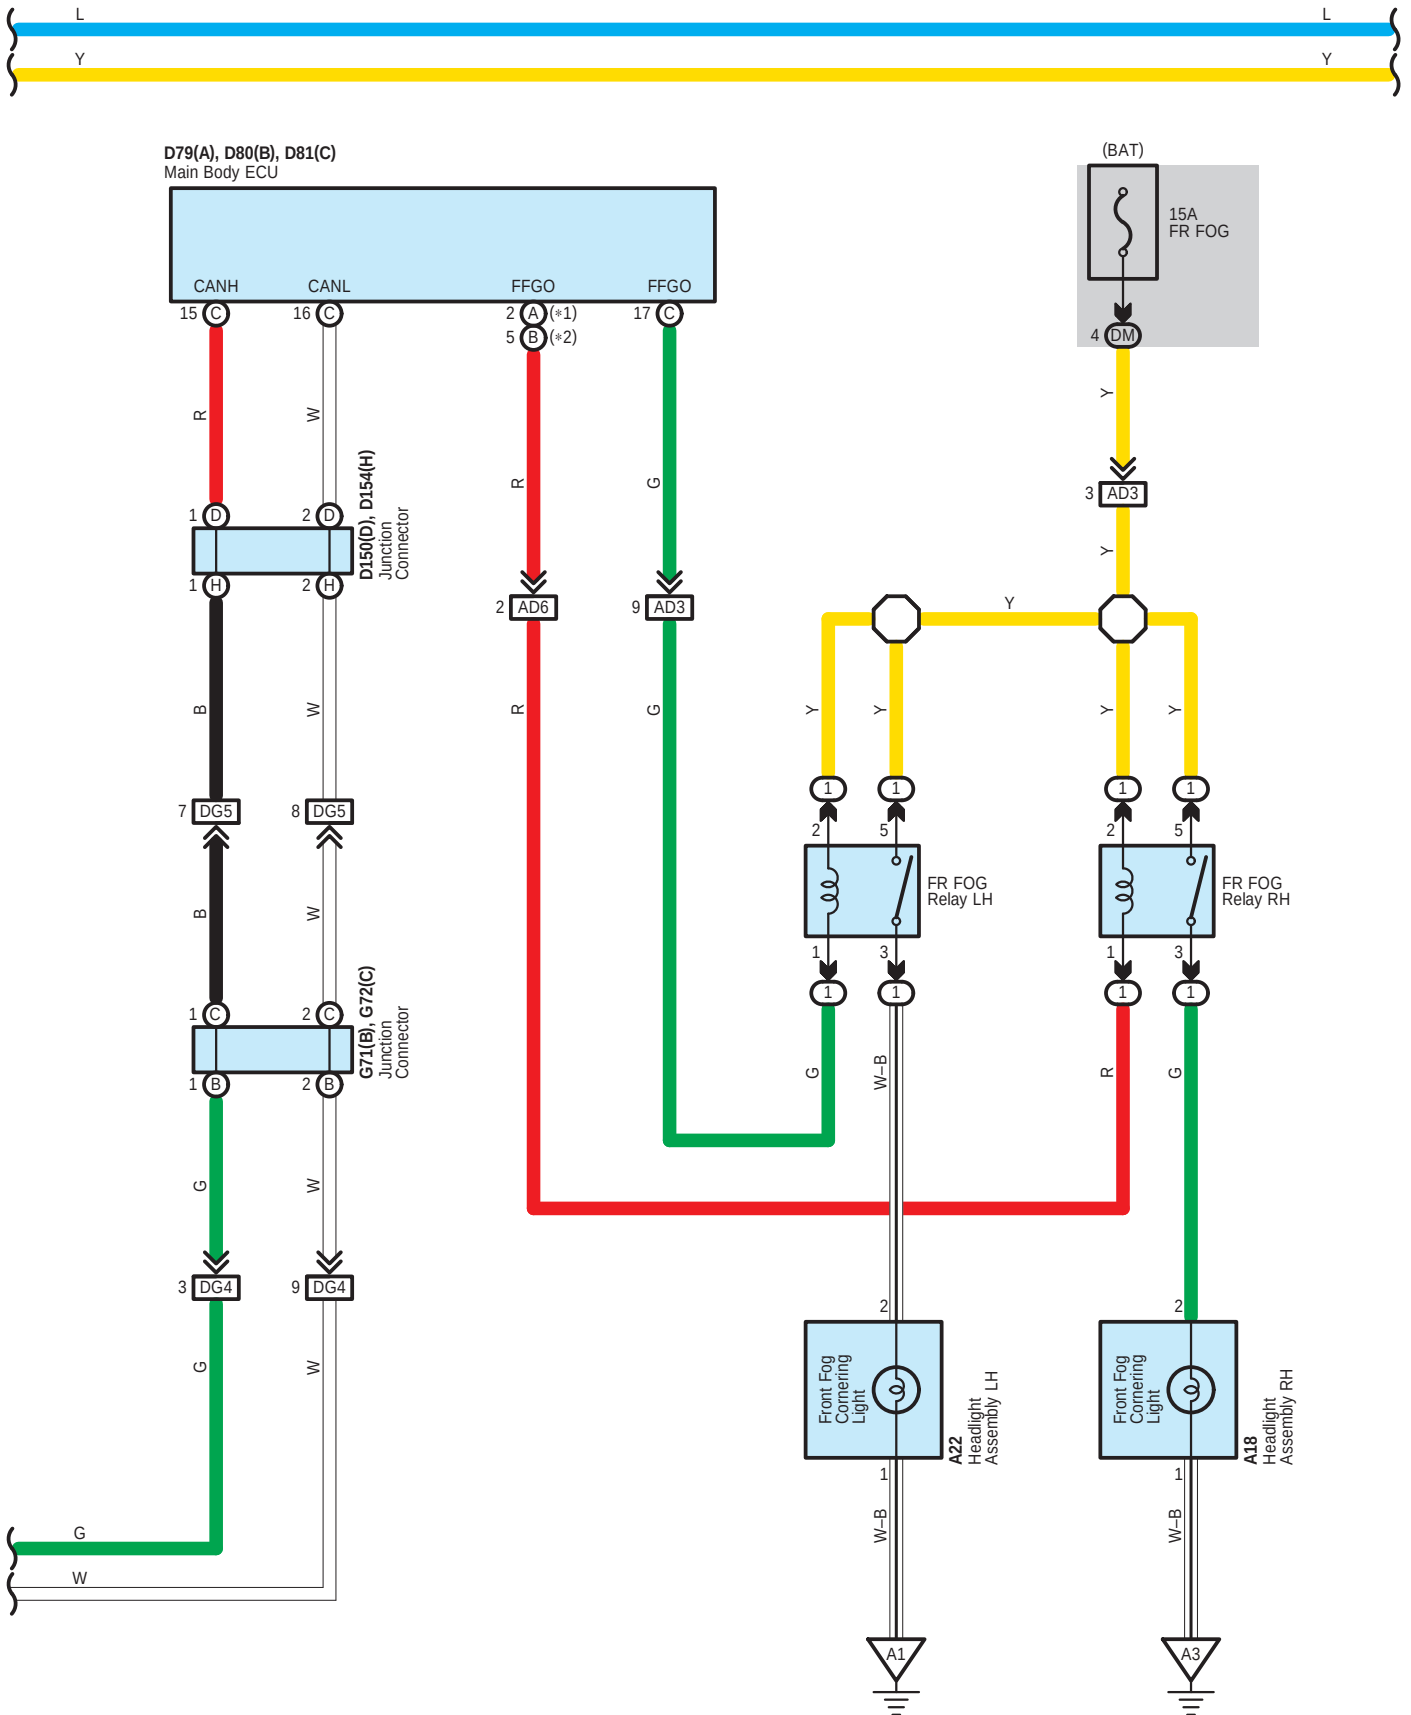

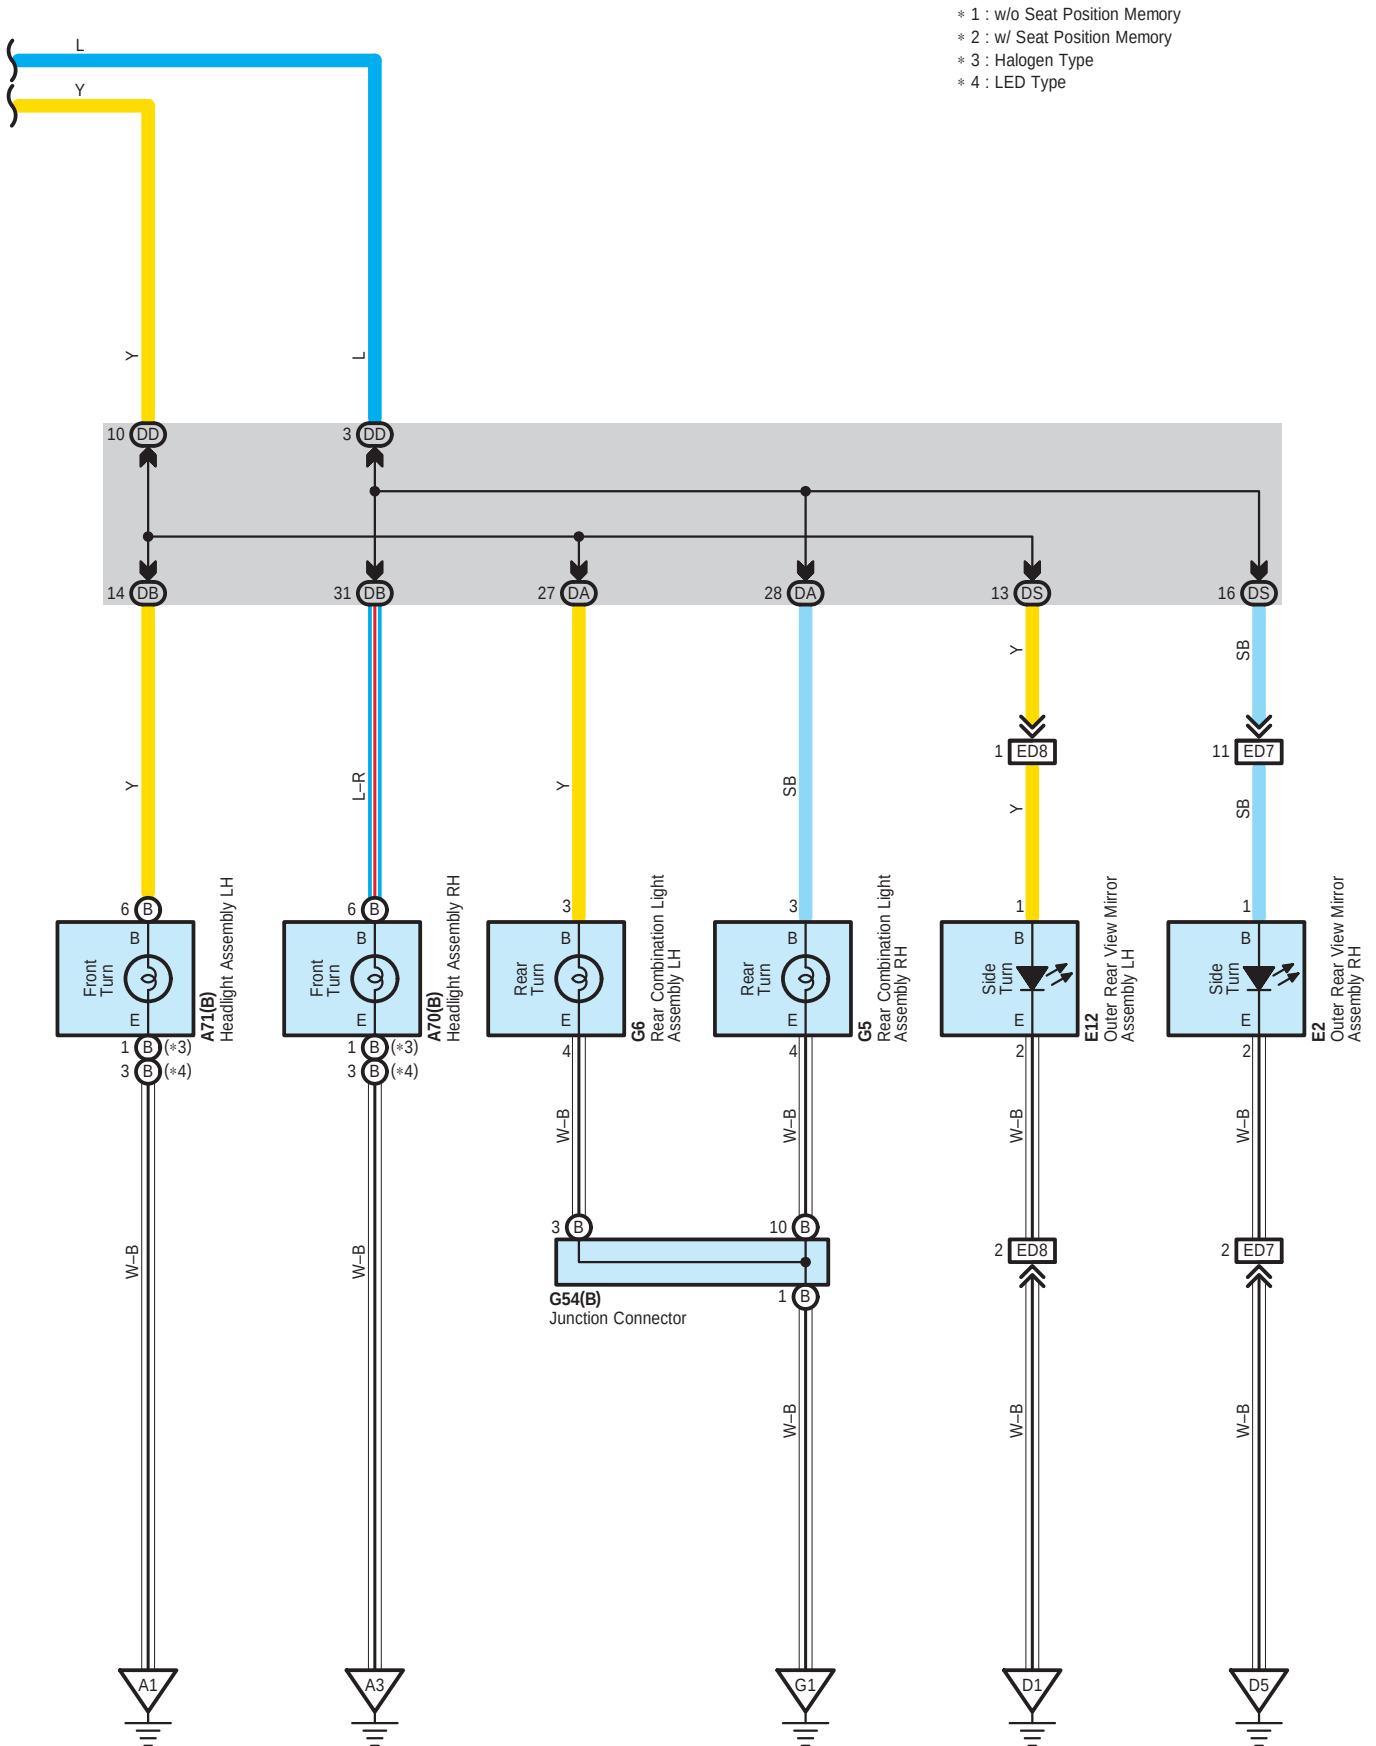


A 18

Black

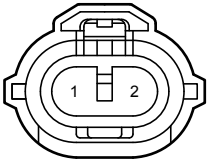


A 22

Black

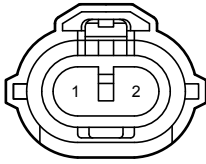


A 70

Gray

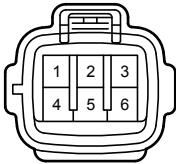


A 71

Gray

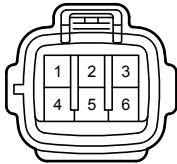


D 7

White

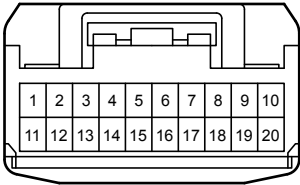


D 61

Gray

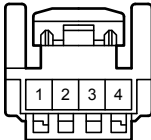


D 66

Black

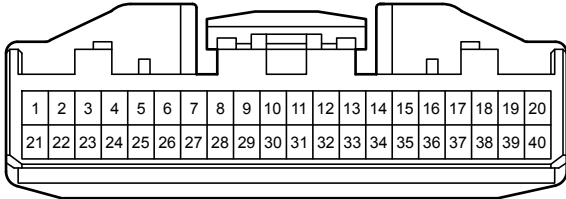


D 79

White

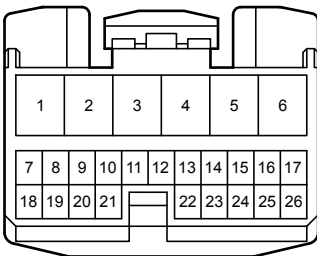


D 80

White

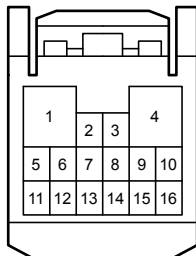


D 81

White

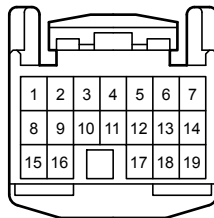


D139

Black

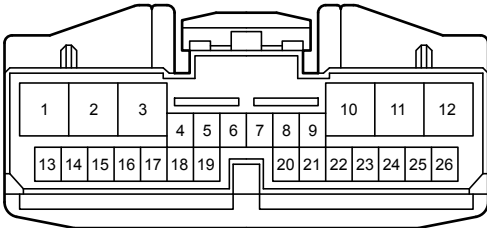


D141

Black

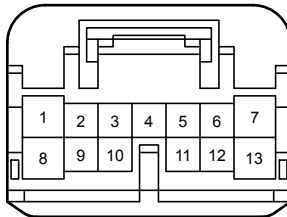


D150

White




D154

White




D161

White




D164

White




E 2

White

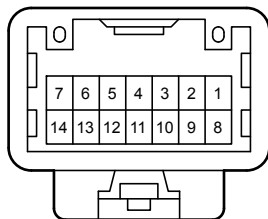


E 12

White

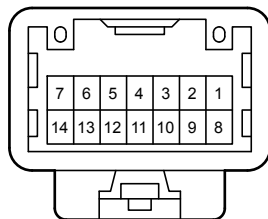


G 5

White




G 6

White




G 54

White




G 71

White




G 72

White




3A

White

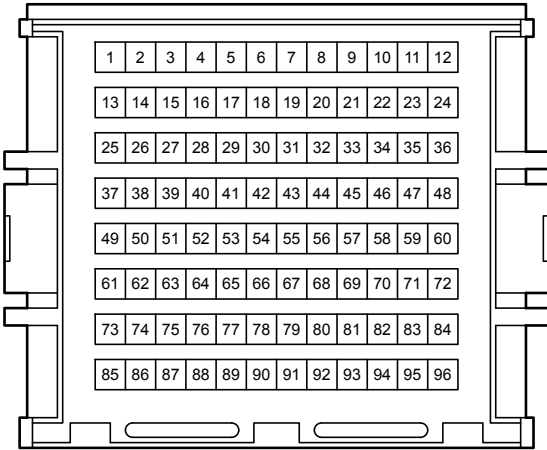


3B

White

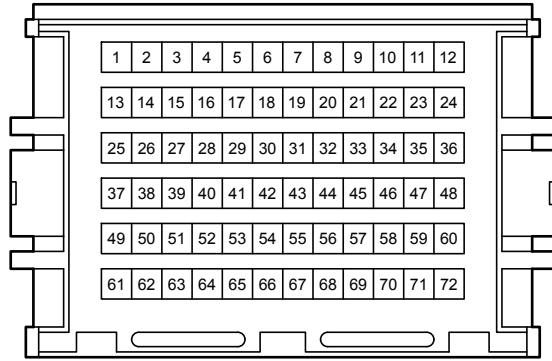


3C

White

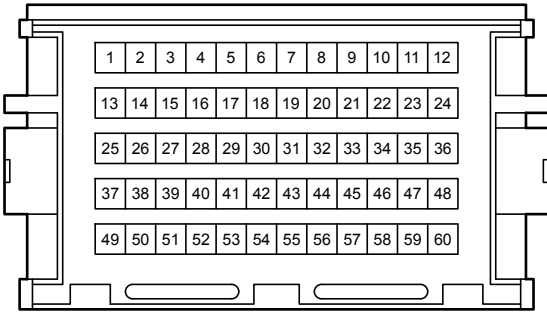


DA

White

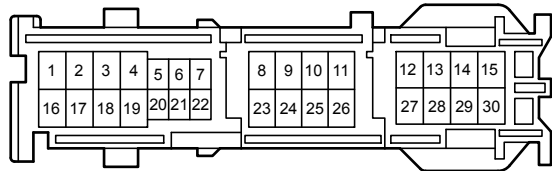


DB

White

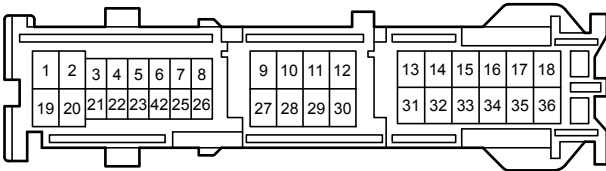


DD

White

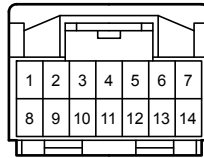


DE

White

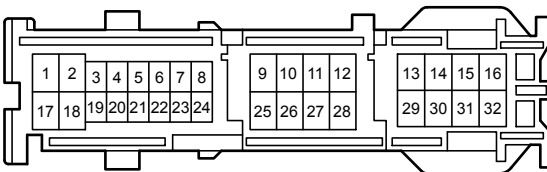


DM

White

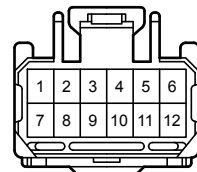


DS


White

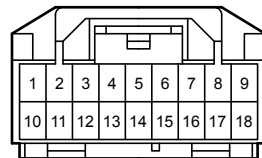


AD3
White

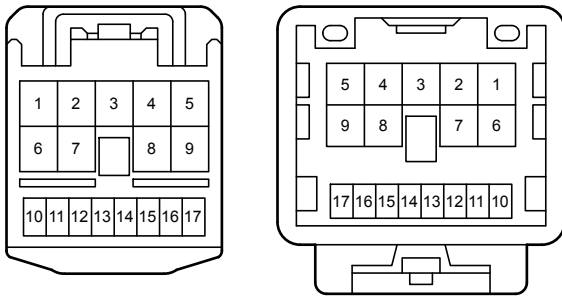


AD6
Gray

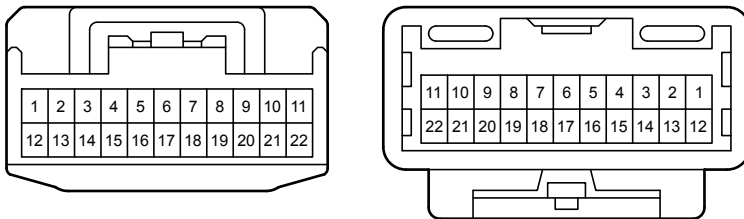


DG4
White

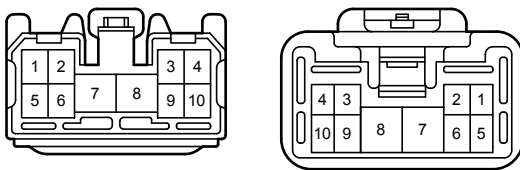

DG5
White

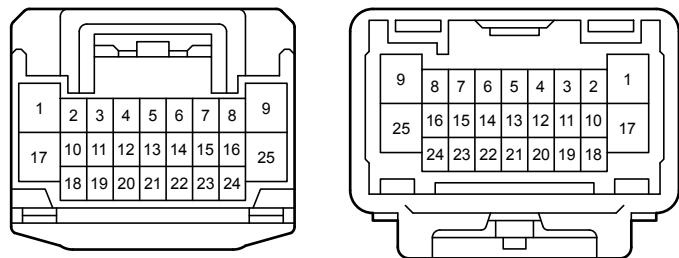

ED7
White

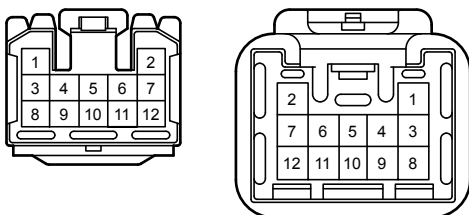

ED8
White

