




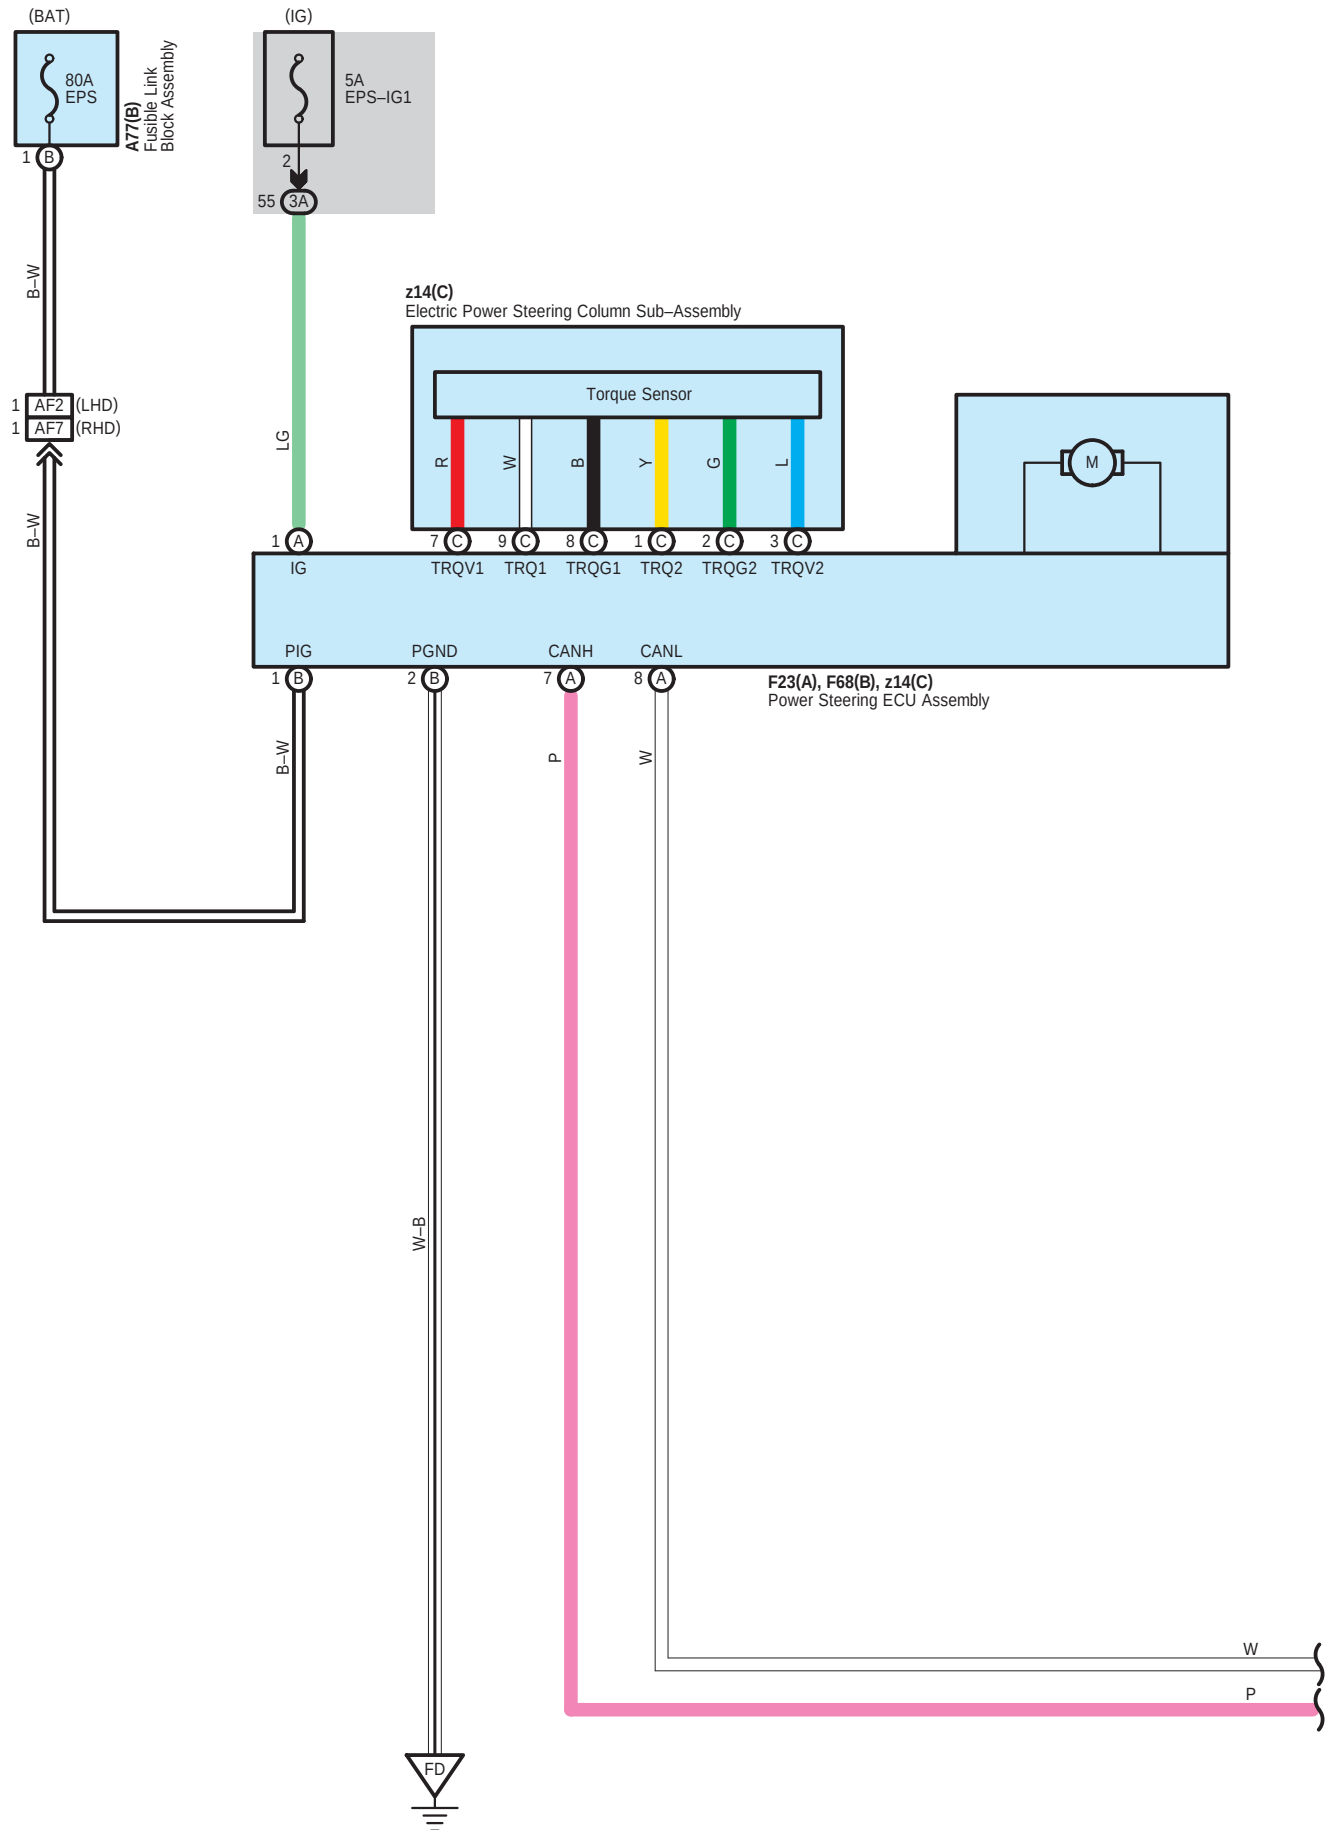
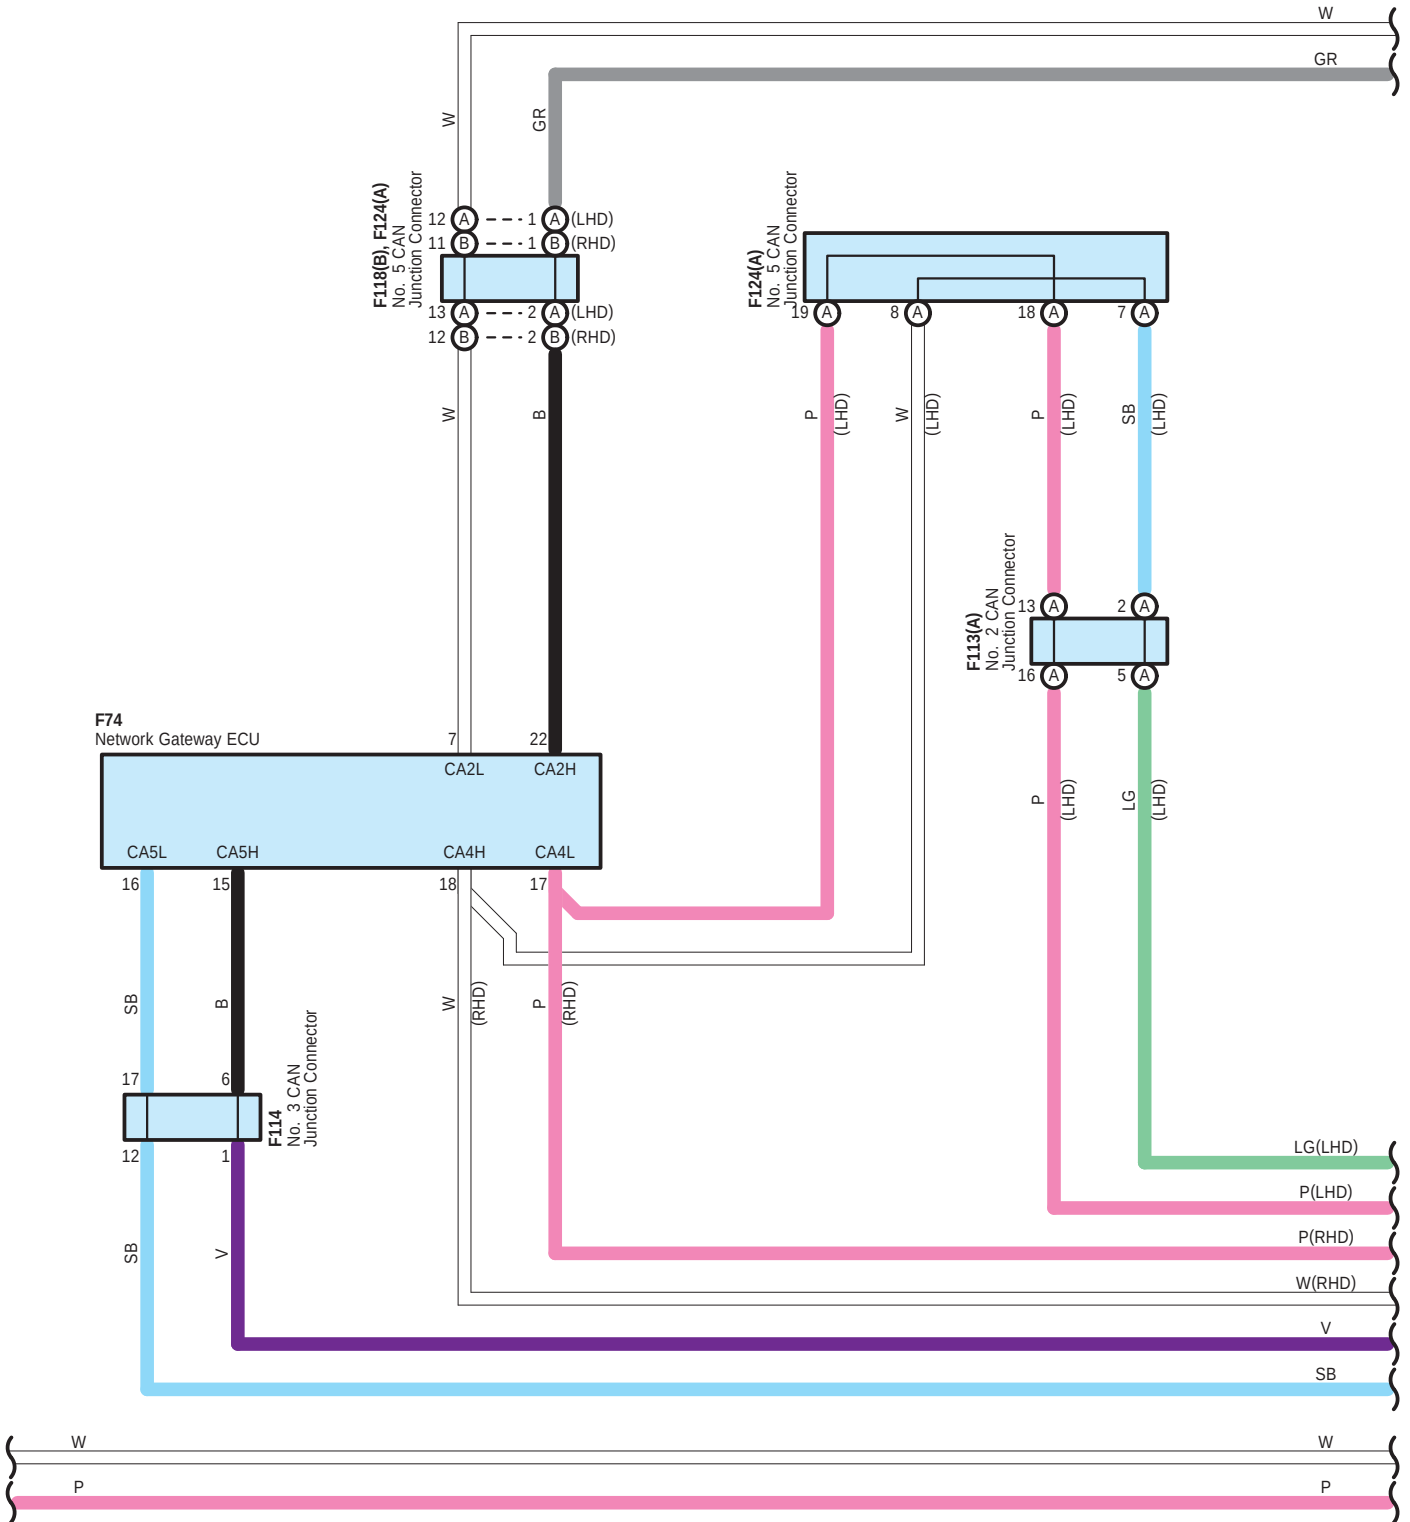
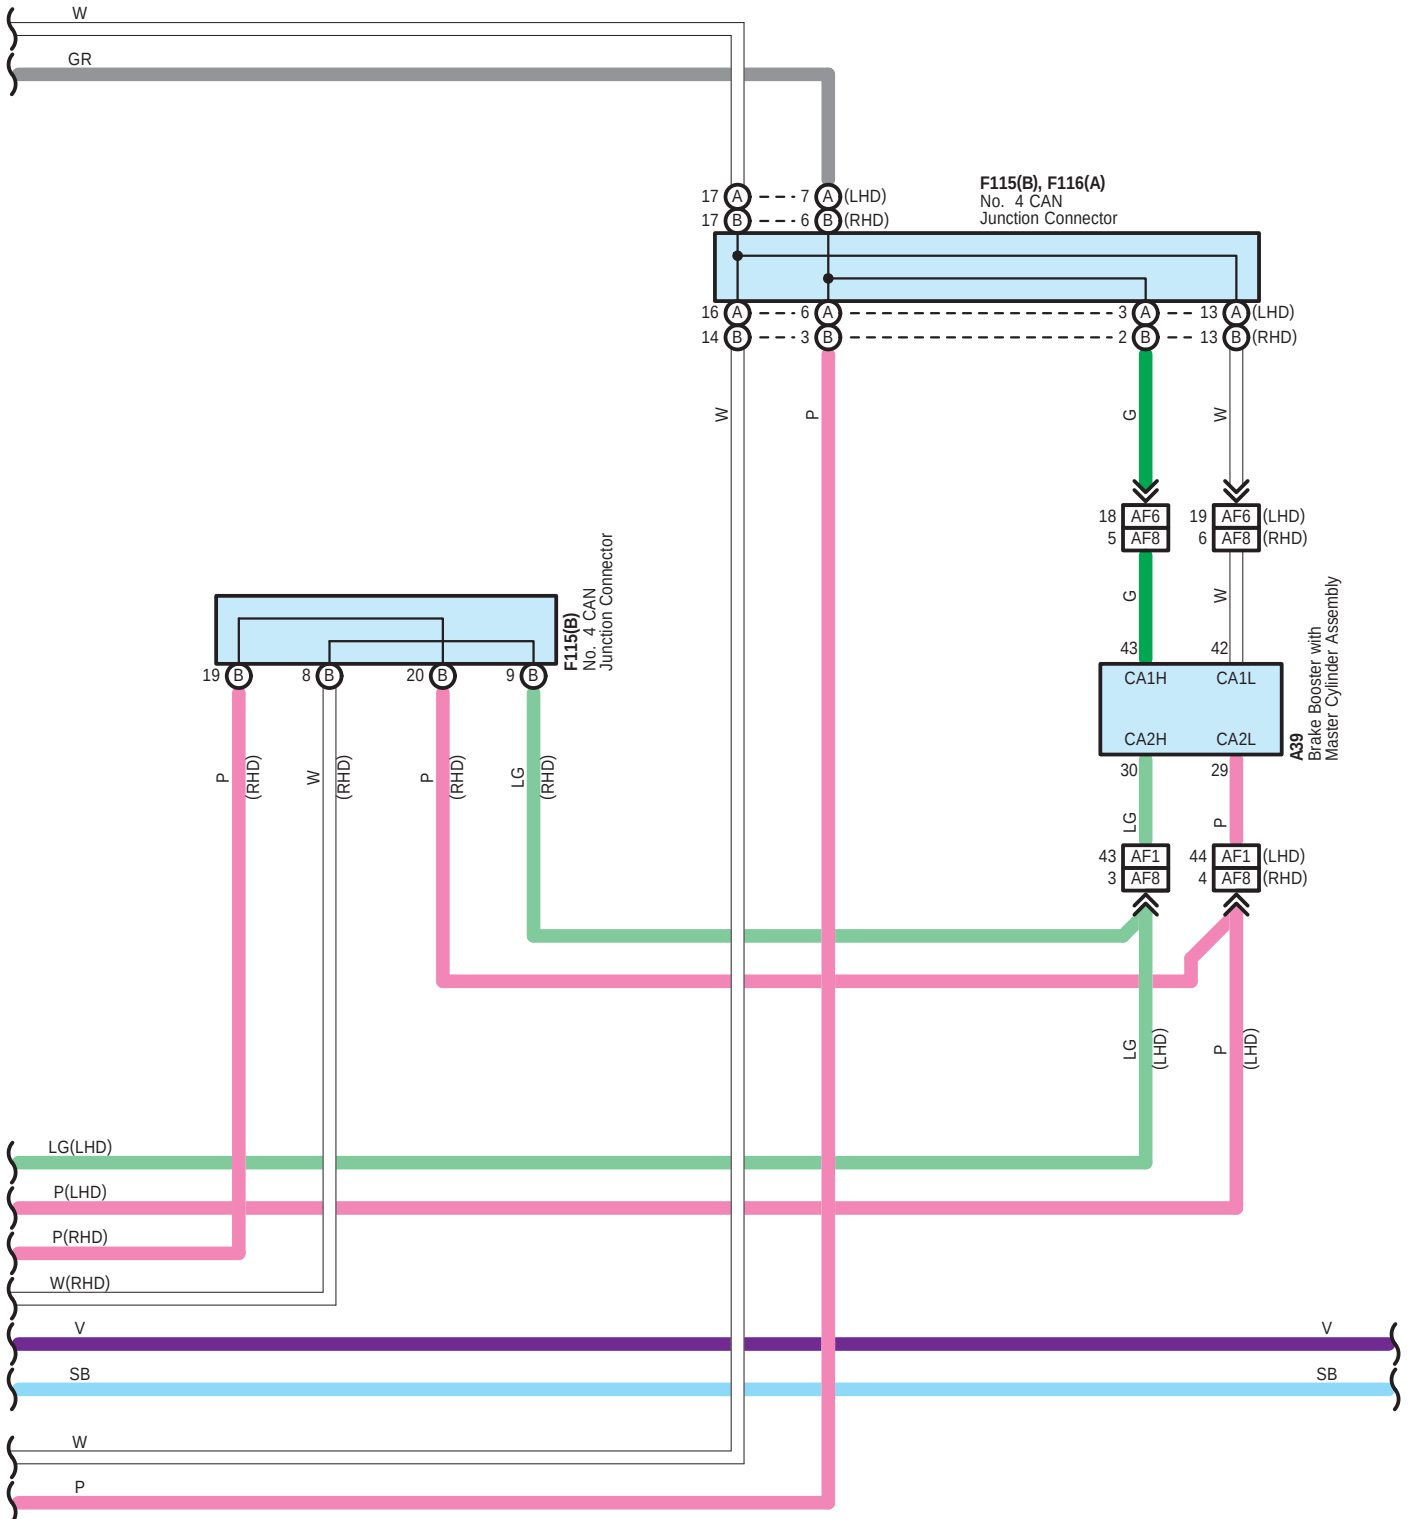
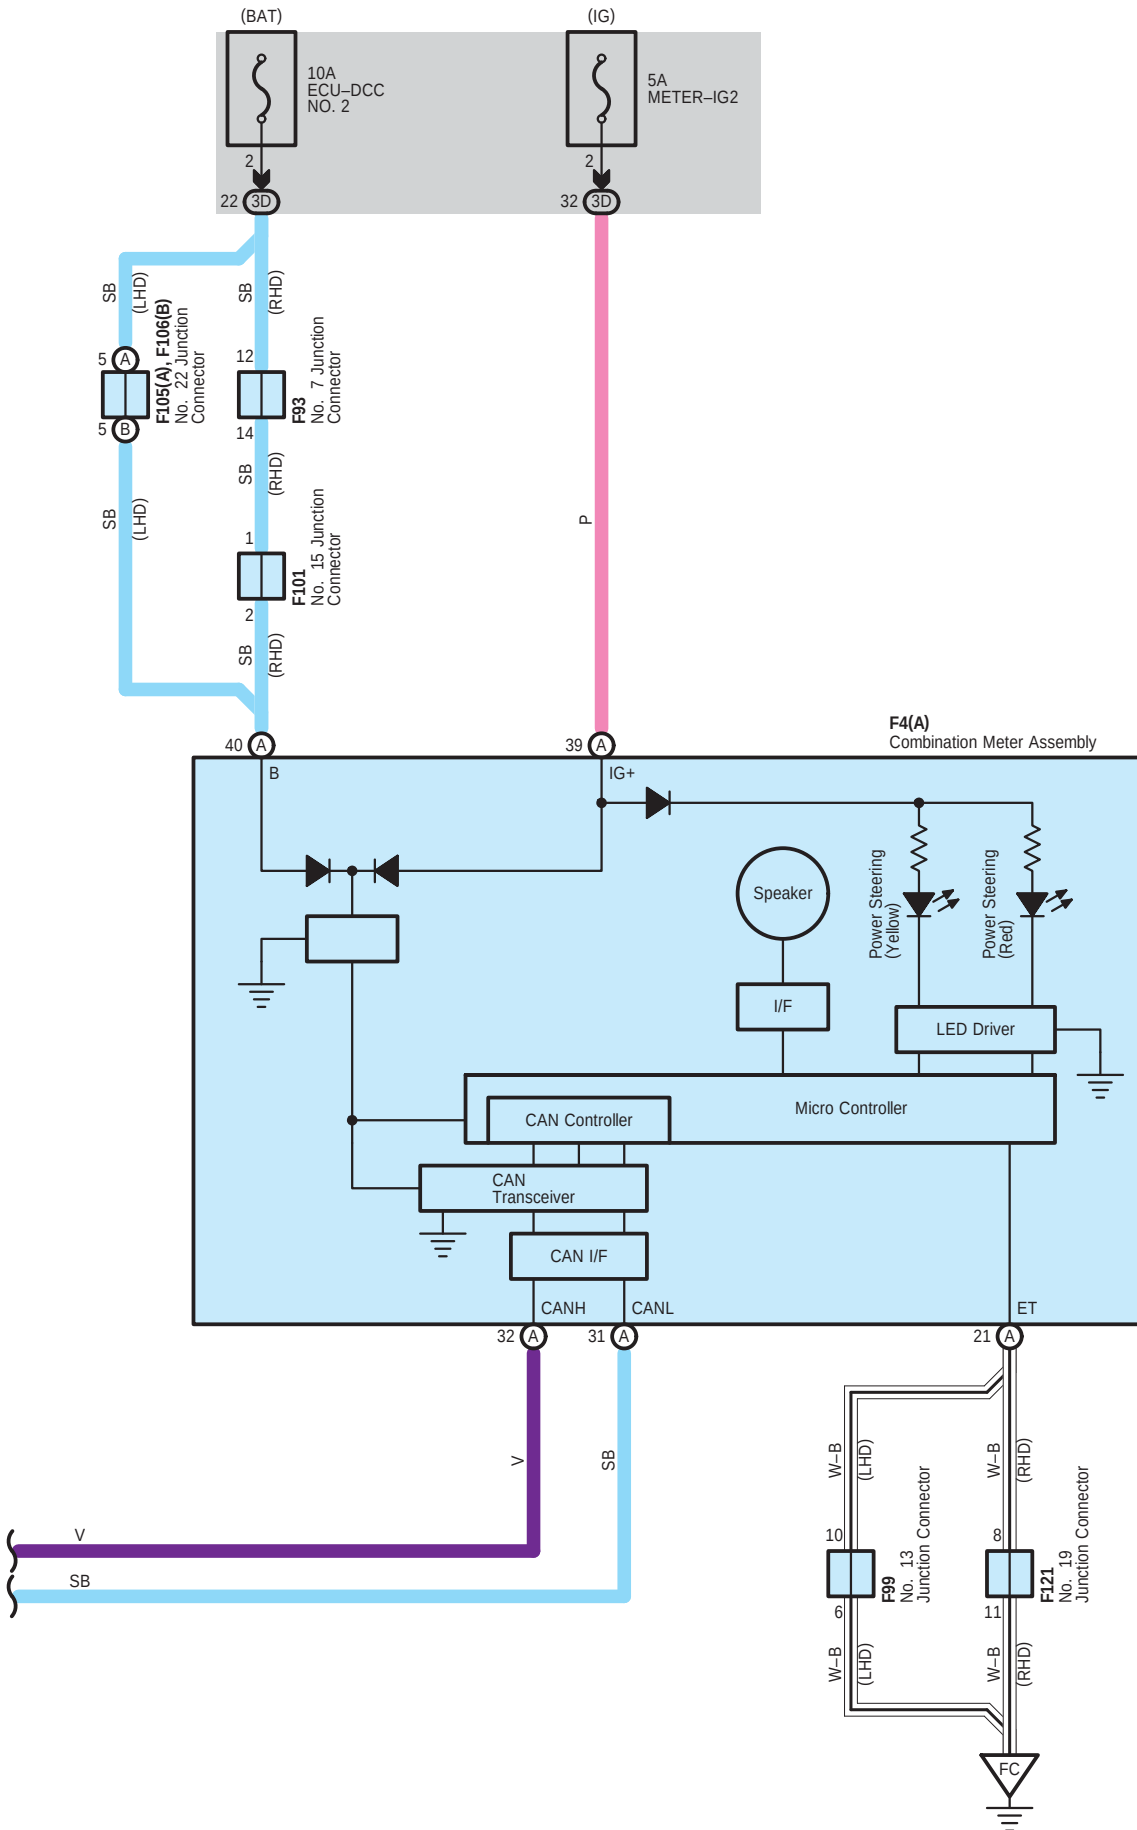
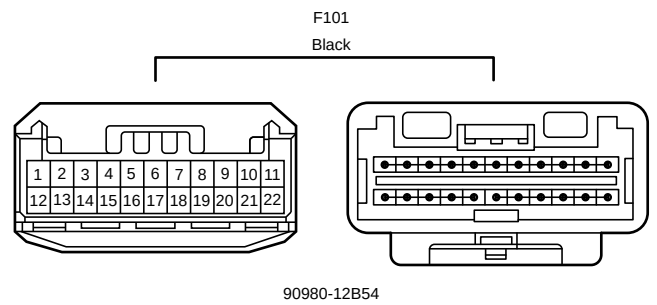
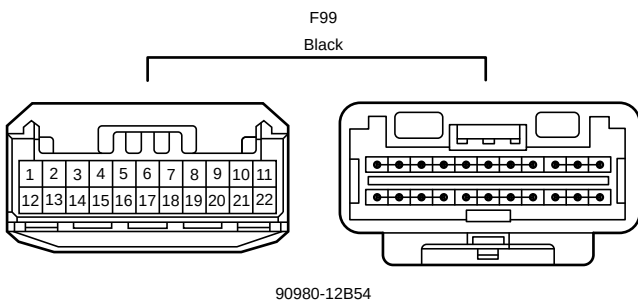
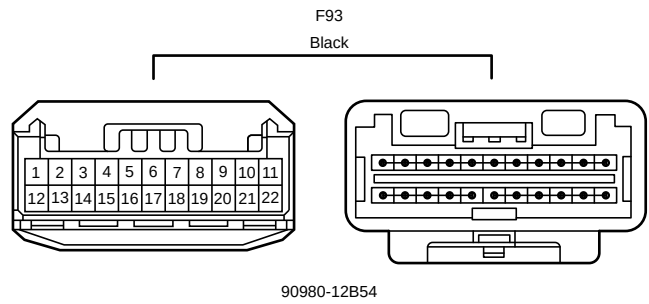
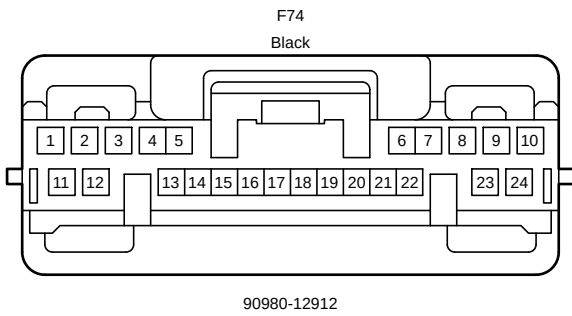


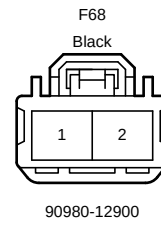

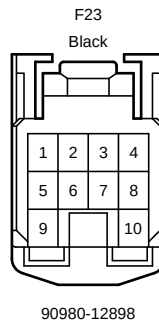


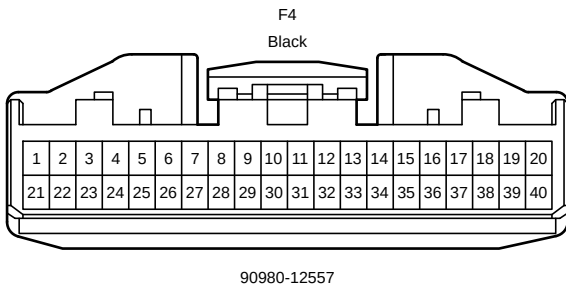

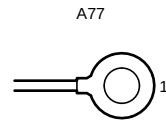

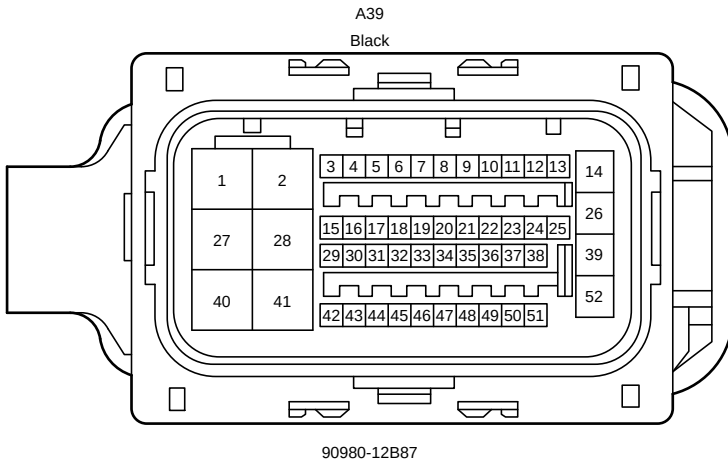


F105
White

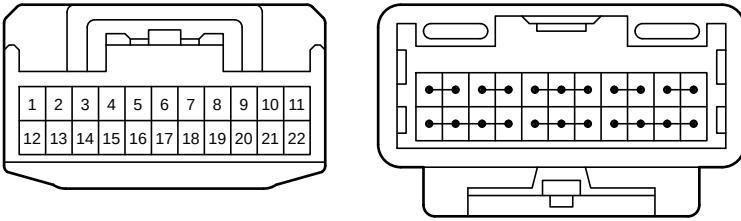


90980-12372

F106
White

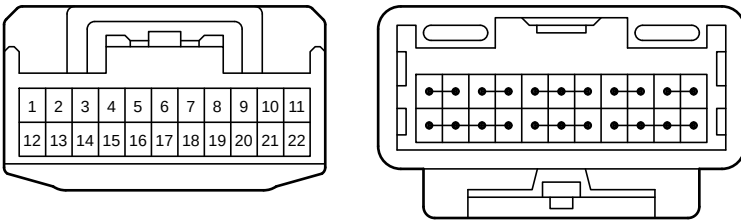


90980-12372

F113
Black

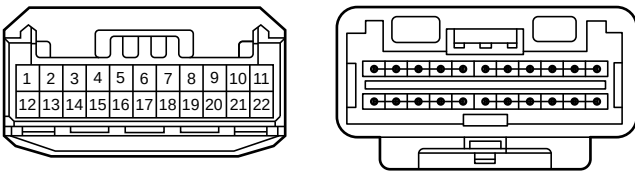


90980-12B54

F114
Black

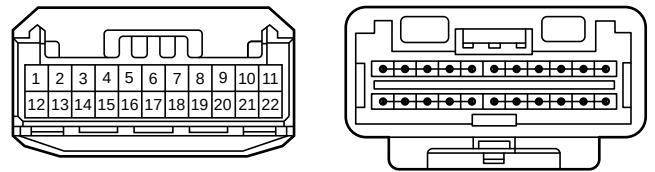



90980-12B54

F115
Black

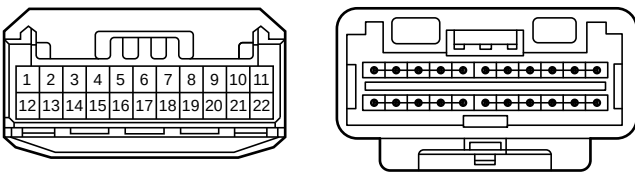



90980-12B54

F116
White

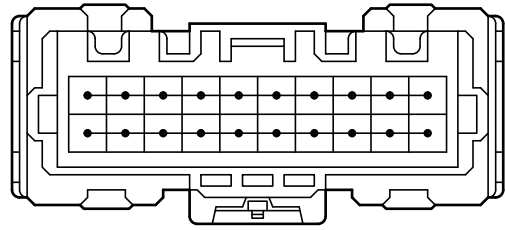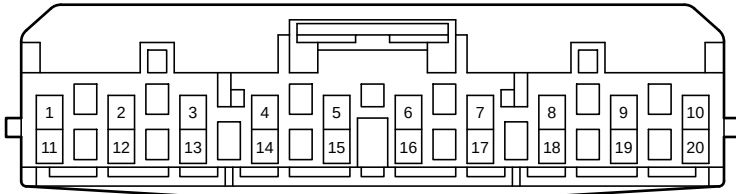



90980-12A58

F118
White

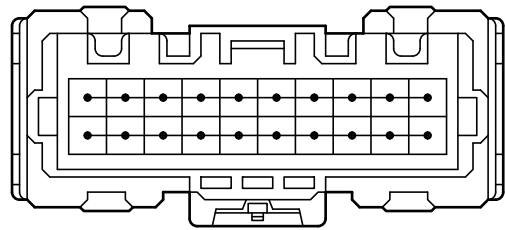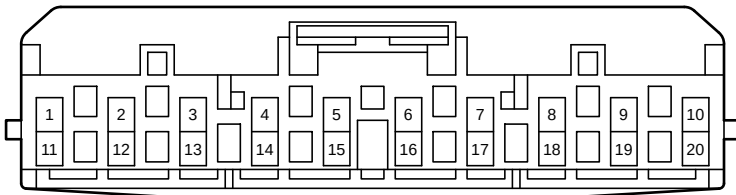



90980-12A58

F121
Black

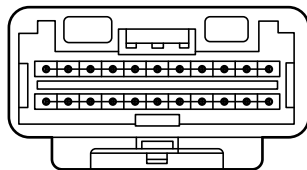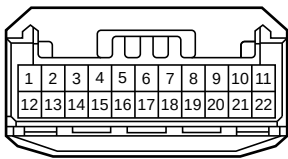


90980-12B54

F124
Black

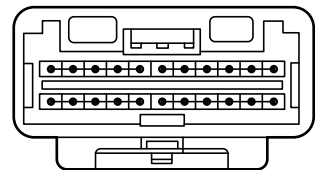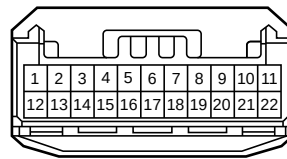


90980-12B54

z14
White

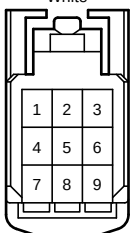


90980-12899


3A
White

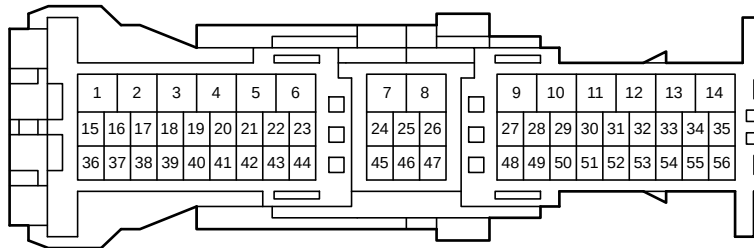

90980-12943

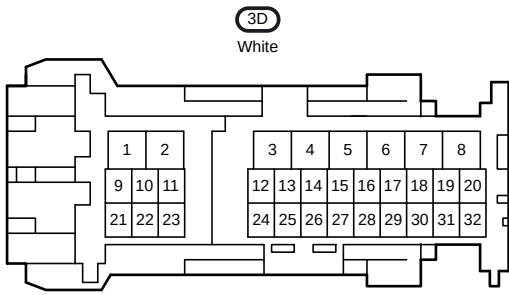


90980-12A48

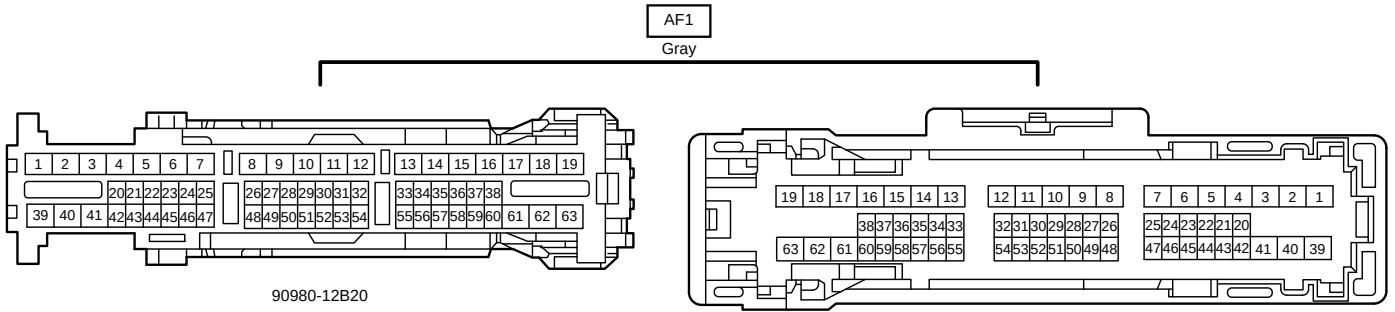


90980-12B20

90980-12B19

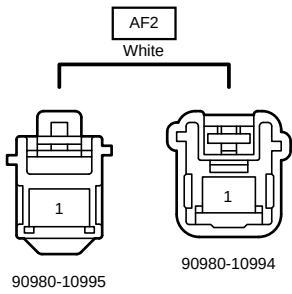


90980-10995


90980-10994

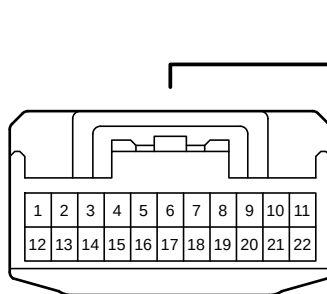

90980-12372

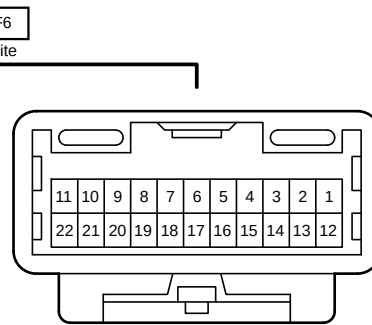


90980-12371

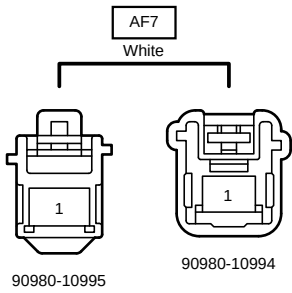


90980-10995

90980-10994

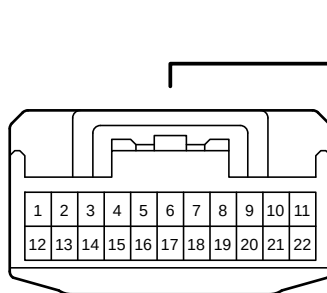

90980-12372

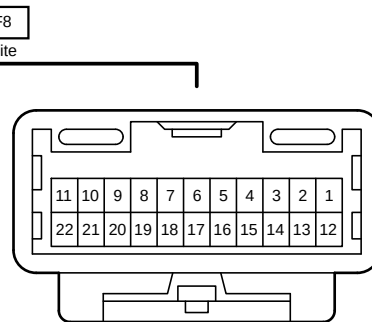

90980-12371