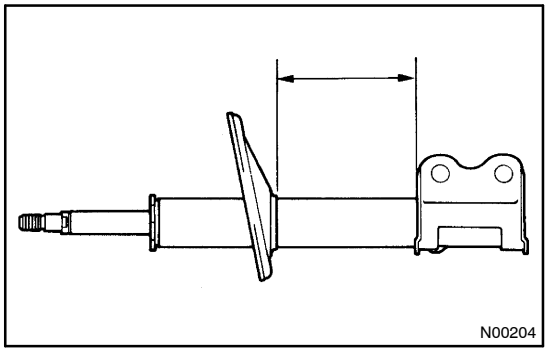



2605Y–01

# DISPOSAL

HINT:

Dispose the RH side by the same procedures with the LH side.

**1. DISPOSE SHOCK ABSORBER ASSY FRONT LH**

(a) Fully extend the shock absorber rod.

(b) Using a drill, make a hole in the cylinder as shown in the illustration to discharge the gas inside.

**CAUTION:**

- **When drilling, chips may fly out, work carefully.**
- **The gas is colorless, odorless and non–poisonous.**