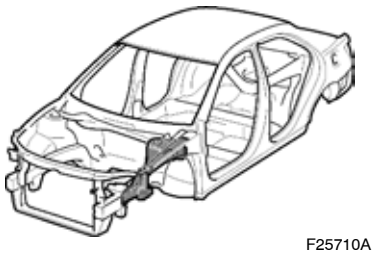
FRONT FENDER APRON (ASSY)


F25710A


With the radiator support and front body pillar lower gusset removed.

Symbol meaning

REMOVAL	▲ ▲M ▲I : Remove Weld Points	: Cut with disc sander, etc.
INSTALLATION	● M I : MIG Plug Weld	: Tack Weld

F25710B

REMOVAL·INSTALLATION

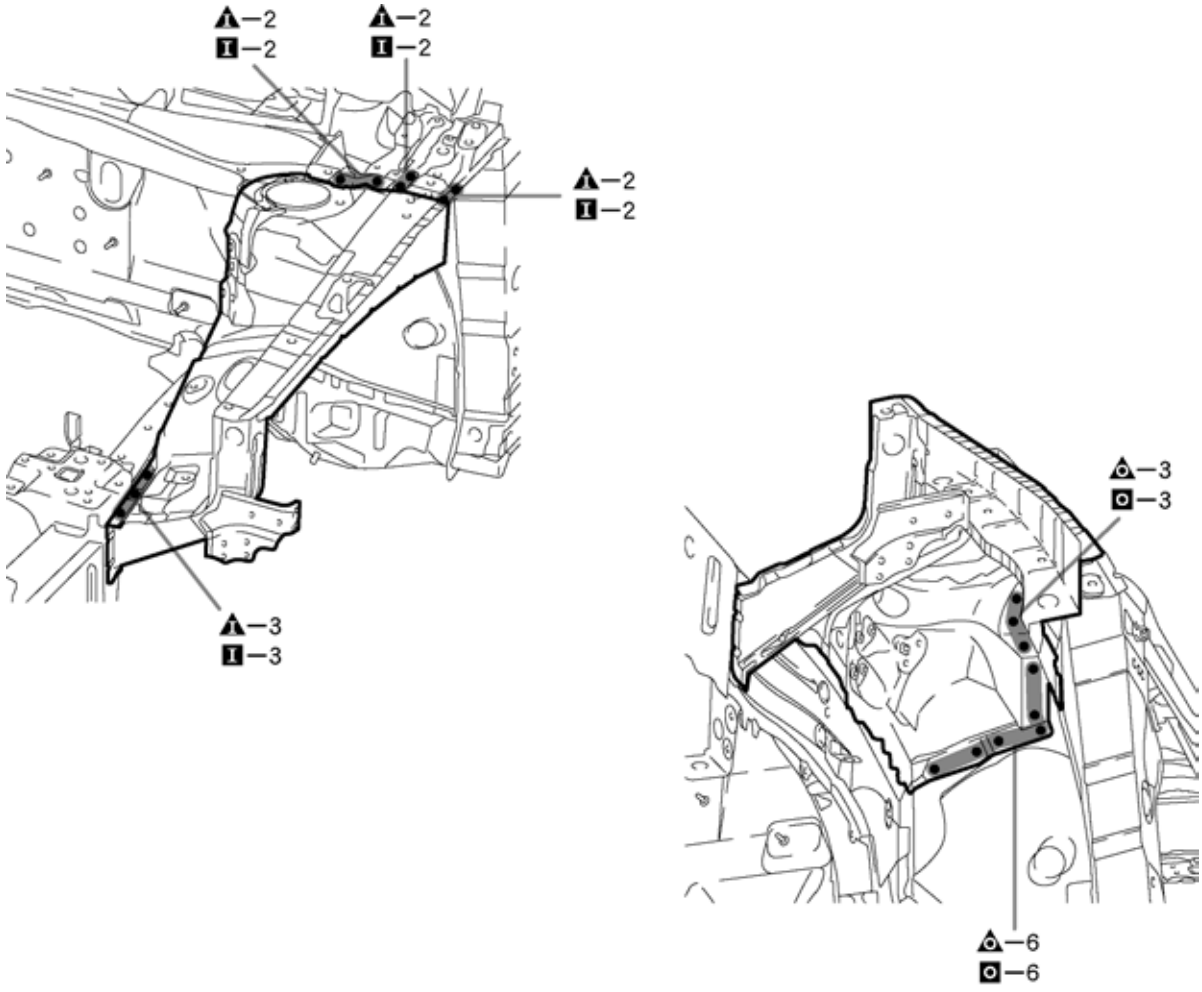

CAUTION


Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

F25710

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

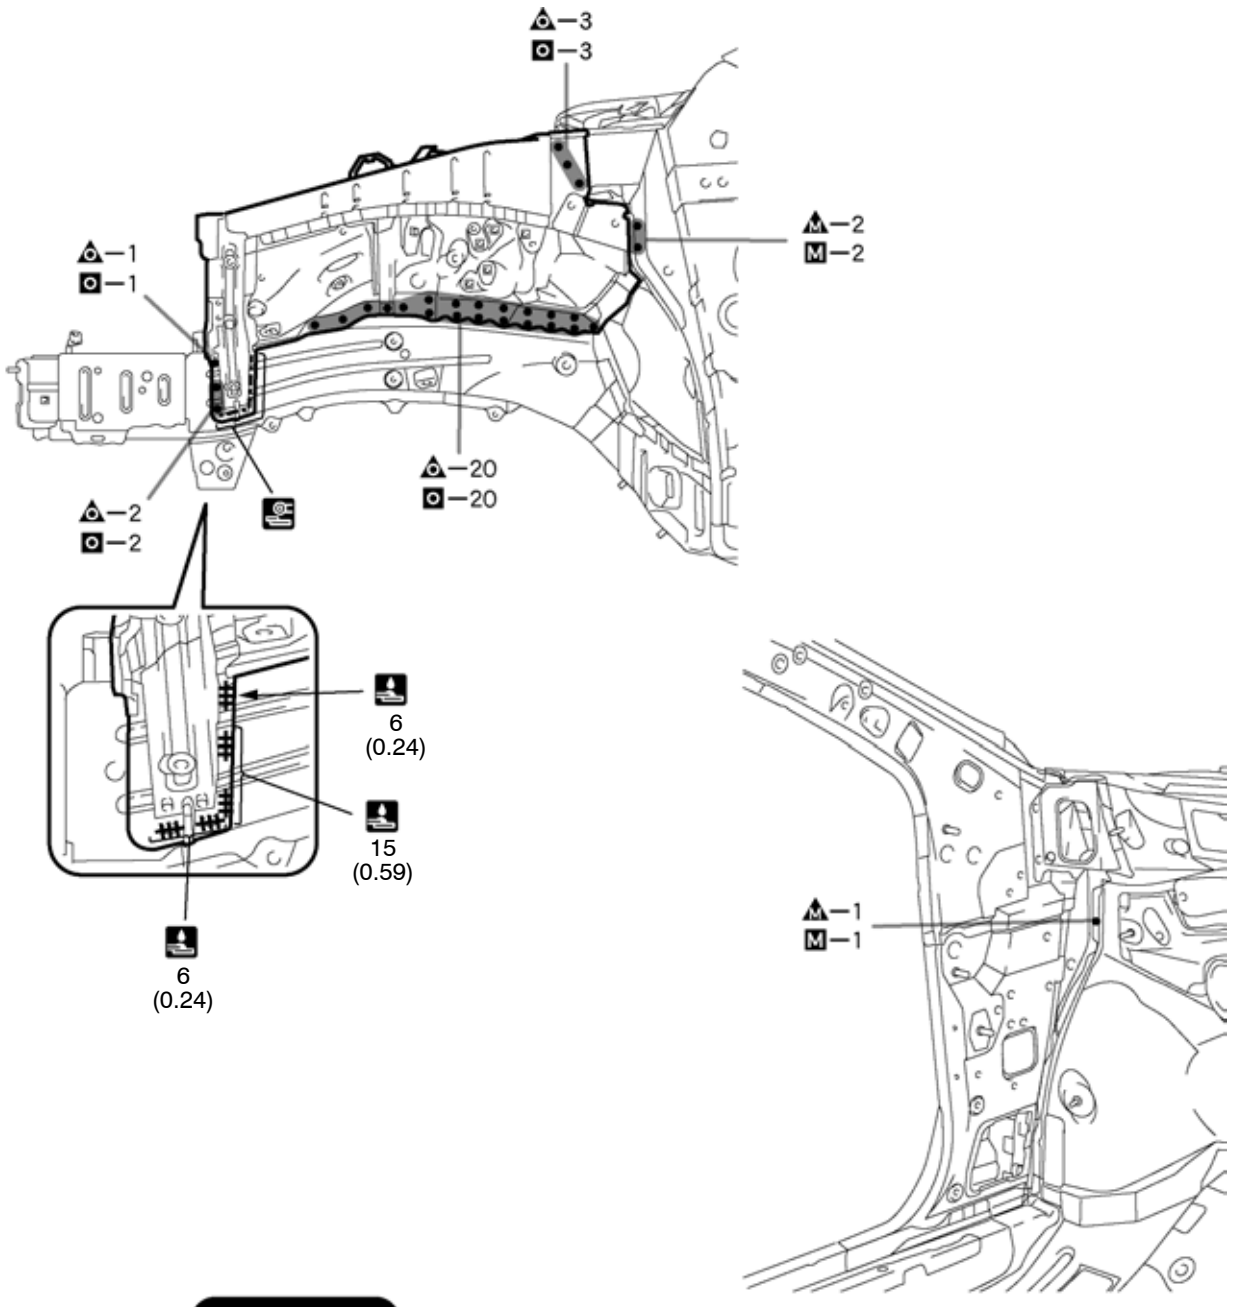

mm (in.)

CAUTION

Make sure to attach correctly in accordance with the body dimension diagram as this part affects the front wheel alignment.

F25711

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.