
NAME PLATE APPLICATION PROCEDURE

(a) Heat the double-sided tape remaining on the body with an infrared lamp or equivalent.
HINT:
Heat the tape to 40 to 60°C for approximately 1 to 2 minutes.

(b) Wipe off the remaining double-sided tape using a clean cloth or equivalent.
HINT:
If a name plate is installed without thoroughly removing the remaining double-sided tape from the body, the name plate will not adhere properly. Make sure to thoroughly wipe off the double-sided tape.


(c) After cleaning the installation area of the body with degreasing agent, attach the name plate to the position shown in the illustration.
HINT:
The working environment should be 20°C when installing the name plate. If the working environment is below 20°C, heat the installation area of the body to 20 to 30°C and then install the name plate.

[for 2AZ-FE]

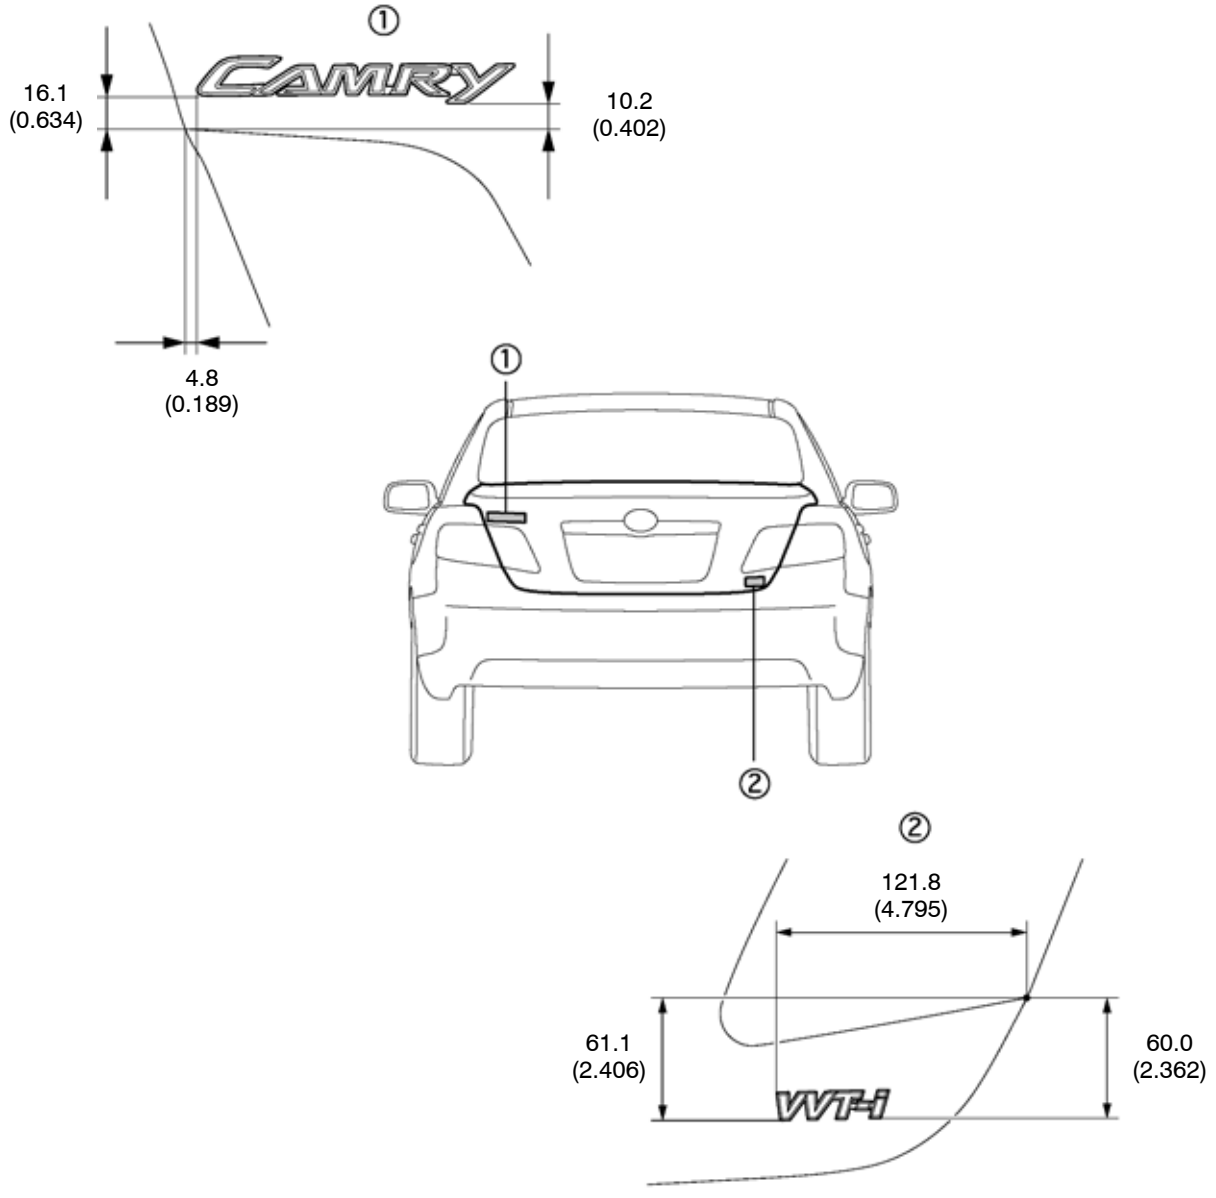


mm (in.)


F26461

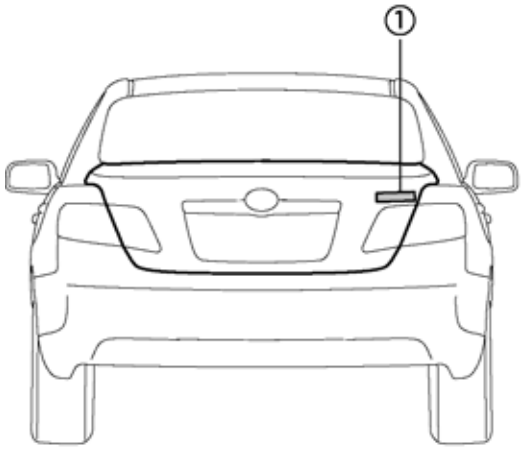


① [For Altise plate]

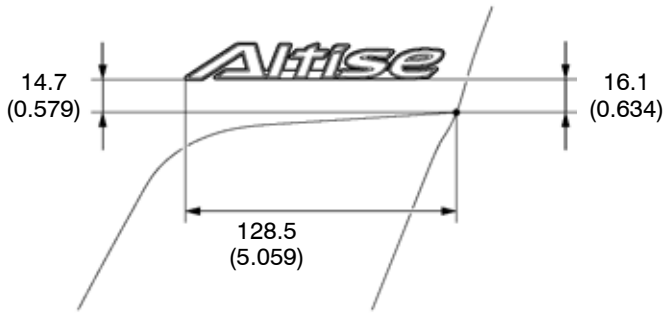


① [For ATEVA plate]

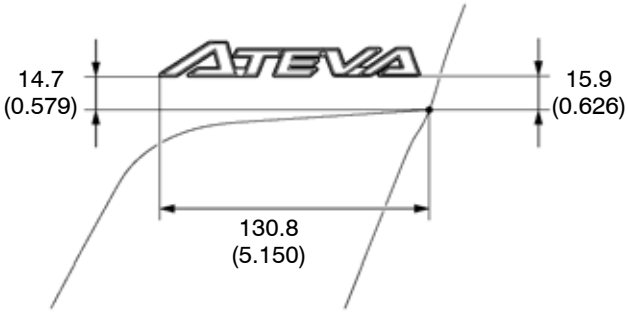

① [For GRANDE plate]

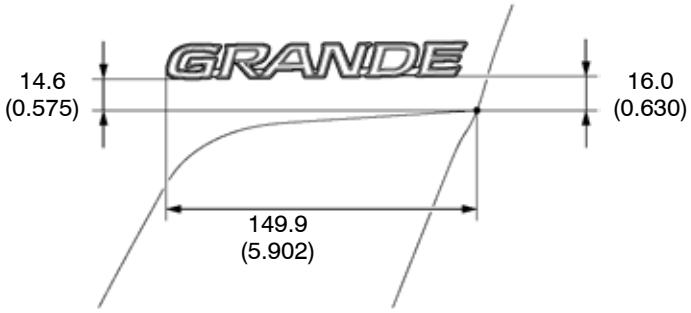


① [For Sportivo plate]

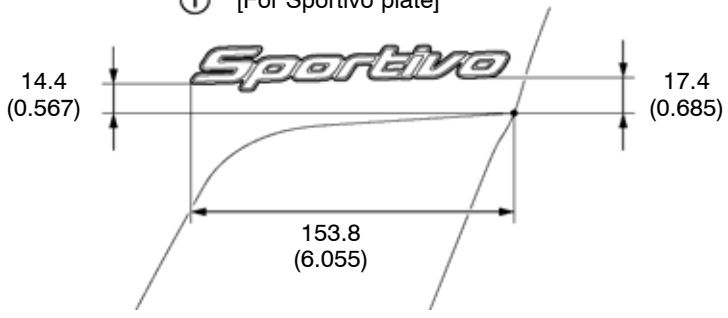


mm (in.)


F26462

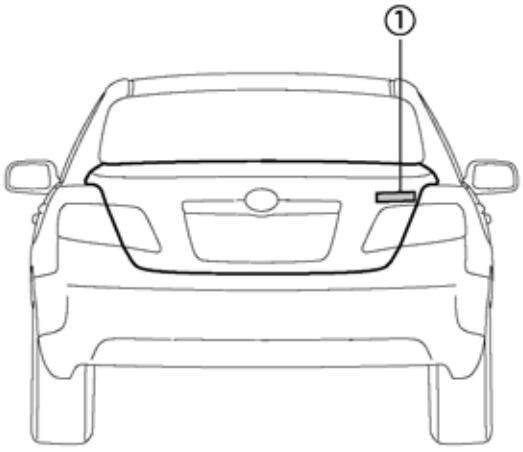


① [For GL plate]

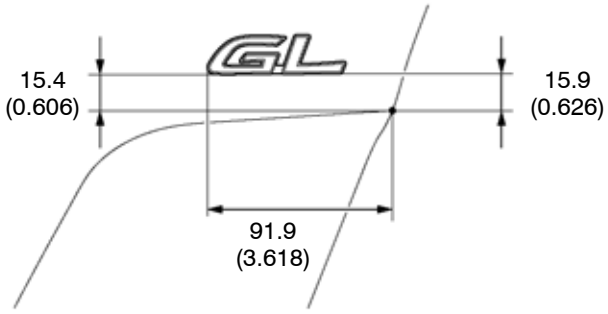

① [For GLX plate]

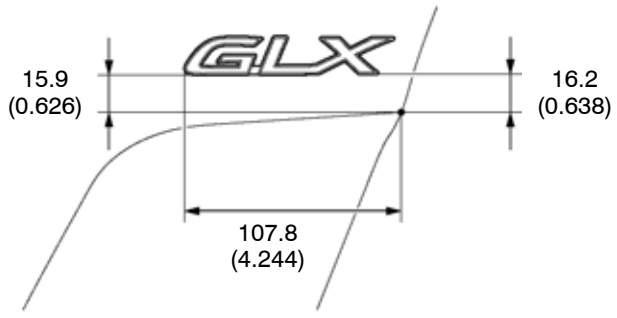


① [For SE plate]

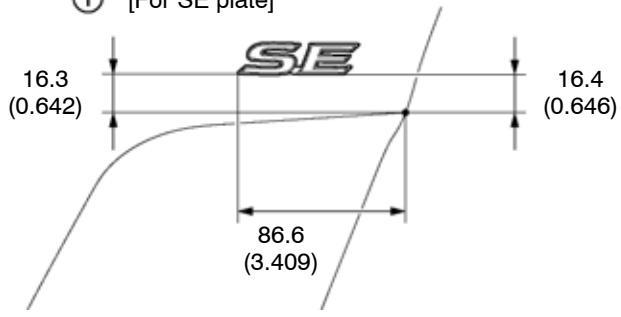


mm (in.)


F26463

[for 2GR-FE]

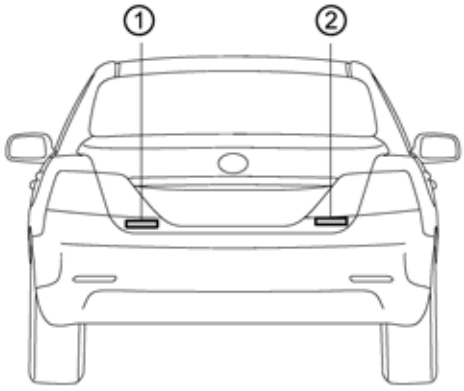


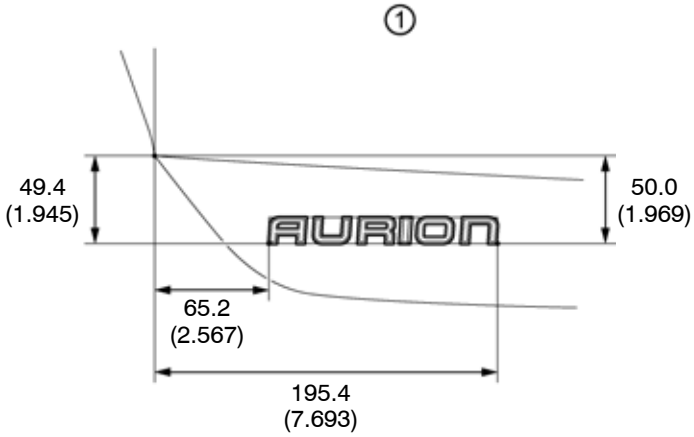


② [For AT-X plate]

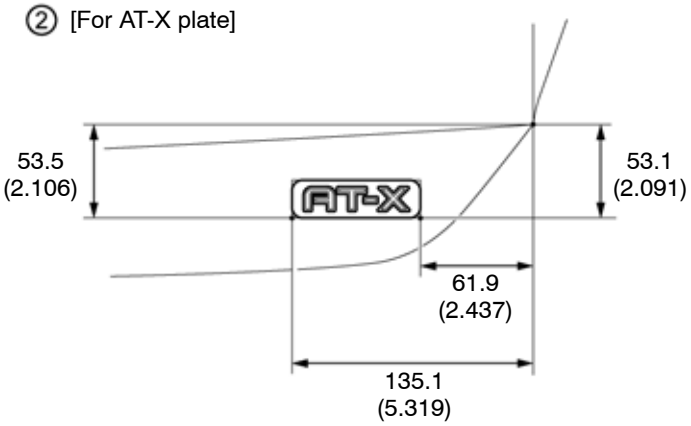

② [For PRODIGY plate]

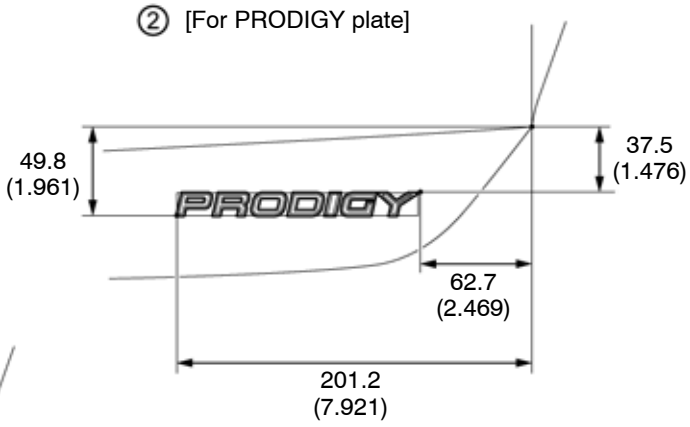


② [For PRESARA plate]

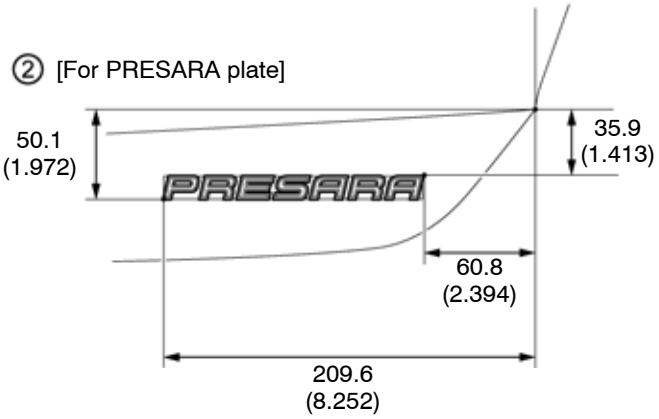


mm (in.)


F27557

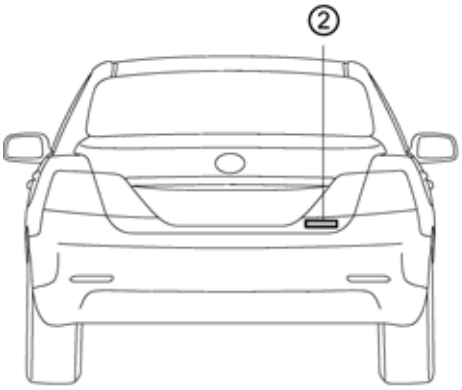


② [For Sportivo SX6 plate]

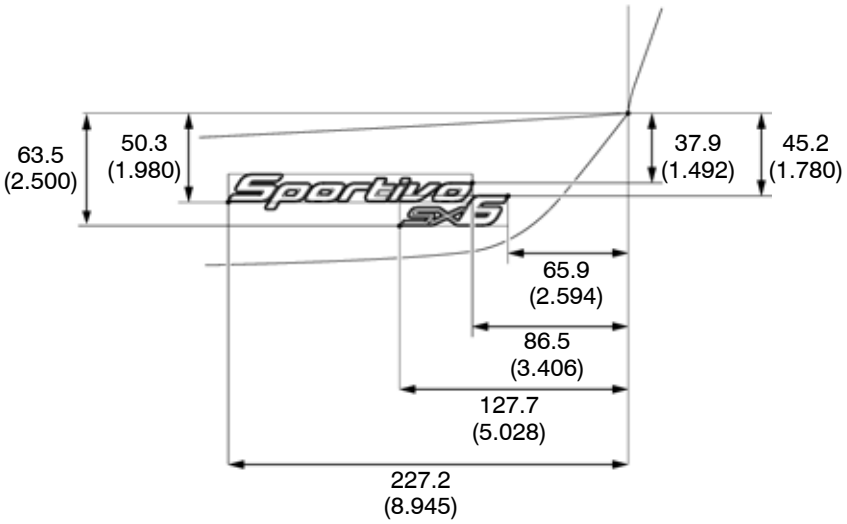


② [For Sportivo ZR6 plate]

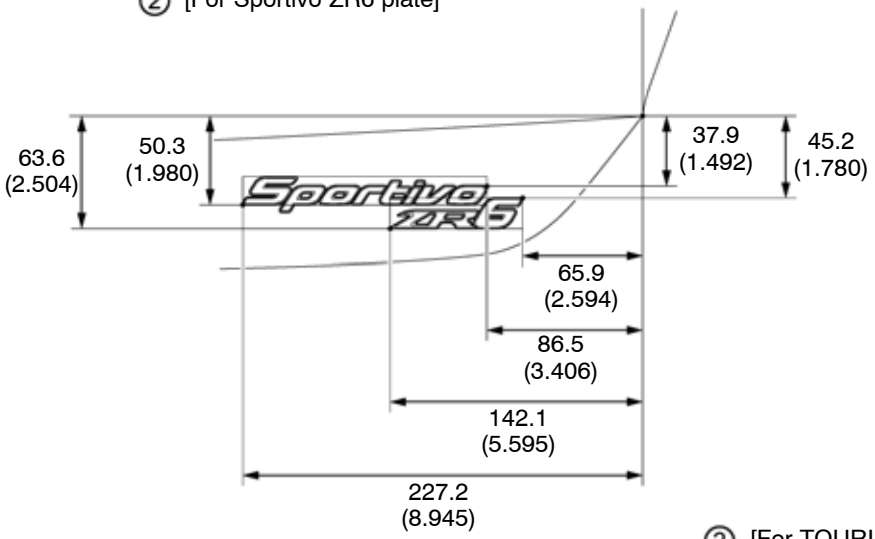

② [For TOURING plate]

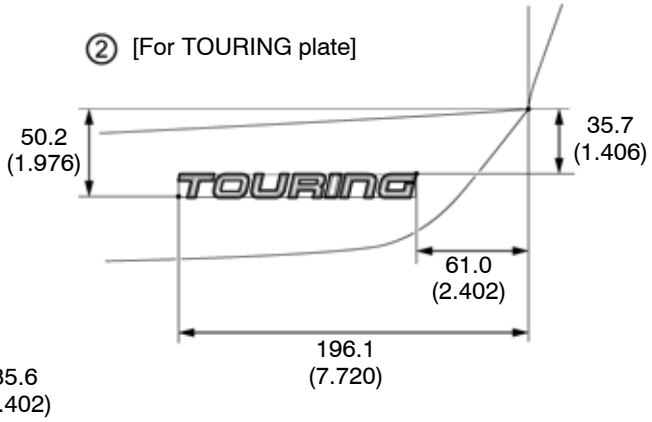


② [For GRANDE plate]

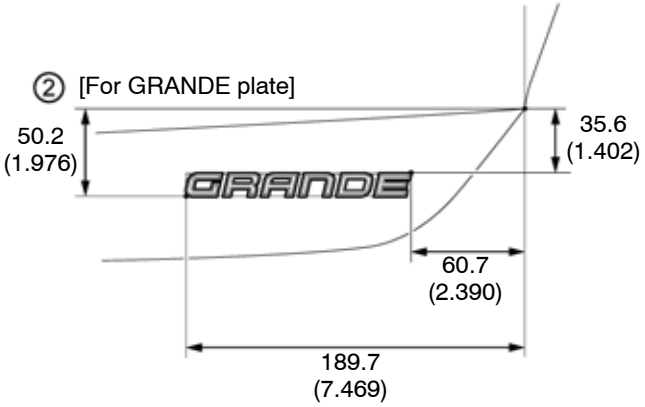


mm (in.)


F27558

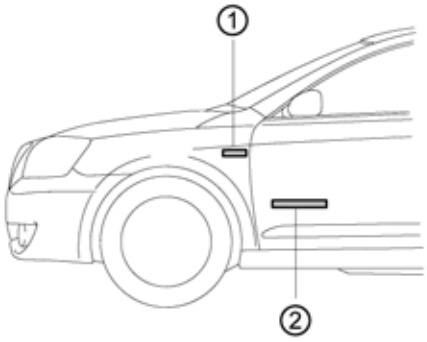


① [For V6 plate LH side]

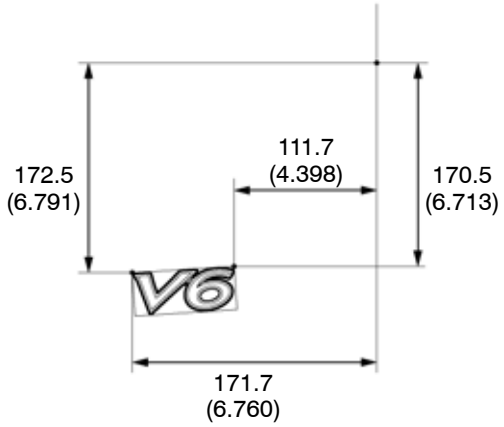


② [For AURION plate LH side]

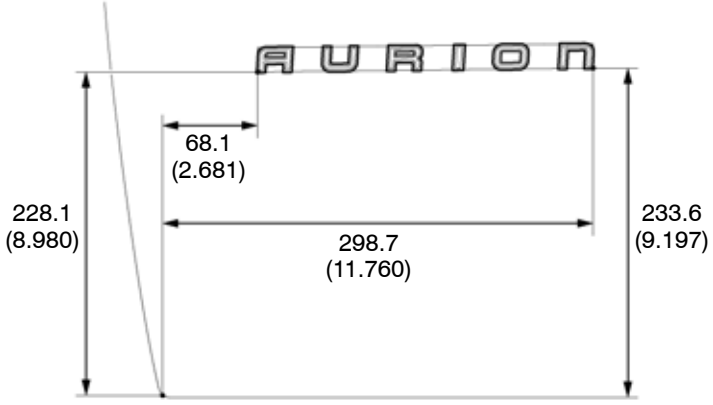


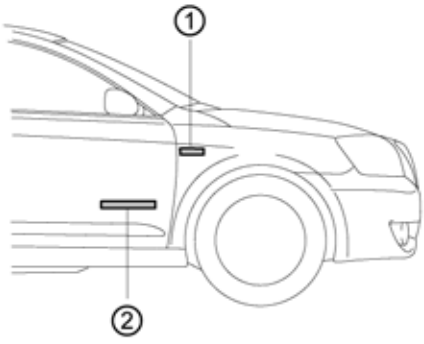

① [For V6 plate RH side]

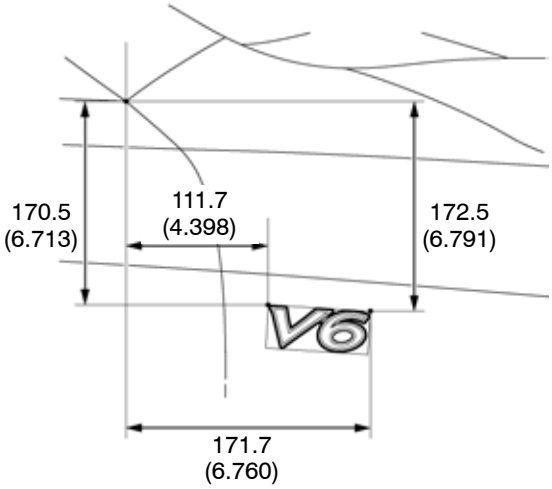

② [For AURION plate RH side]

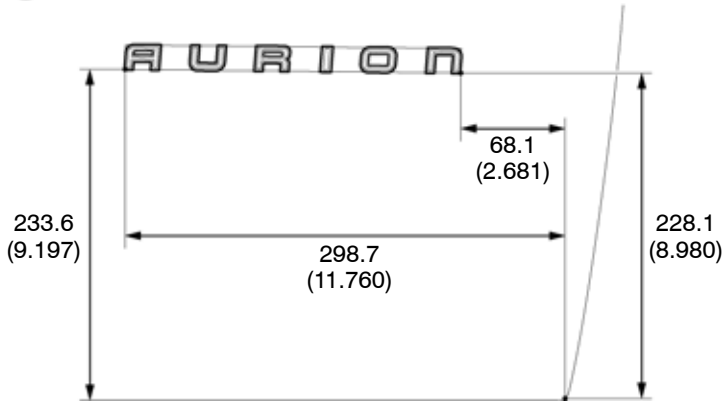

mm (in.)

F27559