
FRONT SIDE MEMBER (CUT-H): TMC made

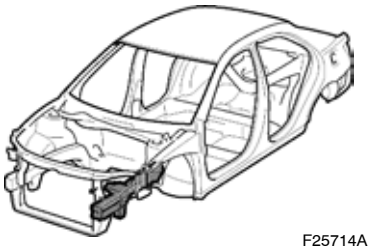

F25714A


With the front fender apron removed.


Symbol meaning


: Remove Weld Points

F25714B

REMOVAL

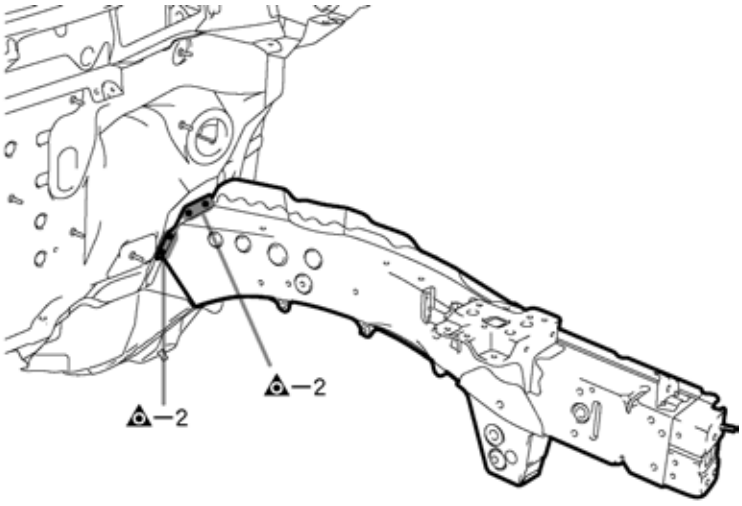

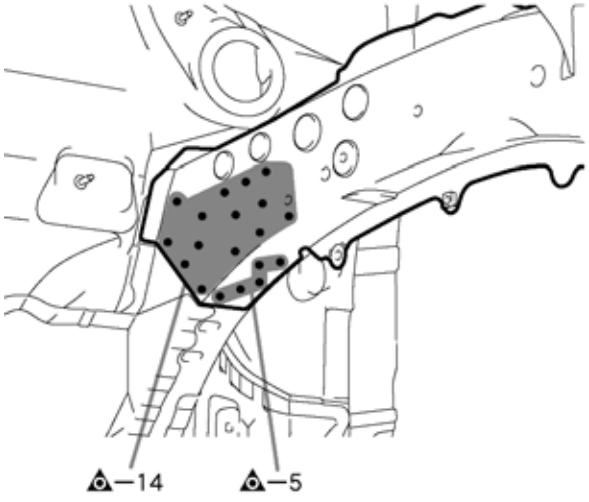

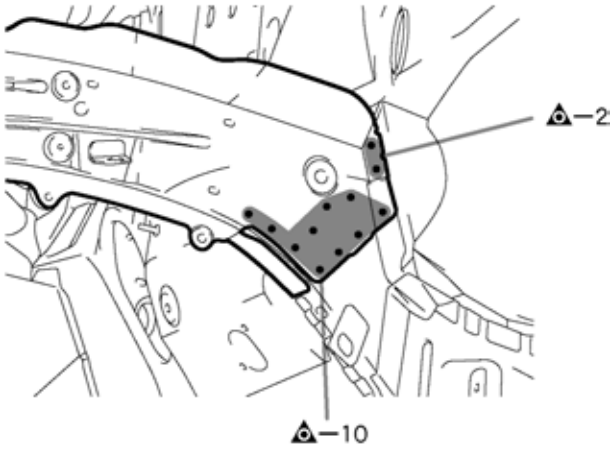


F25714

Symbol meaning

: MIG Plug Weld

F25715B

INSTALLATION

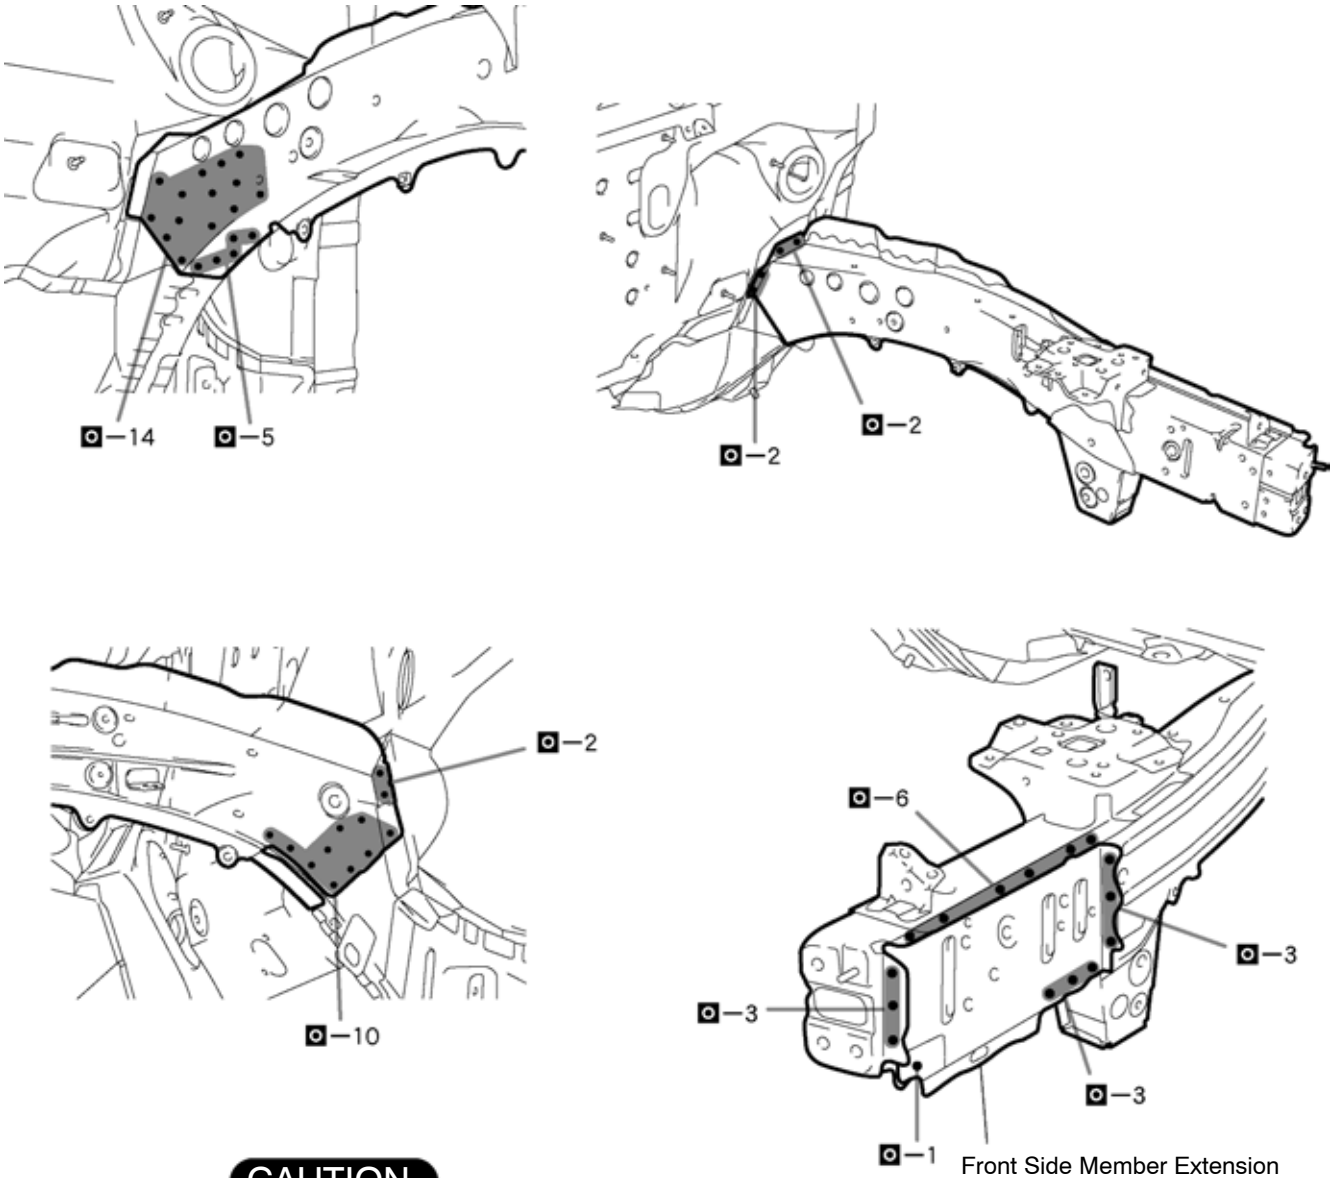

CAUTION

Make sure to attach correctry in accordance with the body dimention diagram as this parts affects the front wheel alignment.

F25715

INSTALLATION POINT

1 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
2 After welding, apply body sealer and undercoating to the corresponding parts.(See the paint·coating)
3 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.