
FRONT FENDER FRONT APRON (ASSY)

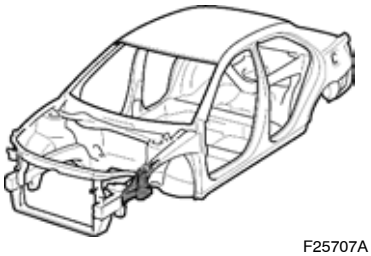

F25707A


With the radiator support removed.

Symbol meaning

REMOVAL	: Remove Weld Points	: Cut with disc sander, etc.
INSTALLATION	: MIG Plug Weld	: Tack Weld

F25707B

REMOVAL·INSTALLATION

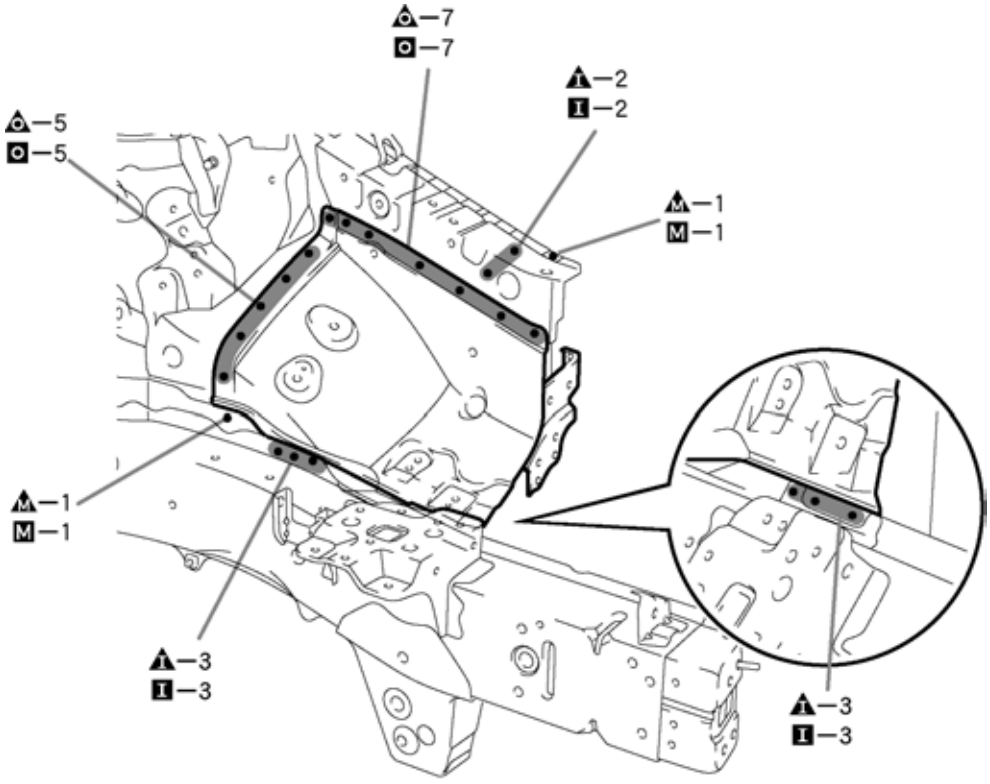


F25707

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.

2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)

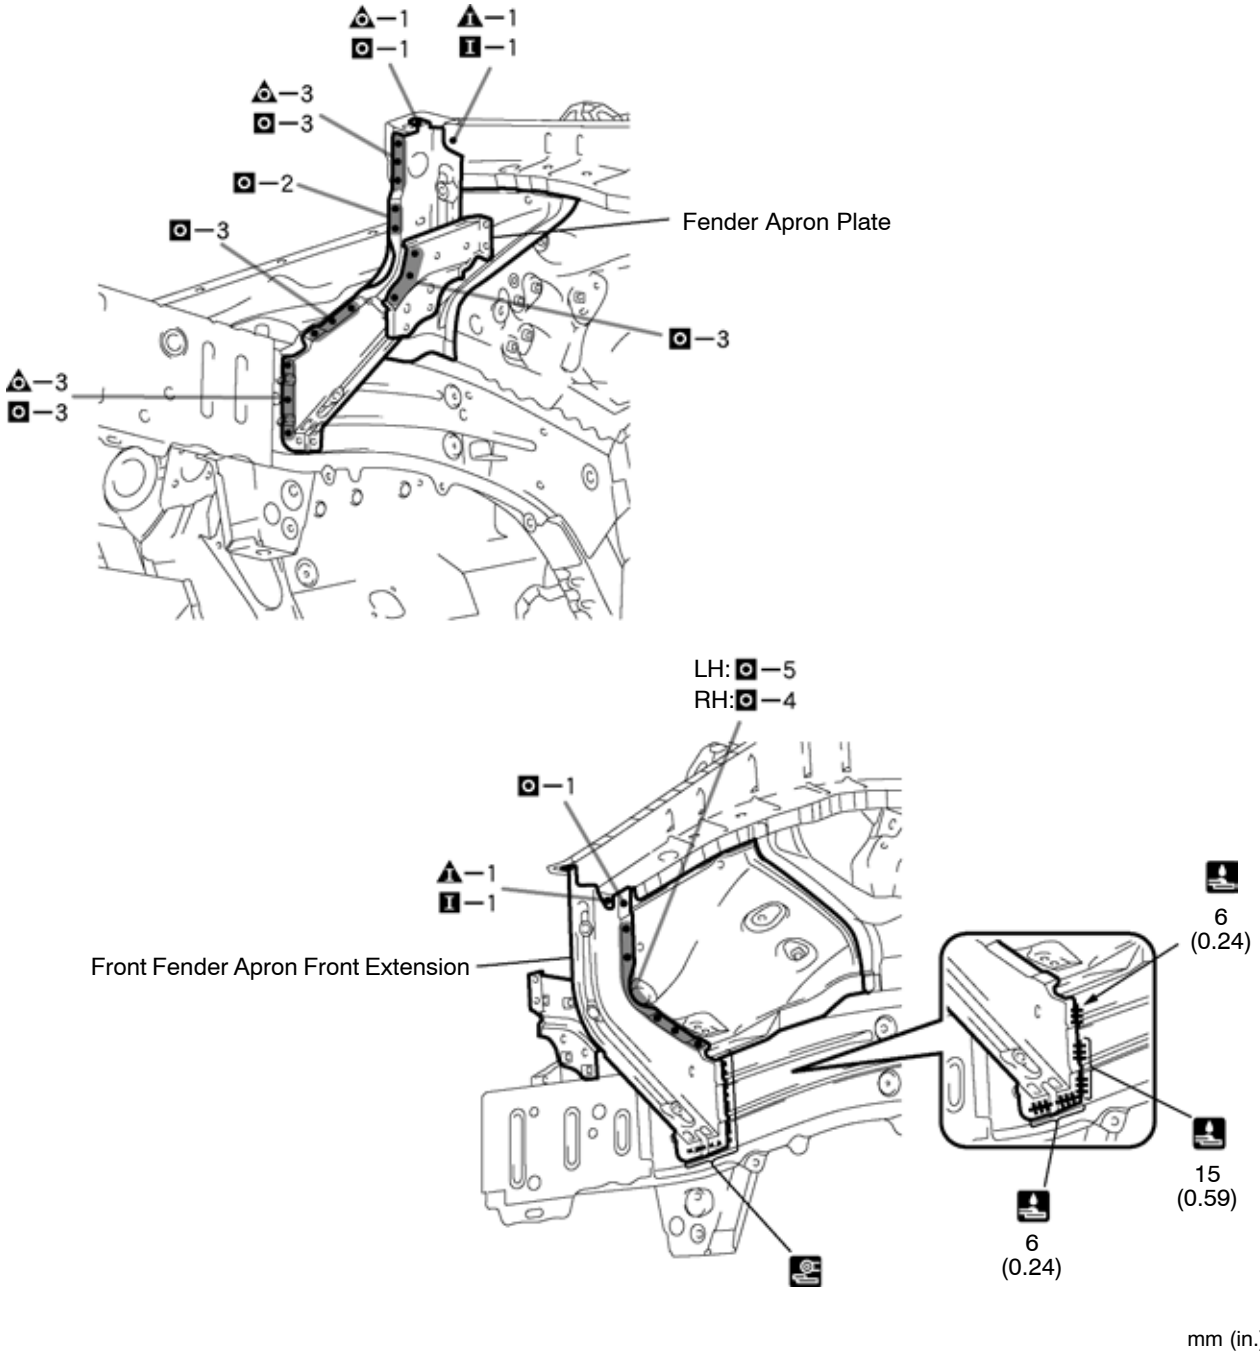

REMOVAL POINT

1 Remove the front fender apron front extension at the same time.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.