
FRONT APRON TO COWL SIDE UPPER MEMBER (ASSY)

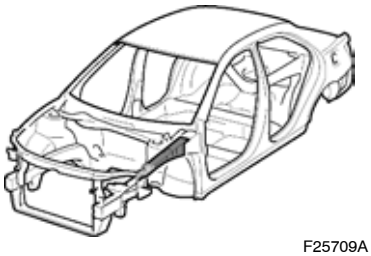

F25709A


With the front fender front apron and front body pillar lower gusset removed.

Symbol meaning

REMOVAL	: Remove Weld Points
INSTALLATION	: MIG Plug Weld

F25709B

REMOVAL·INSTALLATION

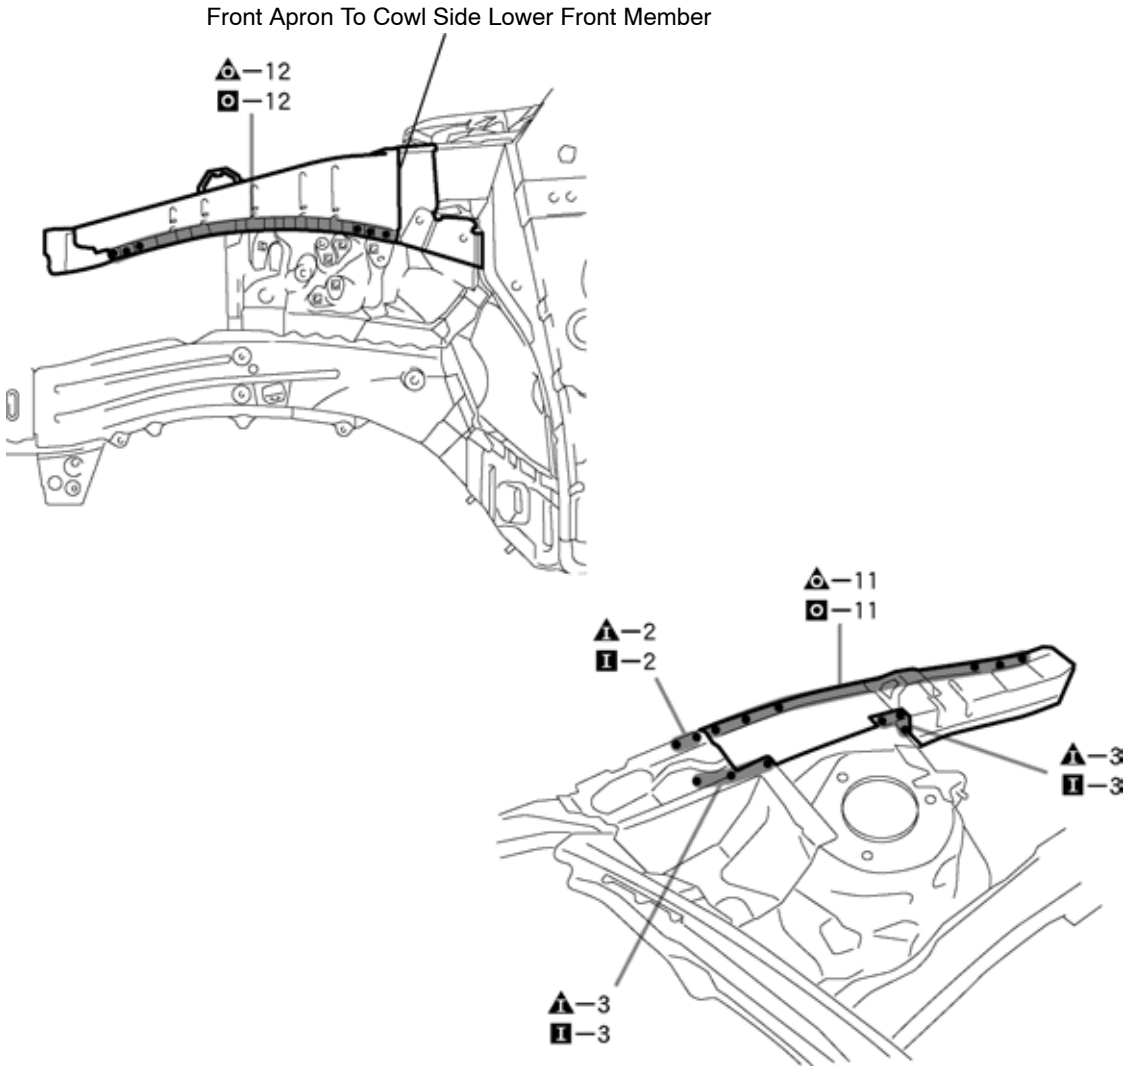


F25709

REMOVAL POINT

1 After removing the front apron to cowl side lower front member, remove the front apron to cowl side upper member.

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding the to the front apron to cowl side upper member vehicle side, install the front apron to cowl side lower front member.

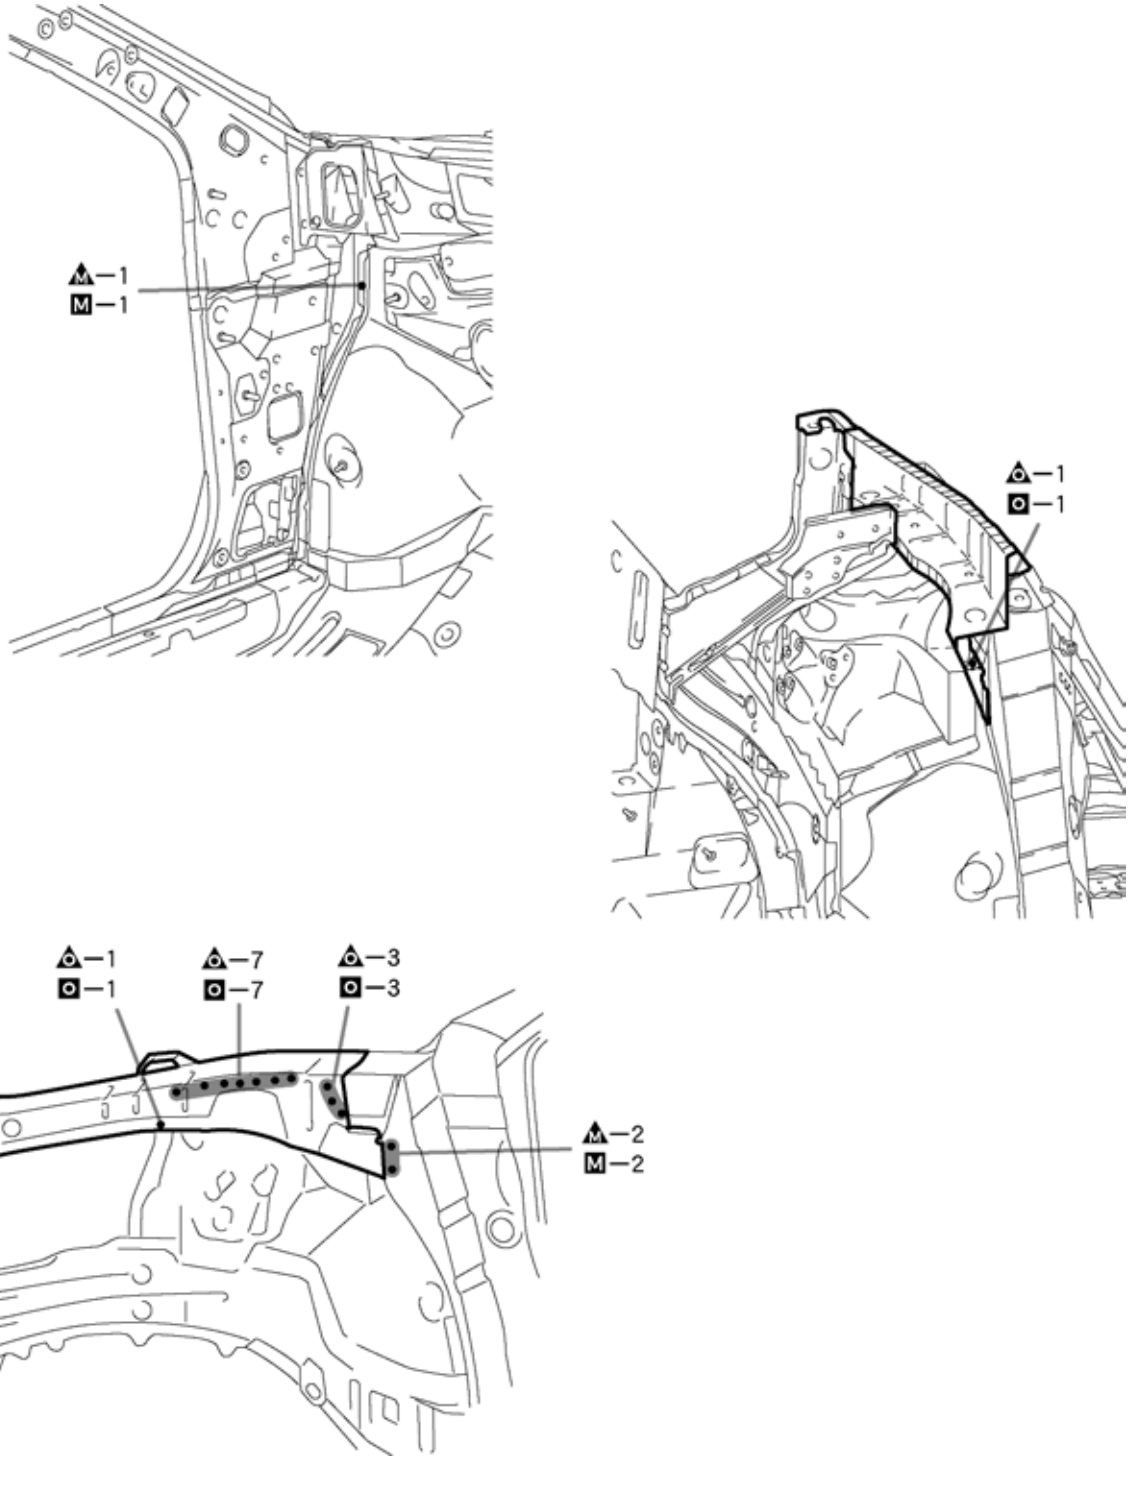

F25805

INSTALLATION POINT

1 Inspect the fitting of the related parts around the new parts before welding. This affects the appearance of the finish.
2 Temporarily install the new parts and measure each part of the new parts in accordance with the body dimension diagram. (See the body dimension diagram)
3 After welding, apply body sealer and undercoating to the corresponding parts. (See the paint·coating)
4 After applying the top coat, apply anti-rust agent to the internal panel portion of the closed section structural weld points.