




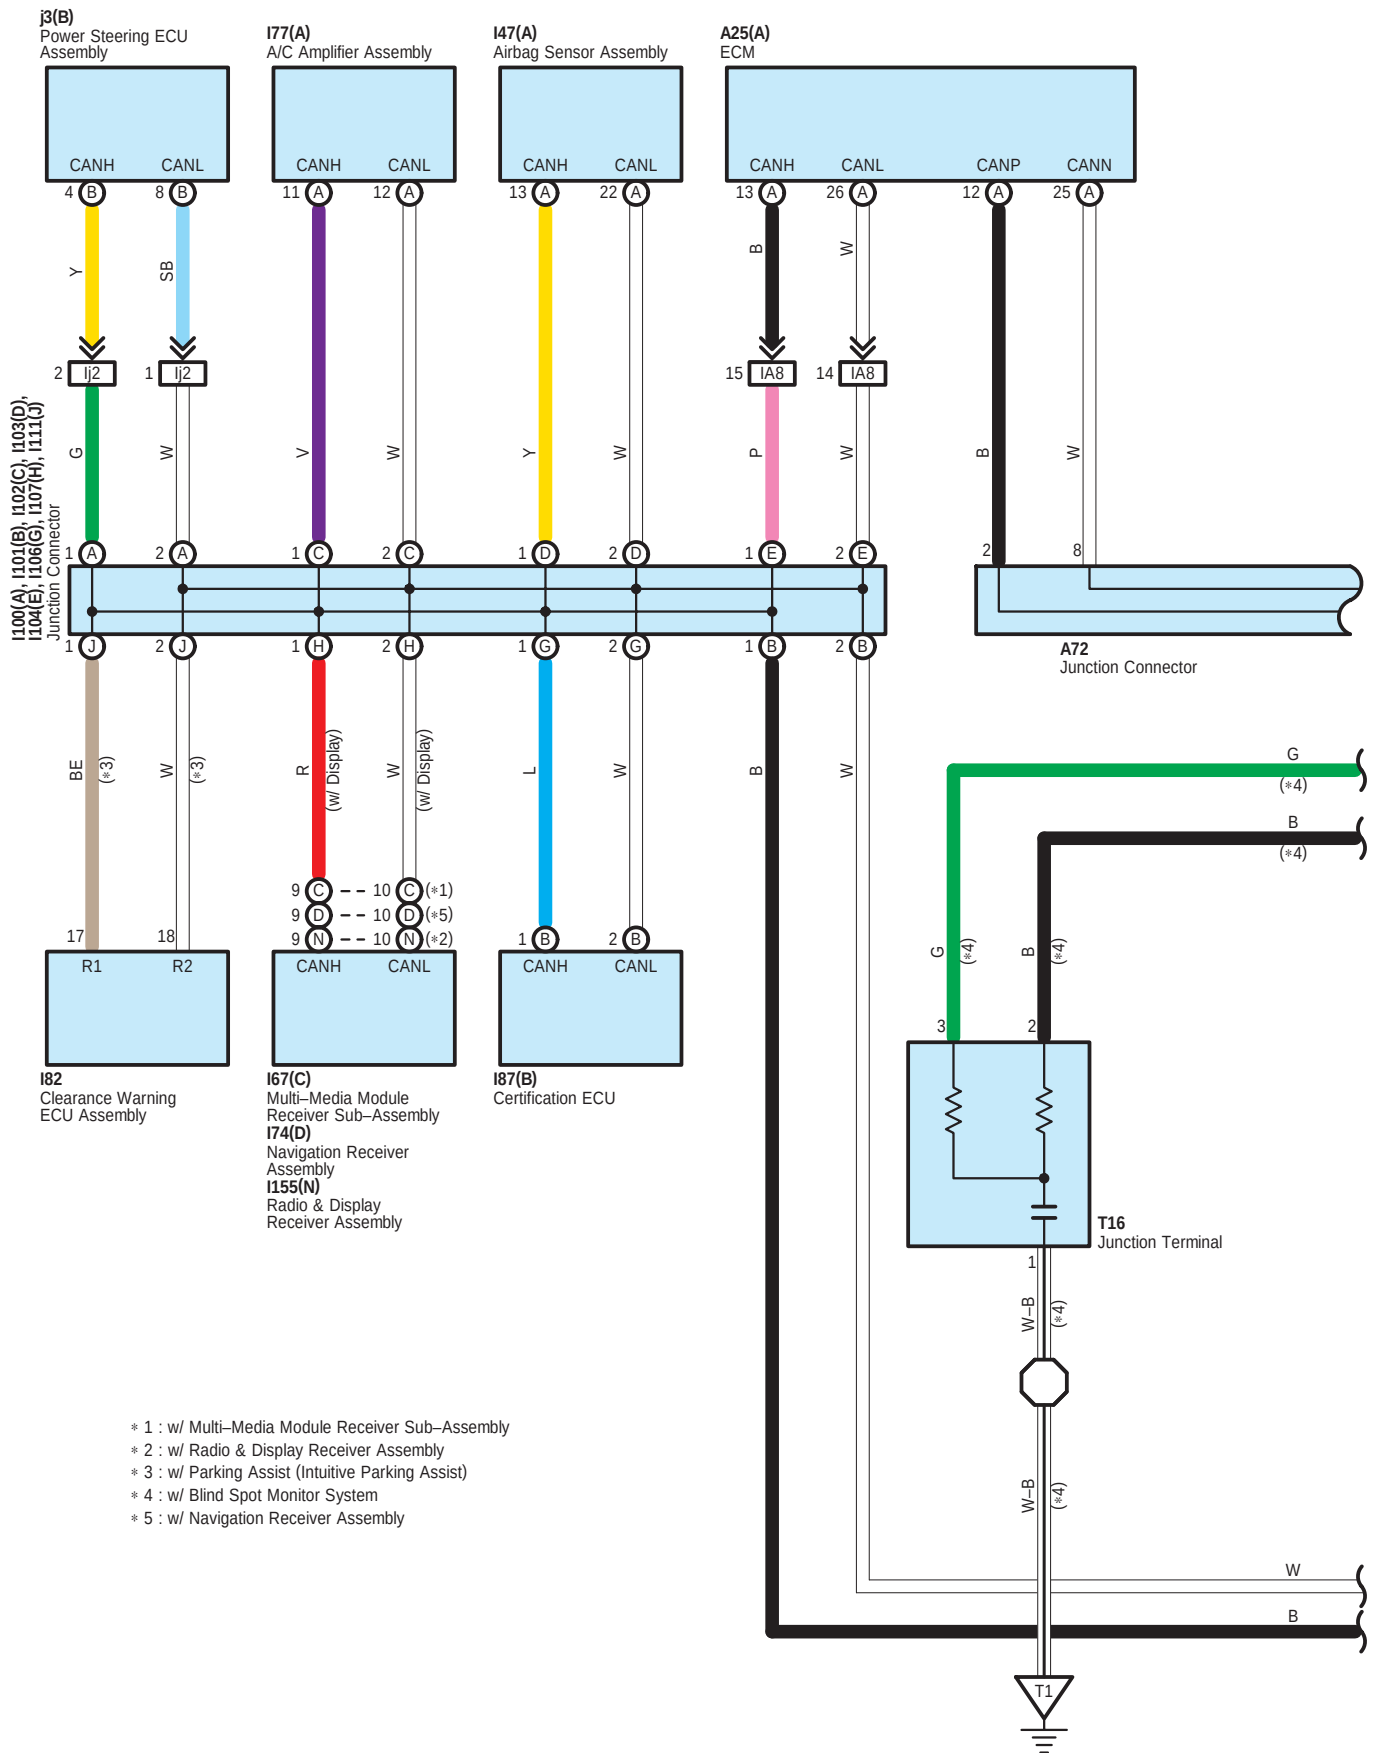


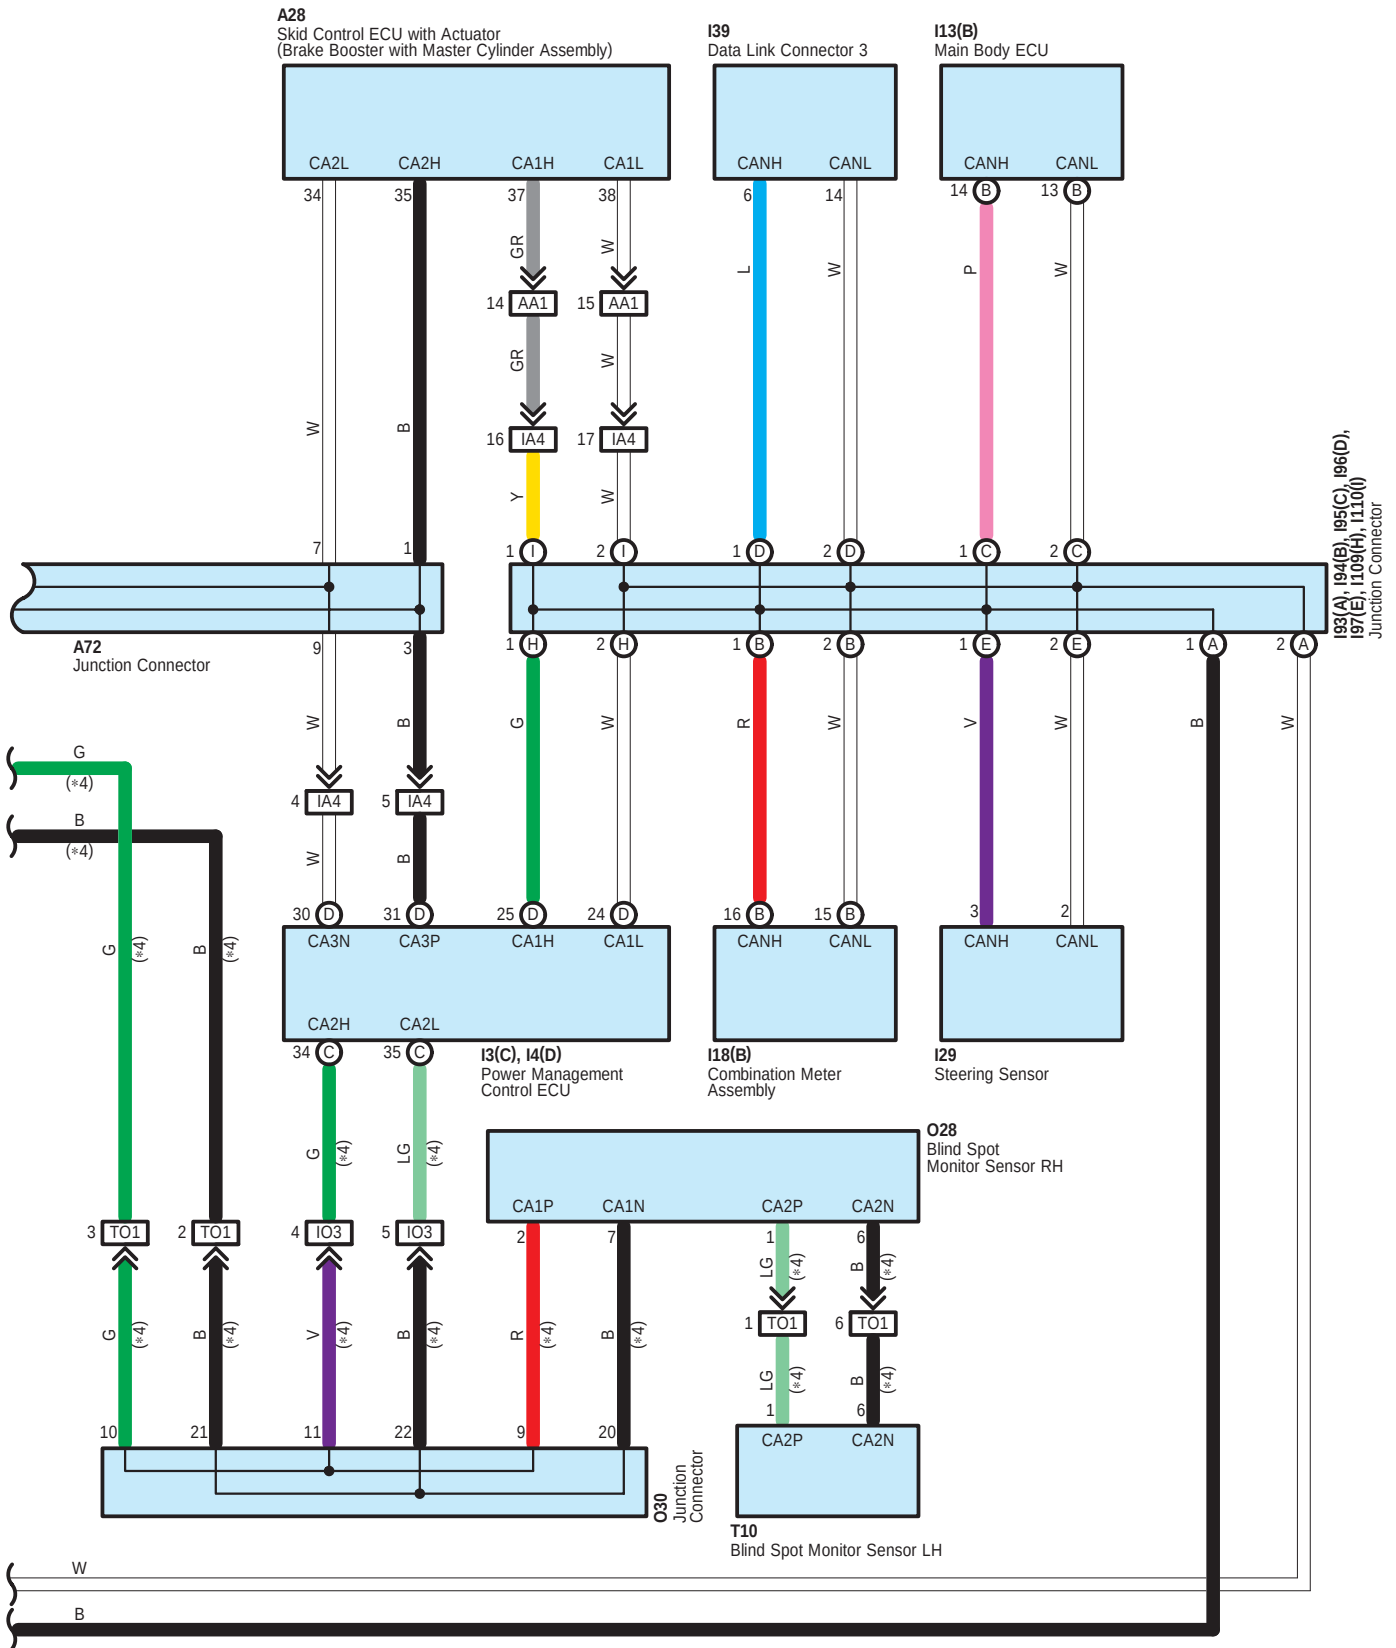


A 25
Black

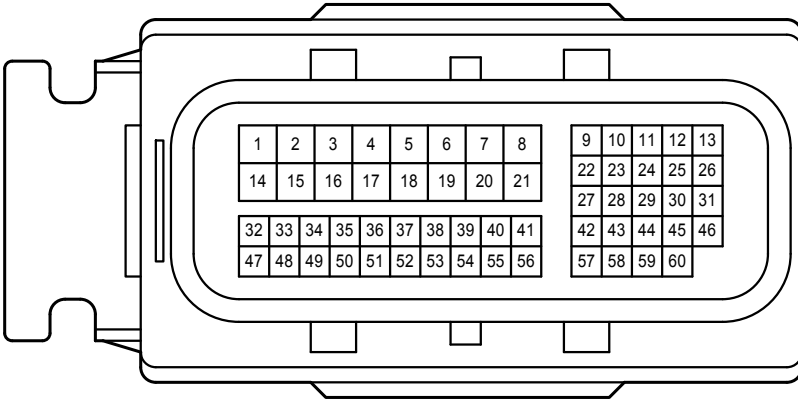


A 28
Black

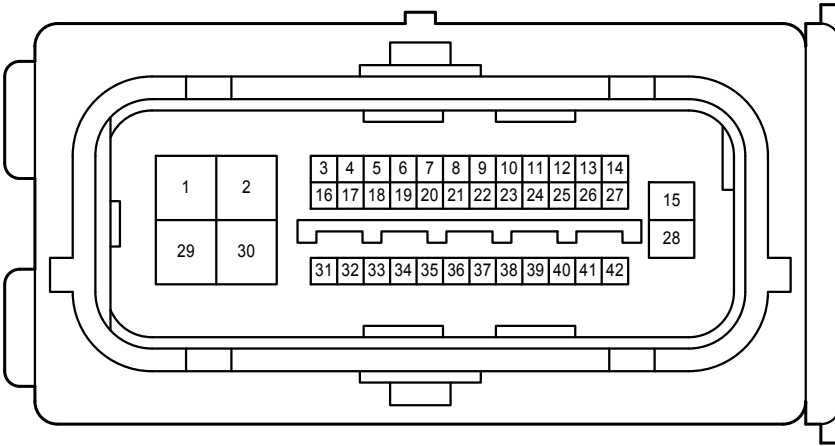


A 72
White

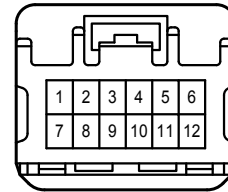


I 3
Gray

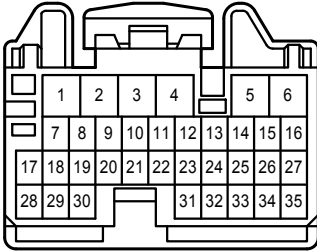


I 4
Gray

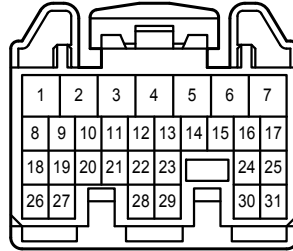

I 13
White

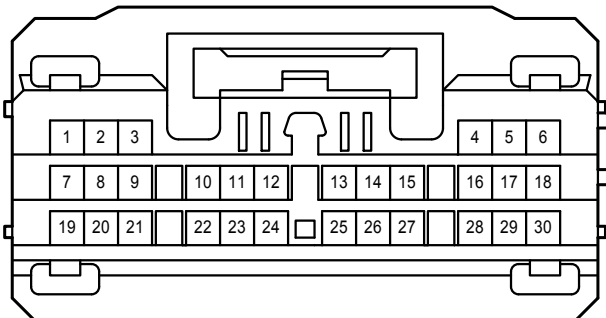


I 18
Black

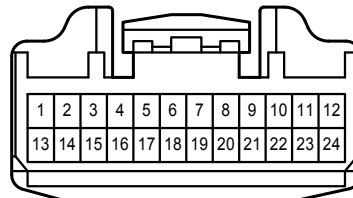


I 29

Blue

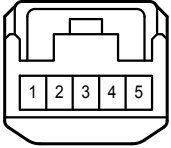


I 39

White

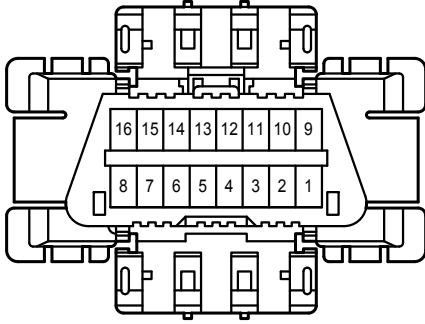


I 47

Yellow

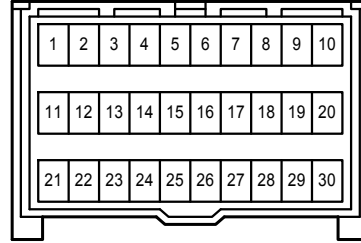


I 67

White

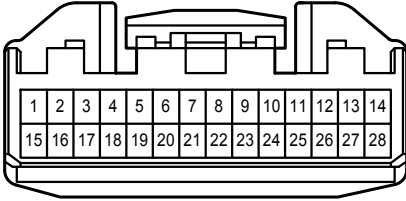


I 74

White

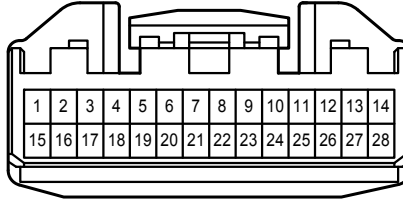


I 77

White

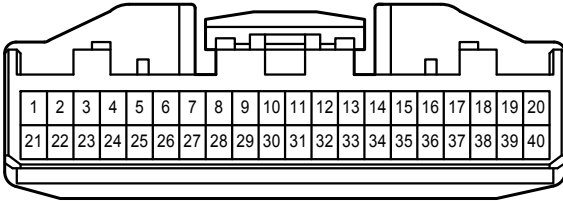


I 82

Black

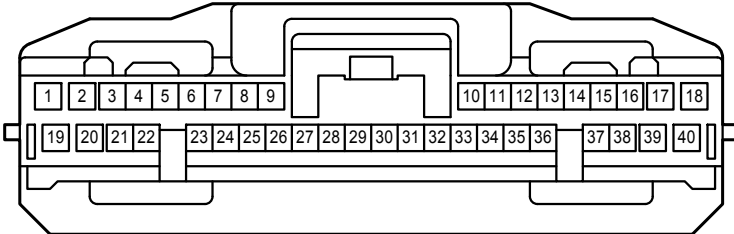


I 87

White

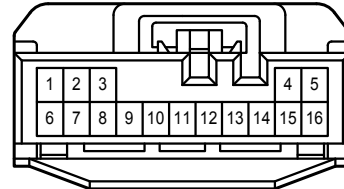


I 93

White




I 94

White




I 95

White




I 96

White




I 97

White




I100

White




I101

White




I102

White




I103

White




I104

White




I106

White




I107

White




I109

White



I110

White




I111


White




I155
White

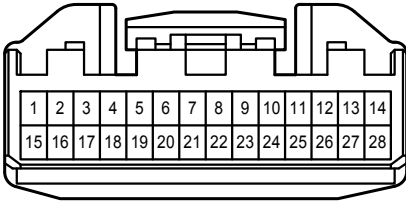


O 28
Black

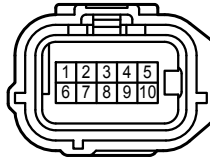


O 30
Black

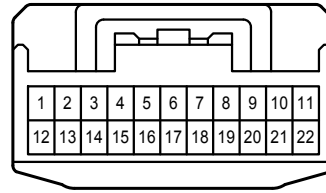


T 10
Black

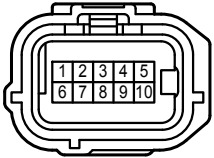


T 16
White




j 3
White

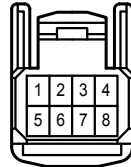

AA1
Blue

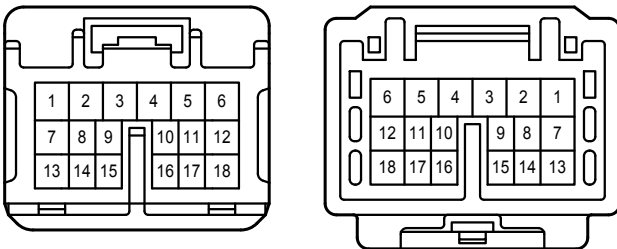

IA4
Gray

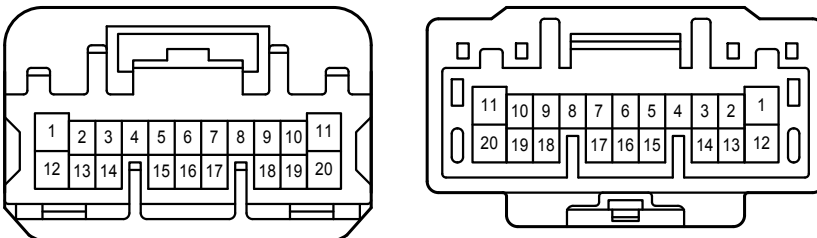

IA8
Gray

